


INSTALLATION

1. INSTALL ELECTRIC COOLING FAN TO RADIATOR

- (a) Install the electric cooling fan with the 6 bolts.

Torque: 5.0 N·m (50 kgf·cm, 44 in.-lbf)

- (b) Connect the radiator reservoir hose to the radiator.

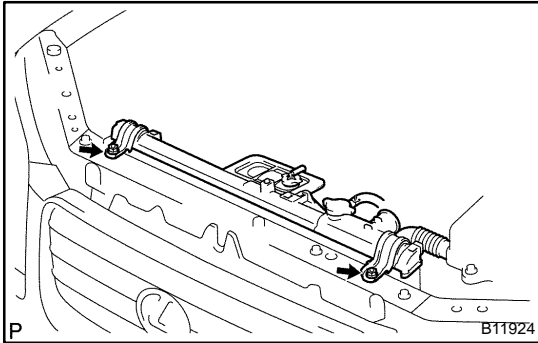

2. INSTALL RADIATOR AND ELECTRIC COOLING FAN ASSEMBLY

- (a) Install the 2 lower radiator supports to the radiator.
(b) Attach the 2 lower radiator supports on the radiator to the body bracket.
(c) Install the radiator and electric cooling fan assembly with the 2 upper radiator supports and 2 nuts.

Torque: 13.5 N·m (135 kgf·cm, 10 ft·lbf)

- (d) Connect the upper radiator hose to the radiator.
(e) Connect the lower radiator hose to the radiator.
(f) Connect the ECM outlet duct to the ECM box.
(g) Connect the wire for electric cooling fan to the clamp on the electric cooling fan.
(h) Connect the 2 electric cooling fan connectors.
(i) Connect the ECT switch connector for electric cooling fan.
(j) A/T:
Connect the 2 oil cooler hoses for A/T to the radiator.

3. INSTALL AIR CLEANER AND MAF METER ASSEMBLY

4. INSTALL AIR CLEANER INLET

5. FILL WITH ENGINE COOLANT

6. START ENGINE AND CHECK FOR ENGINE COOLANT AND A/T FLUID LEAKS

7. INSTALL ENGINE UNDER COVER