


## POSITIVE CRANKCASE VENTILATION (PCV) SYSTEM INSPECTION

EC04X-09


### 1. REMOVE ENGINE COVER

Remove 4 nuts and engine cover.

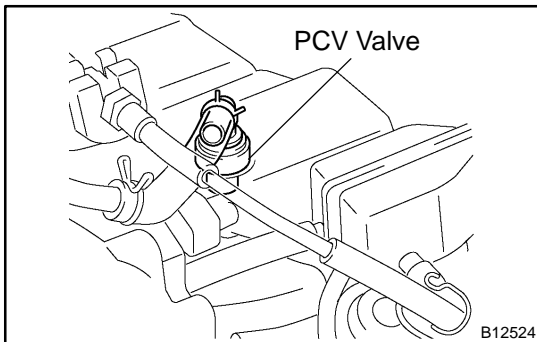

### 2. REMOVE PCV VALVE

- Disconnect the PCV hose from the PCV valve.
- Remove the PCV valve.

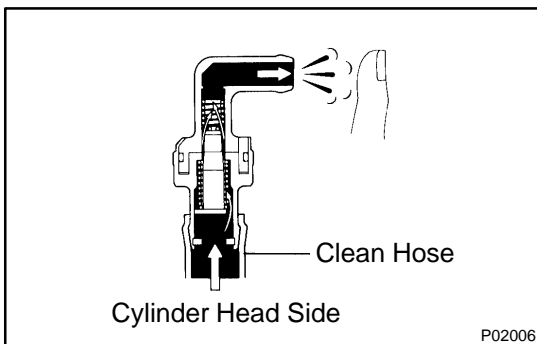


### 3. INSTALL CLEAN HOSE TO PCV VALVE

### 4. INSPECT PCV VALVE OPERATION

- Blow air into the cylinder head side, and check that air passes through easily.

#### CAUTION:


- Do not suck air through the valve.
- Petroleum substances inside the valve are harmful.

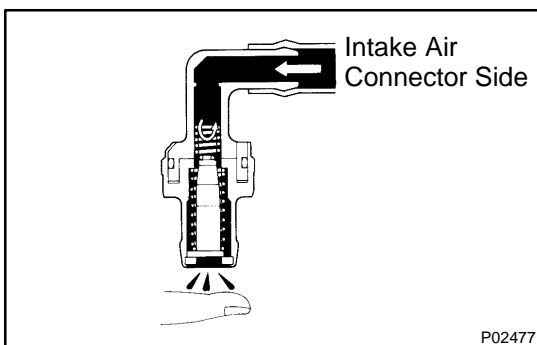

- Blow air into the intake air connector side, and check that air passes through with difficulty.


If operation is not as specified, replace the PCV valve.

### 5. REMOVE CLEAN HOSE FROM PCV VALVE

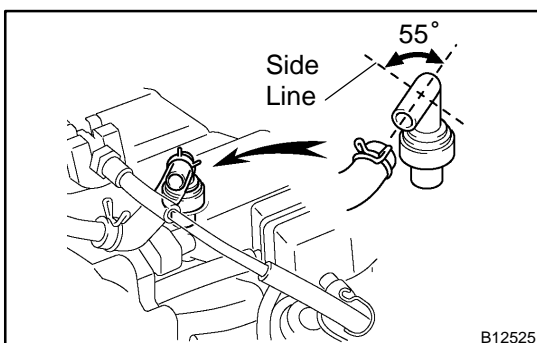

### 6. REINSTALL PCV VALVE

The port faces in the direction indicated in the illustration.

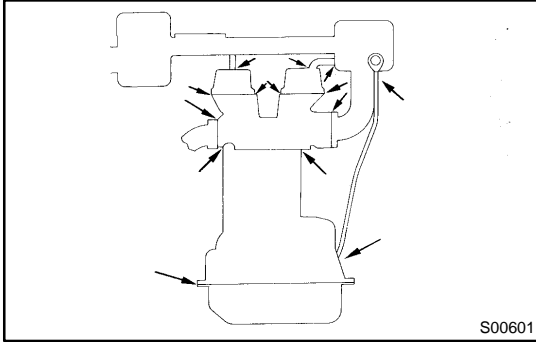

**7. VISUALLY INSPECT HOSES, CONNECTIONS AND GASKETS**

Check for cracks, leaks or damage.

**8. REINSTALL ENGINE COVER**

Install the engine cover with the 4 nuts.