


EXHAUST SYSTEM COMPONENTS

EMODO-08

Heated Oxygen Sensor (Bank 1 Sensor 2)

HINT:

- Before installing oxygen sensor, twist sensor wire counterclockwise 3 and 1/2 turns.
- After installing oxygen sensor, check that sensor wire is not twisted. If it is twisted, remove oxygen sensor and reinstall it.

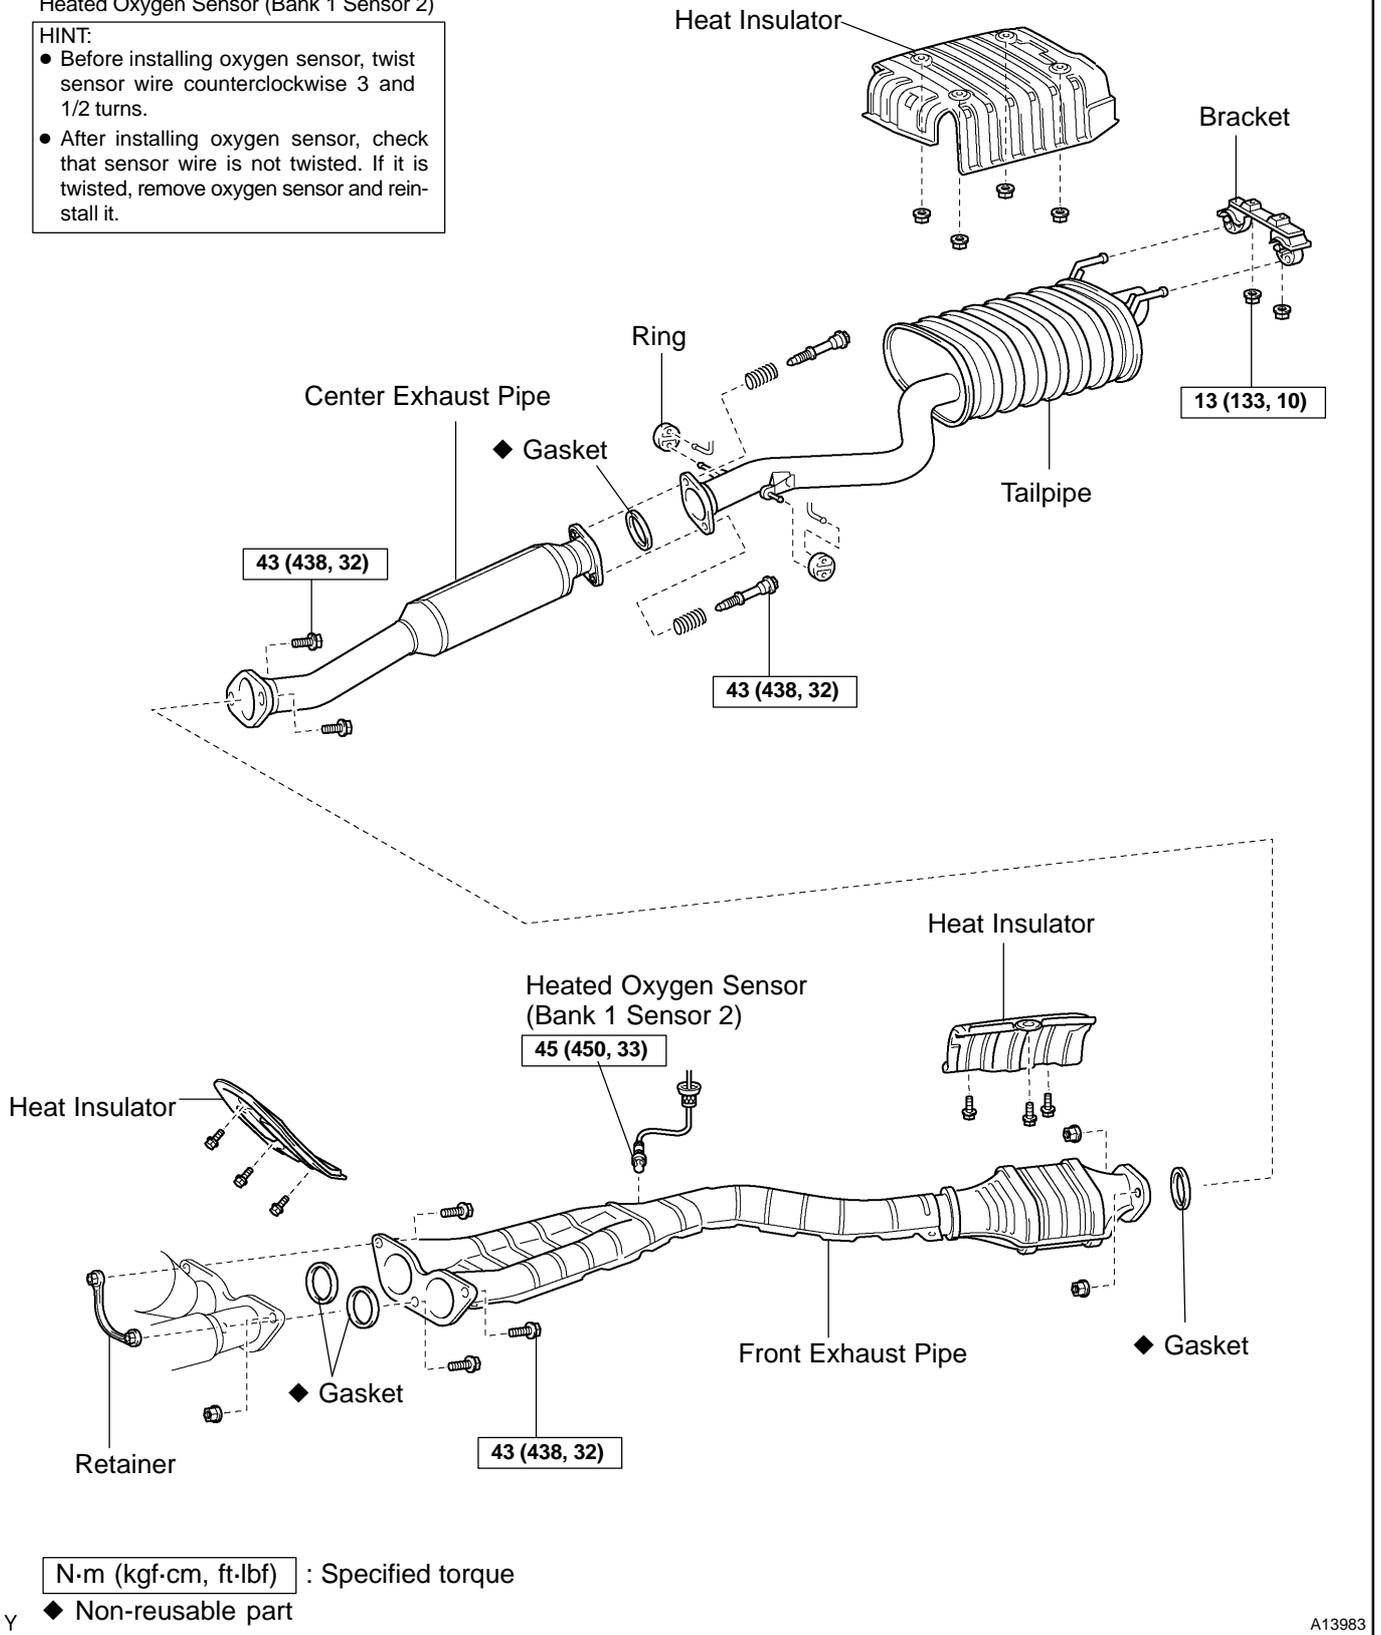

A13983