



DISASSEMBLY

REMOVE NO. 3 HUB SLEEVE, SHIFTING KEY AND SPRING FROM SYNCHRONIZER RING


- (a) Remove the synchronizer ring assembly from the No. 3 hub sleeve.
- (b) Turn the reverse synchronizer pull ring.

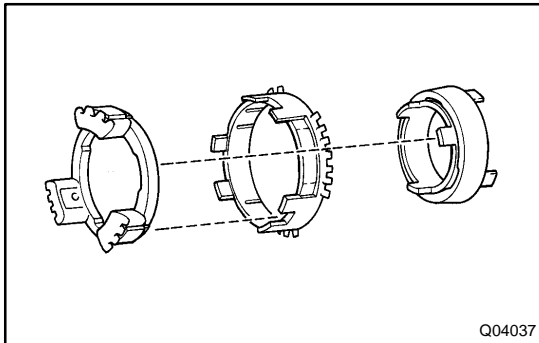

- (c) Remove the reverse synchronizer ring and 5th synchronizer ring from the synchronizer pull ring and cone ring.

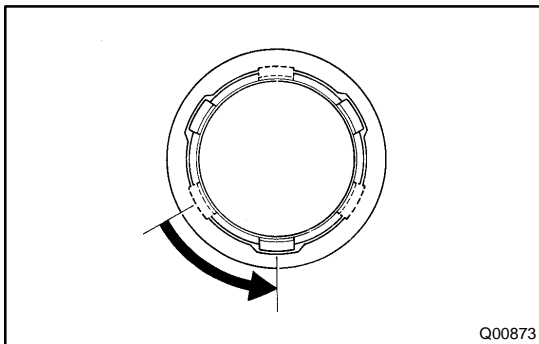

- (d) Turn the reverse synchronizer pull ring and separate the pull ring and cone ring.

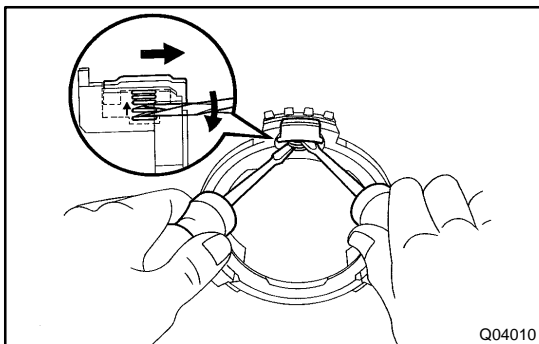

- (e) Remove the 3 shifting keys and key springs by carefully levering up the shifting key spring with one screwdriver and levering the shifting key away from the reverse synchronizer ring with another screwdriver.