



## REASSEMBLY

### REASSEMBLE PROPELLER SHAFT

- Assemble the propeller shaft, align the matchmarks on the universal joint flange and propeller shaft flange, and connect the flanges with the 4 bolts, washers and nuts.
- Torque the 4 nuts.

**Torque: 74 N·m (750 kgf-cm, 54 ft-lbf)**

#### HINT:

Assemble the propeller shaft so that each joint faces in the direction as shown in the illustration.

