


FUEL TANK AND LINE COMPONENTS

SE0NH-07

CAUTION:

- Always use new gaskets when replacing the fuel tank or component parts.
- Apply the proper torque to all parts tightened

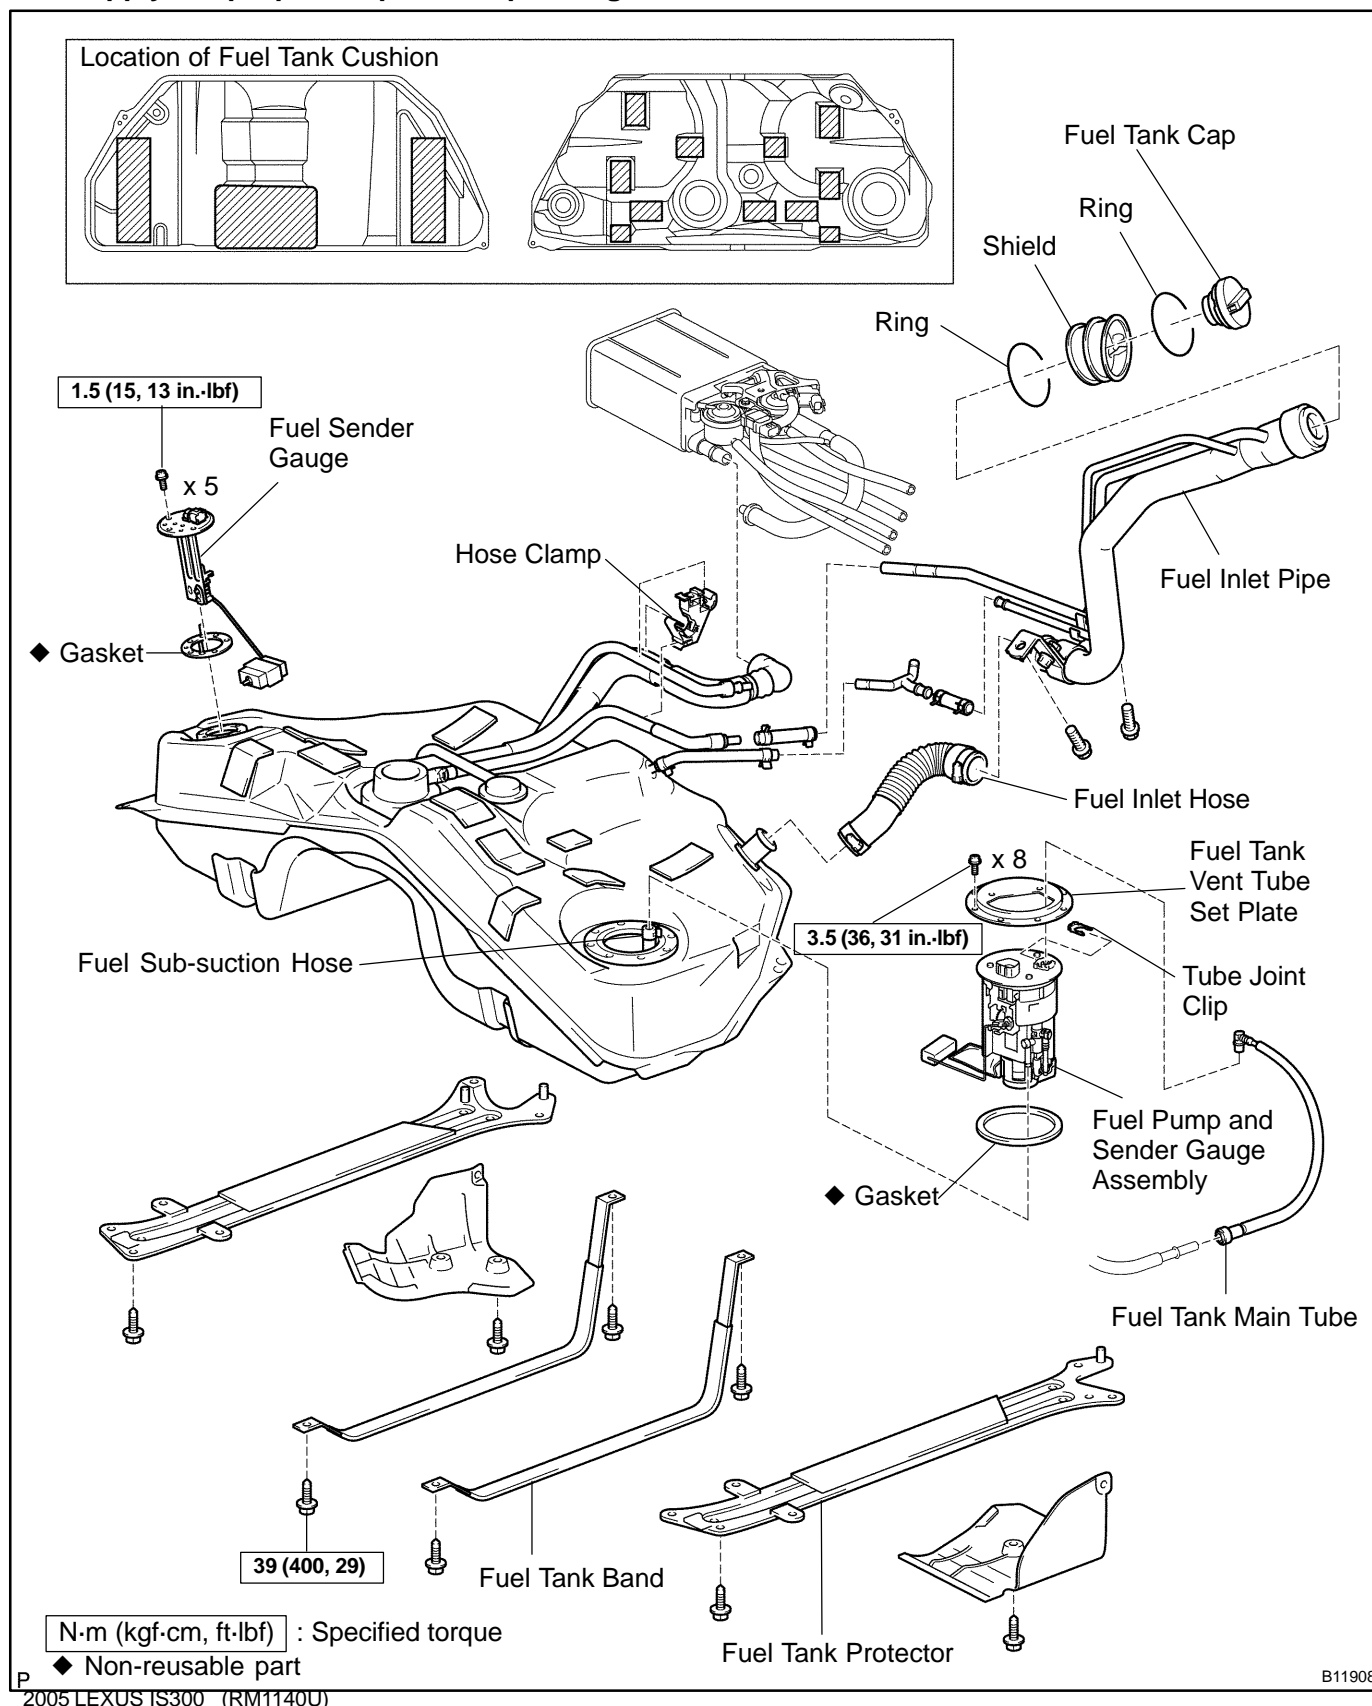

B11908