



## INSPECTION

### 1. REMOVE NO. 3 TIMING BELT COVER



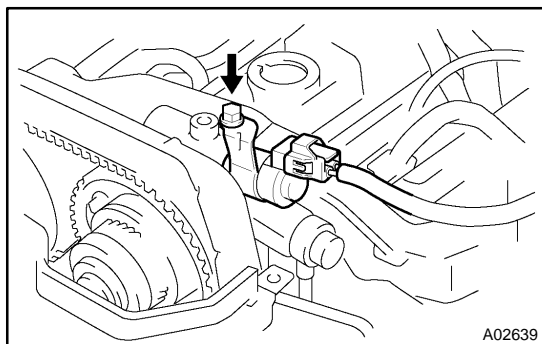

### 2. REMOVE OIL CONTROL VALVE

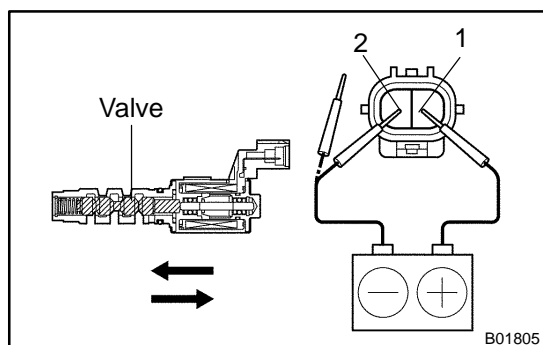- Disconnect the oil control valve connector.
- Remove the bolt, oil control valve and O-ring.



### 3. INSPECT OIL CONTROL VALVE OPERATION

Connect positive (+) lead from the battery to terminal 1 and negative (-) lead to terminal 2, and check the movement of the valve.

Battery positive voltage is applied	Valve moves in  direction
Battery positive voltage is cut off	Valve moves in  direction

If operation is not as specified, replace the valve.

### 4. REINSTALL OIL CONTROL VALVE

- Install a new O-ring to the oil control valve.
- Install the oil control valve with the bolt.  
**Torque: 8.0 N·m (80 kgf·cm, 71 in.-lbf)**
- Connect the oil control valve connector.

### 5. REINSTALL NO. 3 TIMING BELT COVER

**Torque: 8.0 N·m (80 kgf·cm, 71 in.-lbf)**