


EFI MAIN RELAY INSPECTION

SF1ZJ-01

- 1. REMOVE RELAY BOX COVER
- 2. REMOVE EFI MAIN RELAY (Marking: EFI)

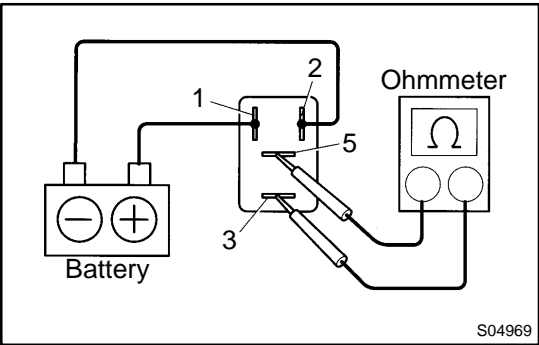

- 3. INSPECT EFI MAIN RELAY
(1) Using an ohmmeter, measure the resistance between the terminals.

Standard:

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (Apply battery voltage to terminals 1 and 2)

If the resistance is not as specified, replace the relay.

- 4. REINSTALL EFI MAIN RELAY
- 5. REINSTALL RELAY BOX COVER