


CIRCUIT OPENING RELAY INSPECTION

SF1ZK-01

1. REMOVE RELAY BOX COVER
2. REMOVE CIRCUIT OPENING RELAY

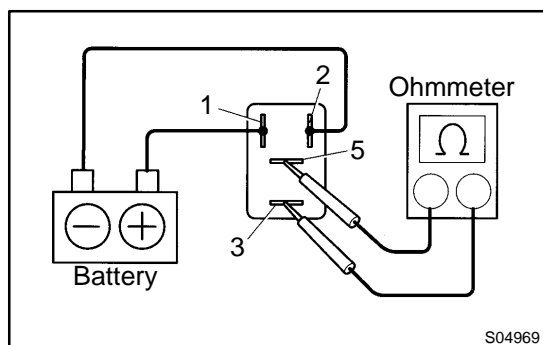

3. INSPECT CIRCUIT OPENING RELAY
 - (2) Using an ohmmeter, measure the resistance between the terminals.

Standard:

Tester Connection	Specified Condition
3 - 5	10 k Ω or higher
3 - 5	Below 1 Ω (Apply battery voltage to terminals 1 and 2)

If the resistance is not as specified, replace the relay.

4. REINSTALL CIRCUIT OPENING RELAY
5. REINSTALL RELAY BOX COVER