


FUEL PUMP RELAY INSPECTION

SF1LG-04

1. REMOVE RELAY BOX COVER
2. REMOVE FUEL PUMP RELAY (Marking: FUEL PMP)

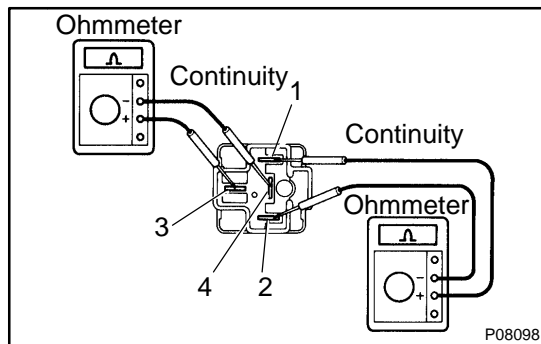


3. INSPECT FUEL PUMP RELAY

- (a) Inspect the relay continuity.
 - (1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.
 - (2) Check that there is continuity between terminals 3 and 4.

If there is no continuity, replace the relay.

If there is no continuity, replace the relay.

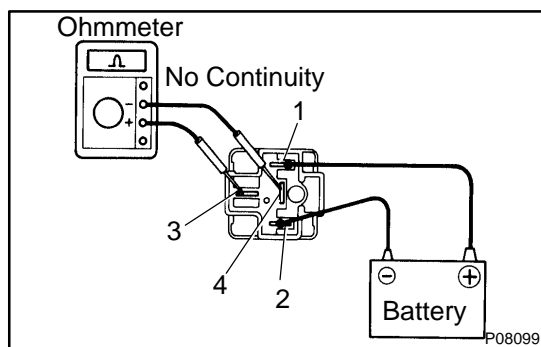

- (b) Inspect the relay operation.
 - (1) Apply battery positive voltage across terminals 1 and 2.
 - (2) Using an ohmmeter, check that there is no continuity between terminals 3 and 4.

If there is continuity, replace the relay.

4. REINSTALL FUEL PUMP RELAY
5. REINSTALL RELAY BOX COVER