



## INSPECTION

### INSPECT FUEL PUMP RESISTOR

Using an ohmmeter, measure the resistance between the terminals.

**Resistance: 0.30 - 0.35  $\Omega$  at 20°C (68°F)**

If the resistance is not as specified, replace the resistor.