


## INSPECTION

1. REMOVE CHARCOAL CANISTER ASSEMBLY
2. REMOVE VSV FROM CHARCOAL CANISTER

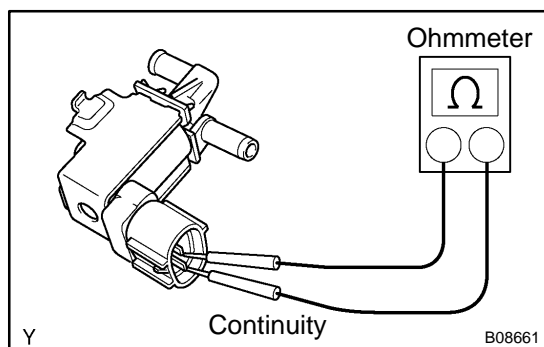

### 3. INSPECT VSV


- (a) Inspect the VSV for open circuit.

Using an ohmmeter, check that there is continuity between the terminals.

#### Resistance:

20°C (68°F)	37 - 44 Ω
120°C (248°F)	51 - 62 Ω


If there is no continuity, replace the VSV.

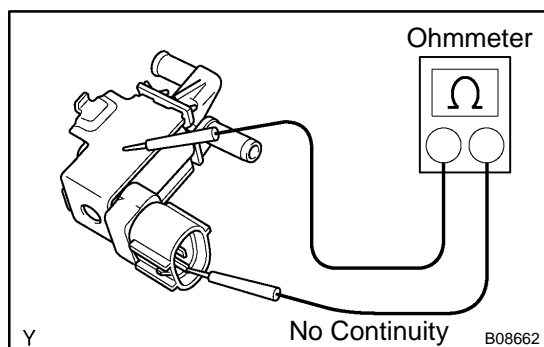

- (b) Inspect the VSV for ground.


Check that there is no continuity between each terminals and the body.

If there is continuity, replace the VSV.

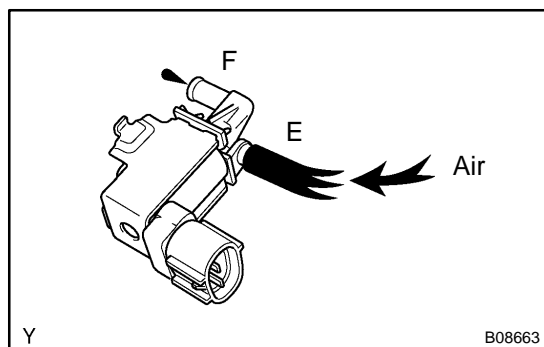

- (c) Inspect the VSV operation.

- (1) Check that the air does not from port E to F.

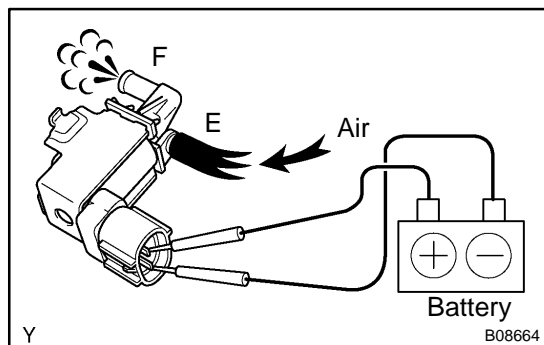

- (2) Apply battery positive voltage across the terminals.

- (3) Check that the air flows from port E to F.

If operation is not specified, replace the VSV.

4. REINSTALL VSV TO CHARCOAL CANISTER

5. REINSTALL CHARCOAL CANISTER ASSEMBLY