



## INSPECTION

### 1. DRAIN ENGINE COOLANT

### 2. REMOVE ECT SENSOR

- Disconnect the ECT sensor connector.
- Using SST, remove the ECT sensor and gasket.  
SST 09205-76030

### 3. INSPECT ECT SENSOR

Using an ohmmeter, measure the resistance between the terminals.

**Resistance: Refer to the graph**

If the resistance is not as specified, replace the ECT sensor.

### 4. REINSTALL ECT SENSOR

- Install a new gasket to the ECT sensor.
  - Using SST, install the ECT sensor.  
SST 09205-76030  
**Torque: 19.6 N·m (200 kgf·cm, 14 ft·lbf)**
  - Connect the ECT sensor connector.
- ### 5. REFILL WITH ENGINE COOLANT

