

INSPECTION

1. Bank 1, 2 Sensor 1, and Bank 1 Sensor 2: INSPECT HEATER RESISTANCE OF HEATED OXY- GEN SENSORS

- Disconnect the oxygen sensor connectors.
- Using an ohmmeter, measure the resistance between the terminals +B and HT.


Resistance:

20°C (68°F)	11 - 16 Ω
800°C (1,472°F)	23 - 32 Ω

If the resistance is not as specified, replace the sensor.

Torque: 45 N·m (450 kgf·cm, 33 ft·lbf)

- Reconnect the oxygen sensor connectors.

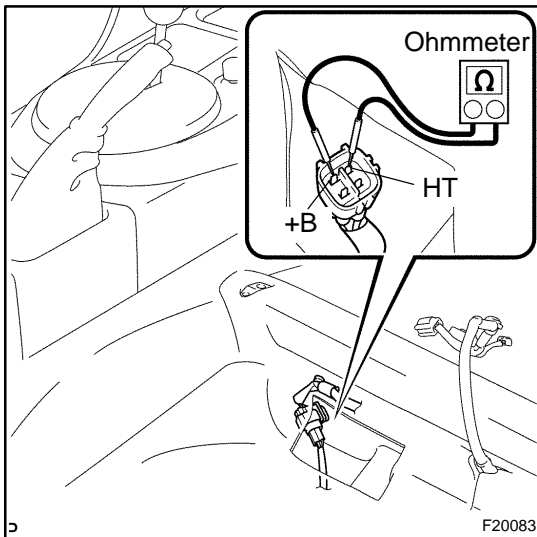

2. Bank 2 Sensor 2: INSPECT HEATER RESISTANCE OF HEATED OXY- GEN SENSOR

- Remove the front seat assembly RH.
- Remove the air duct guide rear RH.
- Disconnect the oxygen sensor connector.
- Using an ohmmeter, measure the resistance between the terminals +B and HT.

Resistance:

20°C (68°F)	11 - 16 Ω
800°C (1,472°F)	23 - 32 Ω

If the resistance is not as specified, replace the sensor.

Torque: 45 N·m (450 kgf·cm, 33 ft·lbf)

- Reconnect the oxygen sensor connector.
- Install the air duct guide rear RH.
- Install the front seat assembly RH.