


STARTER RELAY INSPECTION

ST0Q3-01

1. REMOVE RELAY BOX COVER
2. REMOVE STARTER RELAY

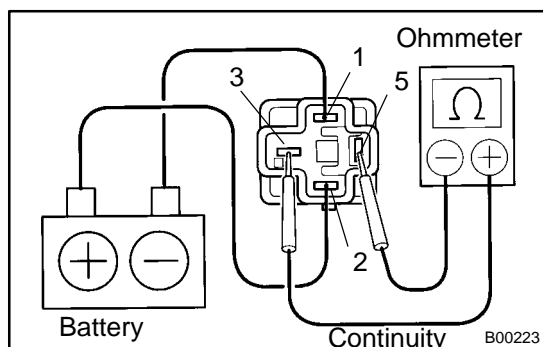

3. INSPECT STARTER RELAY

- (1) Using an ohmmeter, measure the resistance between the terminals.

Standard:

Tester Connection	Specified Condition
3 - 5	10 k Ω or higher
3 - 5	Below 1 Ω (Apply battery voltage to terminals 1 and 2)

If the resistance is not as specified, replace the relay.

4. REINSTALL STARTER RELAY
5. REINSTALL RELAY BOX COVER