

INSTALLATION

1. INSTALL TRANSMISSION SHIFT SWITCH ASSEMBLY TO STEERING WHEEL

- Install the transmission shift switch assembly.
- Push the terminal 1 (horn switch terminal) into the connector.
- Engage the secondary locking device of the connector.
- Install the 2 screws.

2. INSTALL NO. 2 INTERMEDIATE SHAFT ASSEMBLY

Install the No. 2 intermediate shaft assembly with the bolt.

Torque: 35 N·m (360 kgf-cm, 26 ft-lbf)


3. INSTALL SLIDING YOKE

Temporarily install sliding yoke with the bolt "A".

4. INSTALL STEERING COLUMN ASSEMBLY

Install the steering column assembly with the 4 nuts.

Torque: 26 N·m (270 kgf-cm, 19 ft-lbf)

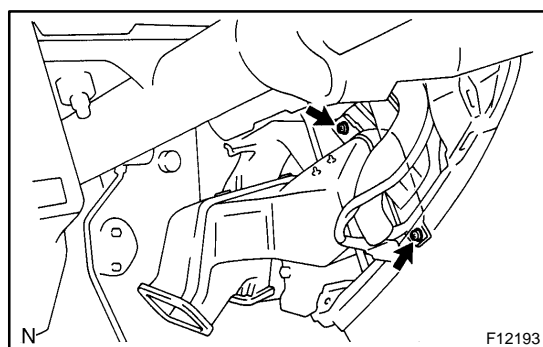


5. CONNECT HEATER TO REGISTER DUCT

Connect the heater to register duct with the 2 screws.

6. INSTALL INSTRUMENT PANEL LOWER PAD INSERT

Install the instrument panel lower pad insert with the 3 bolts.

7. CONNECT BRAKE PEDAL RETURN SPRING

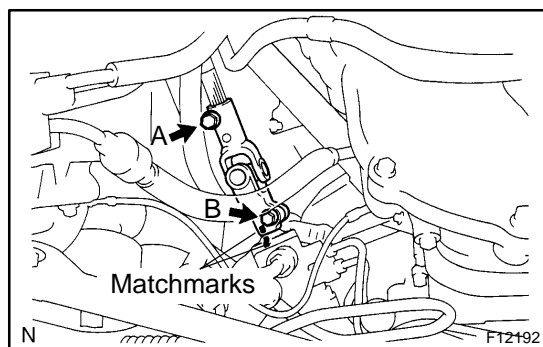

8. CONNECT SLIDING YOKE

- Align the matchmarks on the sliding yoke and control valve shaft.
- Install the bolt "A" and "B".

Torque: 35 N·m (360 kgf-cm, 26 ft-lbf)

9. INSTALL NO. 2 ENGINE UNDER COVER

Install the No. 2 engine under cover with the 5 screws.

10. INSTALL SPIRAL CABLE

11. INSTALL COMBINATION SWITCH WITH SPIRAL CABLE

- Install the combination switch with the 3 screws.
- Connect the airbag connector.
- Connect the connectors.

12. INSTALL COLUMN UPPER AND LOWER COVERS

- Install the column upper cover.
- Install the column lower cover with the 3 screws.

13. INSTALL CLUSTER FINISH PANEL


- Connect the connector and install the cluster finish panel.
- Install the 2 screws.

14. INSTALL LOWER FINISH PANEL

- (a) Connect the hood lock control cable to the lower finish panel.
- (b) Connect the connectors and install the lower finish panel.
- (c) Install the 3 screws.

15. INSTALL FRONT DOOR INSIDE SCUFF PLATE AND COWL SIDE TRIM BOARD

- (a) Install the cowl side trim board with the clip.
- (b) Install the front door inside scuff plate.

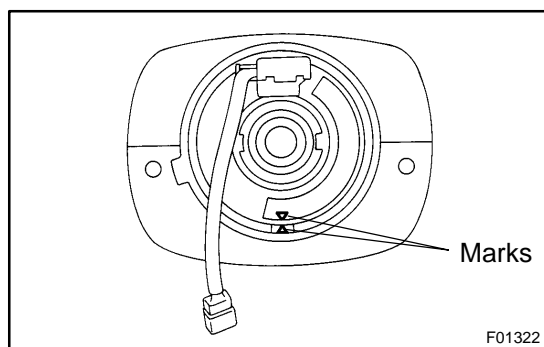**16. CENTER SPIRAL CABLE**

- (a) Check that the front wheels are facing straight ahead.
- (b) Turn the cable counterclockwise by hand until it becomes harder to turn.
- (c) Then rotate the cable clockwise about 2.5 turns to align the marks.

HINT:

The cable will rotate about 2.5 turns to either left or right of the center.


17. INSTALL STEERING WHEEL

- (a) Align the matchmarks on the steering wheel and main shaft assembly.
- (b) Install the steering wheel set nut.
Torque: 50 N·m (510 kgf-cm, 37 ft-lbf)
- (c) Connect the connector.

18. INSTALL STEERING WHEEL PAD**NOTICE:**

- **Never use airbag parts from another vehicle. When replacing parts, replace with new ones.**
- **Make sure the wheel pad is installed with the specified torque.**
- **If the wheel pad has been dropped, or there are cracks, dents or other defects on the case or connector, replace the wheel pad with a new one.**
- **When installing the wheel pad, take care that the wirings do not interfere with other parts and that they are not pinched between other parts.**

- (a) Connect the airbag connector.

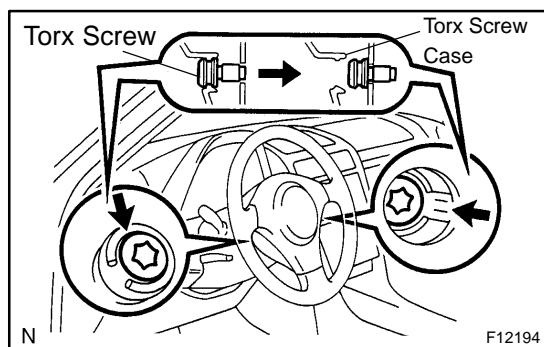

- (b) Install the steering wheel pad after confirming that the circumference groove of the torx screws is caught on the screw case.
- (c) Using a torx socket wrench, torque the 2 screws.
Torque: 8.8 N·m (90 kgf-cm, 78 in.-lbf)

19. CHECK STEERING WHEEL CENTER POINT