

## INSPECTION

### 1. CHECK FLUID LEVEL

- Keep the vehicle level.
- With the engine stopped, check the fluid level in the oil reservoir.

If necessary, add fluid.


**Fluid: ATF DEXRON® II or III**

#### HINT:


Check that the fluid level is within the HOT LEVEL range on the reservoir. If the fluid is cold, check that it is within the COLD LEVEL range.

- Start the engine and run it at idle.
- Turn the steering wheel from lock to lock several times to boost fluid temperature.

**Fluid temperature: 80°C (176°F)**

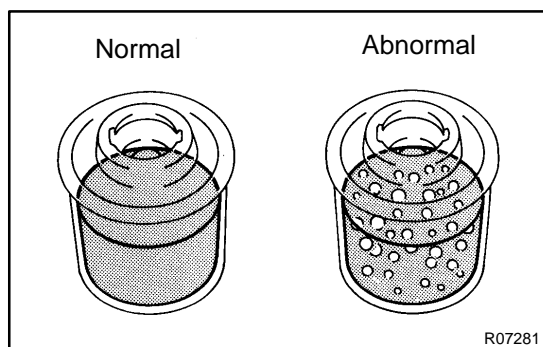

- Check for foaming or emulsification. If there is foaming or emulsification, bleed power steering system (See page [SR-4](#)).

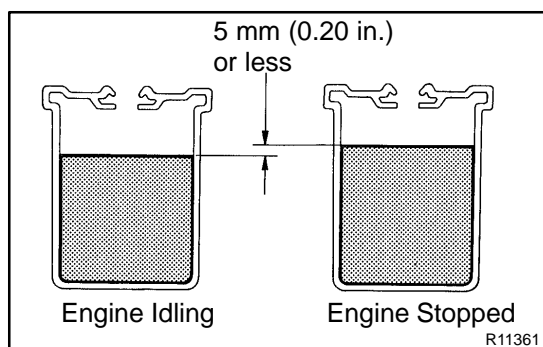

- With the engine idling, measure the fluid level in the oil reservoir.
- Stop the engine.
- Wait a few minutes and remeasure the fluid level in the oil reservoir.

**Maximum fluid level rise: 5 mm (0.20 in.)**

If a problem is found, bleed power steering system (See page [SR-4](#)).


- Check the fluid level.

**2. CHECK STEERING FLUID PRESSURE**

- (a) Disconnect the pressure feed tube from the PS gear (See page [SR-41](#) ).
- (b) Connect SST, as shown in the illustration below.  
SST 09640-10010 (09641-01010, 09641-01030, 09641-01060)


**NOTICE:**

**Check that the valve of the SST is in the open position.**

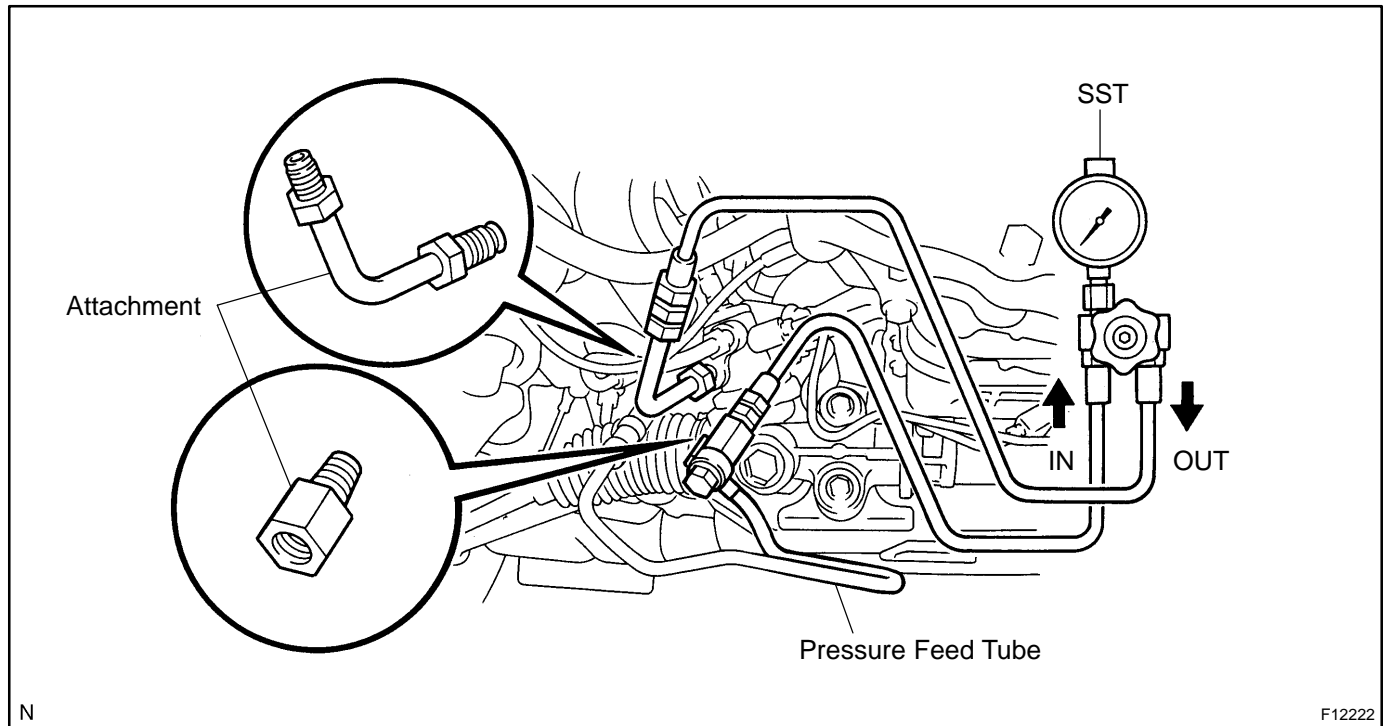

- (c) Bleed the power steering system (See page [SR-4](#) ).
- (d) Start the engine and run it at idle.
- (e) Turn the steering wheel from lock to lock several times to boost fluid temperature.


**Fluid temperature: 80 °C (176 °F)**

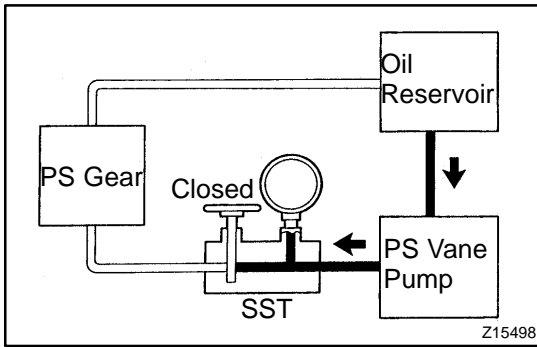

- (f) With the engine idling, close the valve of the SST and observe the reading on the SST.  
**Minimum fluid pressure:**  
**6,900 kPa (70 kgf/cm<sup>2</sup>, 996 psi)**

**NOTICE:**

- Do not keep the valve closed for more than 10 seconds.
- Do not let the fluid temperature become too high.

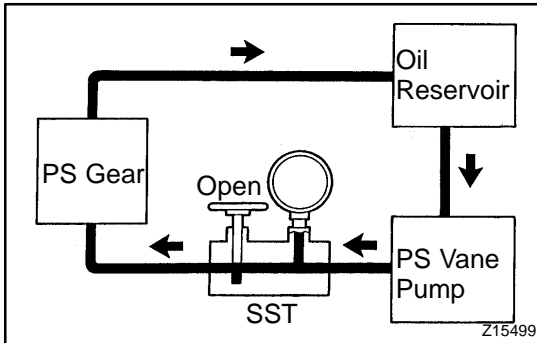


- (g) With the engine idling, open the valve fully.  
 (h) Measure the fluid pressure at engine speeds of 1,000 rpm and 3,000 rpm.

**Difference fluid pressure:**  
**490 kPa (5 kgf/cm<sup>2</sup>, 71 psi) or less**

**NOTICE:**

**Do not turn the steering wheel.**

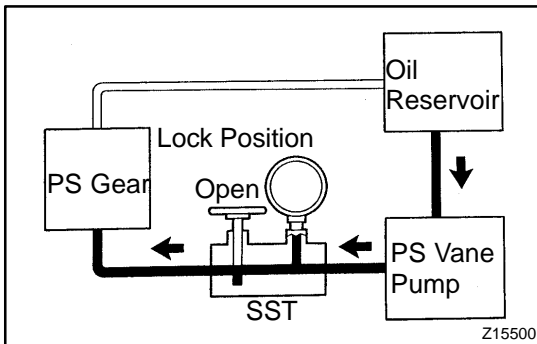

- (i) With the engine idling and valve fully opened, turn the steering wheel to full lock position.  
**Minimum fluid pressure:**  
**6,900 kPa (70 kgf/cm<sup>2</sup>, 996 psi)**

**NOTICE:**

- Do not maintain lock position for more than 10 seconds.
- Do not let the fluid temperature become too high.

- (j) Disconnect the SST.  
 SST 09640- 10010 (09641- 01010, 09641- 01030, 09641-01060)  
 (k) Connect the pressure feed tube to the PS gear (See page [SR-57](#) ).  
 (l) Bleed the power steering system (See page [SR-4](#) ).