

REMOVAL

HINT:

For step 1 to 4, refer to page [SR-13](#) .

1. REMOVE STEERING WHEEL PAD
2. REMOVE STEERING WHEEL
3. REMOVE STEERING COLUMN UPPER AND LOWER COVERS
4. REMOVE SPIRAL CABLE