

## INSPECTION

### 1. Vehicles not involved in collision:

#### INSPECT SUPPLEMENTAL RESTRAINT SYSTEM


- (a) Perform a diagnostic system check (See page [DI-607](#) ).
- (b) Perform a visual check which includes the following item with the curtain shield airbag assembly installed in the vehicle.

Check for cuts, minute cracks or marked discoloration on the front pillar garnish and roof headlining.

### 2. Vehicle involved in a collision and airbag is not deployed:

#### INSPECT SUPPLEMENTAL RESTRAINT SYSTEM

- (a) Perform a diagnostic system check (See page [DI-607](#) ).

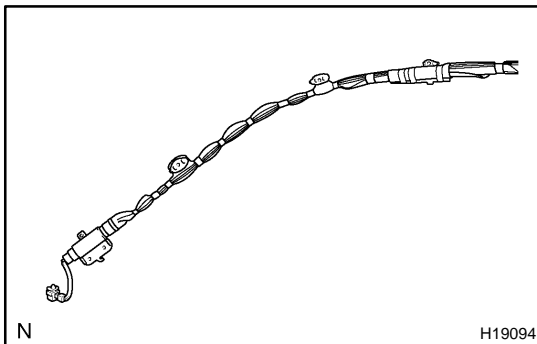

- (b) Perform a visual check which includes the following items with the curtain shield airbag assembly removed from the vehicle.

- Check for cuts, tears and cracks, or marked discoloration of the curtain shield airbag assembly.
- Check for cuts and cracks in wire harness, and chipping in connectors.

#### CAUTION:

For removal and installation of the curtain shield airbag assembly, see page [RS-56](#) and [RS-66](#) . Be sure to follow the correct procedure.

### 3. Vehicle involved in a collision and airbag is deployed:

#### INSPECT SUPPLEMENTAL RESTRAINT SYSTEM

- (a) Perform a diagnostic system check (See page [DI-607](#) ).
- (b) Perform a visual check which includes the following items with the curtain shield airbag assembly removed from the vehicle.

- Check for deformation or cracks on the body part to where the curtain shield airbag installed.
- Check for damage of the connector and wire harness.

#### HINT:

If the body part is deformed or cracked, replace it.