


INSTALLATION

NOTICE:

- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- Never reuse the airbag sensor assembly involved in a collision when the airbag has deployed.
- Never repair a sensor in order to reuse it.

HINT:

For step 3 to 10, refer to page [BO-149](#).

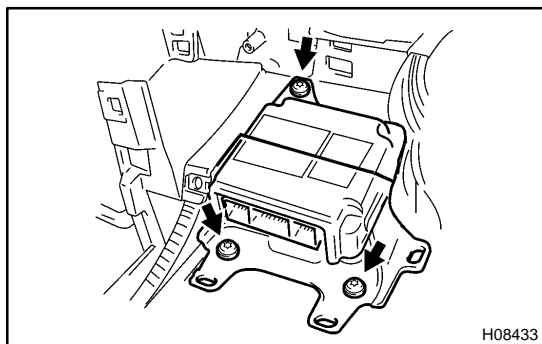

1. INSTALL AIRBAG SENSOR ASSEMBLY

- (a) Using a torx wrench, install the airbag sensor assembly with the 3 screws.

Torx wrench: T40 (Part No.09042-00020 or locally manufactured tool)

Torque: 20 N·m (205 kgf·cm, 15 ft·lbf)

- (b) Connect the 3 airbag sensor assembly connectors.

NOTICE:

- Connection of the connector is done after the sensor assembly has been installed.
- Make sure the sensor assembly is installed with the specified torque.
- If the sensor assembly has been dropped, or there are cracks, dents or other defects in the case, bracket or connector, replace the sensor assembly with a new one.
- When installing the sensor assembly, take care that the SRS wiring does not interfere with other parts and is not pinched between other parts.
- After installing, shake the sensor assembly to check that there is no looseness.

2. INSTALL CONTROL POSITION INDICATOR PLATE

- (a) Connect the engagement of the claw at 4 positions and install the control position indicator plate.

- (b) Connect the connector.

3. INSTALL CONSOLE BOX

4. INSTALL PARKING BRAKE HOLE COVER

5. INSTALL A/C CONTROL WITH RADIO RECEIVER ASSEMBLY

6. INSTALL LOWER CENTER CLUSTER FINISH PANEL

7. INSTALL CENTER CLUSTER FINISH PANEL

8. INSTALL CENTER REGISTER OPENING COVER

9. INSTALL UPPER CONSOLE PANEL

10. INSTALL FLOOR SHIFT LEVER KNOB