

## REPLACEMENT

### REPLACEMENT REQUIREMENTS

In the following cases, replace the front airbag sensor.

- If the SRS has been deployed in a collision (Replace both the left and right airbag sensors.).
- If the front airbag sensor has been found to be faulty in troubleshooting.
- If the front airbag sensor has been found to be faulty during the check in item (See page [RS-74](#)).
- If the front airbag sensor has been dropped.

### CAUTION:

For removal and installation of the front airbag sensor, see page [RS-73](#) and [RS-76](#) . Be sure to follow the correct procedure.