


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected with the ignition switch at ON position, DTC will be recorded.
- Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary. (If the IC terminals are touched, the IC may be destroyed by static electricity.)

1. REMOVE FRONT AND REAR DOOR INSIDE SCUFF PLATES
2. REMOVE CENTER PILLAR LOWER GARNISH
3. REMOVE FRONT SEAT OUTER BELT ASSEMBLY

Pages for reference	See page
Sedan	BO-211
Wagon	BO-214

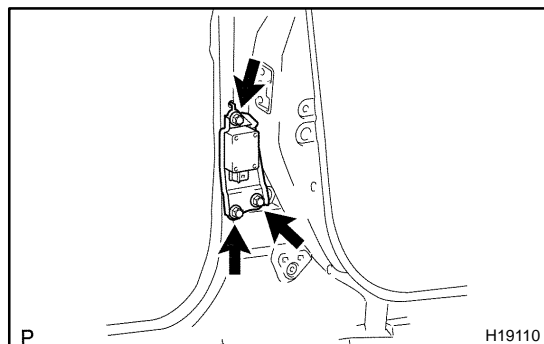

4. REMOVE SIDE AND CURTAIN SHIELD AIRBAG SENSOR ASSEMBLY

- (a) Disconnect the side and curtain shield airbag sensor assembly connector.

NOTICE:

Disconnect the connector with the sensor assembly installed.

- (b) Remove the 3 bolts and side and curtain shield airbag sensor assembly.