INSPECTION

1. Vehicle not involved in collision: INSPECT SUPPLEMENTAL RESTRAINT SYSTEM

Do a diagnostic system check (See page DI-607).

2. Vehicle involved in collision and airbag is not deployed: INSPECT SUPPLEMENTAL RESTRAINT SYSTEM

Do a diagnostic system check (See page DI-607).

3. Vehicle involved in collision and airbag is deployed: INSPECT SUPPLEMENTAL RESTRAINT SYSTEM

Replace the side airbag sensor assembly (See page RS-78).

2005 LEXUS IS300 (RM1140U)

Author: Date: 1995