



## REMOVAL

1. REMOVE REAR WHEEL
2. **SEDAN:**  
**REMOVE LUGGAGE COMPARTMENT TRIM SIDE COVER**

- (a) Remove the luggage compartment trim No. 2 cover.

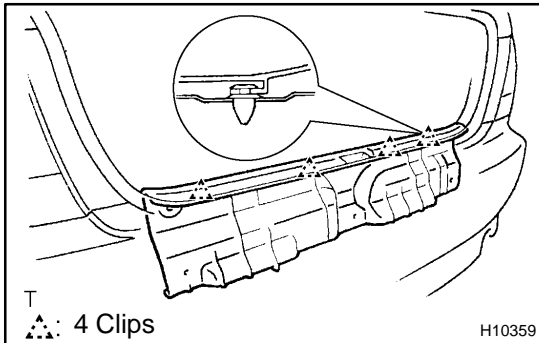


- (b) Remove the luggage compartment trim rear cover.
- (c) Remove the 2 bolts and 2 luggage compartment floor hooks.

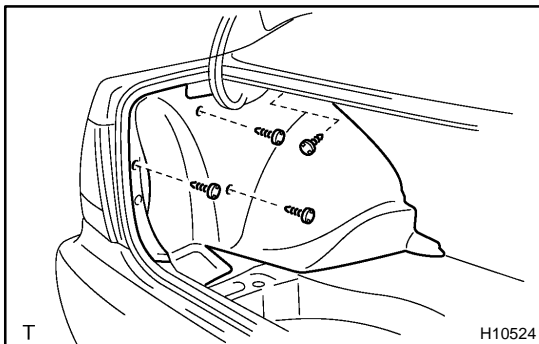

- (d) Remove the 4 screws and luggage compartment trim side cover.

3. **WAGON:**  
**REMOVE DECK TRIM SIDE PANEL ASSEMBLY**

- (a) Remove the rear seat cushion. (See page [BO-204](#) )
- (b) Remove the tonneau cover assembly.
- (c) Remove the bolt and rear seat belt assembly outer.
- (d) Remove the side seatback assembly.  
(See page [BO-204](#) )
- (e) Remove the seat board carpets.
- (f) Remove the 2 bolts and rear floor board No. 4.
- (g) Remove 2 bolts, 2 rope hook assemblies and deck floor box front.
- (h) Remove the rear floor board No. 2, No. 3 and deck board No. 2.
- (i) Remove the deck side trim box LH, RH and the spare wheel cover tray.

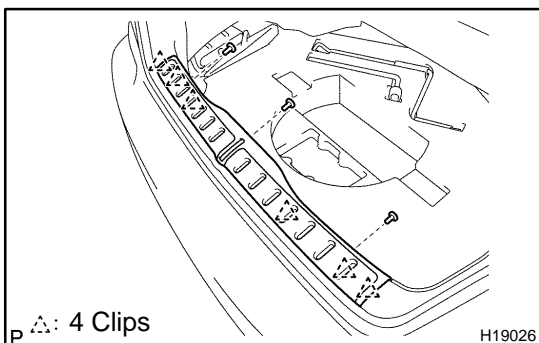


- (j) Remove the 2 bolts and 2 rope hook assemblies.
- (k) Remove the 3 clips.
- (l) Using a screwdriver, remove the rear floor finish plate.

### HINT:

Tape the screwdriver tip before use.

- (m) Remove the deck trim side panel assembly.  
(See page [BO-164](#) )

4. **REMOVE NO. 2 LOWER SUSPENSION ARM**  
(See page [SA-34](#) )

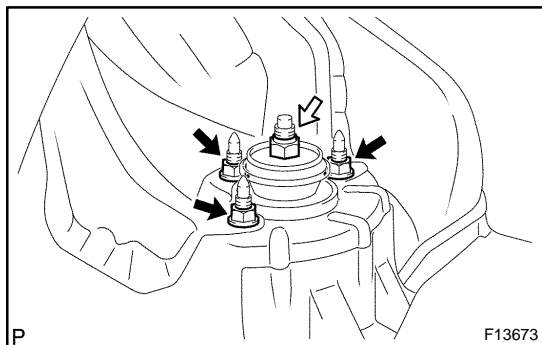

## 5. REMOVE REAR SHOCK ABSORBER WITH COIL SPRING

- (a) Loosen the nut in the center of the suspension support.


### NOTICE:

**Do not remove it.**

### HINT:

If not disassembling the shock absorber, it is not necessary to loosen the nut.

- (b) Remove the 3 nuts from the body.

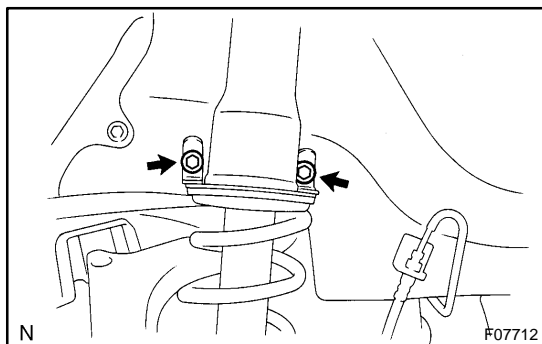

- (c) Remove the 2 bolts and shock absorber with the coil spring from the body.