

INSTALLATION

1. INSTALL REAR SHOCK ABSORBER WITH COIL SPRING

- (a) Install the suspension support to the body with the 3 nuts.
Torque: 64 N·m (650 kgf·cm, 47 ft·lbf)
- (b) Connect the shock absorber with coil spring to the body with the 2 bolts.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)
- (c) Torque the nut in the center of the suspension support.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

HINT:

If the shock absorber has not been disassembled, it is not necessary to torque the nut.

2. INSTALL NO. 2 LOWER SUSPENSION ARM (See page [SA-125](#))

3. SEDAN:

INSTALL LUGGAGE COMPARTMENT TRIM SIDE COVER

- (a) Install the 4 screws and luggage compartment trim side cover.
- (b) Install the 2 bolts and 2 luggage compartment floor hooks.
- (c) Install the luggage compartment trim rear cover and luggage compartment trim No. 2 cover.

4. WAGON:

INSTALL DECK TRIM SIDE PANEL ASSEMBLY

- (a) Install the deck trim side panel assembly. (See page [BO-169](#))
- (b) Install the rear floor finish plate with 3 clips.
- (c) Install the 2 rope hook assemblies and 2 bolts.
- (d) Install the deck side trim box LH, RH and the spare wheel cover tray.
- (e) Install the rear floor board No. 2, No. 3 and deck board No. 2.
- (f) Install the 2 bolts, 2 rope hook assemblies and deck floor box front.
- (g) Install the rear floor board No. 4 with 2 bolts.
- (h) Install the seat board carpets.
- (i) Install the side seatback assembly. (See page [BO-210](#))
- (j) Install the rear seat belt assembly outer with the bolt.
- (k) Install the tonneau cover assembly.
- (l) Install the rear seat cushion. (See page [BO-210](#))

5. INSTALL REAR WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

6. CHECK REAR WHEEL ALIGNMENT (See page [SA-9](#))