


## INSPECTION

### 1. INSPECT STABILIZER BAR LINK BALL JOINT BOOT FOR DAMAGE

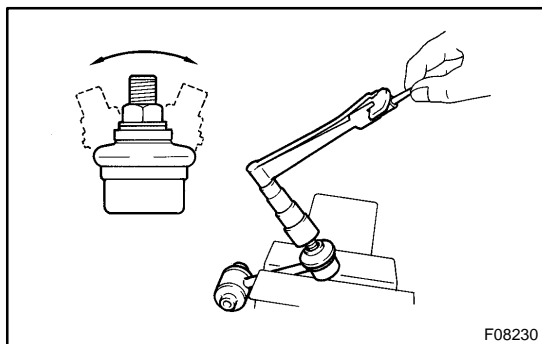

### 2. INSPECT STABILIZER BAR LINK BALL JOINT FOR ROTATION CONDITION

- (a) As shown in the illustration, flip the ball joint stud back and forth 5 times, before installing the nut.
- (b) Using a torque wrench, turn the nut continuously 1 turn per 2 - 4 seconds and take the torque reading on the 5th turn.

**Turning torque:**

**0.05 - 1.0 N·m (0.5 - 10 kgf·cm, 0.4 - 9.0 in.-lbf)**