


## INSPECTION

### 1. INSPECT UPPER SUSPENSION ARM BALL JOINT BOOT FOR DAMAGE

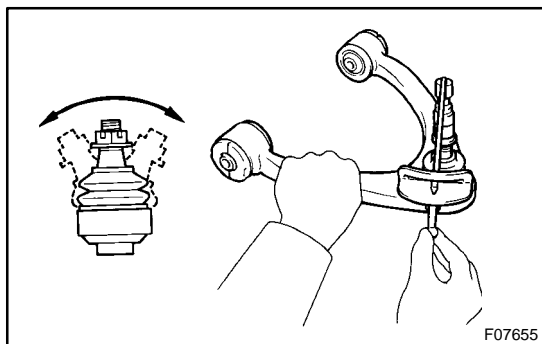

### 2. INSPECT UPPER SUSPENSION ARM BALL JOINT FOR ROTATION CONDITION

- (a) As shown in the illustration, flip the ball joint stud back and forth 5 times, before installing the nut.
- (b) Using a torque wrench, turn the nut continuously 1 turn per 2 - 4 seconds and take the torque reading on the 5th turn.

#### Turning torque:

**1.0 - 3.4 N·m (10 - 35 kgf·cm, 9 - 30 in.-lbf)**