



## FRONT LOWER BALL JOINT ON-VEHICLE INSPECTION

SAORP-06

### INSPECT LOWER BALL JOINT EXCESSIVE PLAY ON-VEHICLE

- (a) Remove the front wheel and install the hub nuts to the disc.
- (b) Using a dial indicator, check the lower ball joint for excessive play when you push the hub nuts up and down with a force of 294 N (30 kgf, 66 lbf).

**Maximum: 0.9 mm (0.035 in.)**

If it is not within the specified value, replace the lower ball joint.