

INSTALLATION

1. INSTALL 2 BUSHINGS AND BRACKETS TO STABILIZER BAR


HINT:

- Install the bushing to the stabilizer bar so that the cutout of the bushing faces the front of the vehicle, as shown in the illustration.
- Install the bushing to the outside of the paint line on the stabilizer bar.

2. INSTALL STABILIZER BAR

Install the stabilizer bar to the body with the 4 bolts.

Torque: 23 N·m (235 kgf·cm, 17 ft·lbf)

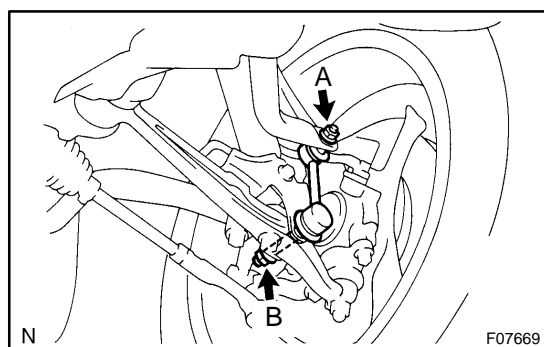

3. INSTALL RH AND LH STABILIZER BAR LINKS

Torque:

Nut A: 74 N·m (755 kgf·cm, 55 ft·lbf)

Nut B: 95 N·m (970 kgf·cm, 70 ft·lbf)

HINT:

If the ball joint turns together with the nut, use a hexagon wrench (5 mm) to hold the stud.

4. INSTALL ENGINE UNDER COVER