

Mark II, Chaser, Cresta

Wiring diagram collection GX10#, JZX10#, LX10#
series (1996-9-)

This document is a resource for inspecting and repairing the electrical wiring of the Mark II, Chaser, and Cresta. In addition to this book, we have also published a new model car manual and repair book as maintenance-related materials for this vehicle, so please use them as well. The actual product includes all wiring diagrams for vehicles produced since September 1996. If the content of this volume differs due to changes in specifications, etc., we will issue a replacement version as necessary.

September 1995 Product number 67476

Toyota Automobile Company
Service Department

History table [Issuance of wiring diagrams] Shows history]

発 行 内 容	品 番	代 金	刷 日	発行 日
Wiring diagram collection file cover (type 0)	6 8 3 6 0	1300 yen	August 29, 1996	September 5, 1996
Mark II, Chaser, Cresta (GX10#,JZX10)	6 7 4 7 6	3200 yen	August 29, 1995	September 5, 1996

If you would like to obtain a collection of wiring diagrams, please contact your local Toyota dealer or Toyota parts distributor. Please apply along with the payment amount to a Toyota dealer or Toyota parts distributor. The wiring diagram collection and file cover are separate part numbers. If you would like a file cover, please apply as well.

Overview

1

Wiring equipment diagram

2

Wiring diagram for each system

3

common connector

4

index

5

August 29, 1996 Printed
September 5, 1996 3200 (unauthorized reproduction prohibited)
Product number 7476 実費 yen (excluding consumption tax)
Published by Takashi Toyota Motor Corporation Service ;
Department 1-23-22 Izumi, Higashi-ku, Nagoya

1 Review

Structure of this book..... 1-2

Explanation of abbreviations/..... 1-2

How to read each *

chapter Chapter 2 Wiring diagram & relay location

- Wiring diagram/ 1-3
- Relay location... 1-4

Chapter 3 System-specific wiring diagram]

- Power supply/earth system diagram... 1-4
- Wiring diagram for each system 1-5

Chapter 4 Common Connector

- Junction block/relay block.... 1-6
- Wire to wire.. 1-6

5 Index

- 索引 1-7

Precautions when handling honkan 1-7




696/09 Product number 67476



Structure of this book

This book consists of the following five chapters depending on the content.

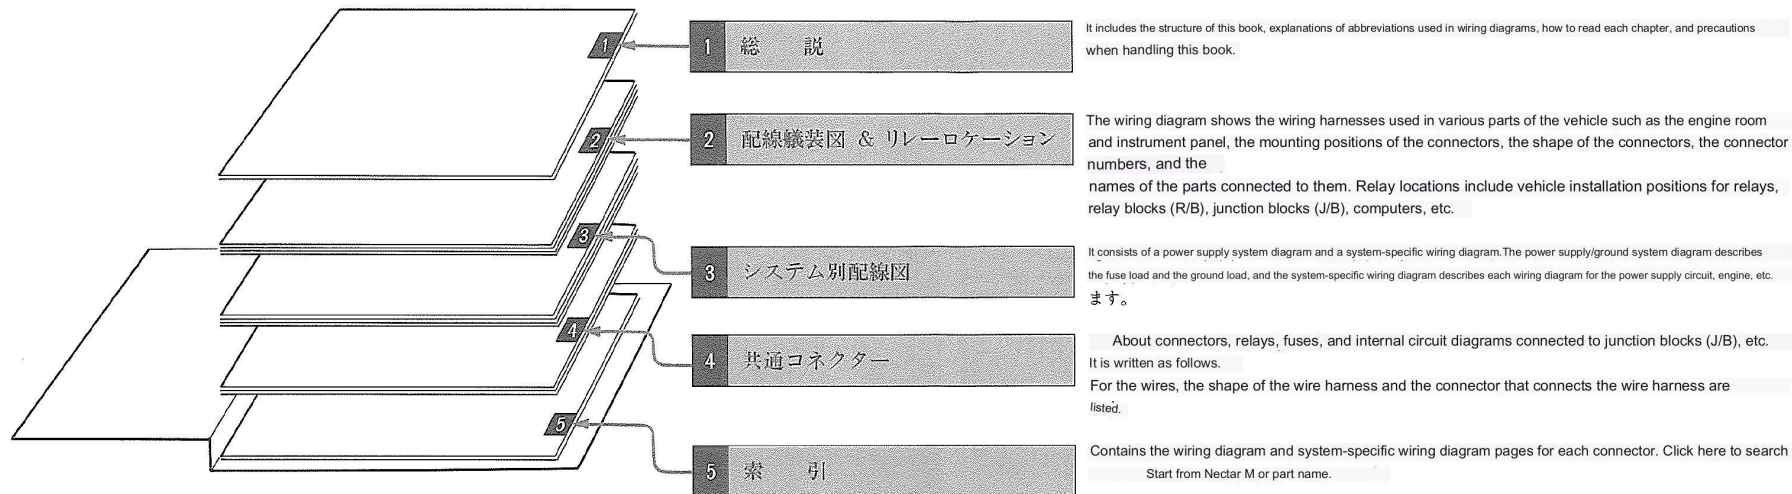

Abbreviation explanation

This book uses the following terms as abbreviations:


略 語	説 明	略 語	説 明
ABS	anti-lock brake system	LH	left hand
A/T	T automatic transaxle	M/T	manual transaxle
ECT	electronic control transmission		G/D Overdrive
F.L.	fusible link	R/B	relay block
FR	front	R.H.	right hand
ISCV	Idle Speed Control Valve	RR	リヤ
J/B	junction block	TRC	traction control
J/C	junction connector	VSV	vacuum switching valve



How to read each chapter

● Wiring outfitting diagram

Shows the wire harnesses used in each part of the vehicle, connector installation positions, connector shapes, connector numbers, and names of parts connected to them.

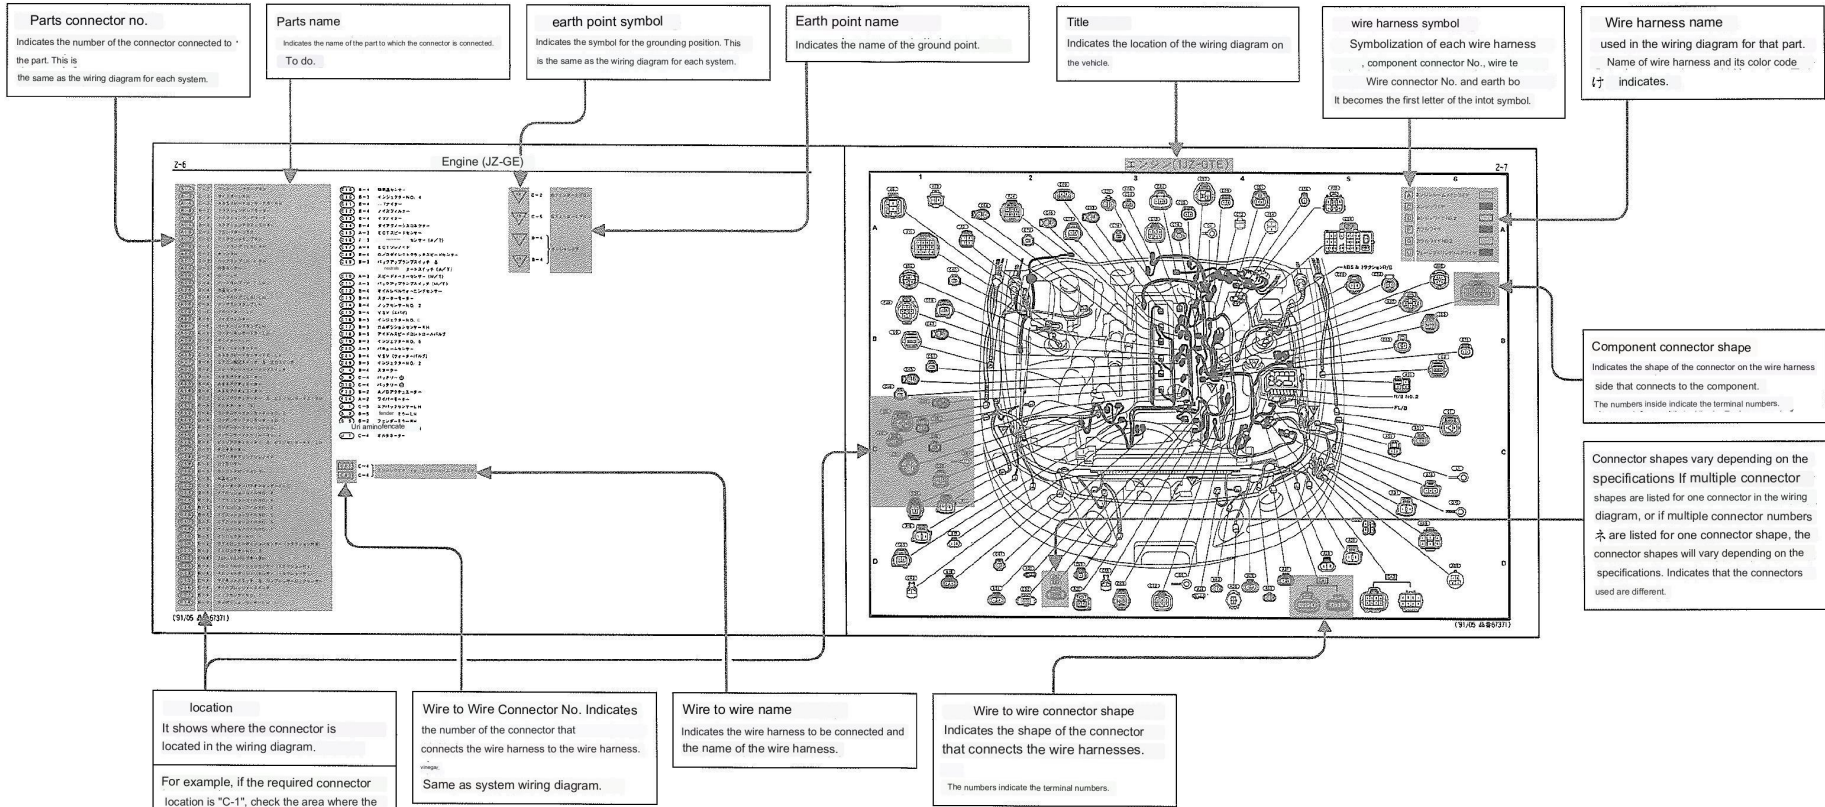

location
It shows where the connector is located in the wiring diagram.

For example, if the required connector location is "C-1", check the area where the "C" row intersects the "1" row of the wiring diagram on that page, find the connector number, and select the end of the callout line indicates the location of that connector.

Wire to Wire Connector No. Indicates the number of the connector that connects the wire harness to the wire harness.
Same as system wiring diagram.

Wire to wire name
Indicates the wire harness to be connected and the name of the wire harness.

Wire to wire connector shape
Indicates the shape of the connector that connects the wire harnesses.
The numbers indicate the terminal numbers.

<Meaning of connector number and earth point symbol>

(A5) Connector for parts
Indicates the wiring harness that the connector extends to. For example, "A" indicates the connector used inside the wire. For the wire harness name "A", refer to "Chapter 2 Wiring diagram & relay location". Indicates the serial number of the connector that belongs to that wire harness.


AC7 wire to wire connector
Indicates the wire harness to be connected. For example, "AC" indicates a connection between the "A" wire female connector and the "C" wire male connector.
Indicates the serial number of the connector used for the wire-to-wire combination.

AF earth point symbol
Indicates the wire harness that connects to that ground point. For example, "AF" indicates that the "A" wire is connected to the "F" point.
Earthing points inside the vehicle are classified by alphabet.

*1 Female connector: Female terminal
*2 Male connector: Male terminal




96/0967476)

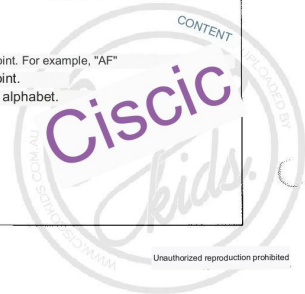

relay location


Vehicle installation of relays, relay blocks (R/B), junction blocks (J/B), computers, etc. Indicates the location.

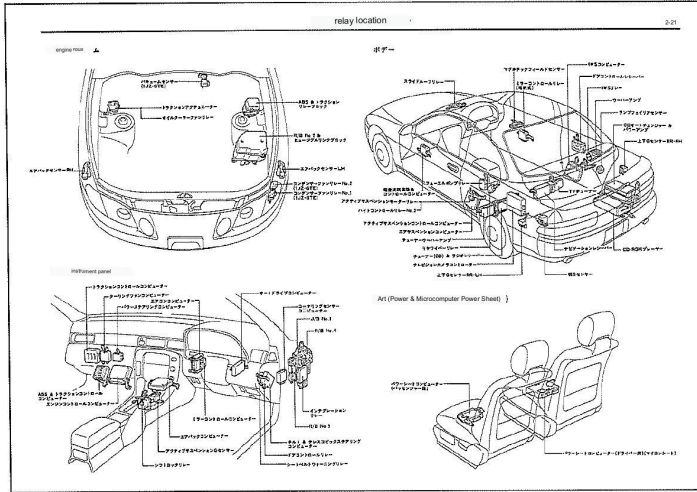



Power/ground system diagram

fuse load
Which system each fuse is associated with indicates.

Earth Load
Indicates which system each ground is associated with.

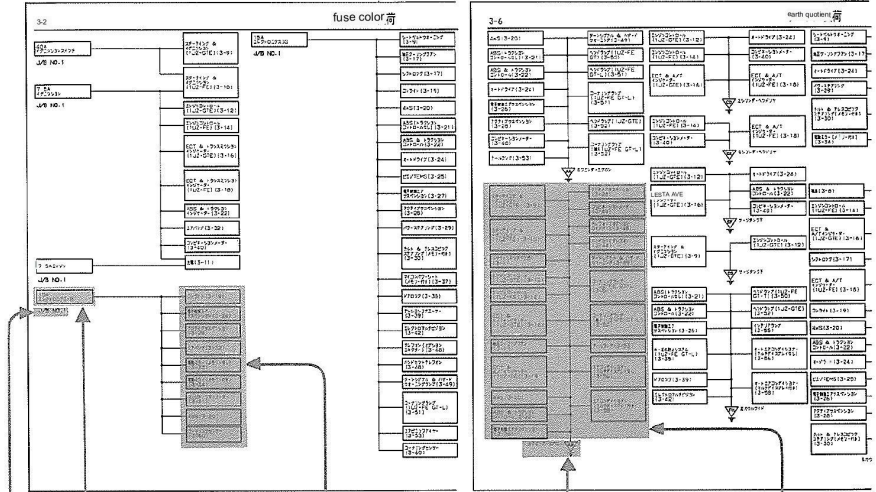


Fuse installation position
Parts with fuses installed
Indicates the name and its mounting location on the vehicle. Also, remove the fuse inside the part. The mounting position is "Chapter 4 connector" Browse.

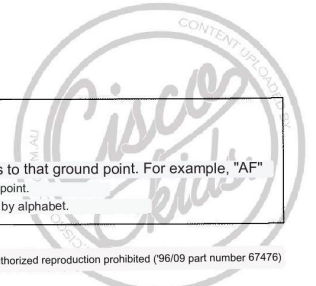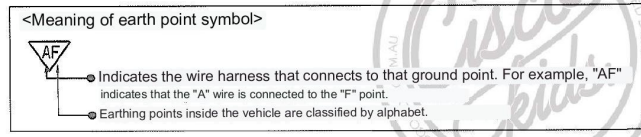

● Wiring diagram for each system


It consists of a power supply wiring diagram and each system wiring diagram. The power supply wiring diagram describes the wiring diagram from the power supply to the fuse, and the system wiring diagram describes the wiring diagram from each system's fuse to ground.

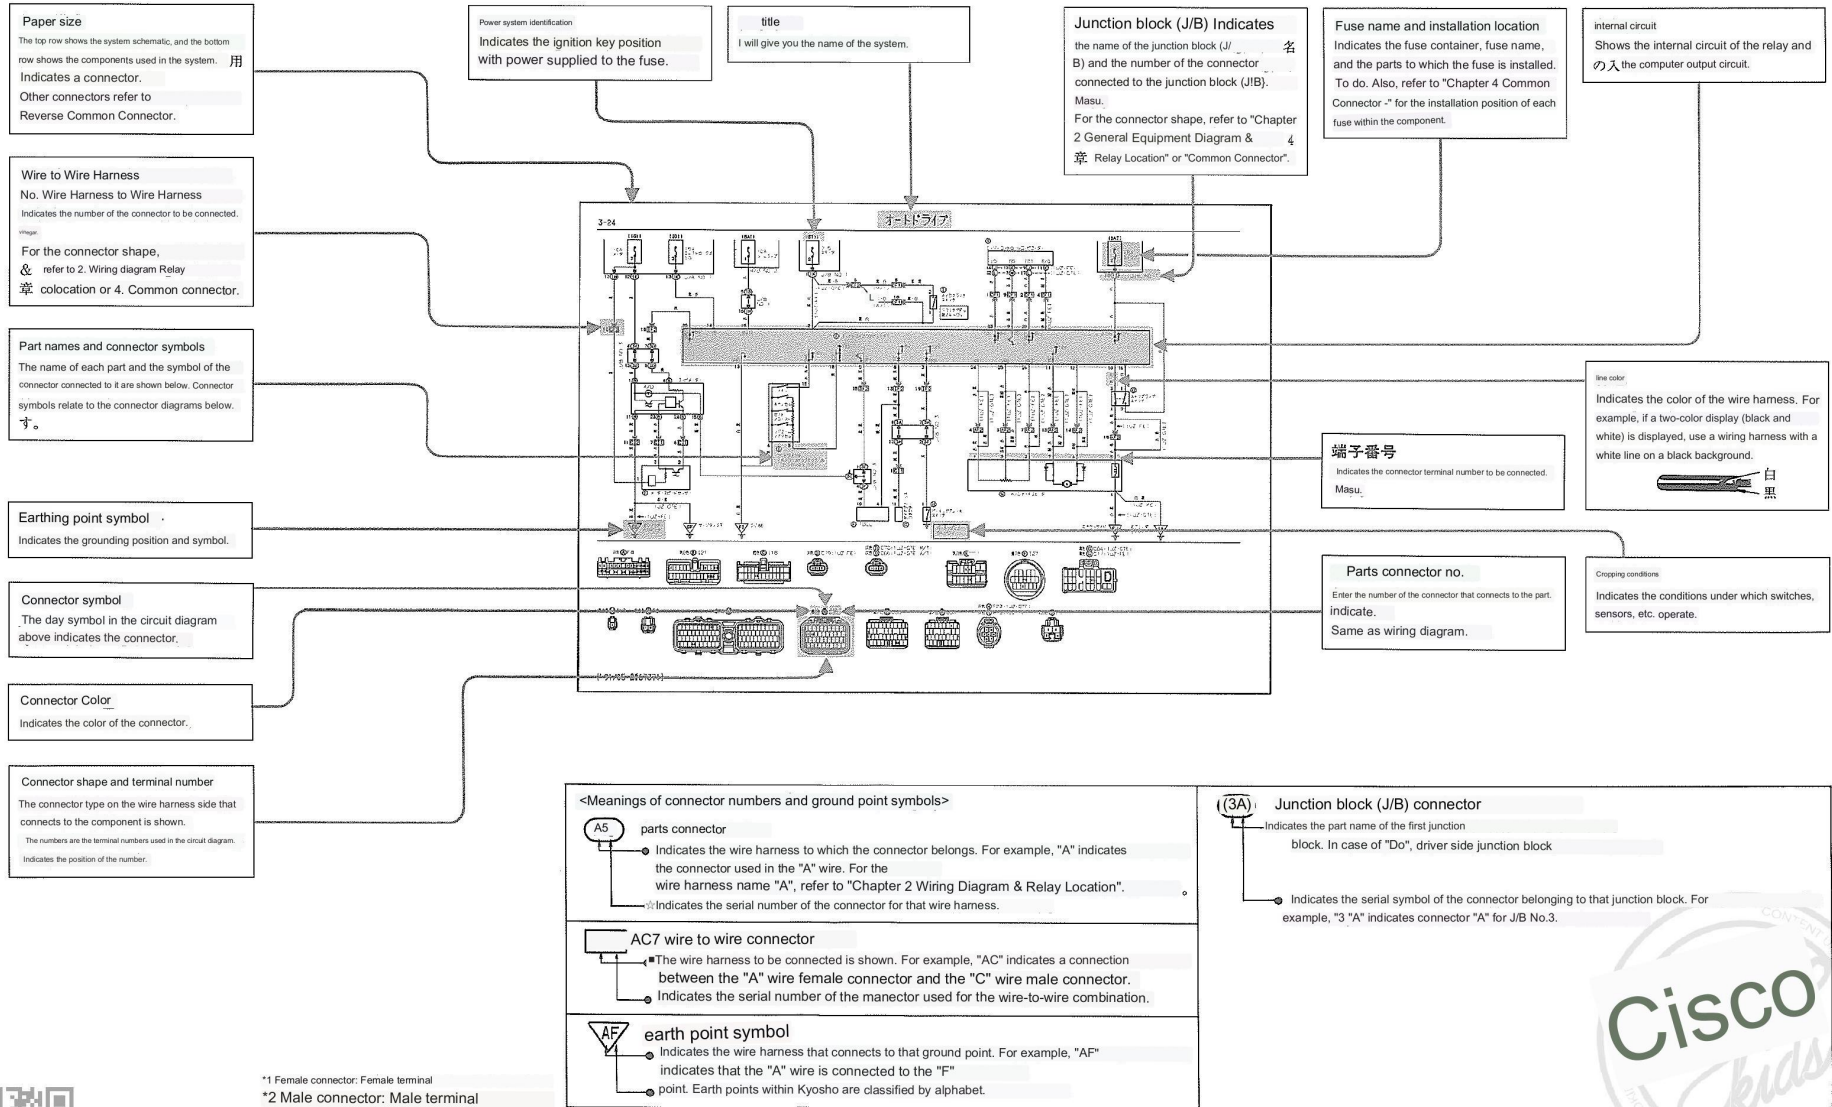

*1 Female connector: Female terminal
*2 Male connector: Male terminal




(*96/09 part number 67476)

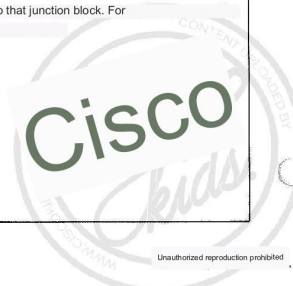


●Junction block (J/B)/Relay block (R/B)

Describe the connectors, relays, fuses, and internal circuits connected to the junction block (J/B), etc. there is.

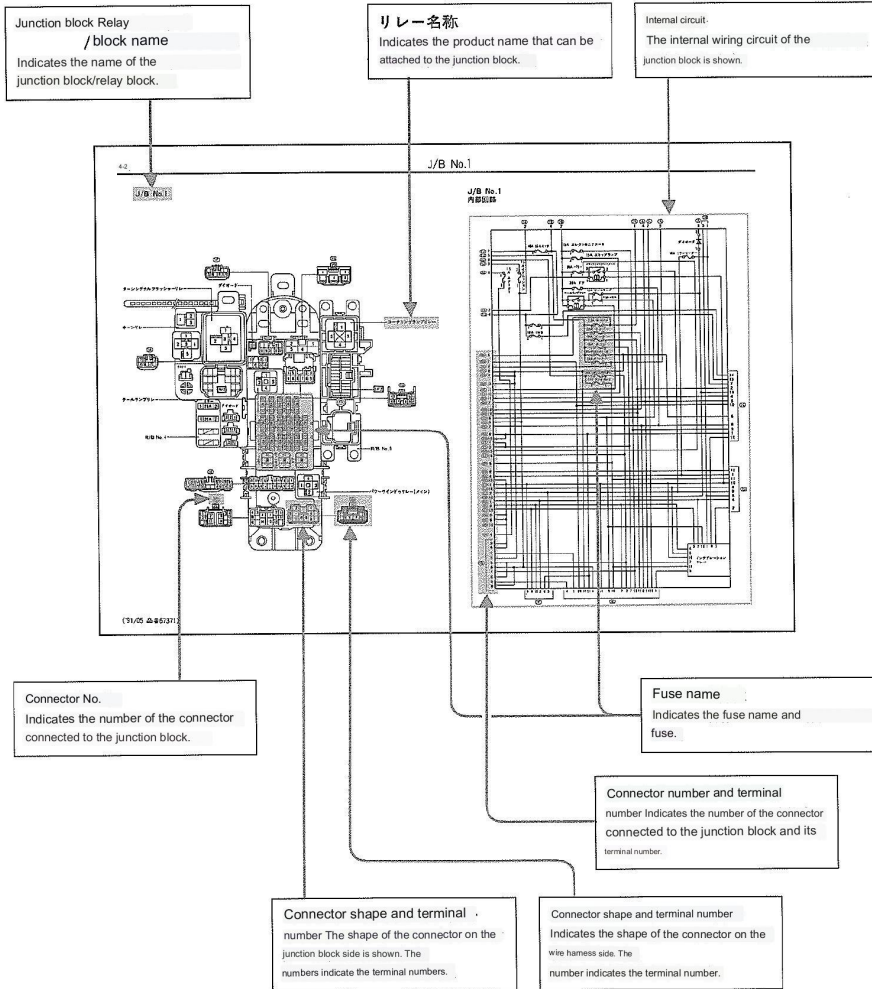

●Wire to wire

A list of wire harnesses and connectors that connect wire harnesses is provided.

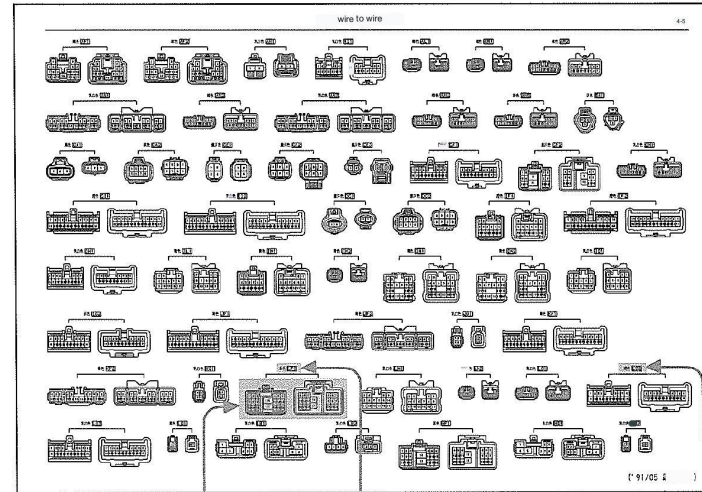

Connector shape and terminal number
Indicates the shape of the connector that connects the wire harnesses. The numbers indicate the position of the terminal number.

Wire to Wire Connector No. Indicates the number of the connector that connects the wire harness to the wire harness. This is common to wiring equipment and system-specific wiring diagrams.

Connector Color
Indicates the color of the connector.


<Meaning of connector number>

SA Junction Block (J/B) Connector -
Indicates the part name of the junction block.
If "Do" indicates the driver side junction block.

Indicates the serial number of the connector belonging to that junction block. For example, "3 A" indicates connector "A" belonging to T/B No.3.

AC7 wire to wire connector
Indicates the wire harness to be connected. For example, "AC" indicates a connection between the "A" wire female connector and the "C" wire male connector. For the wire harness names "A" and "C", refer to "Chapter 2 Wiring Framed Diagram & Relay Location".
Indicates the serial number of the connector used for the wire in wire of the combination.

*1 Female connector: Terminal gamecot
*2 Male connector Terminal is male

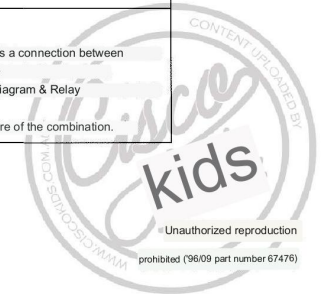

2 Wiring outfitting diagram & relay location

Wiring outfitting diagram

Engine room (1G-FE)	2-2
Engine room (1JZ-GE)	2-5
Engine room (1JZ-GTE)	2-8
Engine room (2JZ-GE)	2-11
Engine room (2L-TE)	2-14
Instrument panel	2-7
Body	2-21
Power seat	2-25

relay location

Relay location...2-2G	
-----------------------------	--




Wire harness symbol	Wire harness name
A	engine room main wire
B	Engine room wire No.2
C	Engine tire
D	Engine tire No.2
E	Engine wire No.3
F	cowl fire
G	instrument panel wire
H	Front door wire RH
I	Front door wire LH
J	Rear door wire No.1
K	Rear door wire No.2
L	floor wire
M	Floor wire No.2
N	Sheet wire No.1
C	Roof wire No.1
P	Trunk panel (luggage compartment door) Tire No.1
Q	Front window fogger switch wire
R	Cooler wiring harness No.1
S	Cooler wiring harness No.2
T	Engine room resea block ASSY





(A3)	A2	Freon, wiper motor	(C106)	C7	C2 sensors
(A 6)	A1	ABS speed sensor RTH	(C107)	B7	temperature sensor
(A 7)	B1	Reid Turn RH (Mark II, Cresta)	(C10B)	A7	igniter
(A8)	D1	Fender marker lamp RH (Mark II Cresta)	(C109)	H2	ignition coil
(A9)	D1	Fron, Turn RH (Mark II Cresta)	(C110)	B7	condenser (radio)
(A10)	C1	Front fog lamp RH (Mark, Cresta)	(C157)	A9	メーター Speed sensor (MT)
(A11)	02	Clearance lamp RH	(D 1)	D12	Battery... (+)
(A12)	D2	Headlamp RH (Mark II, Cresta)	(02)	A1	starter
(A13)	03	Horn RH	(E1)	02	Battery(-)
(A14)	D3	Outside temperature	(F46)	A5	ABS actuator
(A15)	B1	sensor front turn A (chaser)	(F48)	D4	J/C No.2
(A16)	C1	Headlamp HH (Lo) (Jacer)	(F49)	C6	option nine nectar
(A18)	D2	Headlamp RH (Hi) (Chaser)	(F50)	Ca	washer motor
(A19)	D1	Front fog lamp RH (Chaser)	(F51)	02	ABS Speedmantha "R- LII"
(A27)	D4	Horn LH	(F62)	A4	Breather switch (air conditioner high pressure side switch)
(A28)	05	Headlamp LH (Mark II Cresta)	(F63)	A5	ABS actuator
(A30)	D6	Clearance lamp LH	(F71)	A4	Washer motor (oil removal)
(A31)	D6	Front fog lamp LH (Mark II Cresta)			
(A32)	06	Front turn LM (Mark II, Cresta)			
(A33)	09	Fender marker lamp LM (Mark II, Cresta)	(2A)	A6	} Engine room main wire Ic J/B Nc.2
(A34)	C6	Side turn LH (Mark II, Cresta)	(2B)	3.6	
(A35)	D5	Front fog lamp LH (Chaser)	(2 C)	B3	} Kaurwaya to JIB No.2
(A36)	D6	Front turn LH (chaser)	(2 D)	06	
(A36)	06	Headlamp LH (Hi) (Chaser)	(2 E)	C6	
(A39)	06	Headlamp LH (Lo) (Chaser)	(2 G)	C6	
(A10)	D4	Battery (+)			
(A41)	B6	J/C No.2			
(A42)	B6	Engine room R. (ABS)			
(A43)	D4	FL (ABS&Glow)	(QAI)	A1	Front window defogger switch wire to Engine room main wire
(A44)	A3	FL (Alter)			
(A45)	A5	FL (Alter)			
CA40	A5	FL (Alter)			
(A47)	A1	Brake level warning switch	(AB)	B1	white fender apron ass
(A55)	D11	alternator	(AD)	C1	D Left fender apron ground
(A56)	D11	alternator	(ACH)	B2	Intake manifold ground
(C 9)	A10	AT speed sensor	(EL)	B6	Left fender apron ground
(C11)	A10	vacuum sensor	(E.M)	D9	engine block ground
(C78)	A8	neutral start switch			
(C80)	A9	ECT solenoid			
(C98)	A9	Backup lamp swig (M1/12)			
(C89)	A11	starter			
(C90)	A10	water denpara chasender gauge			
(C91)	A7	Injector No.4			
(C92)	A7	Injector No.5			
(C93)	A8	Injector No.6			
(C94)	A10	Knock sensor No.1			
(C95)	D10	oil pressure switch			
(96)	B2	VSV (Nivabo)			
(C97)	C12	diagnosis connector			
(C96)	D9	water temperature sensor			
(C99)	D8	Injector NO.1			
(C100)	D8	Injector NO.2			
(Z101)	D7	Injector NO.3			
(C102)	A7	ISCV			
(C103)	C7	throttle position sensor			
(C104)	D10	magnetic clutch			
(C105)	C7	Distributor			





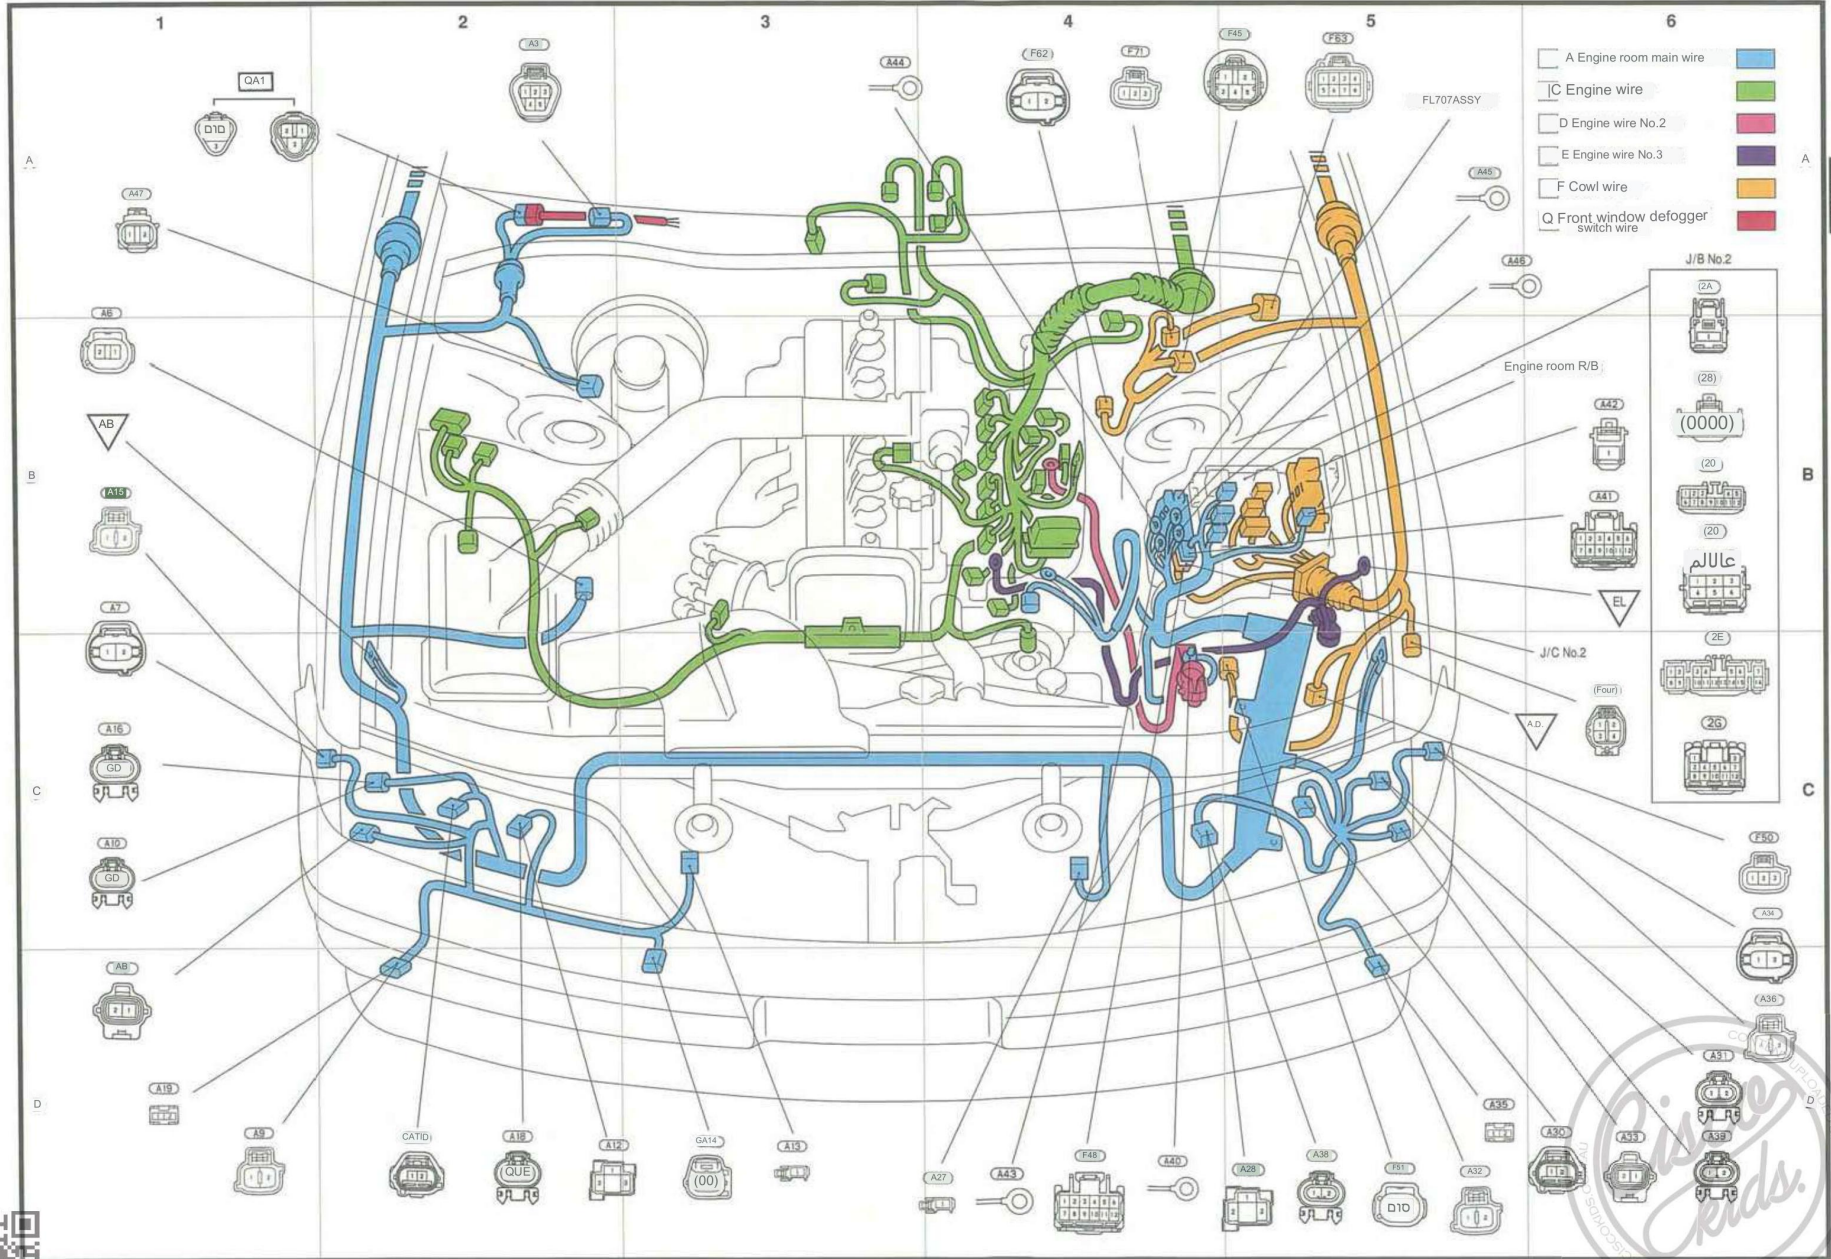

- A Engine room main wire
- C Engine wire
- D Engine wire No.2
- E Engine wire No.3
- F Cowl wire
- Q Front window defogger switch wire

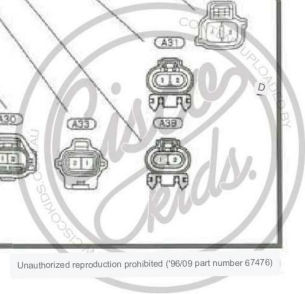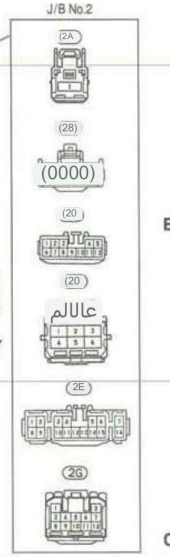

Engine room (1G-FE main unit)

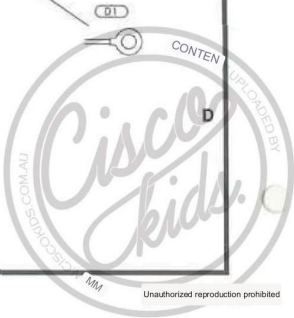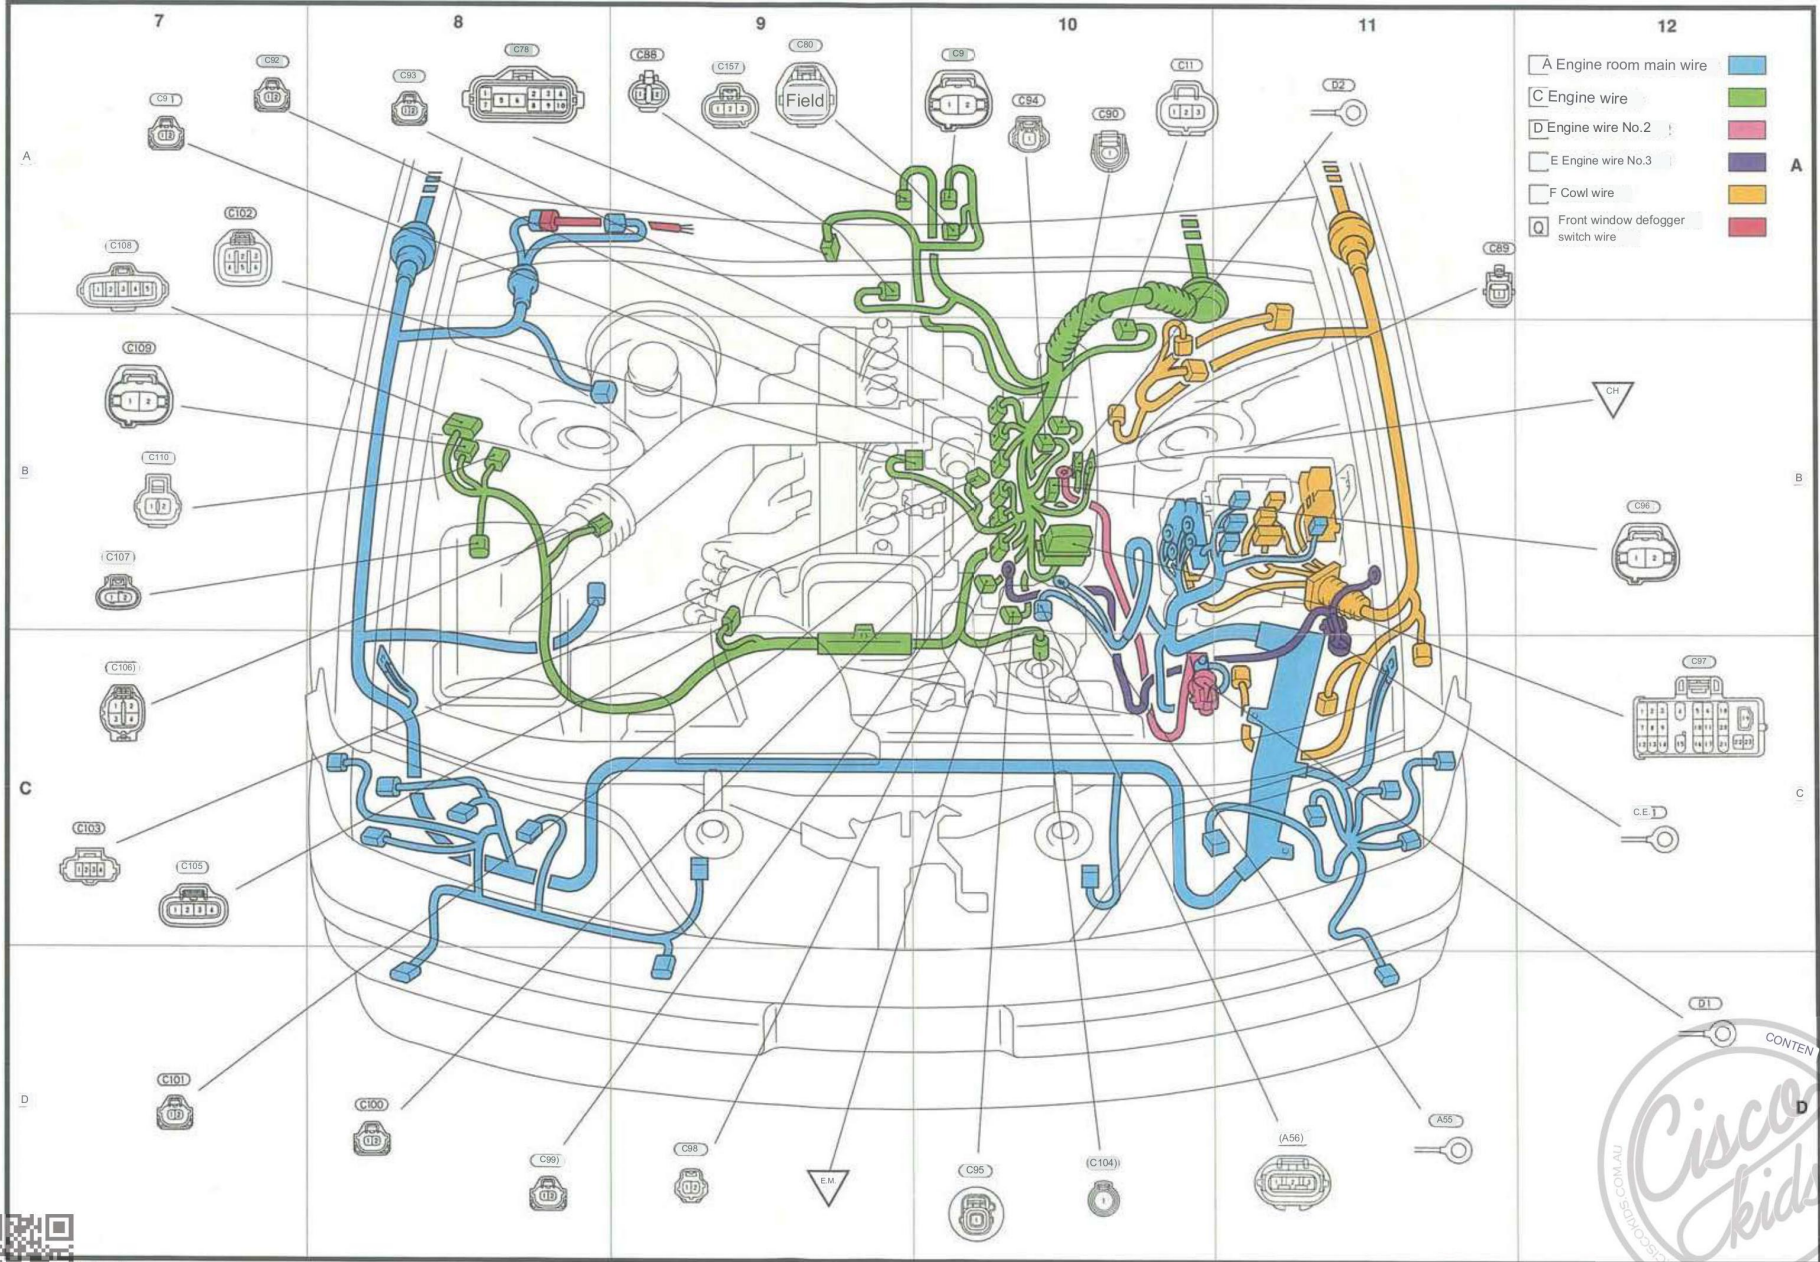

- (A3) A2 front wiper motor
- (A 4) A1 cruise control actuator
- (A 5) A1 Absorber control actuator FR RH (Skyhook> (C2B)
- (A 6) A1 ABS speed sensor FR RH
- (A7) B4 Reid Turn RH (Mark. Cresta)
- (A 8) C1 Fender marker lamp RH Mark II, Cresta)
- (A 9) D-1 Front turn RH (Mark II' Cresta)
- (A10) B1 Front fog lamp RH (Mark II Cresta)
- (A11) C1 Clearance lamp RH
- (A12) D-1 Headlamp RM (Mark II, Cresta)
- (A13) D2 horn RH
- (A14) D2 outside temperature sensor
- (A15) C1 Front turn RH (chaser)
- (A16) B-1 Headlamp RH (Lo) (Chaser)
- (A18) D1 Headlamp RH (Hi) (Chaser)
- (A19) C-2 Front fog lamp RH (Chaser)
- (A20) 42 alter neck
- (AZ1) -3 alternator
- (A23) K-1 Power steering solenoid
- (A27) D-3 ホーンLH
- (A28) D-3 Headlamp H [Mark II Cresta]
- (A30) D-4 Clearance lamp LH
- (A31) D-3 Front fog lamp LH (Mark II' Cresta)
- (A32) D-5 Front turn 1H (Mark II, Cresta)
- (A33) 0-6 Fender marker lamp LH (Mark II, Cresta)
- (A34) D-6 Side Turn (Mark II, Cresta)
- (A35) D-3 Front fog lamp LH (chaser)
- (A36) Turn H (Chaser)
- (A36) D-4 Headlamp LH (Hi) (Chaser)
- (A38) D-6 Headlamp LH (Lo) (Chey t--)
- (A40) D-3 Battery (+)
- (A41) B-6 J/C No.2
- (A42) 2-9 Engine room AV (ABS)
- (A13) A-3 FL (ABS&Glow)
- (A44) A-3 FL (Alter)
- (A45) 44 FL (Qanta)
- (A46) A-4 FL (Qanta)
- (A47) A-2 Brake level warning switch
- (A48) A-1 Front fog lamp RH (Mark II, Cresta)
- (A49) B-1 headlamp R (Lo)
- (A50) D-1 Headlamp level actuator RH
- (A51) D-5 Headlamp LH (Lo)
- (A53) D-4 Headlamp level actuator LH
- (A54) D-4 Front fog lamp [Mark II, Cresta)
- (C7) A-11 O/D Direct clutch speed sensor
- (C 9) A-8 AT speed sensor...
- (C11) A-12 Vacuum sensor-
- (12) A-11 VSV Evabo)
- (C13) B-12 Cam position sensor
- (14) A7 Injector No.6
- (C15) A7 Injector No.5 B-12
- (C16) vsv (variable intake)
- (C17) D-12 Power steering switch
- (C18) D-11 Knock sensor No.2
- (C19) B-12 Starter
- (C21) D-8 Injector No.3
- (C24) D-9 Injector No.1

- (C25) D-8 WV-Solenoid
- (C27) D-9 oil pressure switch
- D-10 water temperature sensor
- (C29) D-9 Knock sensor No.1
- (C30) D-10 Water Temperature Cender Gauge
- (c31) D-11 Magnetic clutch & lock sensor
- (C32) D-8 Ignition coil No.1
- (c33) A-7 Ignition coil No.2
- (c31) D-7 Ignition coil No.3
- (c35) B-7 subthrottle position sensor
- (C37) C-7 sub throttle valve motor
- (C38) A-7 O2 sensor
- (39) D-7 crank position sensor
- (C40) B-7 Igniter intake
- (C41) C-7 temperature sensor
- (C42) D-7 Condenser (Radio)
- (C47) D-7 Injector No.4
- (078) A-8 neutral start switch
- (c79) A-11 ECT solenoid (2WD)
- (c80) A-10 ECT solenoid (4WD)
- (C82) D-7 Throttle position sensor...
- (C83) D-8 Injector No.2
- (C84) D-12 Diagnosis Connector
- (C85) ISC
- (C159) A-9 ECT solenoid (TRC)
- (D1) 9-12 battery (+)
- (D2) C-12 starter
- (E1) C-12 Battery(-)
- (F45) A-5 AGS & TRC actuator
- (F46) A-5 ABS actuator
- (F47) A-4 Absorber control actuator FR LH (Skyhook)
- (F48) 3-6 J/C No.2
- (F49) C-6 Optional connector
- (F50) D-6 Washer...motor
- (F51) D-3 ABS speed sensor FRL H
- (FE2) A-4 Breather switch (air conditioner bad low pressure side switch)
- (F63) A-5 ABS actuator (71)
- washer) A-4 motor (film removed)


- (2 A) B-6 engine room main fire to JE No.2
- (2B) E-6 engine room main fire to JE No.2
- (2C) B-3 cowl wire
- (20) 3-6 Co. JB No.2
- (2 E) C-6
- (2 G) C-6

- (QA1) A-2 Front window defogger switch wire to engine room main wire


- (AB) F-1 Right fender apron ground
- (AD) C-6 左 Fender Apron Ground
- (ACE) B-2 intake manifold ground
- (CF) D-11 intake manifold ground
- (EL) C-12 left fender apron ground
- (EM) F-11 engine block ground



Engine room (around 1JZ-GE)

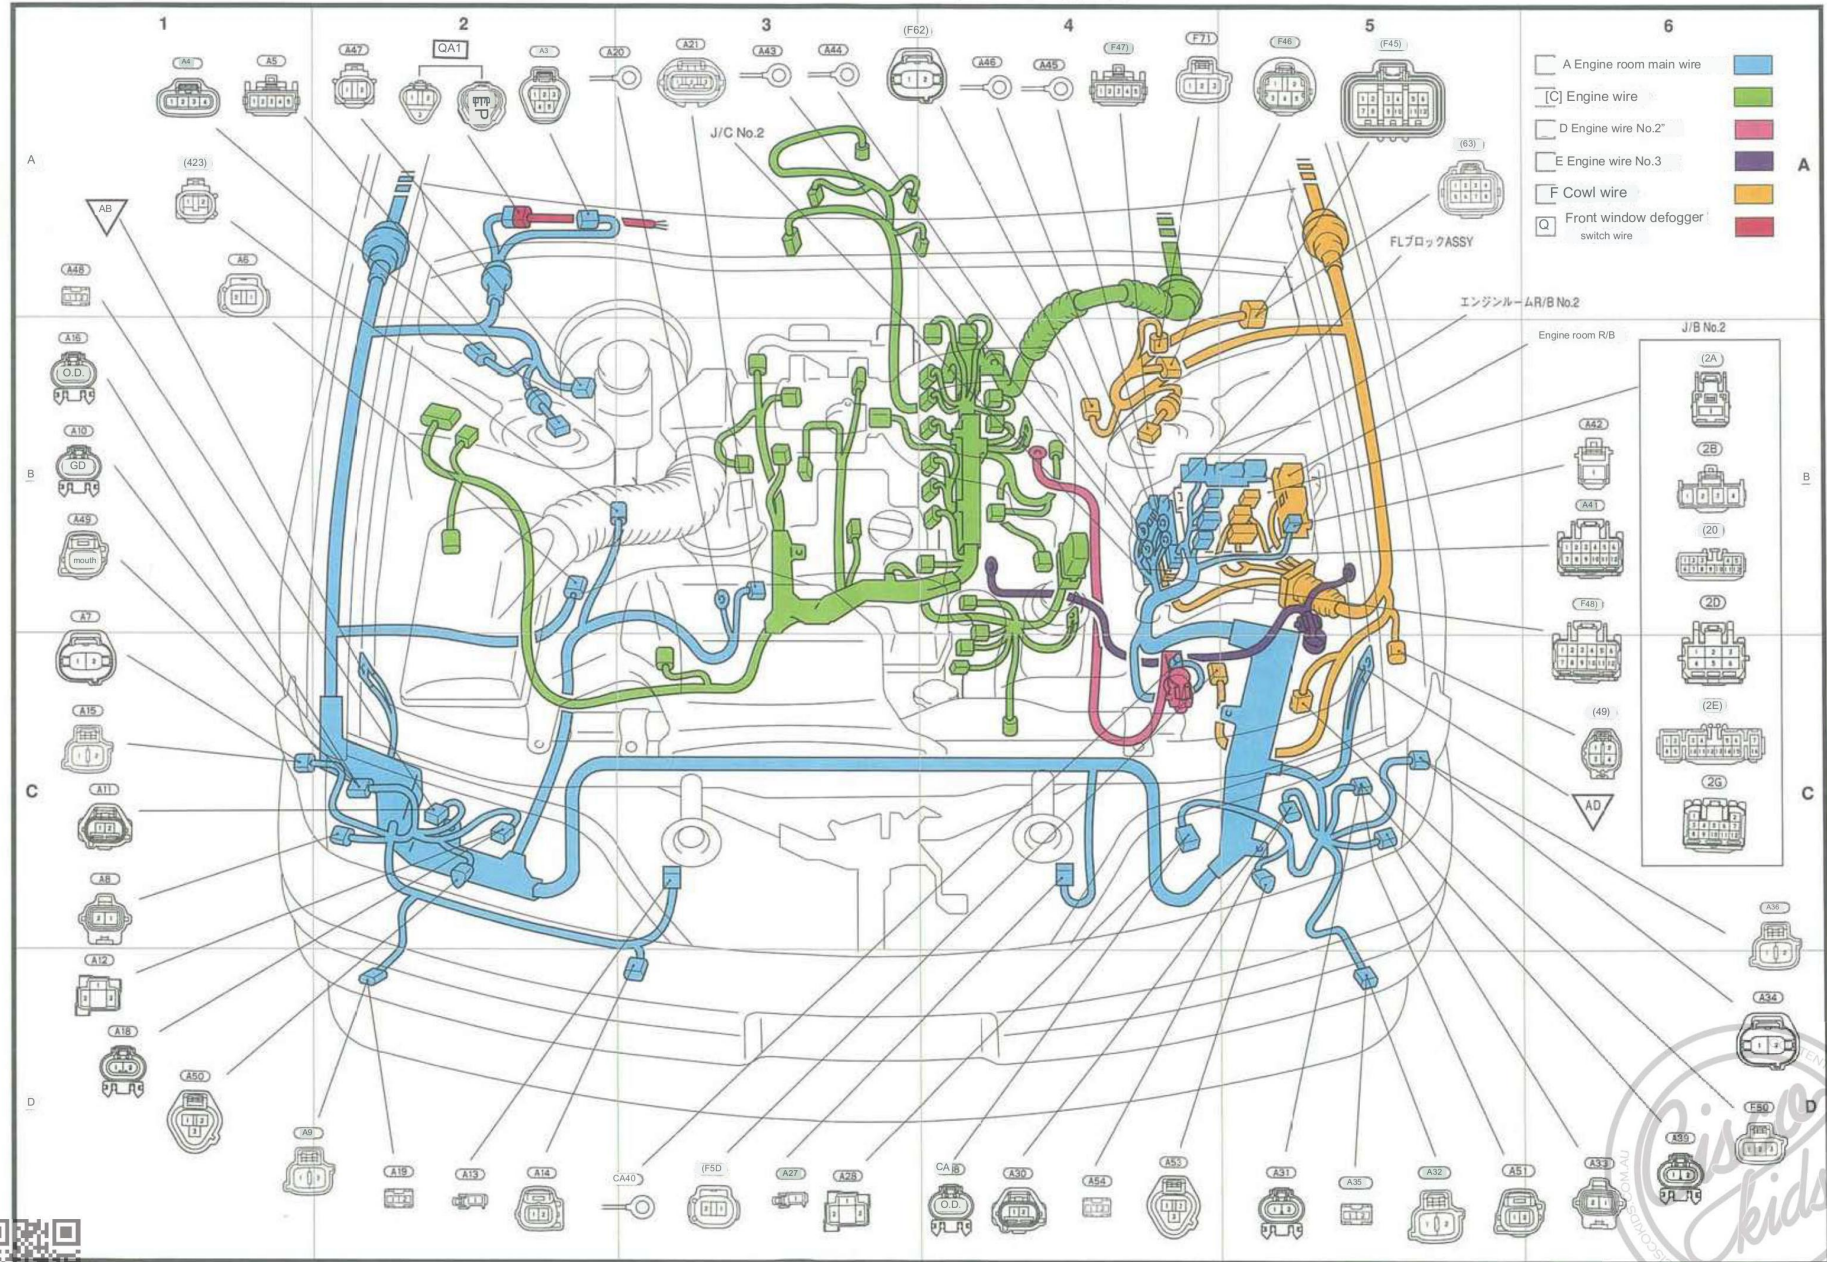

Engine room (1JZ-GE main unit)

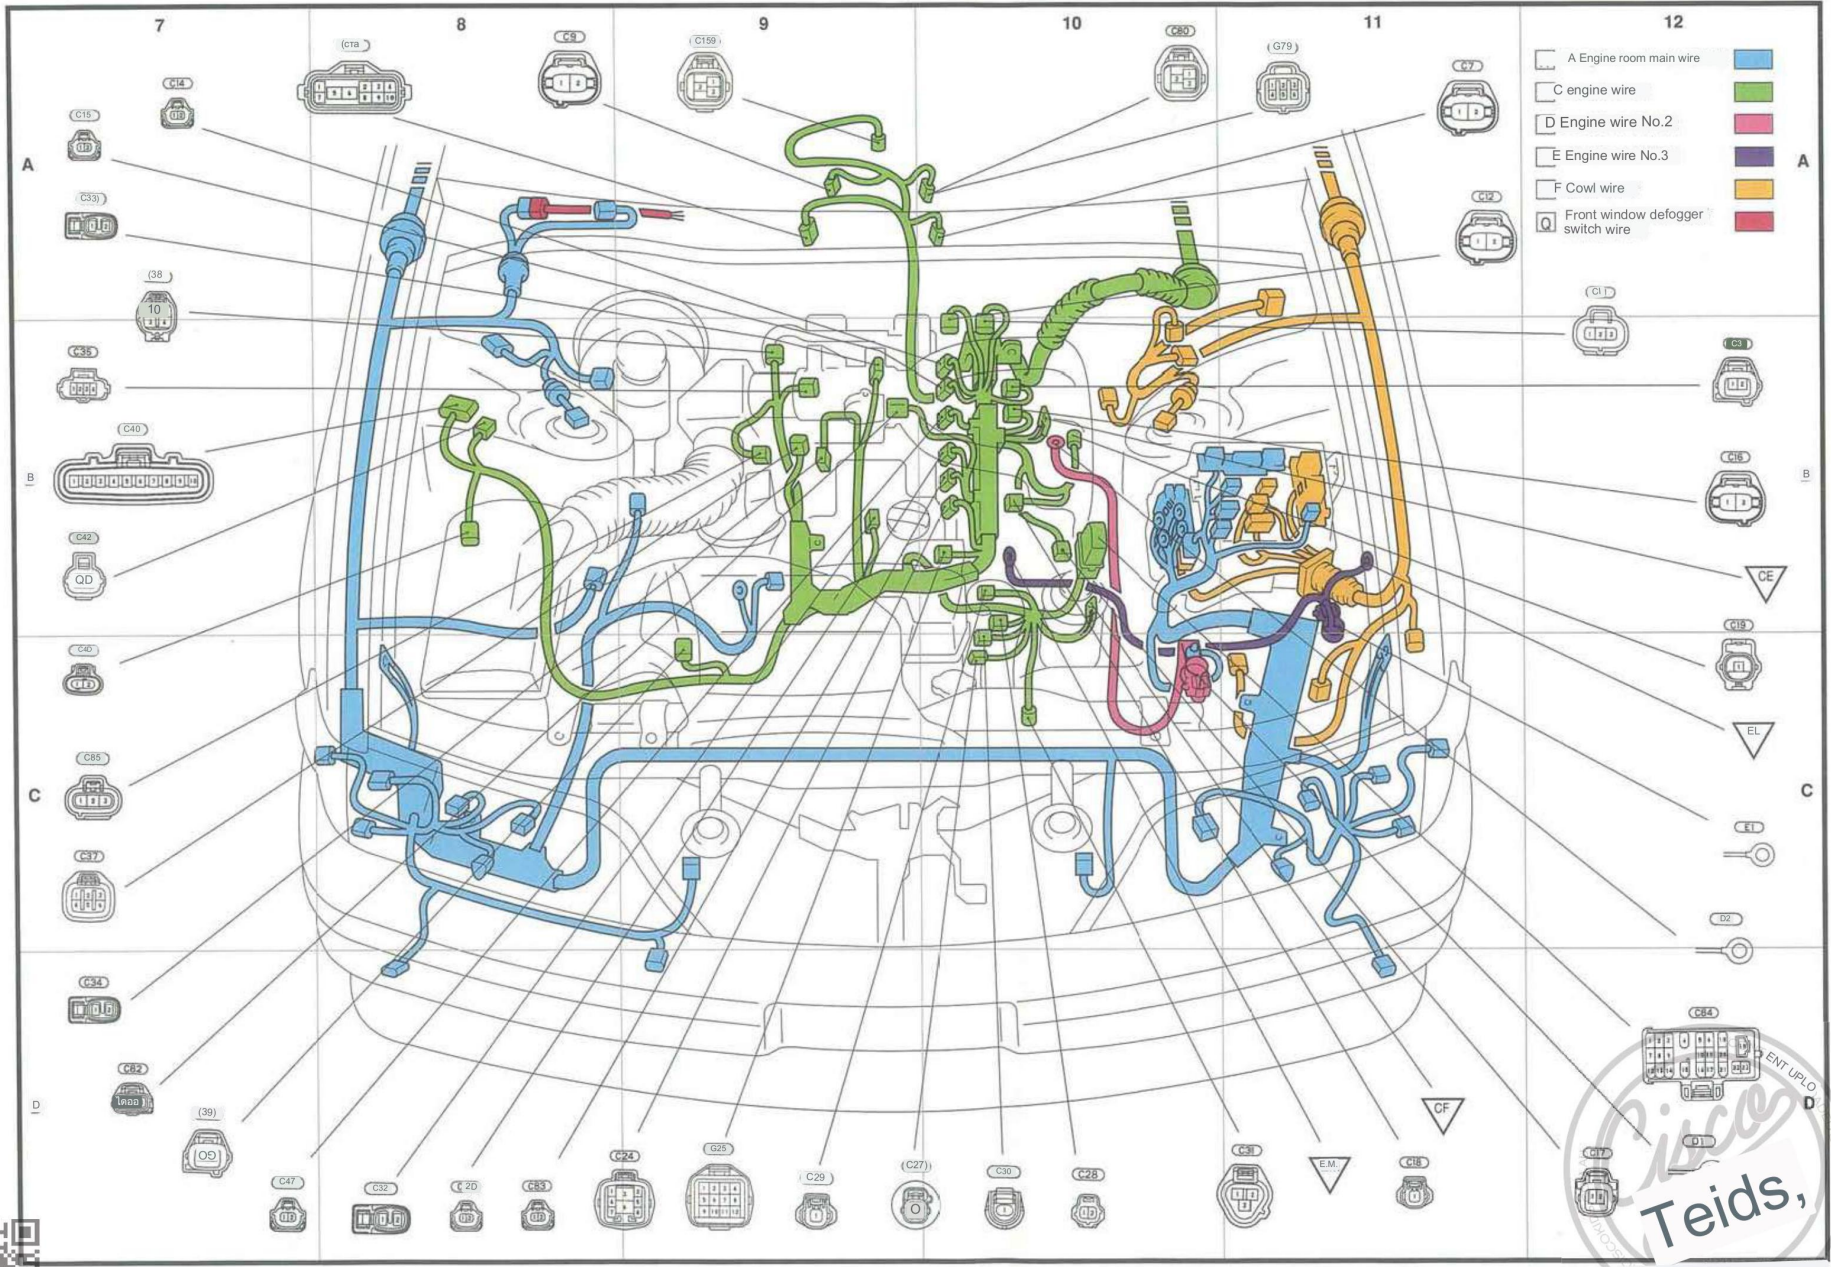

Engine room (1JZ-GTE)

- (A3) A2 front wiper motor
- (A6) B-1 ABS speed sensor FABH
- (A7) B-1 Side Turn RH (Mark II Cresta)
- (AE) C-1 Fender marker lamp AM (Mark II IT, Cresta)
- (A9) D-1 Front turn RH (Mark II Cresta)
- (A11) D-4 Clearance lamp RH
- (A13) D-3 Horn ph
- (A14) D-2 outside temperature sensor
- (A15) C-E Front turn AH (Chaser)
- (A18) 0-2 Headlamp (H) (Chaser)
- (A19) D-1 Front fog lamp H (Chaser)
- (A20) B-1 alternator
- (A21) A-2 alternator
- (A22) A-1 Fuel pump register
- (A23) A-1 Power steering solenoid
- (A27) D-3 Horn LH
- (A29) S-3 Radiator fan motor No.1
- (A30) D-4 Clearance lamp H
- (A32) D-3 Front tongue LH (Mark II Cresta)
- (A33) D-3 Fender marker lamp LH (Mark II, Cresta)
- (A34) D-3 Side Turn H (Mark II, Cresta)
- (A35) D-5 Front fog lamp (Chaser)
- (A36) C-3 Front turn LH (Chaser)
- (A38) 4 Headlamp LH (H)
- (A40) D-4 Battery (+)
- (A9-5) JC No.2
- (A12) B-3 Engine room A/B (ABS)
- (A43) A-3 FL (AB & Glow)
- (A44) A-3 FL (Alter)
- (A45) A-4 FI (Alter)
- (A16) A-4 FL (Alter)
- A17 A-1 Brake level warning switch
- (A48) C-1 front fog light/RH (Mark II, Cresta)
- (A49) C-1 Headlamp AH (Lv)
- (A50) D-1 Headlamp level actuator RH
- (A5%) D-5 Headlamp LH (Lc)
- (A52) A-3 Radiator Noan Motor Nec.2
- (A53) 0-6 Headlamp Sibel Actuator/H
- (A54) D-6 Front Fog Lamp H (Mark, Cresta)
- (B1) 0-3 Water temperature switch (radiator fan)
- (C13) A-7 cam position sensor
- (C14) A-6 Injector No.6
- (C15) A-11 Injector No.5
- (C18) B-7 Knockonser No.2
- (C19) D-12 starter
- (C46) A-11 ISCV
- (C47) 0-7 Injector No.4
- (C48) 4-11 VSV (涡轮增压)
- (C49) 0-10 VSV (Evabo)
- (C50) 4-10 DD direct clutch speed sensor
- (051) A-8 neutral start switch
- (C52) 4-10 NT speed sensor
- (C53) A-10 CT solenoid
- (C54) A-9 backup lamp switch
- (C55) A-9 Meter speed sensor (bottom)
- (C56) B-12 diagnosis connector
- (C57) B-12 condenser (radio)

- (C58) B-2 Igniter
- (C59) B-7 Injector No.3
- (C60) B-7 Injector No.2
- (C61) D-9 Knock sensor No.1
- (C62) D-11 sub throttle valve motor
- (C63) D-11 throttle position sensor
- (C64) C-16 Magnetic clutch & lock sensor
- (C65) D-3 Oil pressure switch
- (C66) D-7 Injector No.1
- (C37) C-16 Subthrottle position sensor
- (C68) D-3 VVT solenoid
- (C69) C-7 Ignition coil No.1
- (c70) A-7 Ignition Coil No.2
- (C71) A-8 Ignition Coil No.3
- (C72) D-8 Water Ampara Chasender Gauge
- (C73) D-8 water temperature sensor
- (C74) D-7 crank position sensor
- (C75) C-7 air flow meter
- (C78) A-7 O2 sensor
- (C77) A-7 VSV (ABV)
- (D1) D-11 Battery (+)
- (D2) C-12 starter
- (E1) battery (-)
- (F44) A-4 Pressure switch (Nearcon high/low pressure side switch)
- (F45) A-5 ABS & TRC Actuator
- (F4B) A-5 ABS Actuator
- (F48) B-6 J/C No.2
- (F49) C-6 Optional connector
- (F50) C-6 washer motor
- (F51) D-4 ABS speed sensor FFLH

- (2A) B-6 } Engine room main wire To JB No.2
- (2B) B-6 }
- (2C) B-6 }
- (2D) C-6 }
- (2E) C-6 } cowl wire J/B No.2
- (2G) C-6 }

- (AB1) D-2 Engine room main wire to engine room wire No.2
- (CA1) A-2 Front window defogger switch wire 13
- Engine compartment main wire



- (AB) 31 右 fender apron ground
- (AD) C-6 左 fender apron earth
- (CE) 0-12 Intake manifold ground

- (CG) 0-12 Intake manifold ground
- (FI) C-42 left fender apron ground
- (YEM) D-10 engine block ground




(06.0367476)



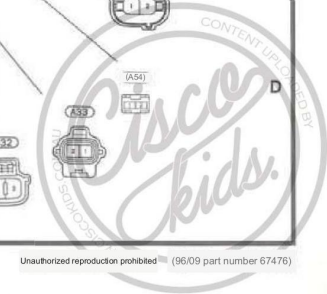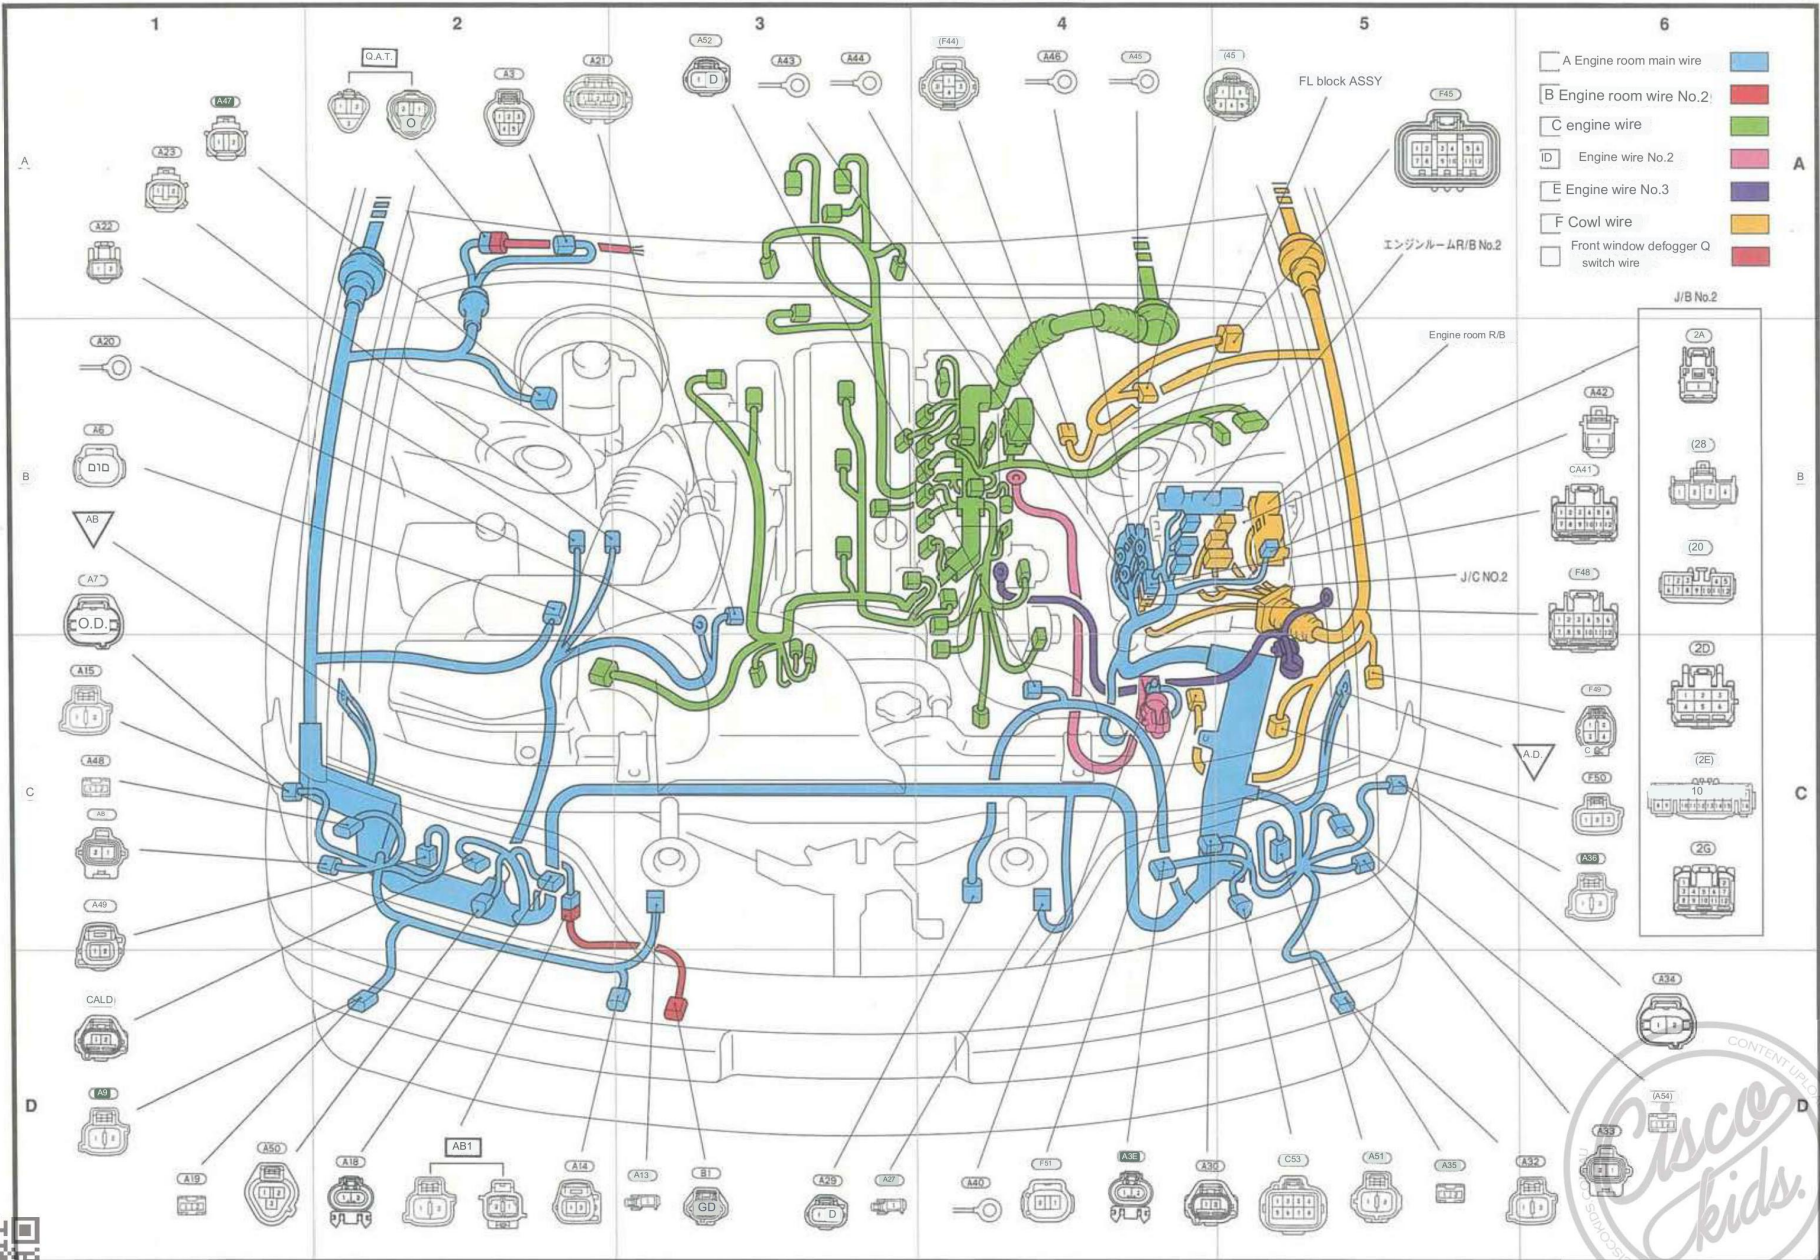


Engine room (1JZ-GTE body)

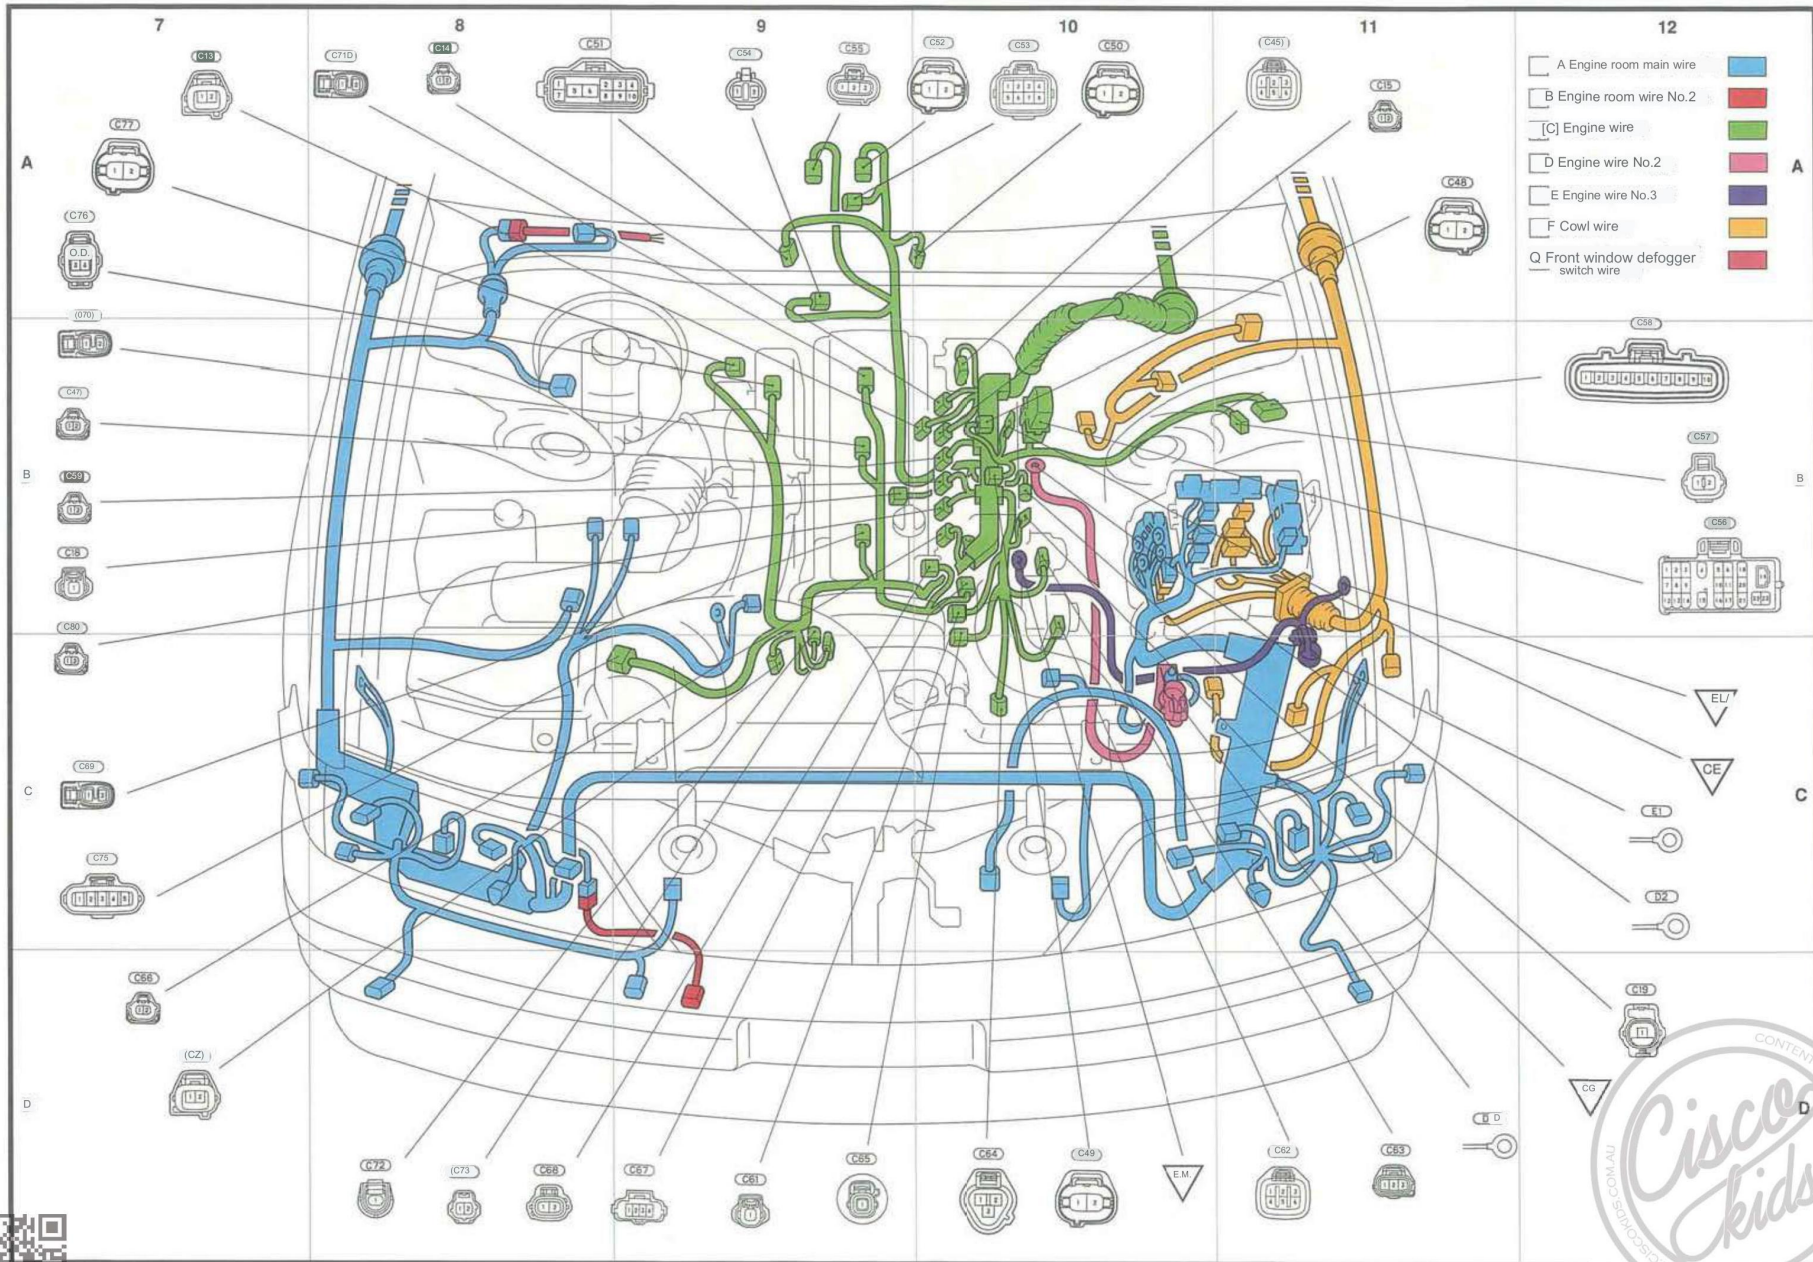

- A Engine room main wire
- B Engine room wire No.2
- C Engine wire
- D Engine wire No.2
- E Engine wire No.3
- F Cowl wire
- Q Front window defogger switch wire



302 Product number 67476)

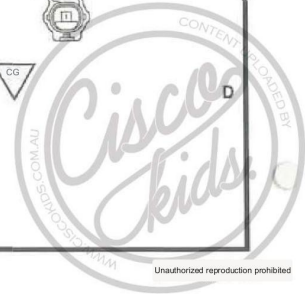


(A3)	A2	Front wiper motor	(C20)	A-10	Injector No.4
(A4)	A-1	Cruise control actuator...	(C21)	A-11	Injector No.3
(A5)	A-1	Absorber control actuator FR RH (Sky ABS Hook)	(C22)	2-7	throttle position sensor
(A 6)	B-1	speed sensor FR RH	(C23)	3-12	Injector No.2
(A7)	B-1	Side Turn HH (Mark, Cresta)	(C24)	D-10	Injector No.1
(A8)	D-1	Fender marker lamp RH (Mark II, Cresta)	(C25)	9-5	VVT solenoid
(A 9)	D-1	Front turn RH (Mark, Cresta)	(C26)	C-12	Diagnosis connector
(A10)	C-1	Front fog lamp Mark II, Cresta)	(c27)	D-10	Oil pressure switch
(A11)	D-1	Clearance lamp AH	(c28)	Water temperature sensor	
(A12)	E-2	Headlamp RH (Mark II, Cresta)	(c29)	D-11	MEC sensor No.1
(A13)	D-2	horn RH	(C30)	D-11	Water Temperature Cender Gauge
(A14)	D-2	outside temperature sensor	(C31)	D-10	Magnetic clutch & lock sensor
(A15)	C-1	Front turn RH (chaser)	(C32)	D-8	Ignition coil No.1
(A16)	C-1	Headlamp RH (Lo) (chaser)	(C33)	A-8	Ignition coil No.2
(A18)	D-1	Headlamp R (Hi Chaser)	(C34)	A-7	Ignition coil No.3
(A19)	D-1	Front fog lamp (chaser)	(C35)	D-7	subthrottle position sensor
(A20)	D-3	alternator	(C36)	B-7	ISCV
(A21)	D-3	Alternator--	(C37)	A-8	sub throttle valve motor
(A22)	B-1	fuel pump register	(C38)	A-8	O2 sensor
(A23)	B-1	power steering solenoid	(C39)	D-8	crank position sensor
(A24)	A-1	ABS Actuator & Hydro Brake Booster	(C40)	B-7	igniter
(A25)	A-2	ABS Actuator & Hydro Brake Booster	(C41)	C-7	吸気Temperature
(A26)	A-3	ABS actuator & hydro brake booster	(C42)	C-7	sensor condenser (radio)
(A27)	E-1	Horn LH	(D1)	0-12	Battery (+)
(A28)	D-5	Headlamp LH (Mark, Cresta)	(D 2)	B-12	starter
(A29)	D-4	Radiator fan heater No.1	(E 1)	C-2	battery (2)
(A30)	D-6	Clearance lamp LH	(F44)	A-3	Pressure switch (air conditioner pressure side switch)
(A31)	D-8	Front fog lamp LH (Mark II, Cresta)	(F45)	A-5	ABS & TRC actuator
(A32)	D-5	Front turn LH (Mark II Cresta)	(F46)	A-4	ABS actuator
(A33)	D-6	Fender marker lamp LH (Mark II Cress Kai)	(F47)	A-5	Absorber control actuator FR LH (Skyhook)
(A34)	C-6	Side turn... (Mark II, Cresta)	(F43)	D-4	J/C No.2
(A35)	D-5	Front fog lamp LH (chaser)	(F43)	C-3	Optional connector
(A36)	C-6	Front turn EH (chaser)	(F50)	D-6	washer motor
(A38)	D-5	Headlamp (Hi) (Chaser)	(F51)	D-9	ABS speed sensor FR LH
(A39)	D-6	Headlamp LH (Lo) (Chaser)	(F53)	9-5	Engine room RB (ABS)
(A40)	D-5	Battery (+)			
(A41)	C-4	J/C No.2			
(A42)	B-6	Engine room AB (ABS)			
(A43)	D-4	FL (ABS&Glow)			
(A44)	D-3	FL (Alter)			
(A15)	A-3	FL (Alter)	(2 A)	A-6	Engine room main wall wire to J/B No.2
(A46)	A-3	FL (Alter)	(2 B)	B-6	
(A47)	A-1	Brake level warning switch Water	(2 C)	B-6	
(E1)	D-3	temperature switch (radiator fan)	(2 D)	B-6	
(C 7)	A-10	O/D Direct clutch speed sensor	(2E)	C-6	Cowl wire To JB No.2
(C 8)	F-4	neutral start switch	(2 G)	C-6	
(C 9)	A-10	AT speed sensor			
(C10)	A-9	ECT solenoid			
(C11)	A-10	vacuum sensor	(AB1)	D-2	Engine room main wire to engine room wire No.2
(C12)	A-10	VSV Bate)	(QA1)	A-1	Front window defogger switch wire IC
(C13)	A-11	cam position sensor			engine room main wire
(C14)	A-9	Injector No.6	(FA1)	B-6	Cowl Soyler 10 Engine room main wire
(C15)	A-9	Injector No.5 VSV	(TFT1)	A-4	
(C16)	A-11	(variable air)	(TFT2)	A-4	Cowl wire to engine room relay block ASSY



(AA)	B-1	右Fender Apron Earth
(AB)	E-1	右Fender apron ground
(AC)	B-1	右Suspension Tower Earth
(AD)	C-6	左fender apron ground
(CE)	A-12	Intake manifold ground
(ACF)	D-12	Intake manifold ground
(EL)	C-12	Left fender apron ground
(EM)	A-12	engine block ground



Engine room (around 2JZ-GE)

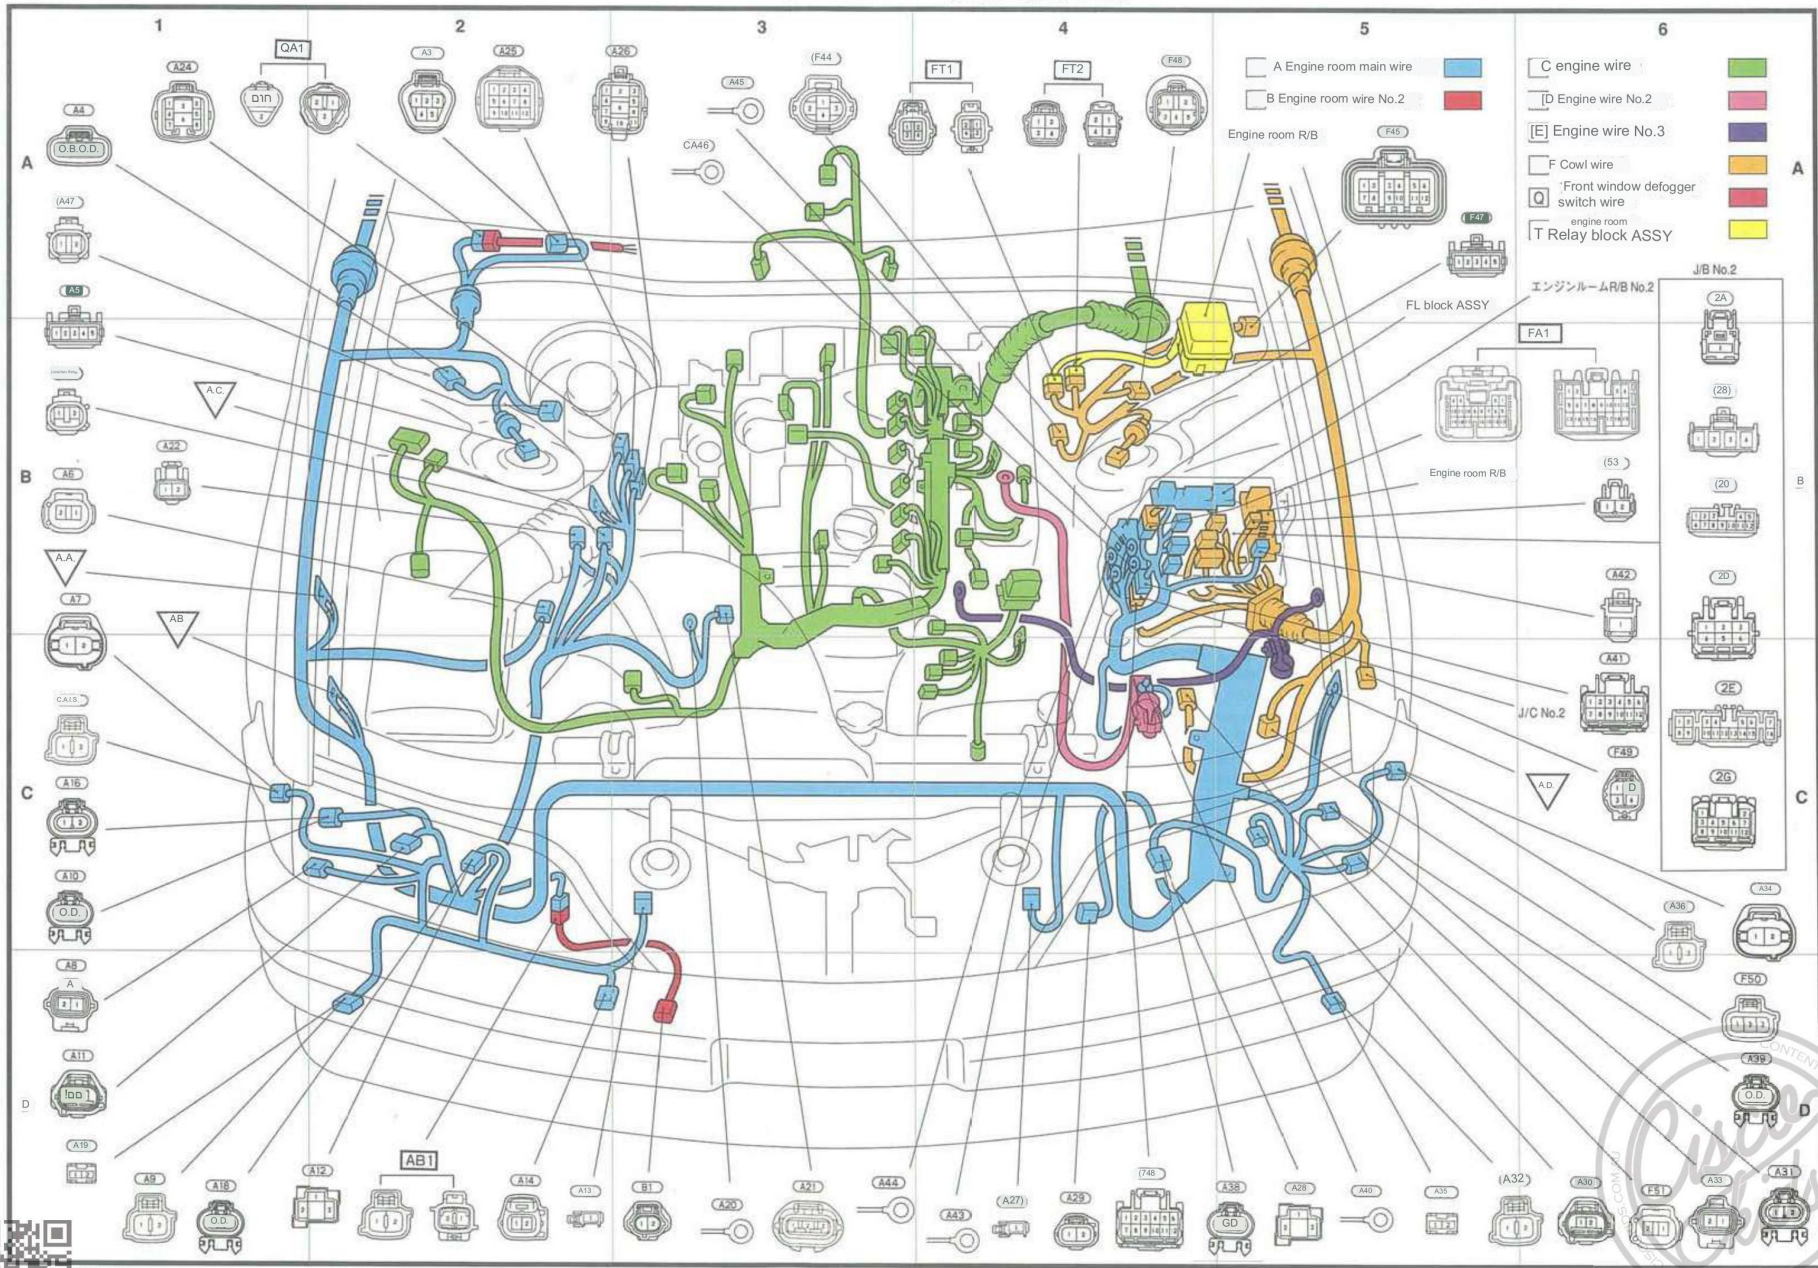

900367476

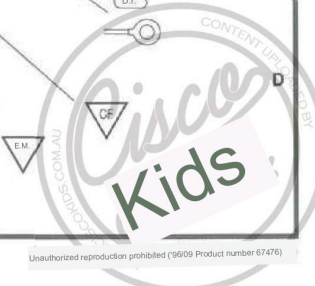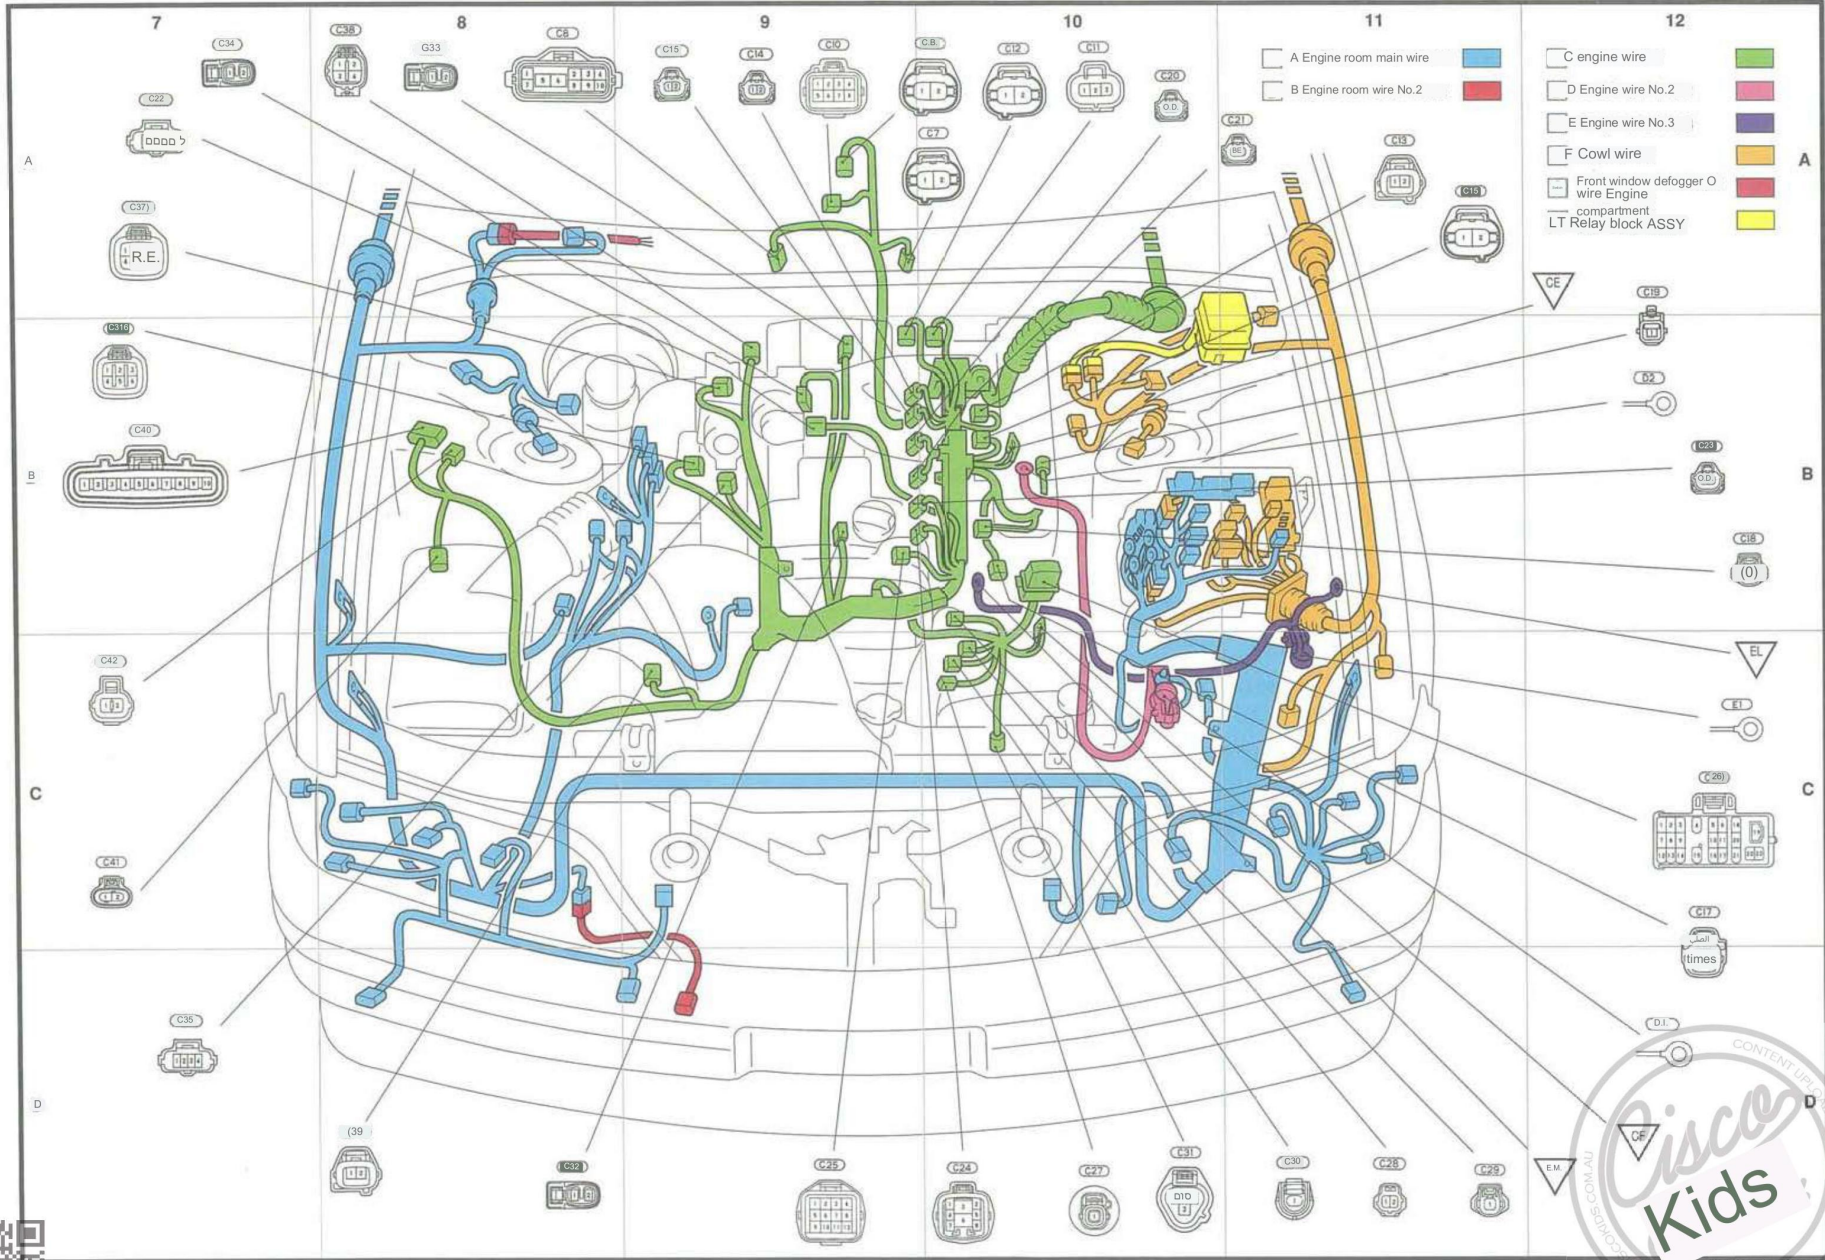

(A3)	A2	pronto wiper motor
(A6)	A-1	ABS speed sensor RRH
(A7)	C-1	Side turn AH (Mark II, Cresta)
(A8)	D-1	Fender marker lamp FH (Mark II, Cresta)
(A9)		Front Turn Mark II Cresta
(A1U)	C-1	Front fog lamp H Mark II Cresta
(A11)	D-1	Clearance lamp AH
(A12)	D-E	Headlamp H (Mark II Cresta)
(A13)	D-3	Hom RH
(A14)	D-2	Outside temperature
(A15)	C-1	sensor front turn AH (chaser)
(A16)	B-1	Headlamp RH (Lo) (Chaser)
(A18)	D-2	Headlamp RH (Hi) (Cheyley)
(A19)	D-2	Front fog lamp RH (chaser)
(A20)	A-3	alternator
(A2)	A-3	alternator
(A27)	D-4	Hom LH
(A28)	D-4	Headlamp LH (Mark II, Cresta)
(A30)	D-5	Clearance lamp LH
(A31)	D-5	Front fog lamp LH (Mark II, Cresta)
(A32)	D-6	Front turn (Mark II Cresta)
(A33)	D-6	Fender marker lamp LH (Mark II, Cresta)
(A34)	C-6	Side turn LH (Mark II, Cresta)
(A35)	D-6	Front fog lamp LH (Chaser)
(A36)	C-6	Front turn 1 (Chaser)
(A38)	D-4	Headlamp LH (Hi) (Chaser)
(A39)	D-6	Headlamp LH (Lo) (Cheyley)
(A40/D4)		Battery (+)
(A41)	B-6	J/C No.2
(A42)	B-6	Engine room R/B (ABS)
(A43)	D-3	FL (ABS&Glow)
(A44)	A-4	FL (Alter)
(A45)	A-4	FL (Alter)
(A46)	D-3	FL (Alter)
(A47)	A-1	Brake level warning switch
(A37)	A-1	vacuum warning switch
(A58)	B-1	Intake temperature sensor
(A59)	A-3	magnetic clutch
(C135)	A-11	fuel filter switch
(C137)	A-10	fuel heater
(C133)	A-10	VSV Me.1 intake throttle
(C139)	A-11	Turbo pressure sensor
(C140)	A-9	(drosolenoid
(C141)	A-3	neutral start switch
(C142)	B-7	oil pressure switch
(C143)	B-7	VSV (EGR)
(C144)	D-7	VSV NO.2 aperture
(C145)	A-7	water temperature sensor
(C148)	D-6	starter
(C147)	C-7	glow plug
(C14B)	D-9	flank position sensor
(C149)	D-8	電string sub弁
(C150)	D-9	timer control valve
(C151)	DA	補正 Resistance (VSP)
(C152)	D-10	補正 Resistance (VRT)
(C153)	B-2	throttle position sensor
(C154)	D-11	diesel engine revolution sensor

(C155)	D-11	Fuel Puffure Sensor
(C156)	D-10	Water Temperature Cender Gauge
(C158)	A-12	diagnosis connector
(D1)	D-12	Battery (+)
(D2)	A-10	starter
(E1)	C-12	battery(-)
(F45)	A-5	ABS & TRC Actuator
(F46)	A-5	ABS Actuator
(F48)	D-3	J/C No.2
(F49)	C-6	Optional connector
(F50)	C-6	Washer motor
(F51)	D-5	ABS speed sensor RLI
(F62)	A-4	Pressure switch (air conditioner commercial low pressure side switch)
(F63)	A-5	ABS actuator

(2A)	A-6	} Engine room main wire to JB No.2
(2B)	3-6	
(2C)	3-9	
(2D)	B-6	} Cowl wire to JB No.2
(2E)	C-6	
(2G)	C-5	

(CA1)	B-12	Engine wire to engine room main wire
(QA1)	A-1	Front window defogger switch wire tp engine room main wire

(AB)	B-1	Right fender apron ground
------	-----	---------------------------



(AD)	C-3	Left fender apron ground
------	-----	--------------------------

(CK)	A-7	engine block source
------	-----	---------------------


(EL)	C-12	Left fender apron ground
------	------	--------------------------

(EM)	D-11	engine block ground
------	------	---------------------



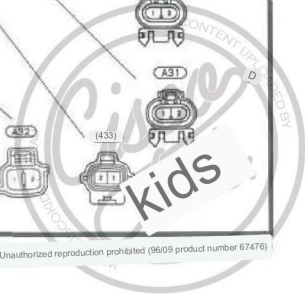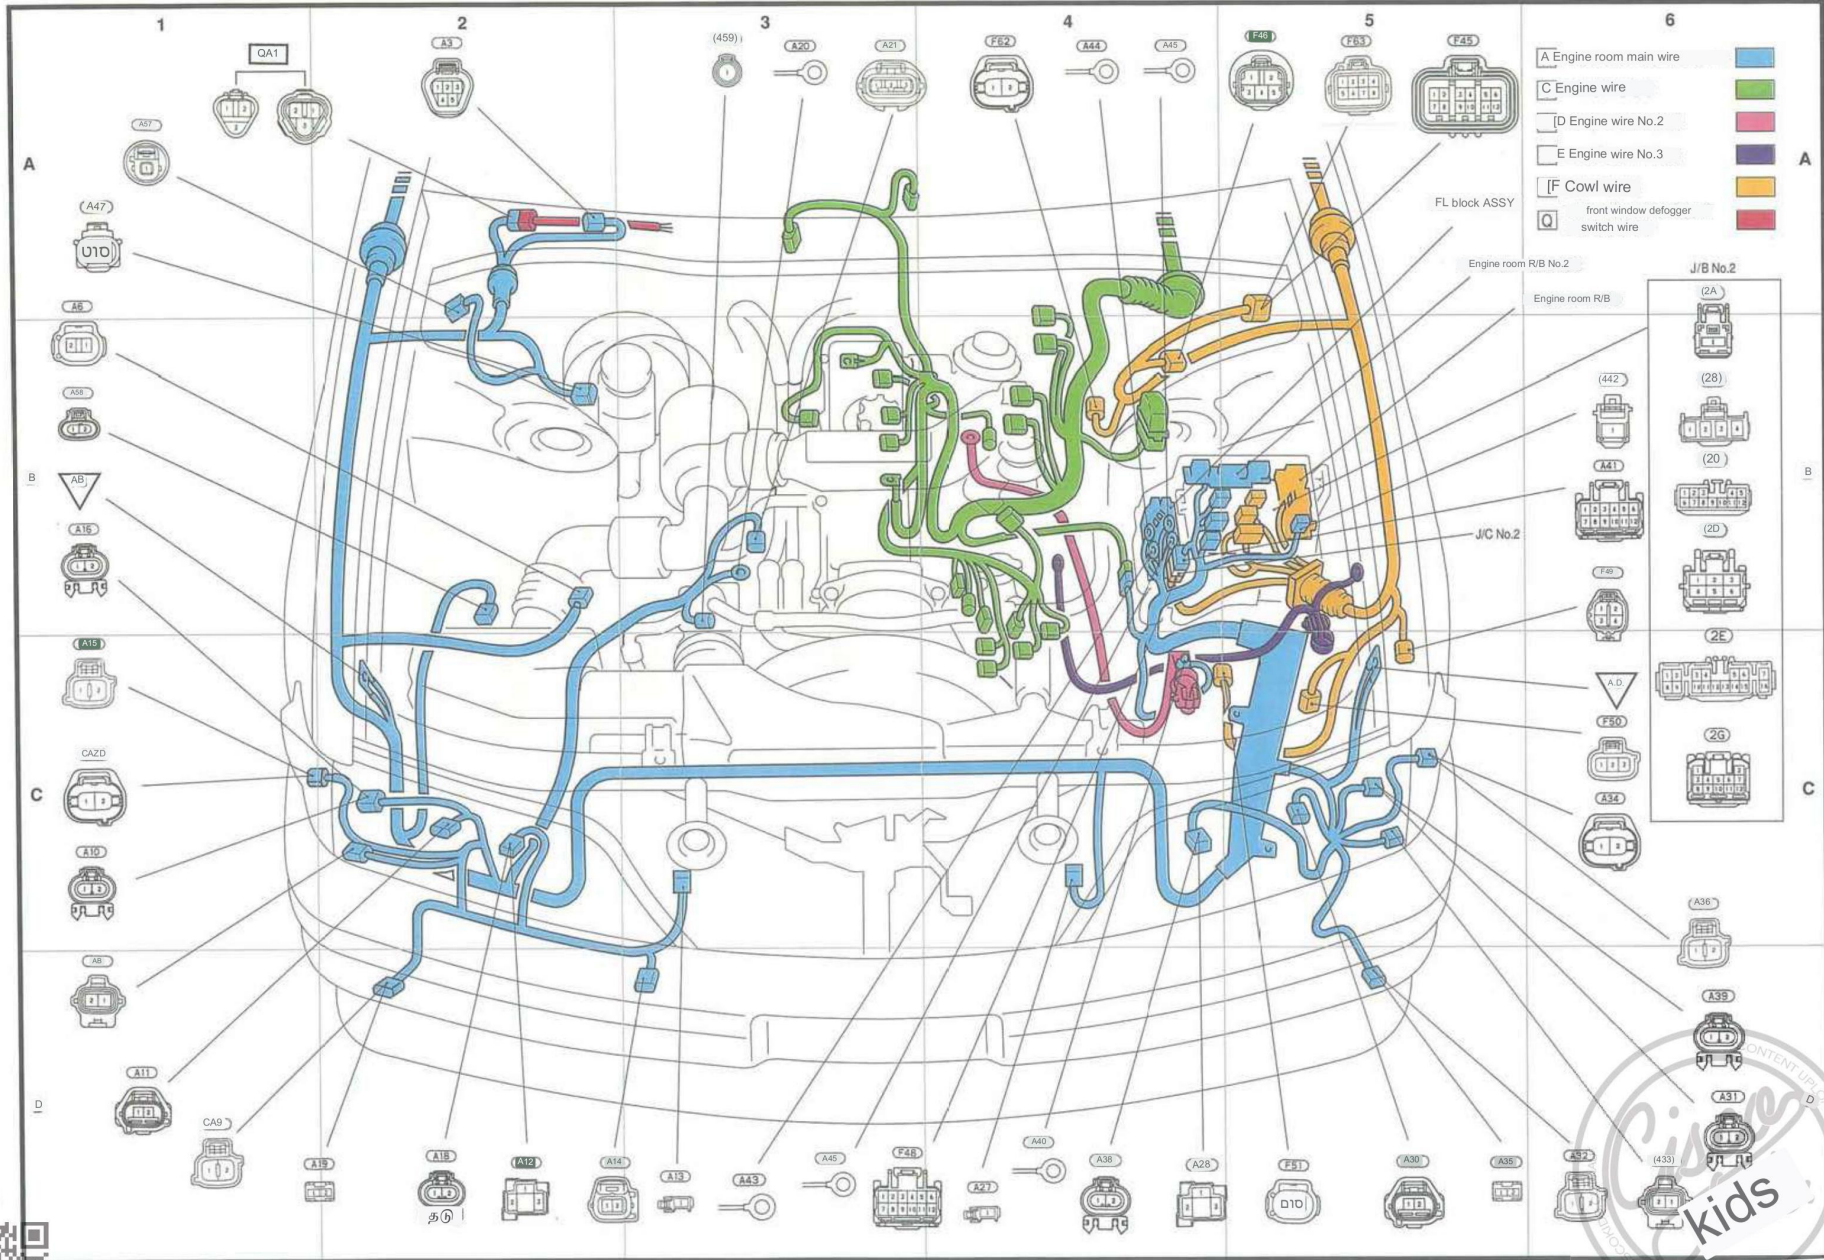

Engine room (2L-TE main body)

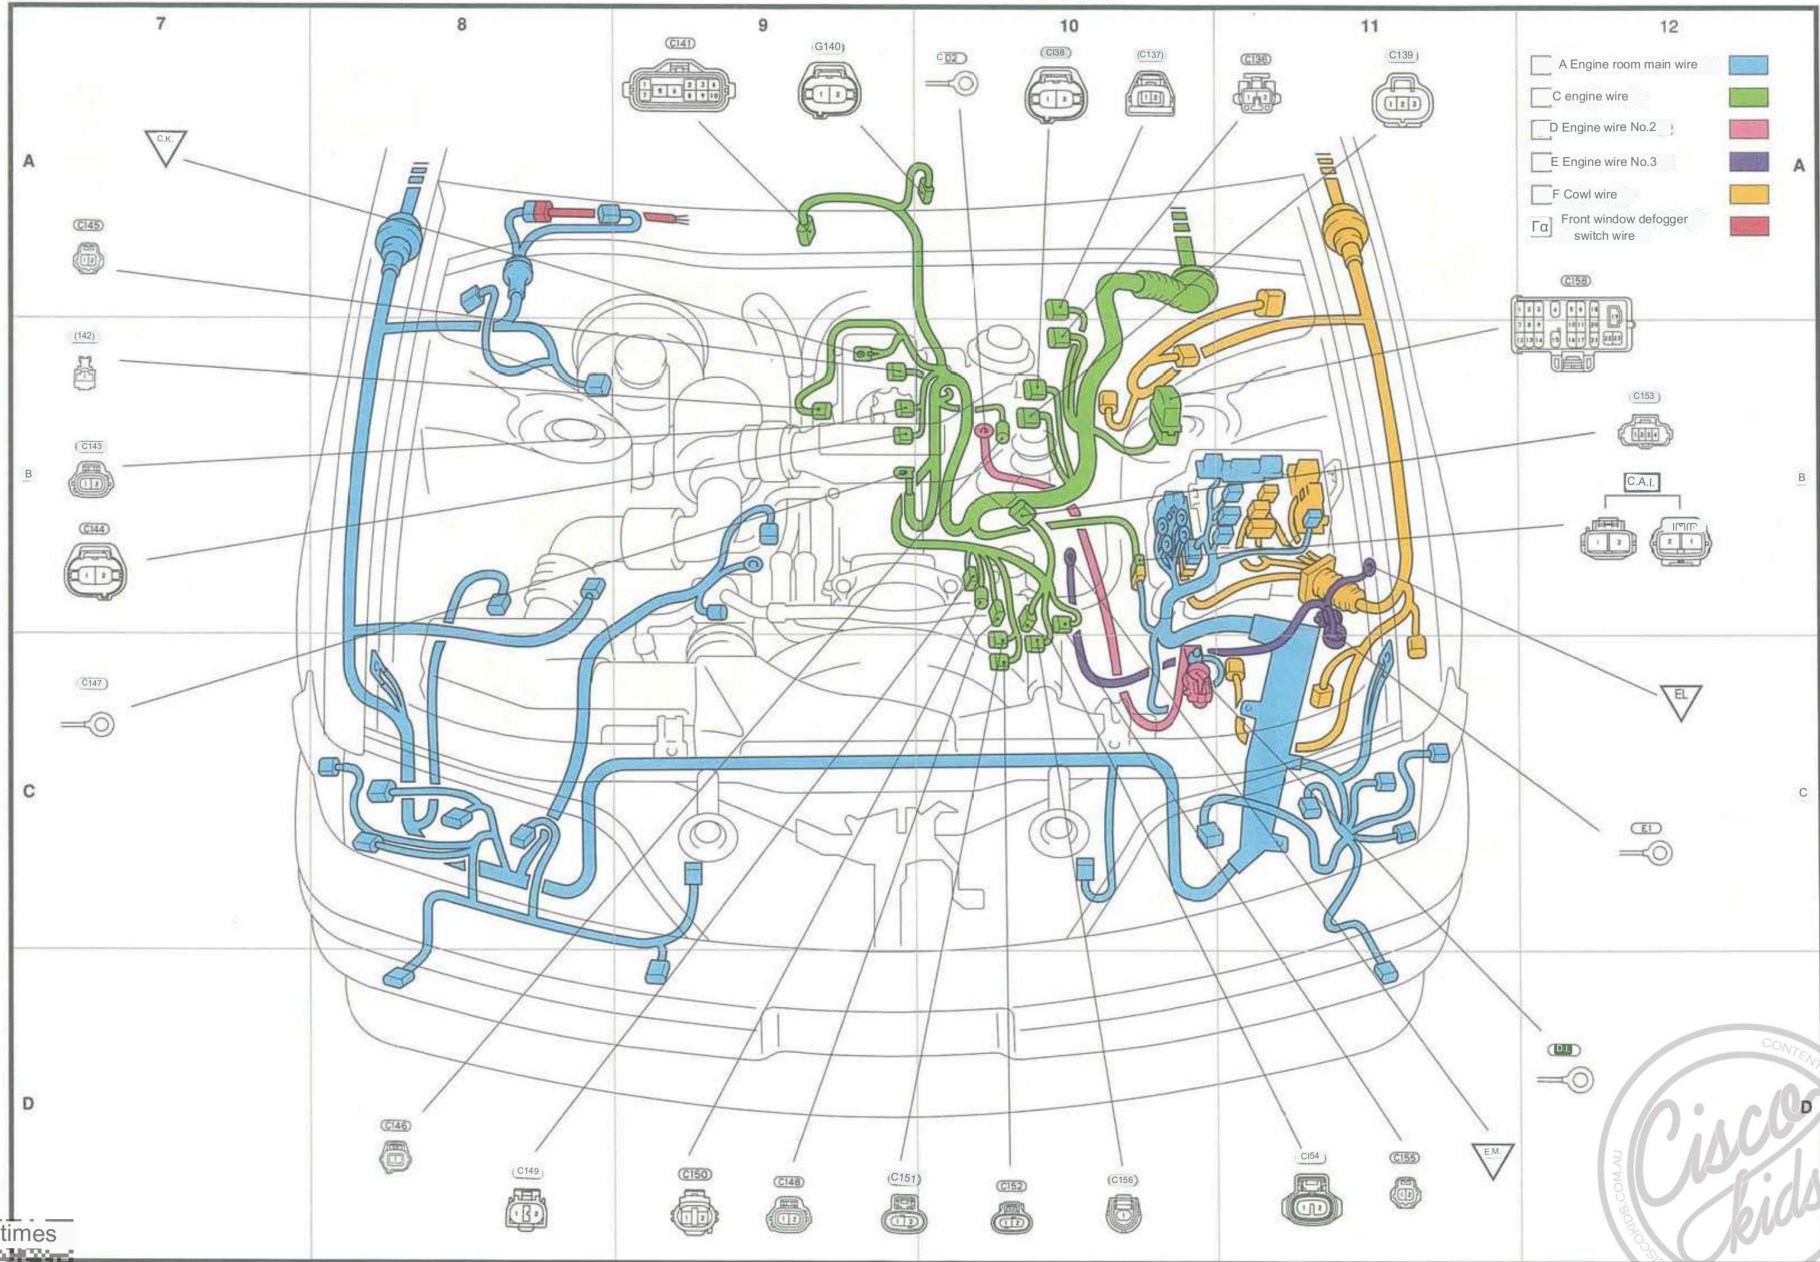

times
 2009#67476



(A 1)	B:6	J/C No.1
(A2)	A:6	J/C (A/ No.17)
(C 1)	C:13	J/C N o.3
(C 2)	C:7	Engine control computer (excluding G-FE,2L-TE)
(C 3)	C:7	Engine control computer (excluding 1G-FE,2L-TE)
	B:7	J/C N o.4
	A:14	J/C N o.5
	A:15	J/C N o.5
	A:14	Throttle control computer (1JZ-GTE) J/C
	A:14	NO.6
	A:15	J/C NO.6
	E:7	Engine control computer (1G-FE)
	C:7	Engine control computer (1G-FE)
	C:7	Emission control computer (2L-TE)
	0-7	Emission control computer (2L-TE)
	C:6	Multitex network body computer...
	D:6	Optional connector
	C:4	vacuum indicator buzzer
	A:5	J/C N o.8
	A:4	J/C N o.9
	A:6	Absorber control computer (Skybook)
	D:1	TCCL (excluding 16-FF, 117-G)
	36	tire pressure warning switch
(F9)	2-1	Rear fog lamp switch
(F10)	C:1	Mirror heater switch
(F11)	A:4	power steering computer
(F12)	A:5	cruise control computer
(F13)	B:12	stop lamp switch
(+14)	A:1	Key lock solenoid & Key unlock warning switch
(F15)	E:1	ignition switch
(F16)	B:1	ignition key lighting
(F19)	B:1	Steering sensor
(F20)	B:1	combination switch
(F21)	A:1	combination switch
(F22)	C:1	Combination switch
(F23)	0-1	airbag (driver's side)
(F24)	C:12	Parking brake switch (foot operated)
(F25)	D:11	Excluding engine control computer 1,215)
(F23)	D:6	Engine control computer (excluding 1G-FE,2L-TE)
(F27)	0-10	Center Airbag Sensor
(F28)	D:8	Detection Crash Senry
(F29)	D:8	ASS deceleration sensor
(F30)	A:15	Airbag (passenger side)
(F31)	A:5	ABS computer (VSC)
(F32)	A:1	ABS computer (VSC)
(F33)	A:2	ABS computer (VSC)
(F34)	A:1	ABS computer (VSC)
(F35)	A:1	ABS & TRC computer
(F36)	A:1	ABS&TRC computer
(F37)	A:6	A3S & TRC Computer
(F38)	B:13	throttle valve motor driver
(F38)	B:13	J/CN.10
(F40)	B:13	J/C N o.3
(F41)	D:15	J/CNo.1
(F42)	D:15	J/CNo.12
(F43)	B:18	J/C N o.13
(F44)	C:1	J/C No.14


(F54)	A:13	Throttle Control Computer (1JZ-GTE)
(F55)	B:6	DLC3 (1G-FE,1JZ-GE)
(F56)	D:7	ADS deceleration sensor (4WD)
(F57)	A:13	ABS Computer
(F5A)	A:13	ABS computer
(F59)	A:14	ABS & 4WD Computer
(FED)	A:13	ABS & 4WD Computer
(F61)	A:13	ABS 4WD computer
(F64)	C:1	H Engine Control Computer (1G-FE)
(F66)	B:6	Peter idle up switch (2L-TE)
(F67)	A:3	brake warning relay
(F68)	D:19	Emission Control Computer (2L-TE)
(F70)	B:1	Steering Sensor (VSC)
(G1)	C:1	outer mirror switch
(G 2)	A:6	Conflight Scanner
(G3)	A:4	Sun sensor
(G 4)	B:12	Combination meter (analog meter)
(G5)	A:12	Combination meter (analog meter)
(G 6)	A:11	Combination meter (analog meter)
(G 7)	A:11	Combination meter (analog meter)
(G 8)	D:12	intenal air sensor
(G9)	D:12	headlamp level switch
(G10)	D:12	air purifier switch
(G11)	0-10	排気 temperature sensor
(G12)	0-8	Parking brake switch (lever type)
(G13)	D:8	console box lamp
(G14)	D:8	traction off switch
(G15)	D:9	E TCS switch
(G16)	D:3	pattern select switch
(G17)	D:9	DD main switch & shift indicator lighting
(G18)	D-	Shift lock control relay straight T)
(G19)	D:10	cigarette lighter lighting
(G20)	0-18	cigarette lighter
(G21)	D:10	bitter eyes
(G22)	A:10	hazard switch
(G23)	A:10	clock
(G24)	B:7	radio & stereo
(G25)	A:7	Radio & stereo
(G26)	0-1	Air conditioner computer...
(G27)	B:7	air conditioner computer
(G28)	A:15	J/C N o. 15
(G30)	A:18	evapo sensor
(G31)	A:15	glove box lamp
(G32)	A:15	Servo motor for switching between inside and outside air damper
(G33)	E:13	air purifier service connector
(G34)	D:8	OD main switch & shift indicator lighting (gate type A/T)
(G35)	A:9	Shift cock control relay (gate type AT)
(G36)	A:7	swing knill
(G37)	B:7	radio & stereo
(G38)	B:7	Munch AV Station
(G39)	D:12	Multi AV Segation
(G40)	2-14	J/C N o.21
(G41)	C:12	Combination meter (digital meter)
(G42)	6-12	Combination meter (digital meter)
(G43)	A:12	Combination meter (digital meter)
(G44)	D:8	Absorber control switch (Skyrack)
(R 1)	A:7	Servo motor for switching air mix damper

(R2)	C:2	Servo motor for mode damper switching
(S 1)	A:18	Blower motor
(s2)	A:17	Blower...motor...controller
(s3)	A:17	propeller motor controller
(PA)	B:18	Tocaul wire 10 driver side JB
(P B)	B:18	
(P C)	C:18	
(D G D)	C:18	
(D G E)	C:18	Nuwire No.1 to Driver side JB
(F F)	C:18	
(F G)	C:18	Instrument panel wire 10 Driver side JB
(F H)	C:18	
(F I)	C:18	Floor wire driver side JB
(F J)	D:10	
(FK)	D:18	Engine room main wire 10 driver side JB
(FL)	0-15	
(D G M)	C:16	Cowl wire to driver side JIB
(F N)	D:18	floor wire to Driver side JIB
(3A)	A-	instrument panel wire to J/B No.3
(3B)	A-	
(3C)	A:3	
(3 D)	A:3	
(3E)	A:3	
(3F)	A:9	
(3 G)	A:9	
(3 H)	A:9	
(5A)	A:2	
(5 B)	A:2	
(5 C)	A:2	Cowl wire to JB No.5
(5 9)	A:3	
(5 E)	A.S.	
(5F)	A:3	
(AF1)	C:6	Engine room main wire 10 Cowl wire
(AF 2)	D:1	
(AF 3)	C:6	
(AF4)	D:2	Engine wire 10 Cowl wire
(CF 1)	D:15	
(CF 2)	D:15	
(CF3)	B:18	Engine wire to instrument panel wire
(CG1)	D:7	
(FL1)	D:15	Cowl Tsuiya 30 Floor Riar
(FL2)	D:4	
(FS1)	A:16	Uruwire to Tara Wiring Harness No.2
(GF1)	D:6	Instrument panel wire 10 Cowl wire
(GF 2)	C:12	
(GF 3)	C:15	
(GL 1)	D:4	Instrument panel wire to probria
(GM1)	D:4	Instrument panel wire floor wire No.2
(GM2)	D:14	
(GM3)	D:14	Instrument panel wire to cooler wiring harness No.1
(GR)	A:17	
(HF1)	D:5	Front door wire AH Lo cowl wire
(H F2)	D:3	

(RG)	D:2	1 Front door wire RH to instrument panel wire
(RF)	D:3	Front door wire LH to cowl wire
(IG1)	C:13	Front door wire LH to instrument panel wire
(LF1)	D:5	Floor wire Lv Cowl wire
(MF1)	D:17	Acore wire No.2 to cowl wire
(MF2)	0-13	
(FN)	B:6	right cowl side doors
(FC)	A:6	Cowl inner panel ground
(FP)	A:13	Sora Countside Earth





Instrument panel (right side)

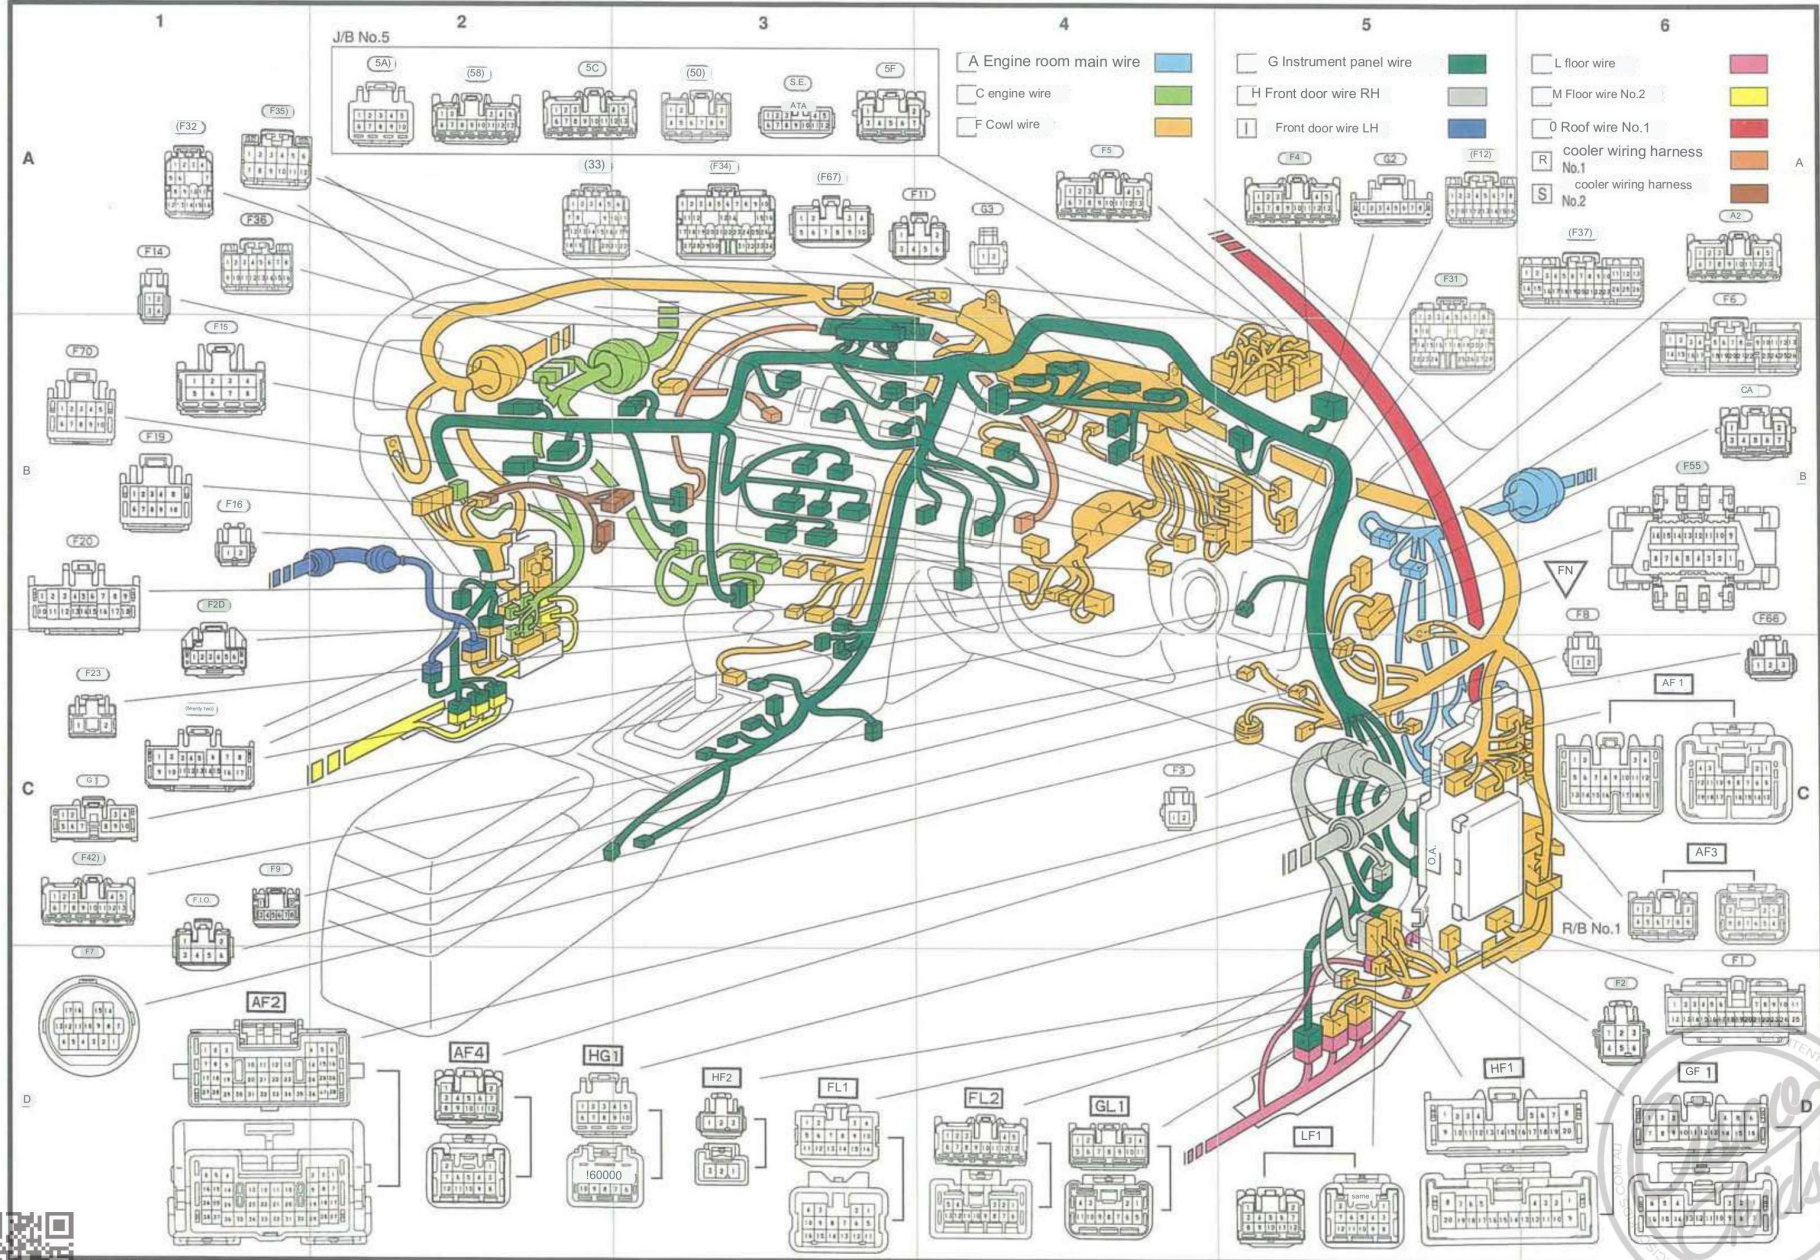


2930 Product number 67476

Instrument panel (center)

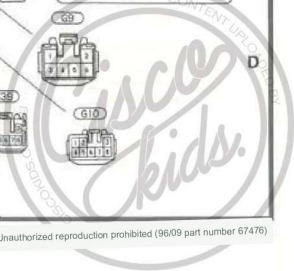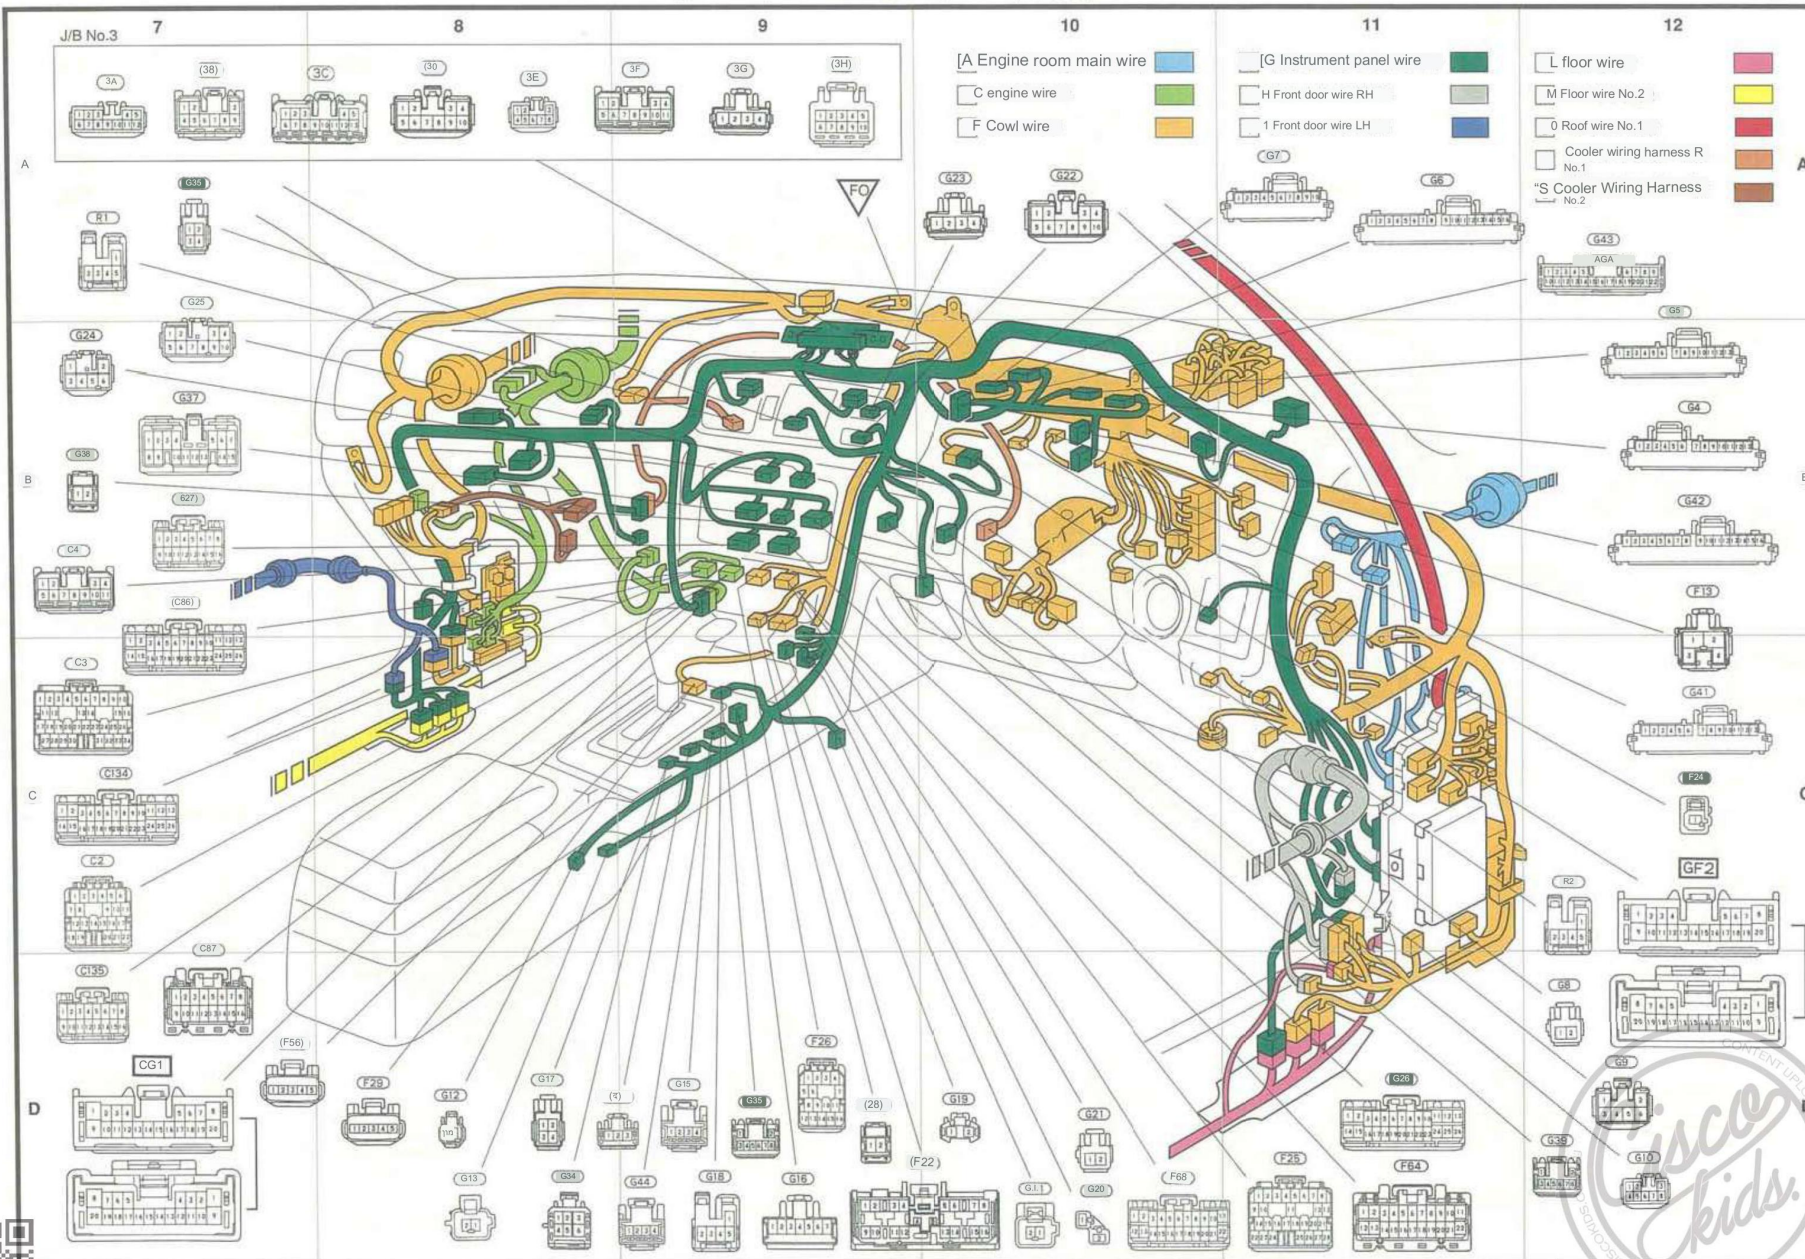

Instrument panel (left side)

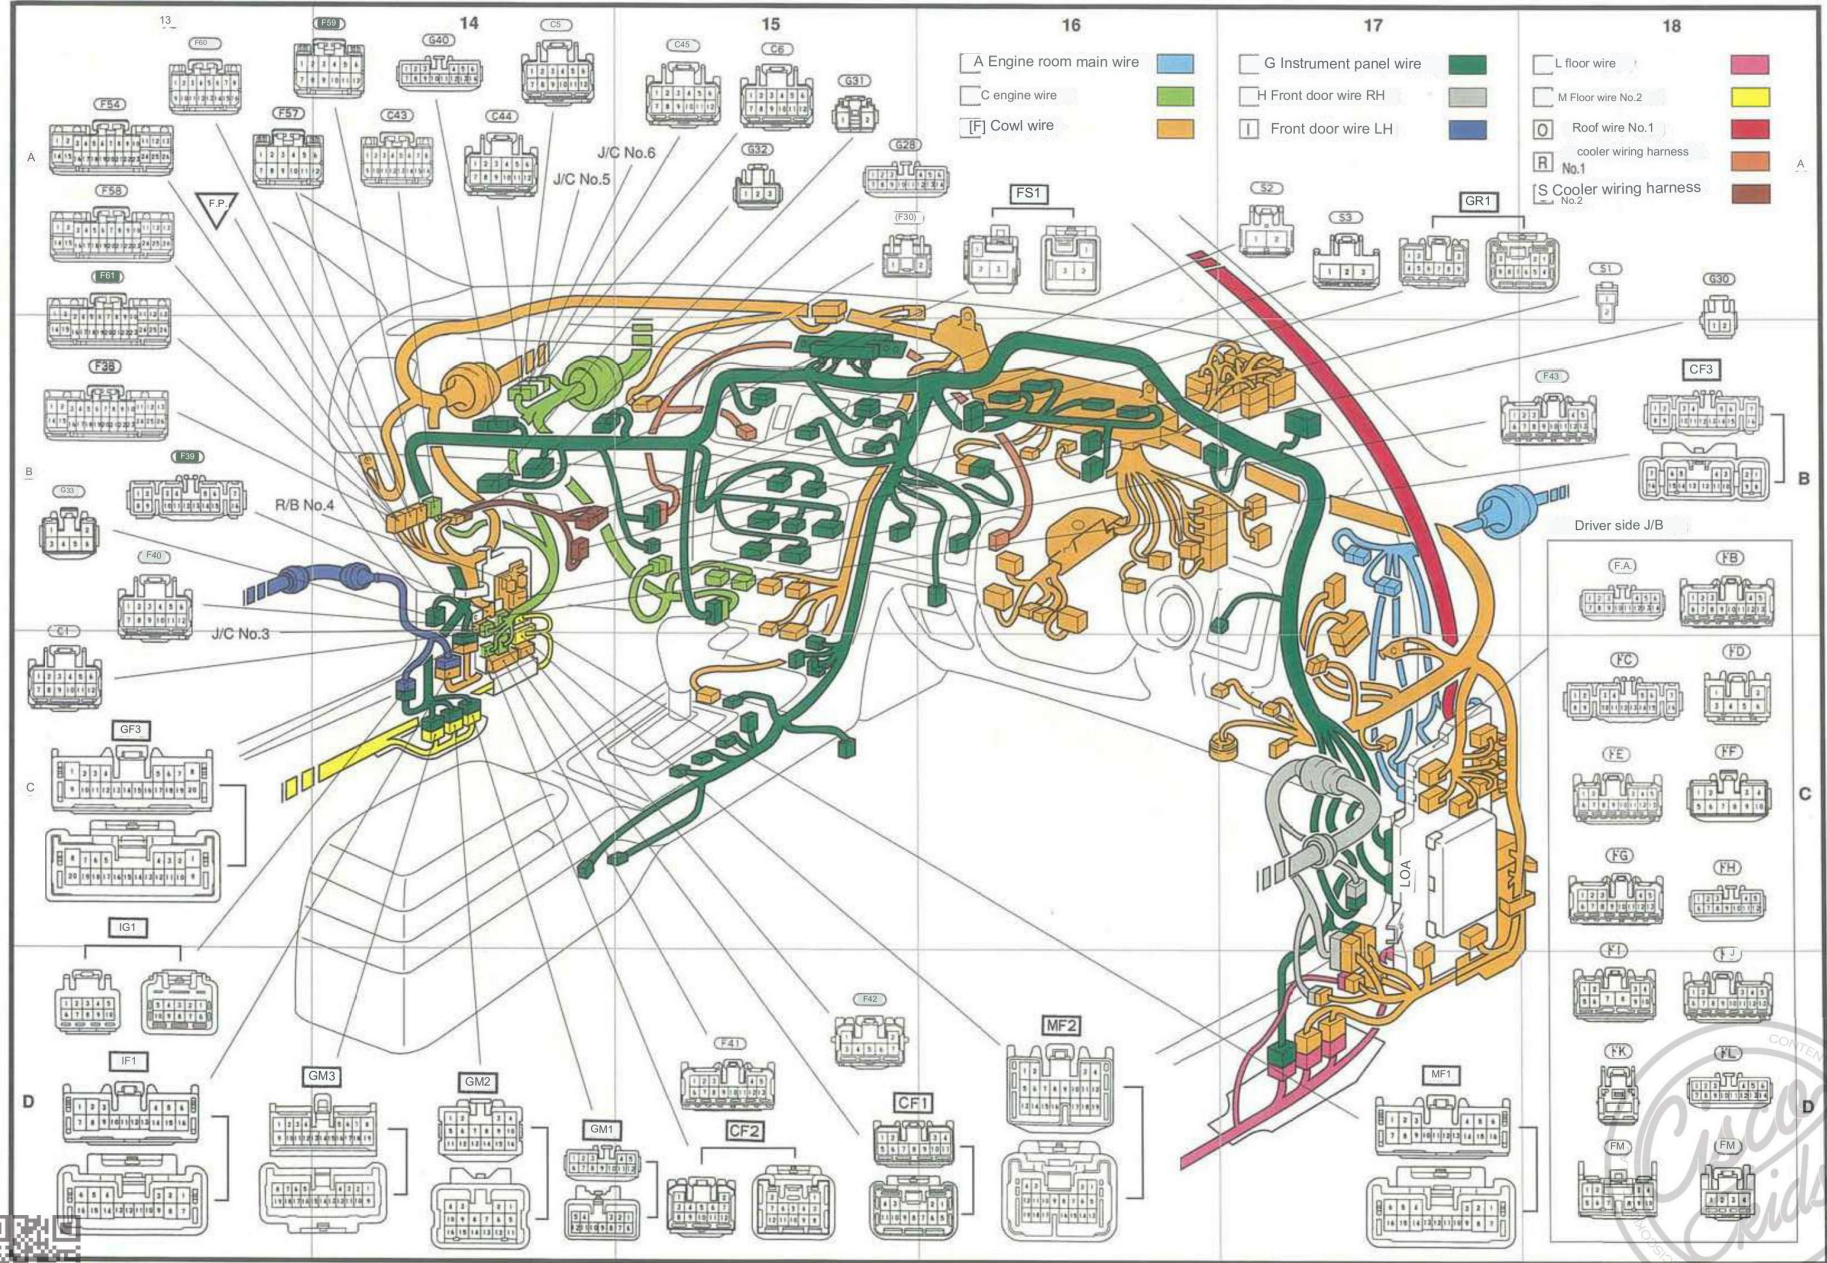


60367476)

(H1) A-6 multinox network master switch
 (H2) A-10 Power window motor...FRH
 (H3) A-6 Door control switch (for key deviation) (Fujista)
 (H4) A-7 front speaker AH
 (H5) 2-6 J/C No.16 Cresta)
 (H5) A-8 remote control actuator RH
 (H7) A-8 Remote Control Arabutor PH & Miraku —RH
 (H8) A-9 Tweeter AH
 (H 9) C-12 Courtesy lamp FRAH (Fresta)
 (H10) C-12 Door control motor FR RH
 (H17) 0-12 Courtesy lamp FR RH mark, chaser)
 (H12) A-10 Door control switch (for key interlocking) (Mark II, Jaycer)
 (I) B-7 Power window motor FR LH
 (I2) 2-7 Multitex Network Switch FR LH
 (I 3) B-7 front speaker —LH
 (I4) B-7 Tweeter LH
 (I 5) B-7 Remote control actuator LH
 (I6) B-7 Remote control actuator & mirror heater LH
 (I 7) D-7 Courtesy lamp FR LH
 (I 8) D-7 Door control motor FR LH
 (J 1) 0-12 Power window motor RRRH
 (32) B-12 rear speaker RAH
 (J3) A-11 Marvolex Network Switch RRRH
 (JA 1) B-12 Bear control motor/BRRH
 (K 1) D-11 Power window motor RR LH
 (K 2) D-10 Rear speaker LH
 (K 3) D-11 Multitex Network Switch RR LH
 (K4) D-10 Doormin Troll Motor SR LH
 (L1) A-7 Enopack RH (sheet)
 (L 2) A-7 Buckle switch FRAH (without power seat)
 (3) D-11 exhaust temperature sensor
 (L 4) E-12 Courtesy switch FR/FRH Cresta)
 (L 5) C-12 Side airbag sensor EH
 (L6) A-13 Lap belt solenoid FR RH
 (L7) A-14 ABS speed sensor ARAI-1
 (L8) A-14 Courtesy switch RA RH
 (L 9) A-15 J/C (Earth No. 23
 (L10) A-15 J/C No. 17
 (211) A-15 Absorber control actuator ARRH
 (L12) A-16 J/C No. 18
 (L13) D-16 fuel pump
 (L14) D-15 fuel sender gauge
 (L15) A-14 Center stop lamp (bulb type)
 (L16) D-18 Rear wiper motor & relay---
 (L17) D-14 luggage room lamp
 (L18) 4-17 lamp failure sensor
 (L19) B-17 luggage opener relay
 (L20) 4-17 door control receiver
 (L21) B-18 Rear combination lamp RH (backup lamp)
 (L22) C-18 Luggage autonarsonoid (Mark, Cresta)
 (L23) D-17 rear combination lamp backup lamp)
 (L24) D-16 Center stop lamp (LED type) (Mark II)
 (L24) B-18 Center stop lamp (LED) (Cresta)
 (L25) D16 Noise filter (stop lamp)
 (L26) A-18 License plate lamp LH (Chaser)
 (L27) B-18 License plate lamp RH (Chaser)
 (L28) D-17 Center stop lamp (LED type) (Chaser)


(L29) A-15 J/C No. 19
 (L30) C-1 Rackage opener solenoid switch (Cresta)
 (L31 C-12 力— Tesiswitch Gate (Mark II Chaser)
 (M1) D-9 stereo power amplifier
 (M2) J-1 stereo power amplifier
 (M3) C-7 Airbag LH (seat)
 (M4) C-7 Back switch FR-LH (Crestan)
 (M 5) C-7 Courtesy switch FR LH (Crestan)
 (M 6) D-9 Lap belt solenoid FR LH
 (M7) D-8 side airbag yancer ih
 (M8) 3-13 AES speed sensor RRLF
 (9) B-13 courtesy switch FAL
 (M10) B-13 Absorber control actuator BRLH
 (M11) A-14 woofer speaker
 (M12) D-14 yaw rate sensor
 (M13) D-15 navigation computer
 (M14) 3-15 navigation computer
 (M15) C-7 Buckle switch FRL (Mark II Chaser)
 (M16) 4-7 Courtesy switch FRL (Mark II Chaser)
 (D1) A-4 vanity lamp RH
 (O 2) 0-2 Sliding roof switch & map lamp (Mark/Chaser/
 (O 3) A-2 Sliding roof control relay
 (O 4) A-2 Berlie lamp LH
 (35) A-4 room lamp
 (06) B-5 Noise filter (defogger)
 (07) A-3 map lamp
 (O 8) A-2 Sliding roof switch & front room lamp
 Map lamp (Cresta)
 (O 9) A-3 Rear arm lamp LH
 (O10) A-4 Rear room lamp HH
 (O11) A-3 Front room lamp & map lamp
 (P 1) B-18 Rear combination lamp RH
 (P 2) D-18 2 License Plate Lamp (Mark, Cresta)
 (P 3) 0-16 Rear combination lamp LH
 (P 4) D-18 Luggage room lamp switch (Cresta)
 (Doto) 3-6 Roof Wire No.1 to Driver Side Jits
 (R 1) A-4 floor wire 50 Driver side J/B
 (Do) A-6
 (R N) A-6
 (FL1) 0-6 Cowl wire 10 Floor wire
 (FL2) C-3 Instrument panel wire to cowl wire
 (IGF3) C- Instrument panel wire to core wire
 (GL 1) D-5 Instrument panel wire Lu Floor wire No.2
 (GM1) D-1 Instrument panel wire Lu
 (GM2) D-2 Instrument panel wire Lu
 (GM3) D-3 Instrument panel wire Lu
 (HF1) A-1 Front door wire AH to cowl wire
 (HF2) B-6 Front door wire RH to instrument panel wire
 (HG1) 0-5 Front door wire LH to Cowl fire
 (IF1) C-1 Front door wire LH 10 Instrument panel wire
 (IG1) D-4 Floor wire 10 Ur wire
 (LF1) B-6



(LJ1) A-11 Floor wire to Rear door wire No.1
 (L2) A-10 Floor Wire to Floor Wire No.2
 (LMI) 613 floor wire to Twyer No.1
 (LNI) A-7 floor wire 10 Trunk panel wire No.1
 (LP1) B-16 (Rackage compartment door)
 (IMF1) A-1 Acore wire No.2 to cowl wire
 (MF2) B-1
 (MK1) D-7 Floor wire No.2 10 Rear door wire No.2
 (MK2) D-6
 (ML1) C-13 Floor VyaJ No.2 to Floyer
 (ML2) D-13
 (LG) D-12 floor cross member earth
 (LR) A-17 Right quarter panel ground
 (MS) A-13 Left quarter panel ground
 (PT) U-16 lolly back panel arm



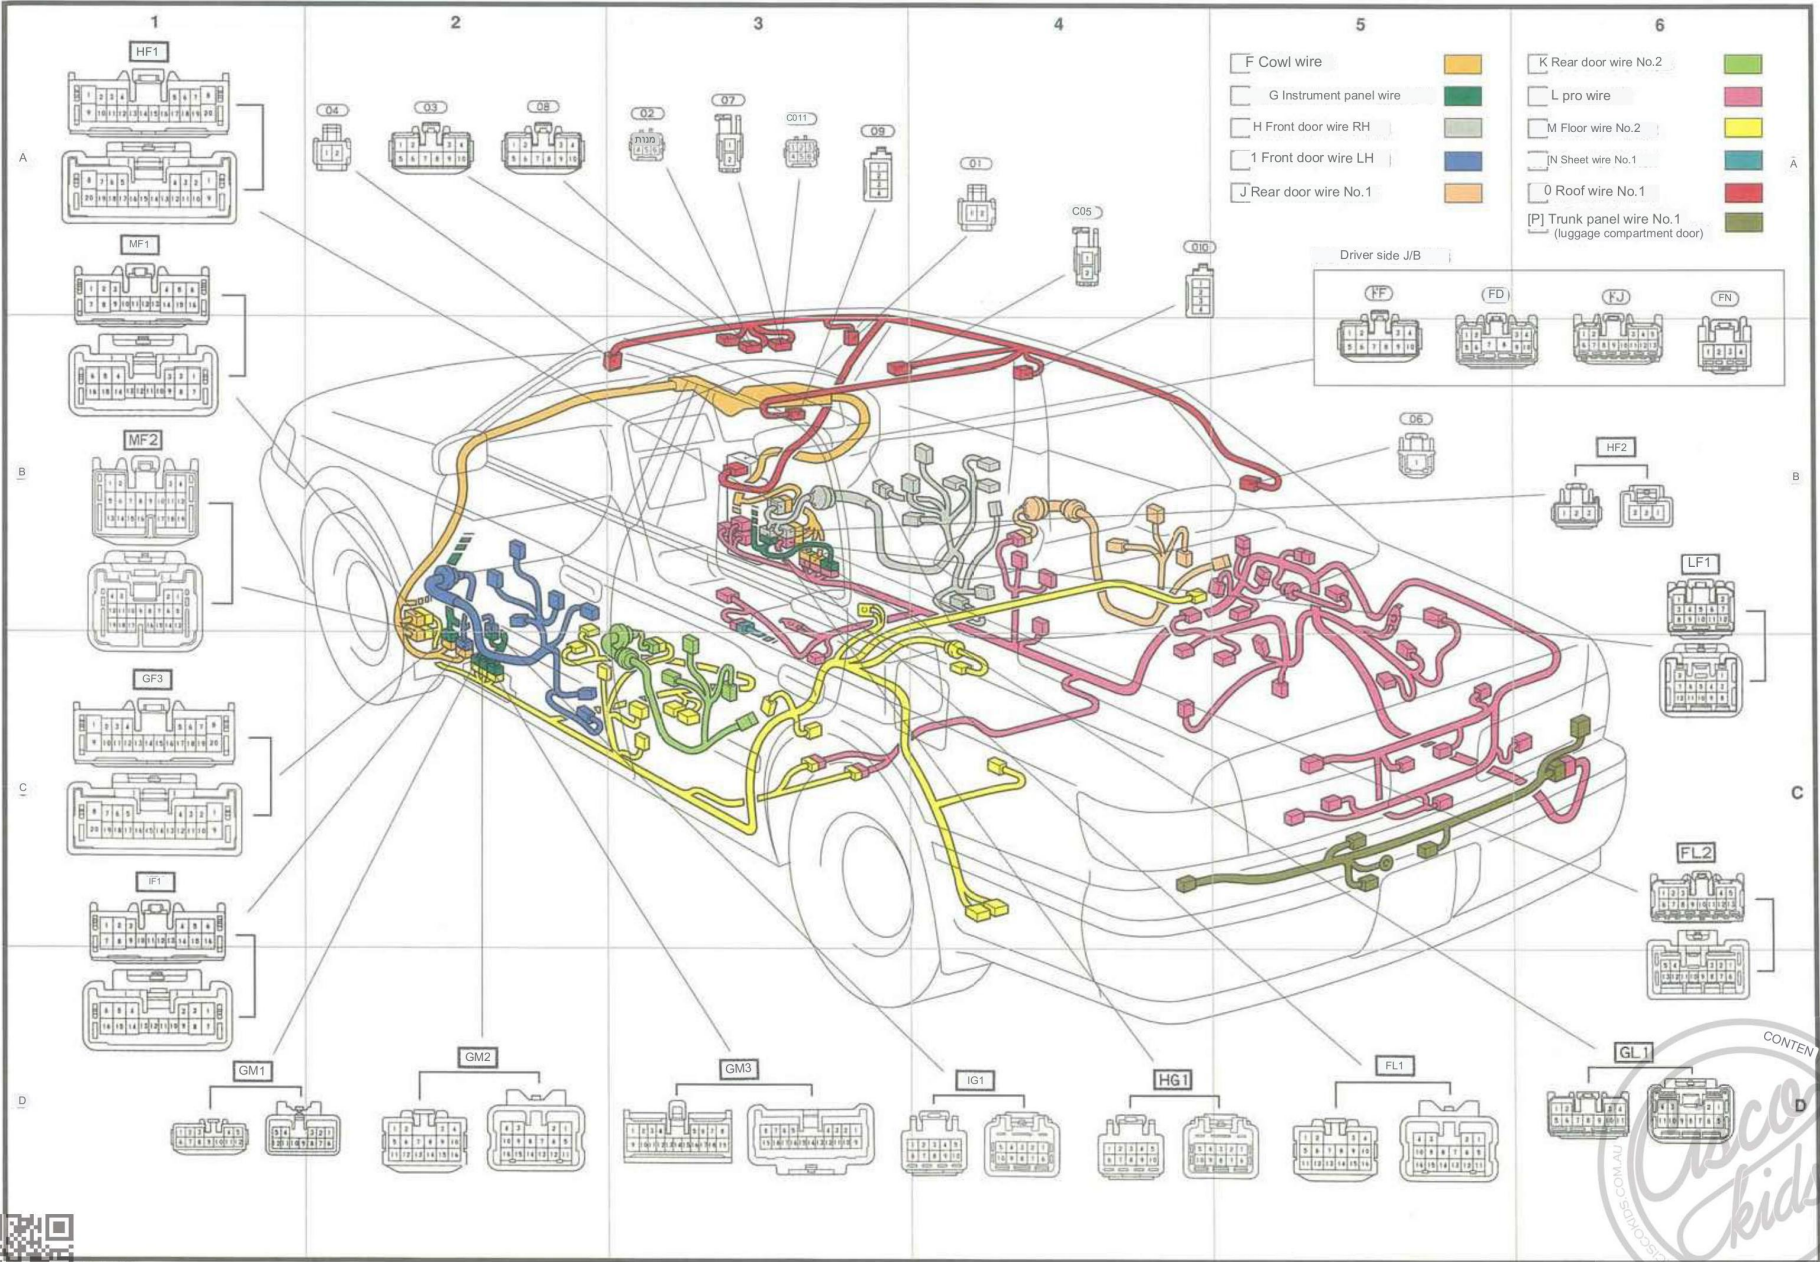


No.3 67476

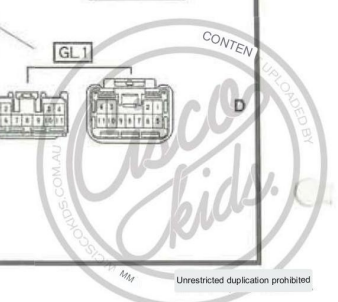

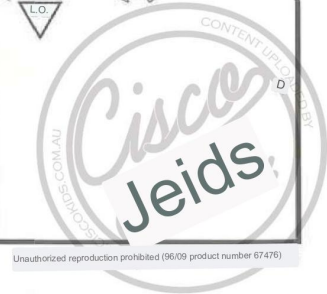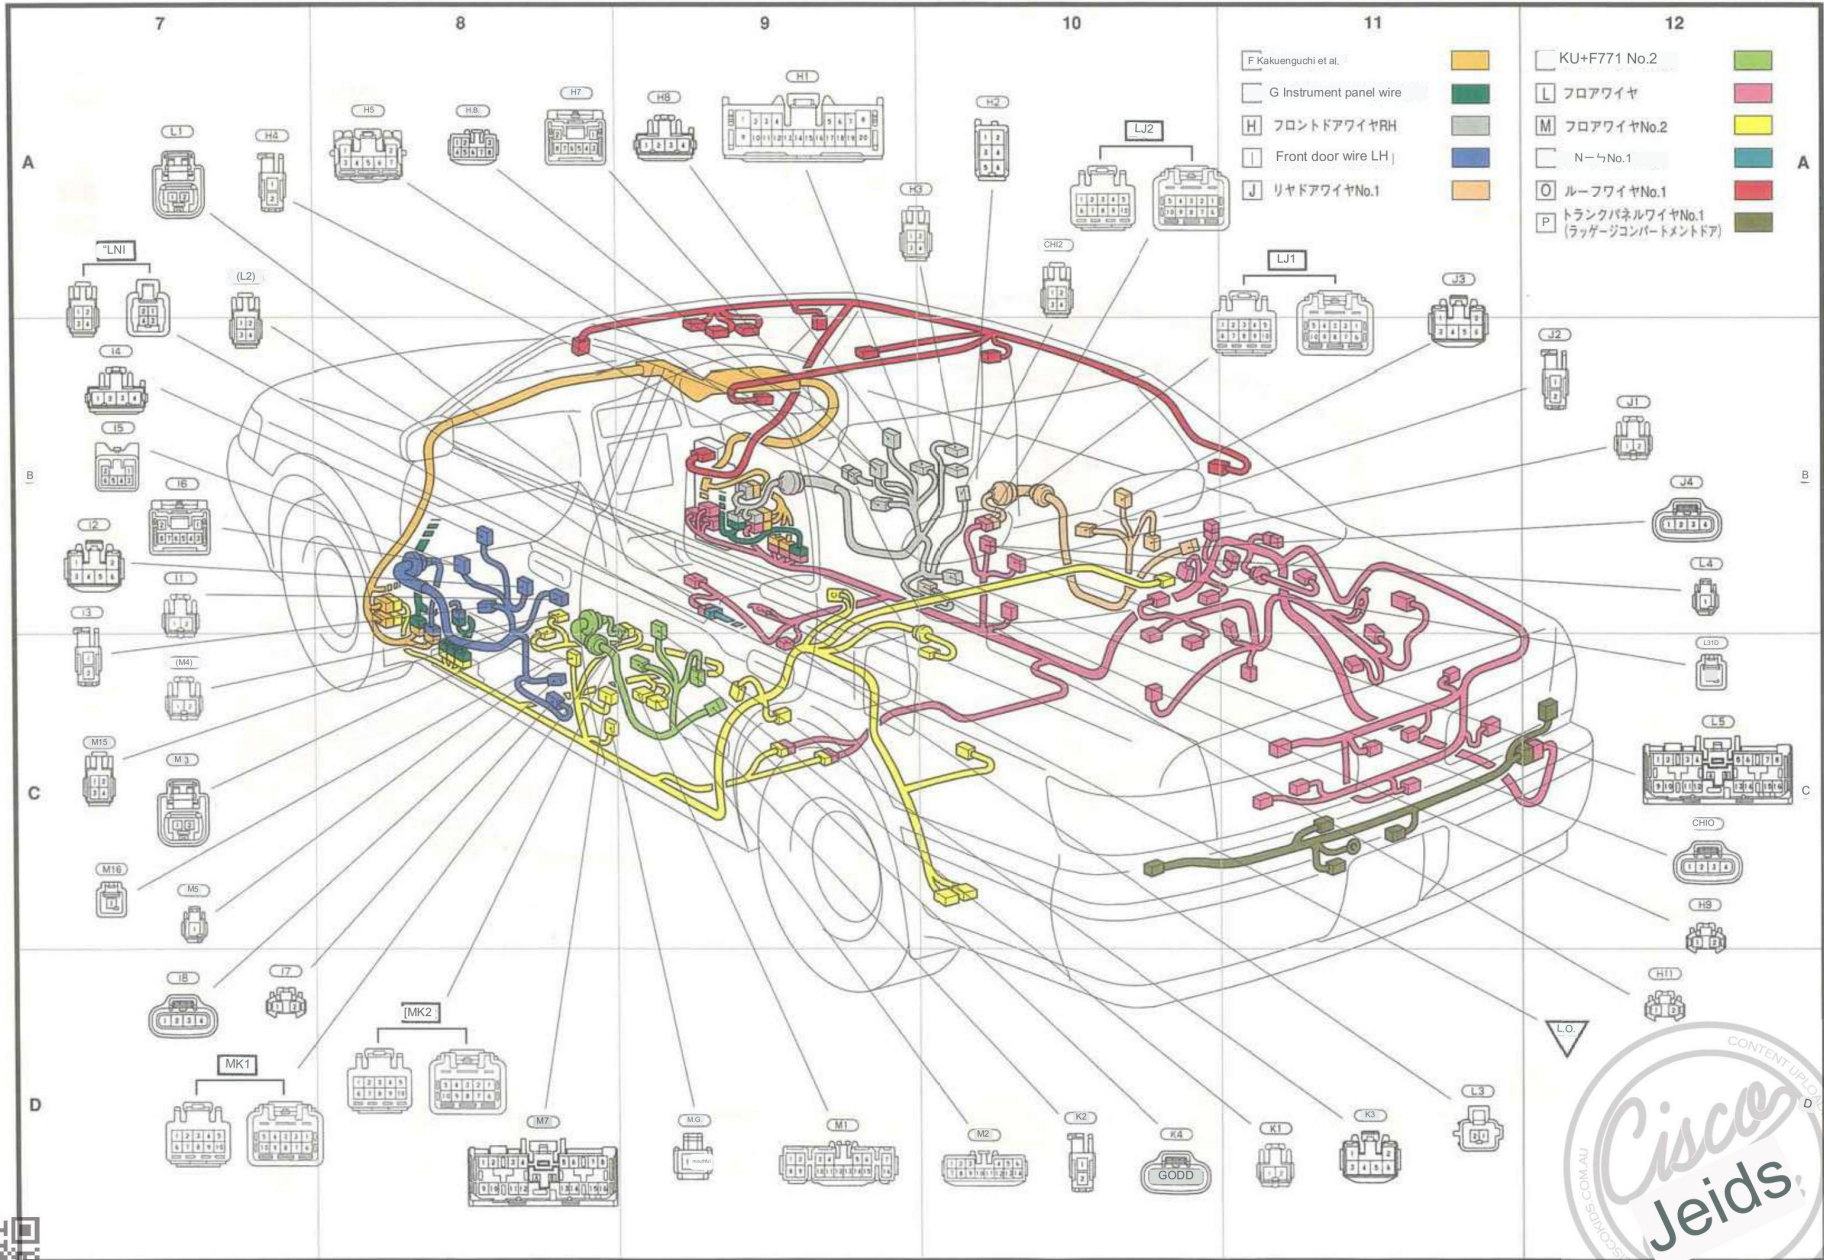

Body (side)

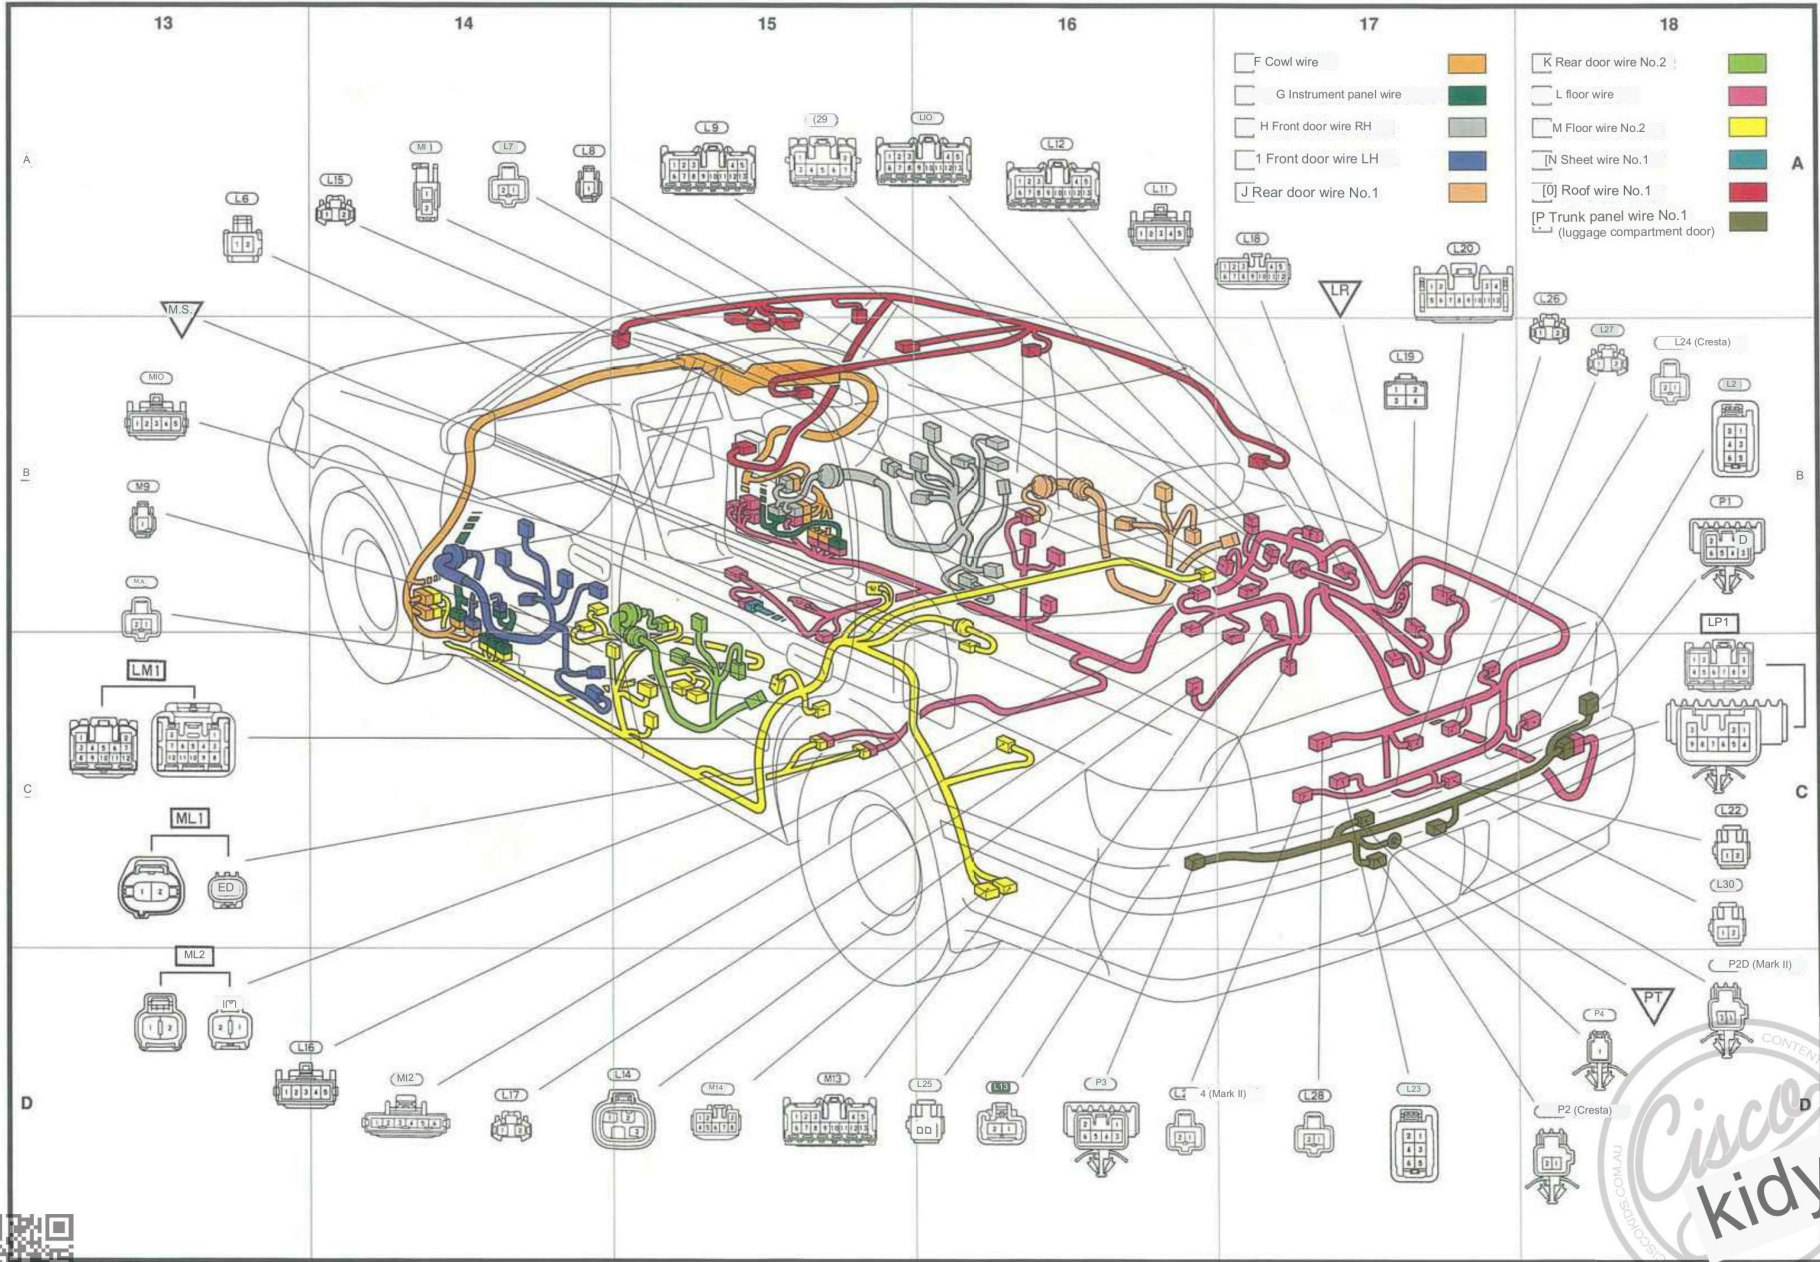


96/09 #67476




パワーシート

- L 1 B1 エアバッグRH (シート)
 - LN 1 A2 スライドモーター (除くスポーツシート)
 - N 2 C-1 7021 (Issute Riki Ichiyoichi (excluding <2 US-25-lower))
 - N 3 A3 (Chinese Eight-Year-Year-Year-Year-Old (Excluding Mazda 23-2))
 - N 4 A3 パワーシートスイッチRH (除くスポーツシート)
 - N 5 D1 バックルスイッチRH
 - N 6 D4 リクライニングモーター (除くスポーツシート)
 - N 7 B4 2015-The whole sky and the whole sky
 - N8 03 117-9-12 Electric child (for 81 steps) (Matazuichi 25-6)
- LN1 02 フロアワイヤ to シートワイヤNo.1

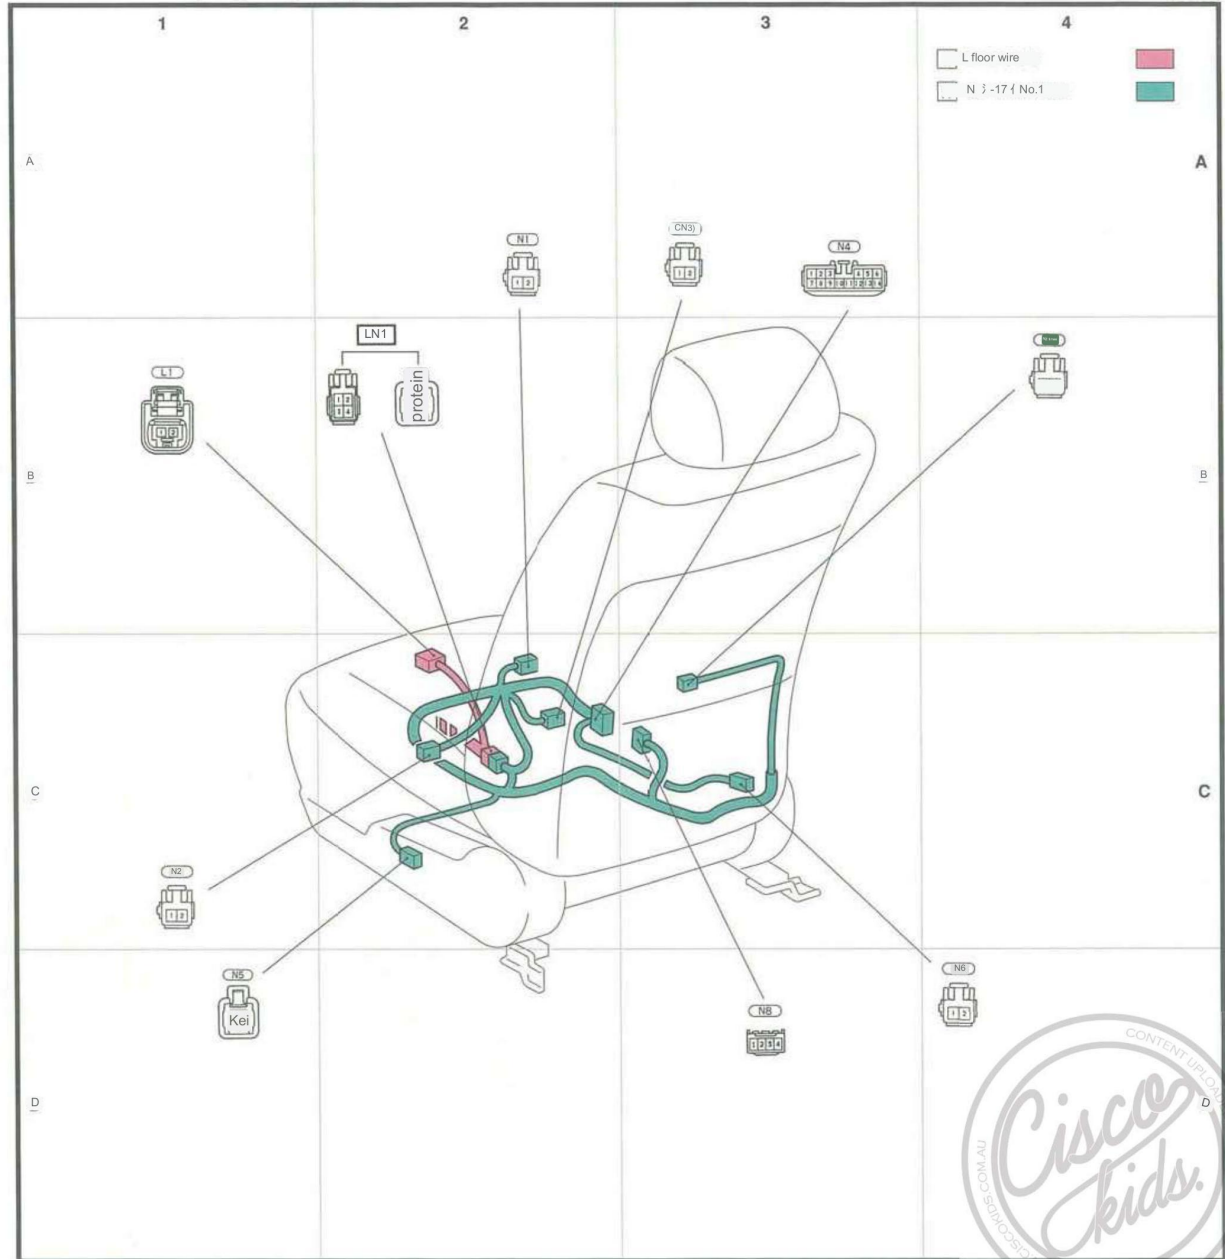


relay location


engine room

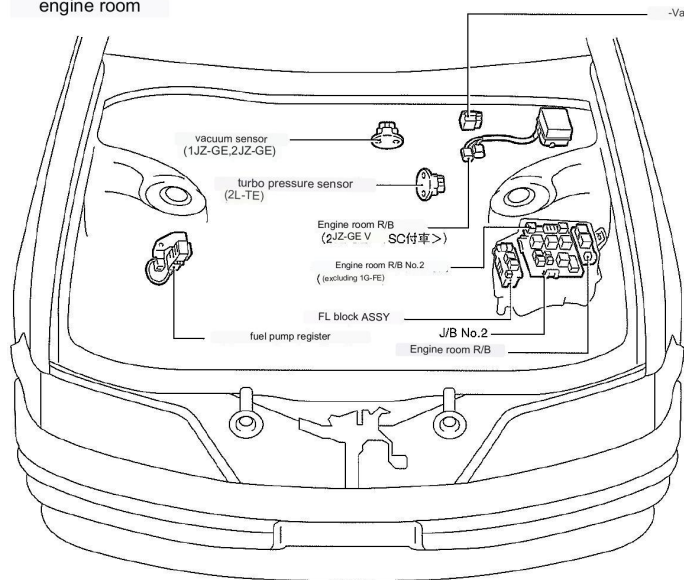

body

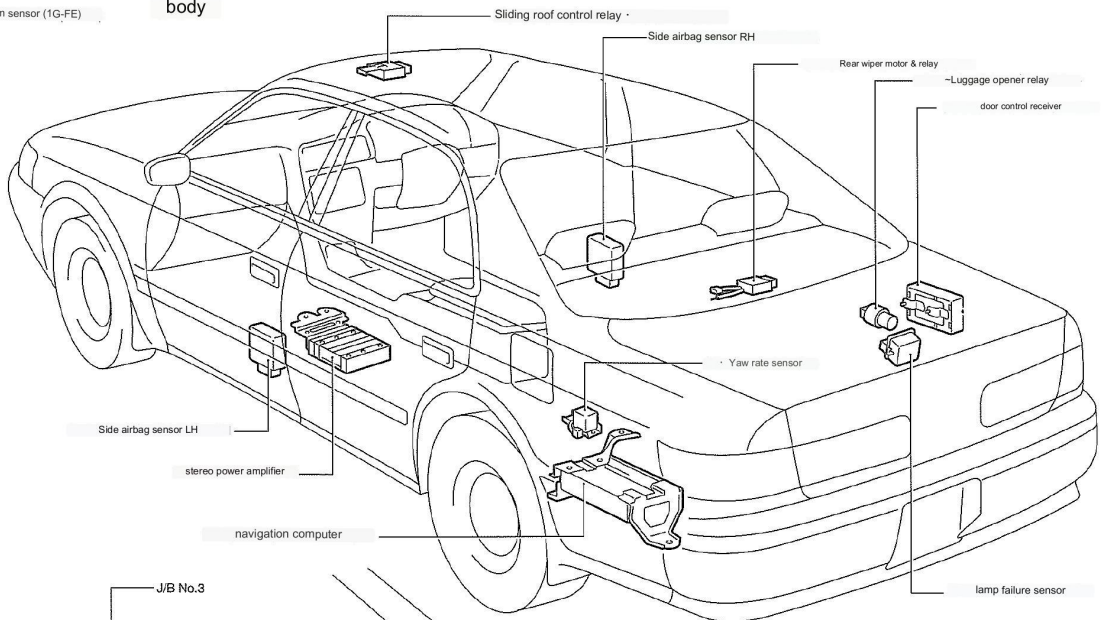

instrument panel

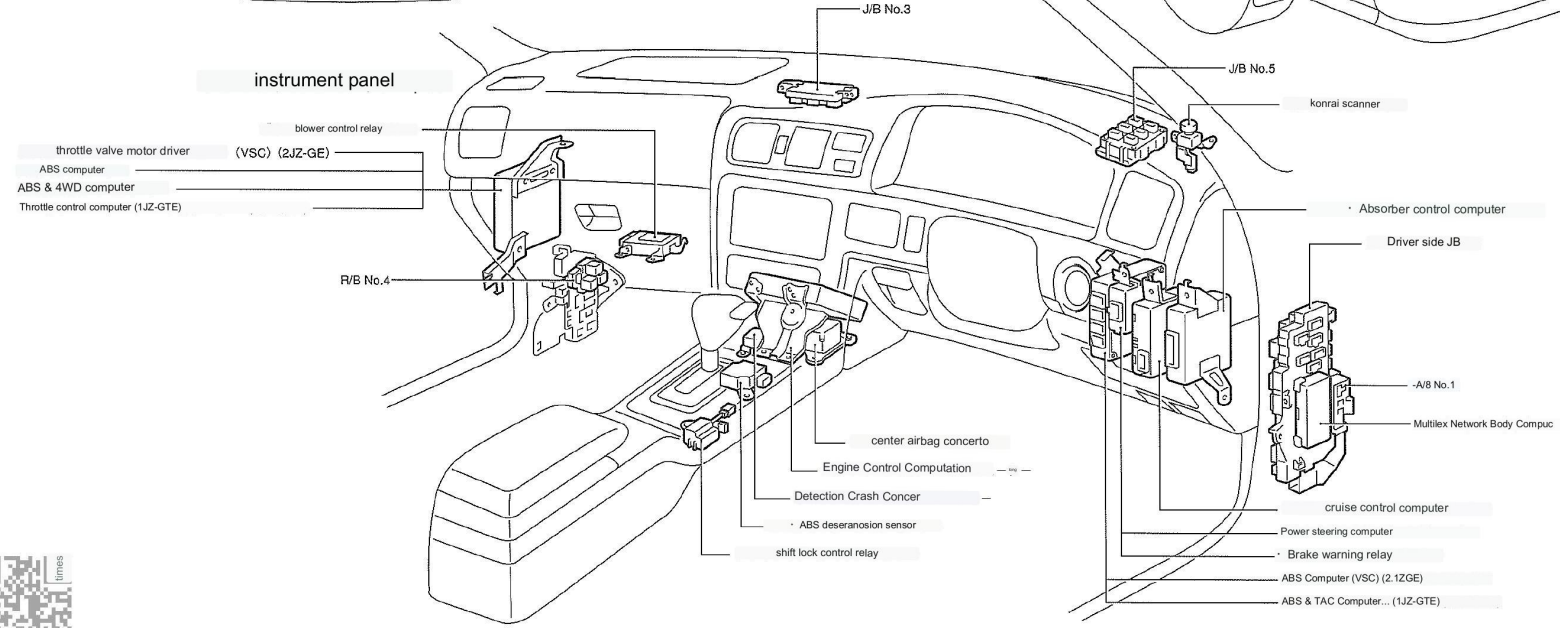

3 Wiring diagram for each system¹

Wiring diagram for each system

Power seats related	
charging	3-2
charging	3-7
Engine related	
Stating & Ignition	3-3
Engine control (1G-E)	3-4
Engine control (1JZ-GE)	3-6
Engine control (1JZ-GTE)	3-8
Engine control (2JZ-GE)	3-10
Engine control (diesel)	3-12
Cooling fan	3-13
Fuel heater (diesel)	3-13
Chassis related	
ECT (1JZ-G E)	3-14
skyhook control suspension	
(T E M S)	3-15
ECT (1JZ-G T E)	3-16
Shift lock	3-17
Overdrive (excluding ECT)	3-17
ECT (2JZ-G E)	3-18
Shift indicator	3-19
power steering	3-19
ECT (i G T E)	3-20
Airbag	3-21
ABS (without TRC)	3-22
ABS & 4WD	3-23
ABS & TRC (JZ-GE)	3-24
Electronically controlled throttle (1, Z-GTE)	3-26
ABS & TRC (diesel)	3-30
ABS (V S C)	3-32
Body related	
outer mirror	3-25
Seat belt warping	
& tension reducer	3-31
sliding roof	3-31
Warning for forgetting to remove the key &	
Power forgetting to turn off the light	3-31
door lock	3-34
power window	3-35
front power seat	3-36

Around the instrument panel

Rear wiper & washer	3-36
Excluding built-in audio amplifier <AV integrated type>	3-37
Audio (AV lkyu type with built-in amplifier)	3-38
Horn	3-39
Audio (AV system for guests with separate amplifier)	3-40
Audio (AV integrated system except for separate amplifier)	3-42
Combination meter (analog meter)	3-44
Combination meter (digital meter)	3-46
	3-43

Lights

Headlamp (excluding 1JZ-GE S grade and 1JZ-GTE)	
1JZ-GTE	3-29
backup lamp	3-37
Conlight	3-47
Stop lamp	3-48
Tail runno	3-48
interior lamp	3-49
illumination	3-50
Figure lamp	3-51
Turn Signal & Hard	3
51	
Headlamp (1JZ-GE S grade and 1JZ-GTE)	
1JZ-GTE	3-52



Air conditioning related

automatic air conditioner	3-28
Air Bill Noire	3-52


Others

Optional connector	3-21
Rear window defogger	3-34
Cigarette lighter & clock	3-35
Front window defogger &	
Mirahi Ta	3-41
Between earths	3-42
Cruise control, power	3-43
supply/earth system list	3-53




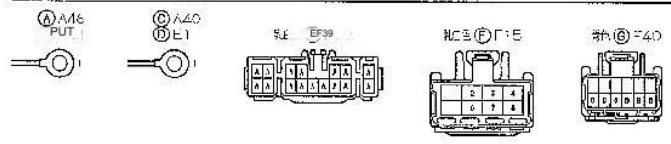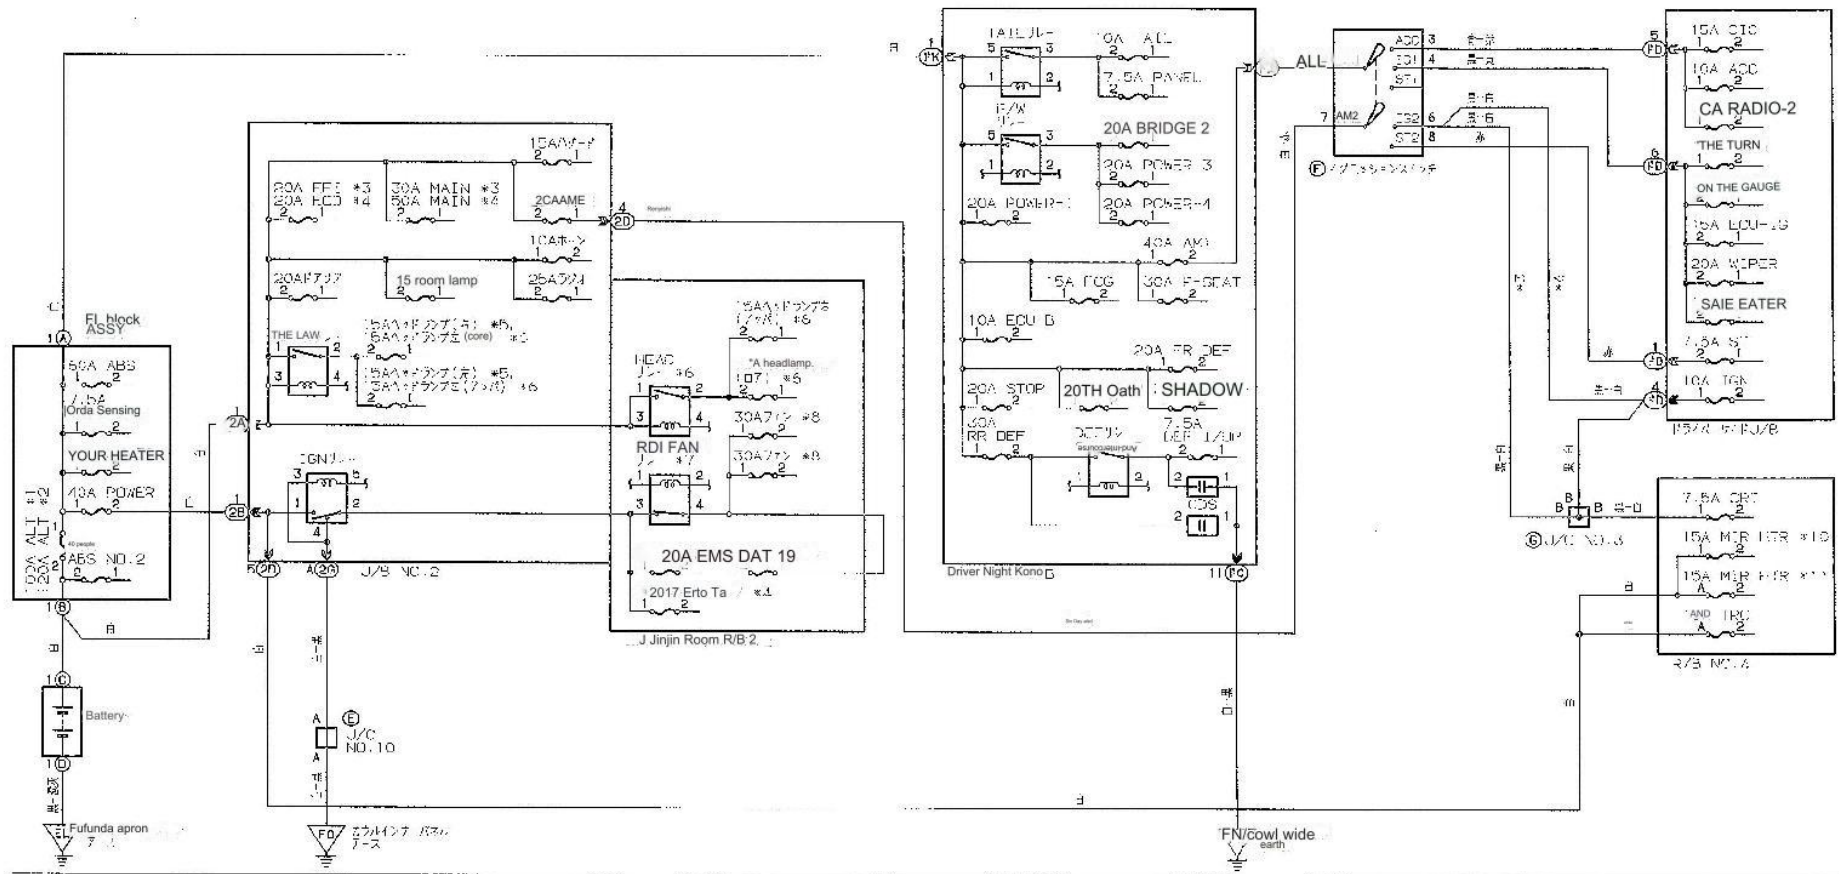


3

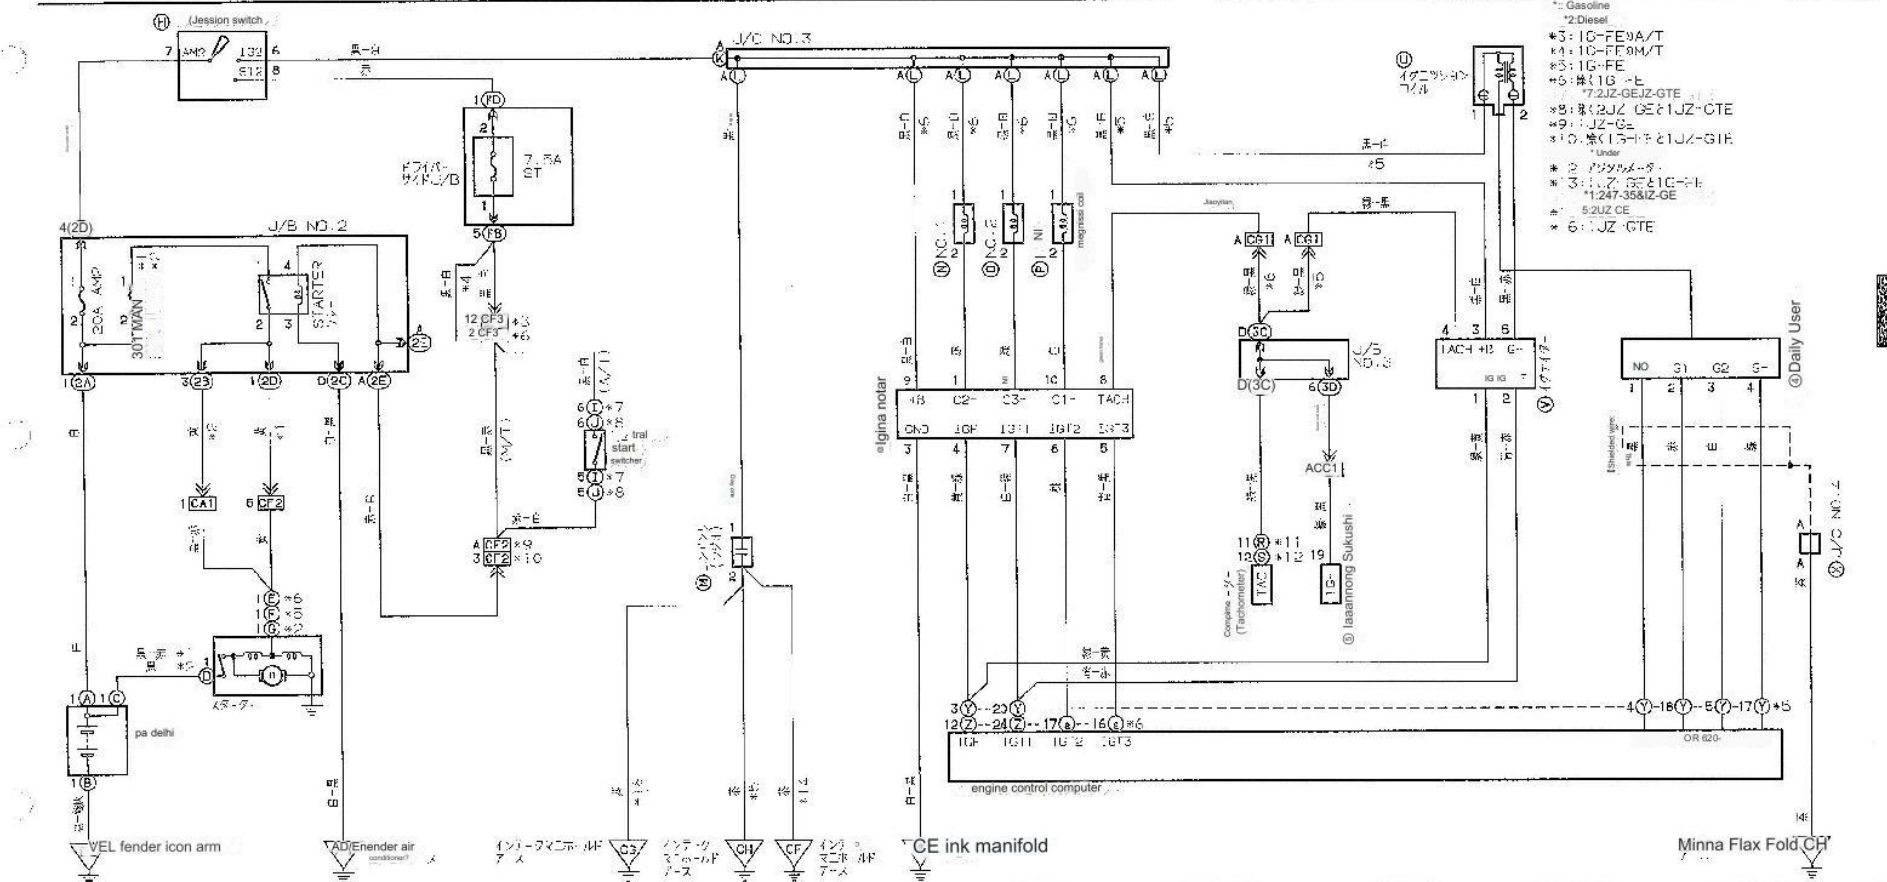

- * 1: Gasoline
- * 2: Diesel
- * 3: 1G-FE9A/T
- * 4: 1G-FE9M/T
- * 5: 1G-FE
- * 6: 1G-FE
- * 7: 2JZ-GE1JZ-GTE
- * 8: 1JZ-G2
- * 9: 1JZ-G2
- * 10: 1JZ-G2
- * 11: 1JZ-GTE
- * 12: 1JZ-GTE
- * 13: 1JZ-GTE
- * 14: 1JZ-GTE
- * 15: 1JZ-GTE
- * 16: 1JZ-GTE
- * 17: 1JZ-GTE
- * 18: 1JZ-GTE
- * 19: 1JZ-GTE
- * 20: 1JZ-GTE

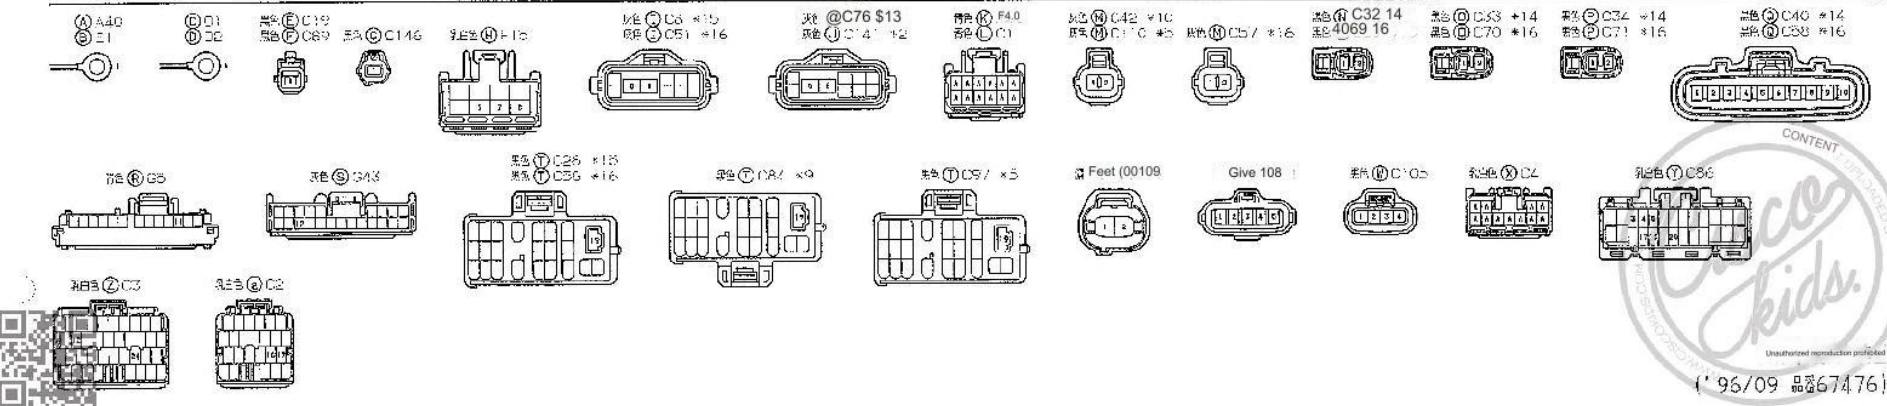


Engine control (1G-FE)

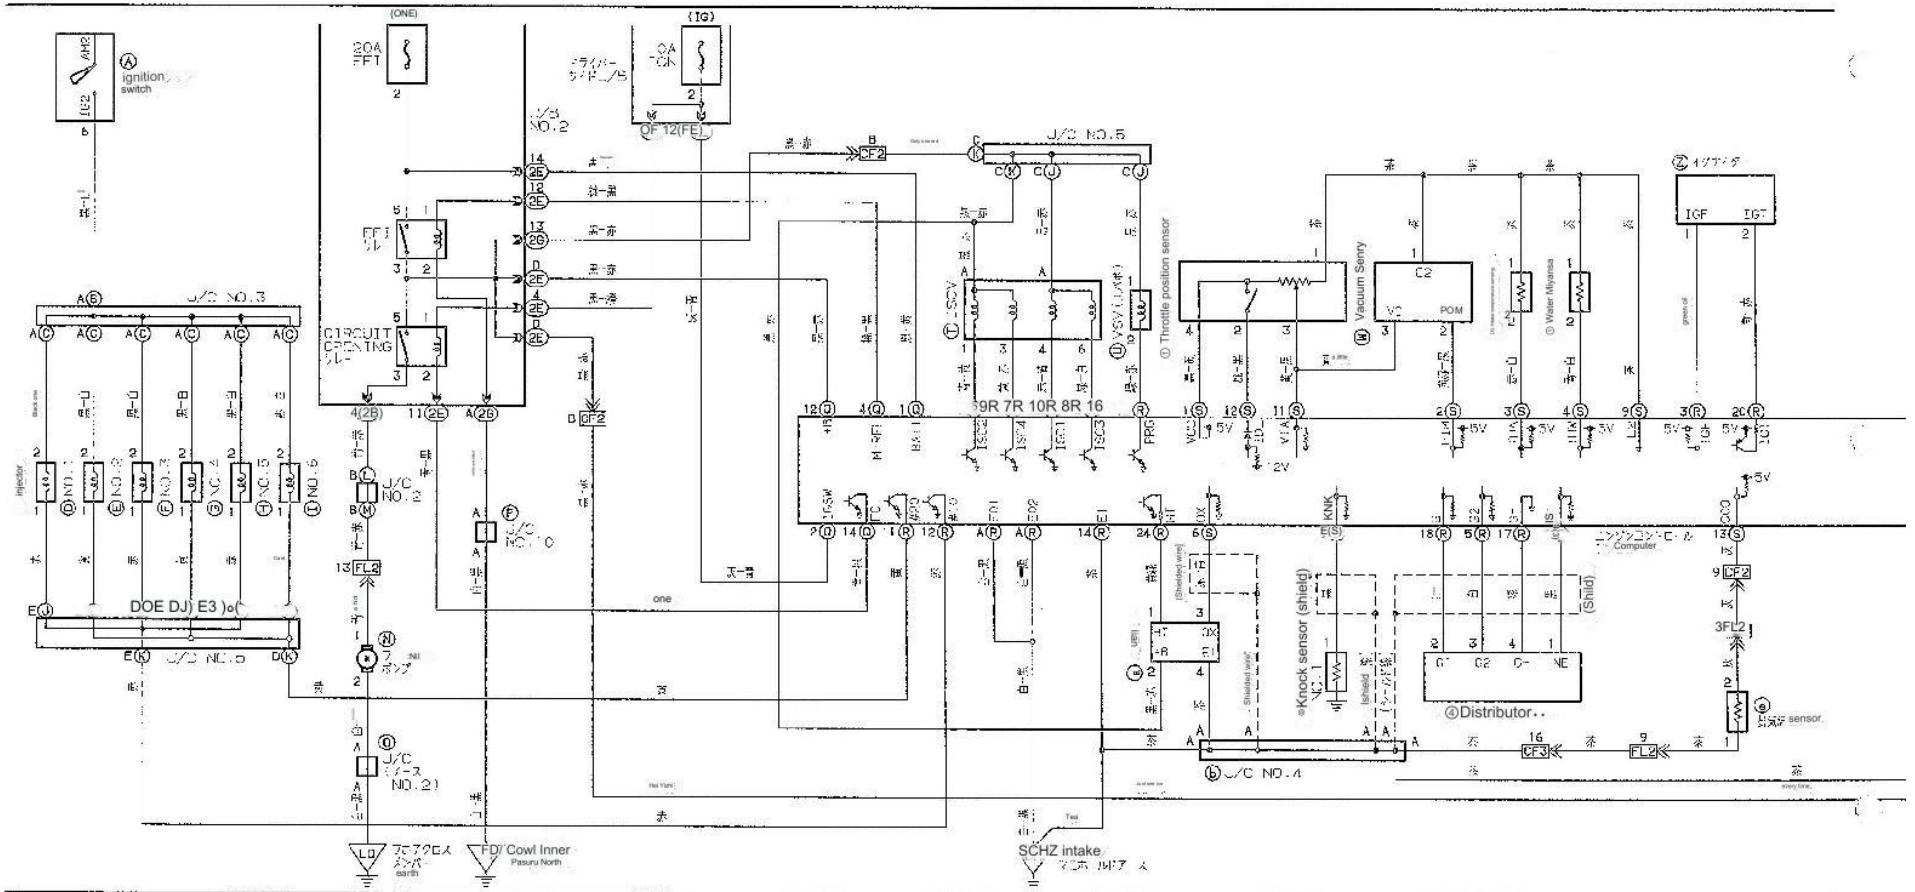

- | | | | | | | | | | | | | | |
|---------------|---------------|----------------|---------------|---------------------------|----------------|----------------|---------------|----------------|---------------|---------------|---------------|---------------|---------------|
| Relay (A) F10 | Relay (C) F40 | Relay (C) C101 | Relay (C) C99 | Relay (F) 1:01 Color 1092 | Relay (C) C93 | Relay (C) C96 | Relay (C) C95 | Relay (L) A41 | Van-48 | Excellent L13 | Relay (L) L9 | Relay (F) F59 | Relay (F) F61 |
| Relay (C) C86 | Relay (S) C97 | Relay (T) C102 | Relay (U) C96 | Relay (V) C103 | Relay (M) C111 | Relay (C) C107 | Relay (Y) C98 | Relay (Z) C108 | Color C100 C4 | Relay (C) C94 | Relay (C) C95 | Relay (I) I3 | |






Product number 67476

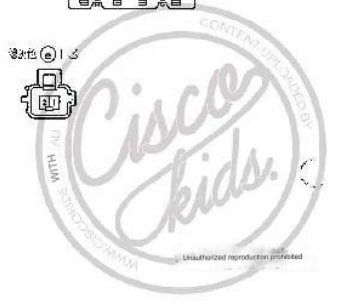



Unauthorized reproduction prohibited

Engine control (1G-FE)

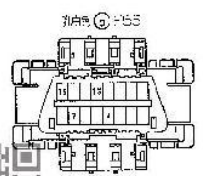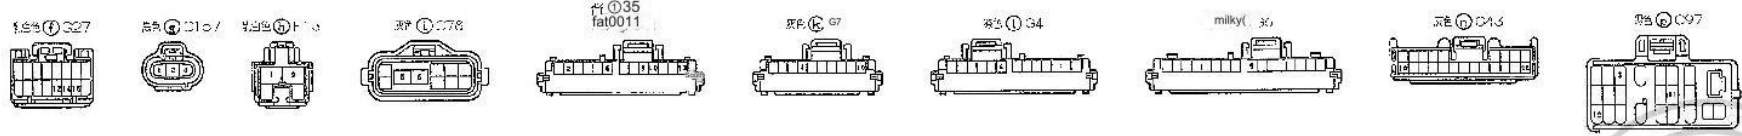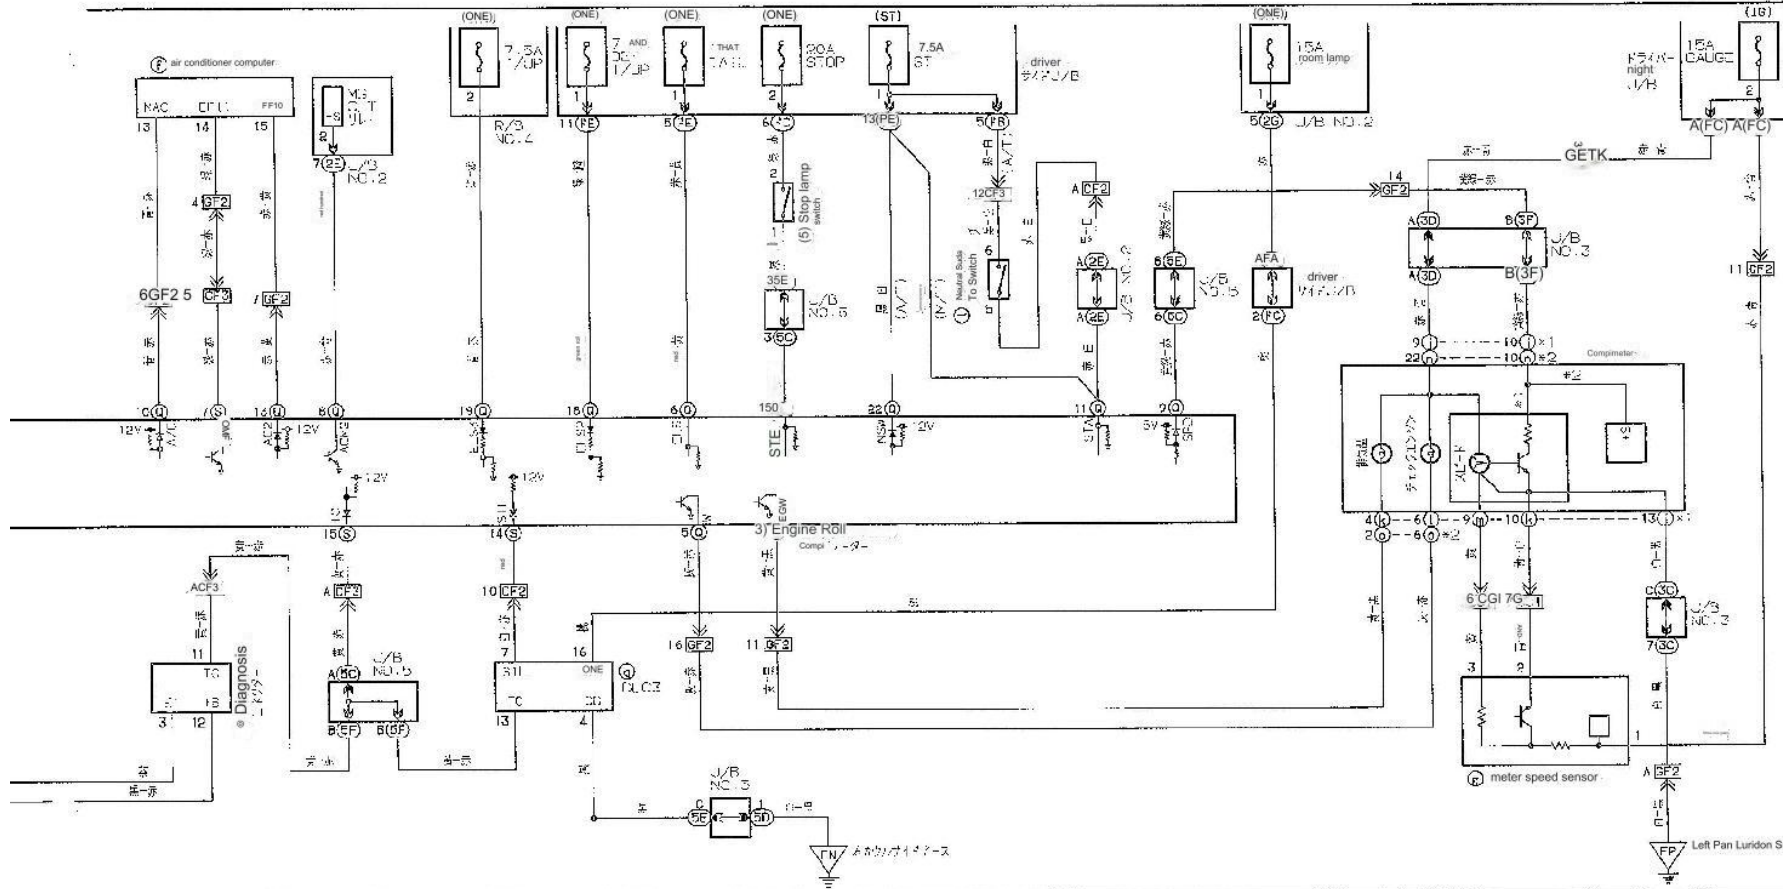


Engine control (1JZ-GE)

#1: 2D TRC included #3: Anonig meter
 #2: without DOTFC #4: Digital meter
 #5: 2WC +7: Grade
 #6: 2WC #7: 3: 2WD WD with TRC

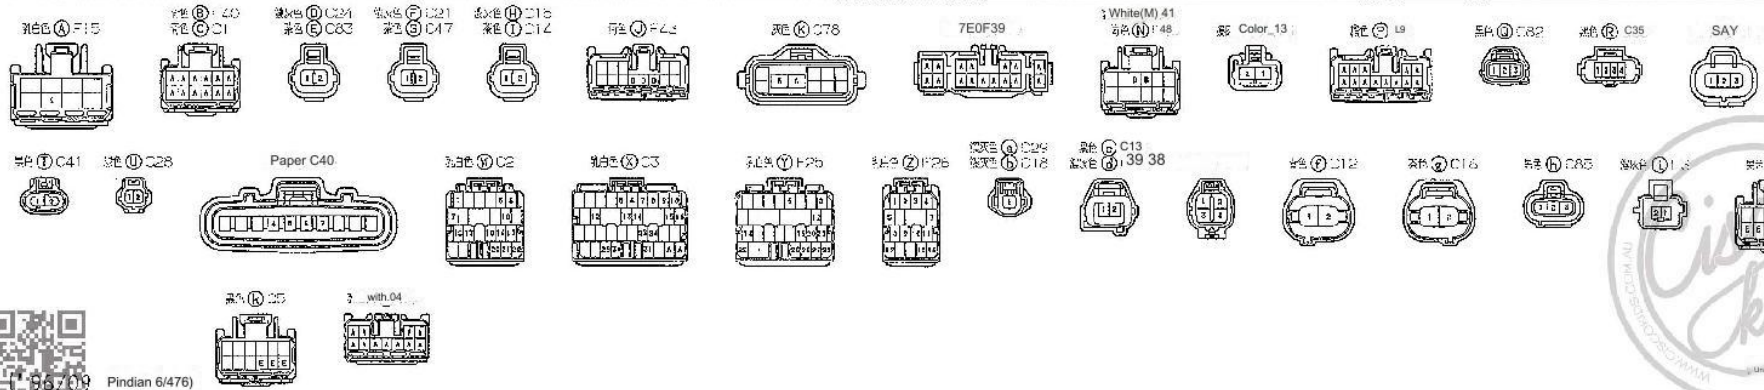
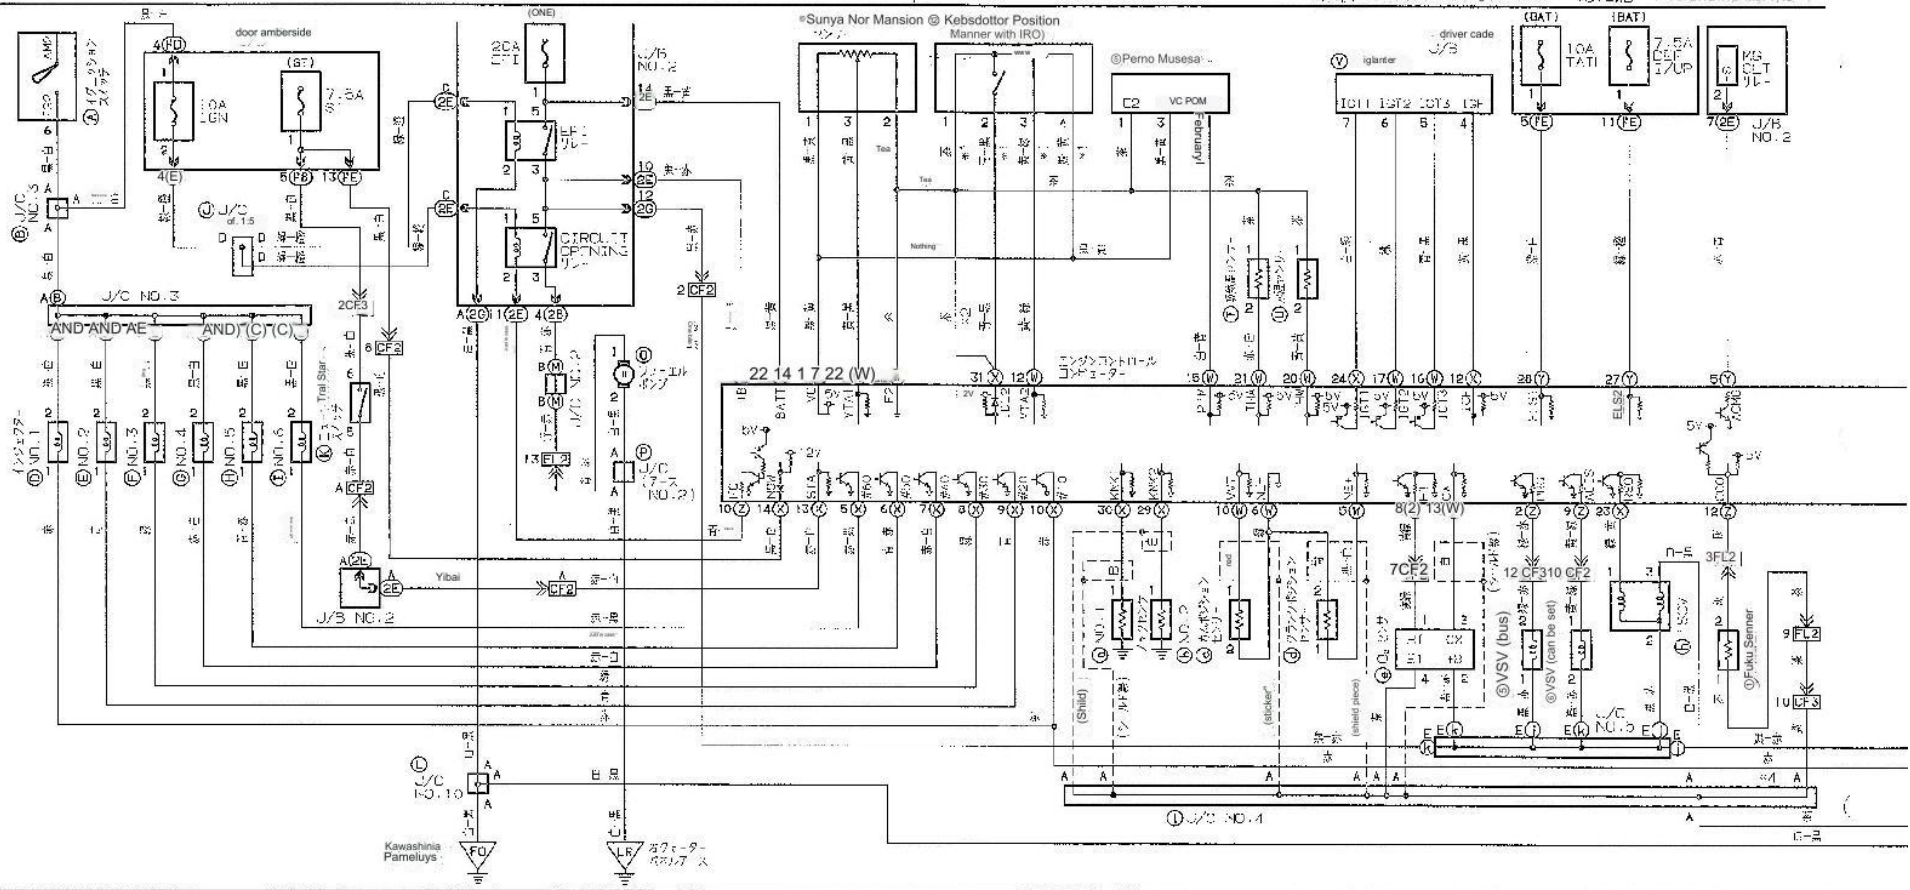


Pindian 6(476)


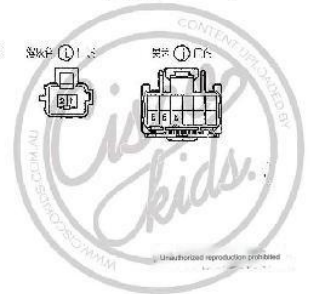


Engine control (1JZ-GE)

Charging

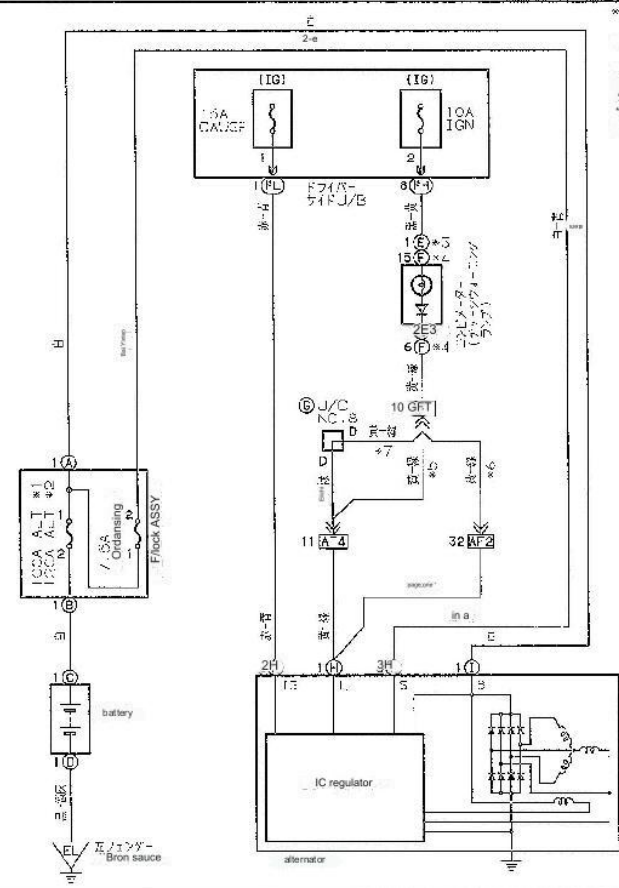
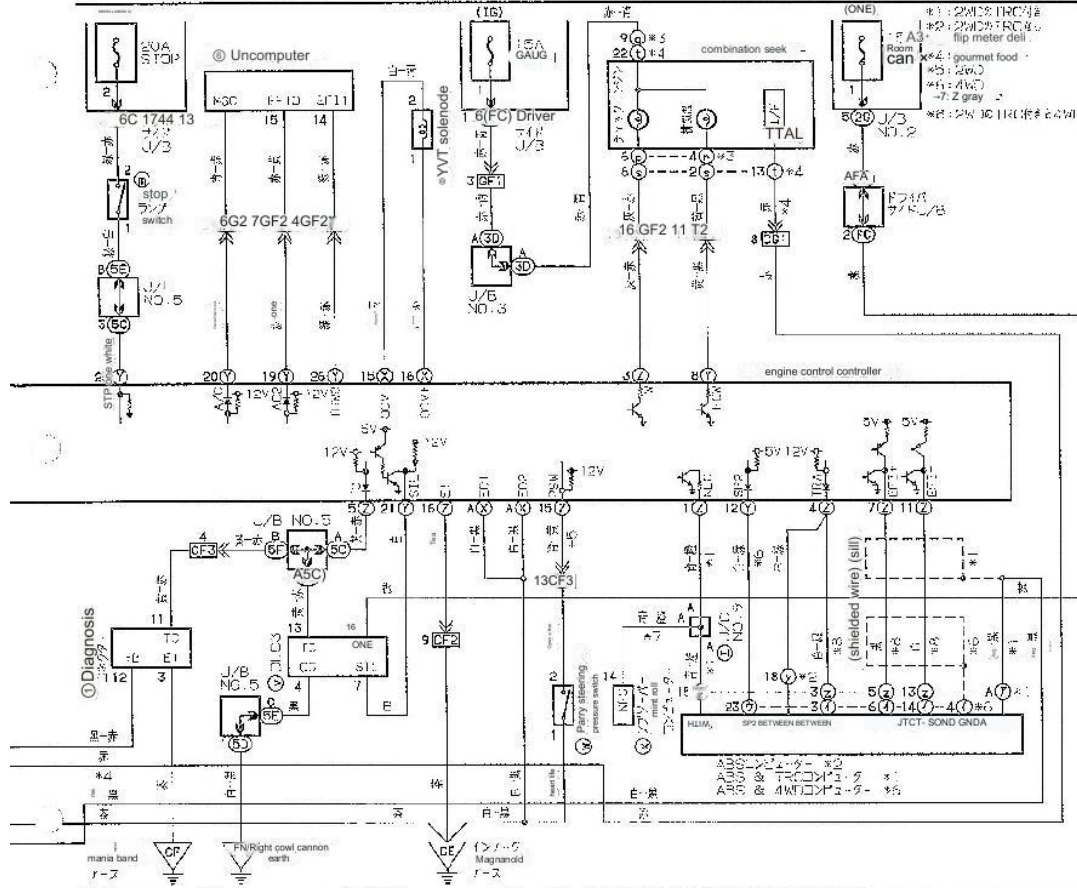


- *1: 1JZ-GE (1JZ-GE)
- *2: 2JZ-GE (2JZ-GE)
- *3: 2JZ-GE (2JZ-GE)
- *4: 2JZ-GE (2JZ-GE)
- *5: 2JZ-GE (2JZ-GE)
- *6: 2JZ-GE (2JZ-GE)
- *7: 2JZ-GE (2JZ-GE)
- *8: 2JZ-GE (2JZ-GE)
- *9: 2JZ-GE (2JZ-GE)
- *10: 2JZ-GE (2JZ-GE)
- *11: 2JZ-GE (2JZ-GE)
- *12: 2JZ-GE (2JZ-GE)
- *13: 2JZ-GE (2JZ-GE)
- *14: 2JZ-GE (2JZ-GE)
- *15: 2JZ-GE (2JZ-GE)
- *16: 2JZ-GE (2JZ-GE)
- *17: 2JZ-GE (2JZ-GE)
- *18: 2JZ-GE (2JZ-GE)
- *19: 2JZ-GE (2JZ-GE)
- *20: 2JZ-GE (2JZ-GE)
- *21: 2JZ-GE (2JZ-GE)
- *22: 2JZ-GE (2JZ-GE)
- *23: 2JZ-GE (2JZ-GE)
- *24: 2JZ-GE (2JZ-GE)
- *25: 2JZ-GE (2JZ-GE)
- *26: 2JZ-GE (2JZ-GE)
- *27: 2JZ-GE (2JZ-GE)
- *28: 2JZ-GE (2JZ-GE)
- *29: 2JZ-GE (2JZ-GE)
- *30: 2JZ-GE (2JZ-GE)
- *31: 2JZ-GE (2JZ-GE)
- *32: 2JZ-GE (2JZ-GE)
- *33: 2JZ-GE (2JZ-GE)
- *34: 2JZ-GE (2JZ-GE)
- *35: 2JZ-GE (2JZ-GE)
- *36: 2JZ-GE (2JZ-GE)
- *37: 2JZ-GE (2JZ-GE)
- *38: 2JZ-GE (2JZ-GE)
- *39: 2JZ-GE (2JZ-GE)
- *40: 2JZ-GE (2JZ-GE)
- *41: 2JZ-GE (2JZ-GE)
- *42: 2JZ-GE (2JZ-GE)
- *43: 2JZ-GE (2JZ-GE)
- *44: 2JZ-GE (2JZ-GE)
- *45: 2JZ-GE (2JZ-GE)
- *46: 2JZ-GE (2JZ-GE)
- *47: 2JZ-GE (2JZ-GE)
- *48: 2JZ-GE (2JZ-GE)
- *49: 2JZ-GE (2JZ-GE)
- *50: 2JZ-GE (2JZ-GE)

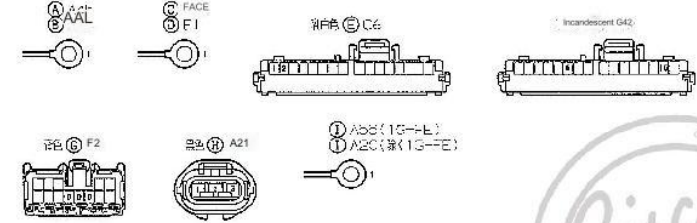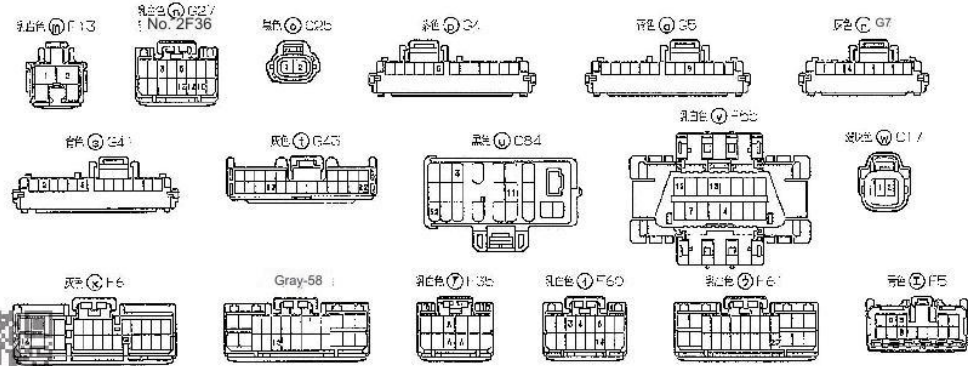


Engine control (1JZ-GTE)

*1: K/T
*2: A/T

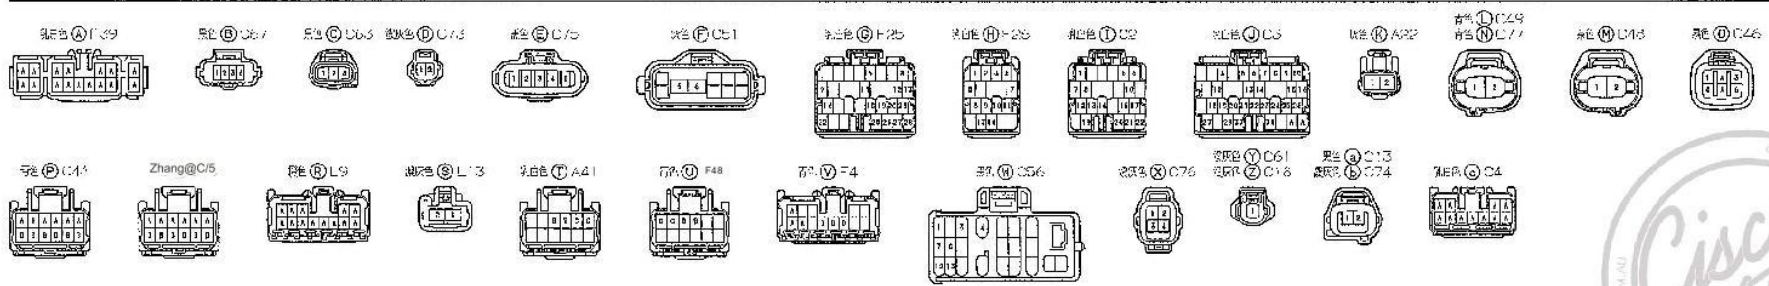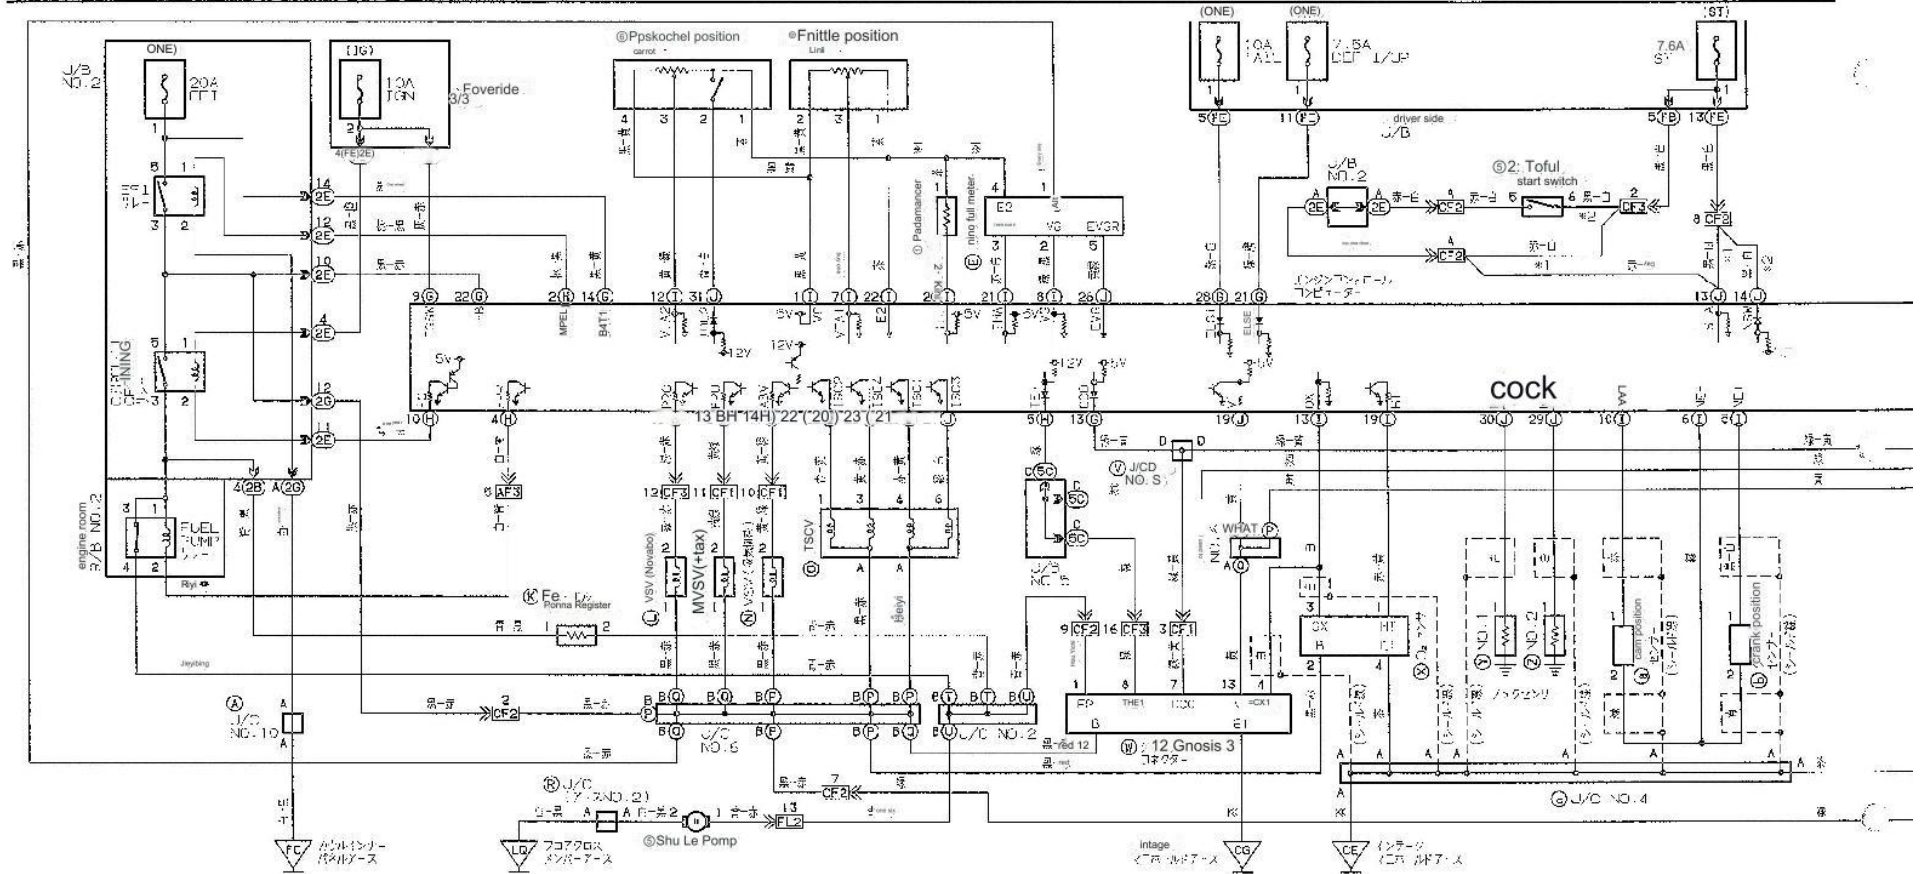


Product number 67476

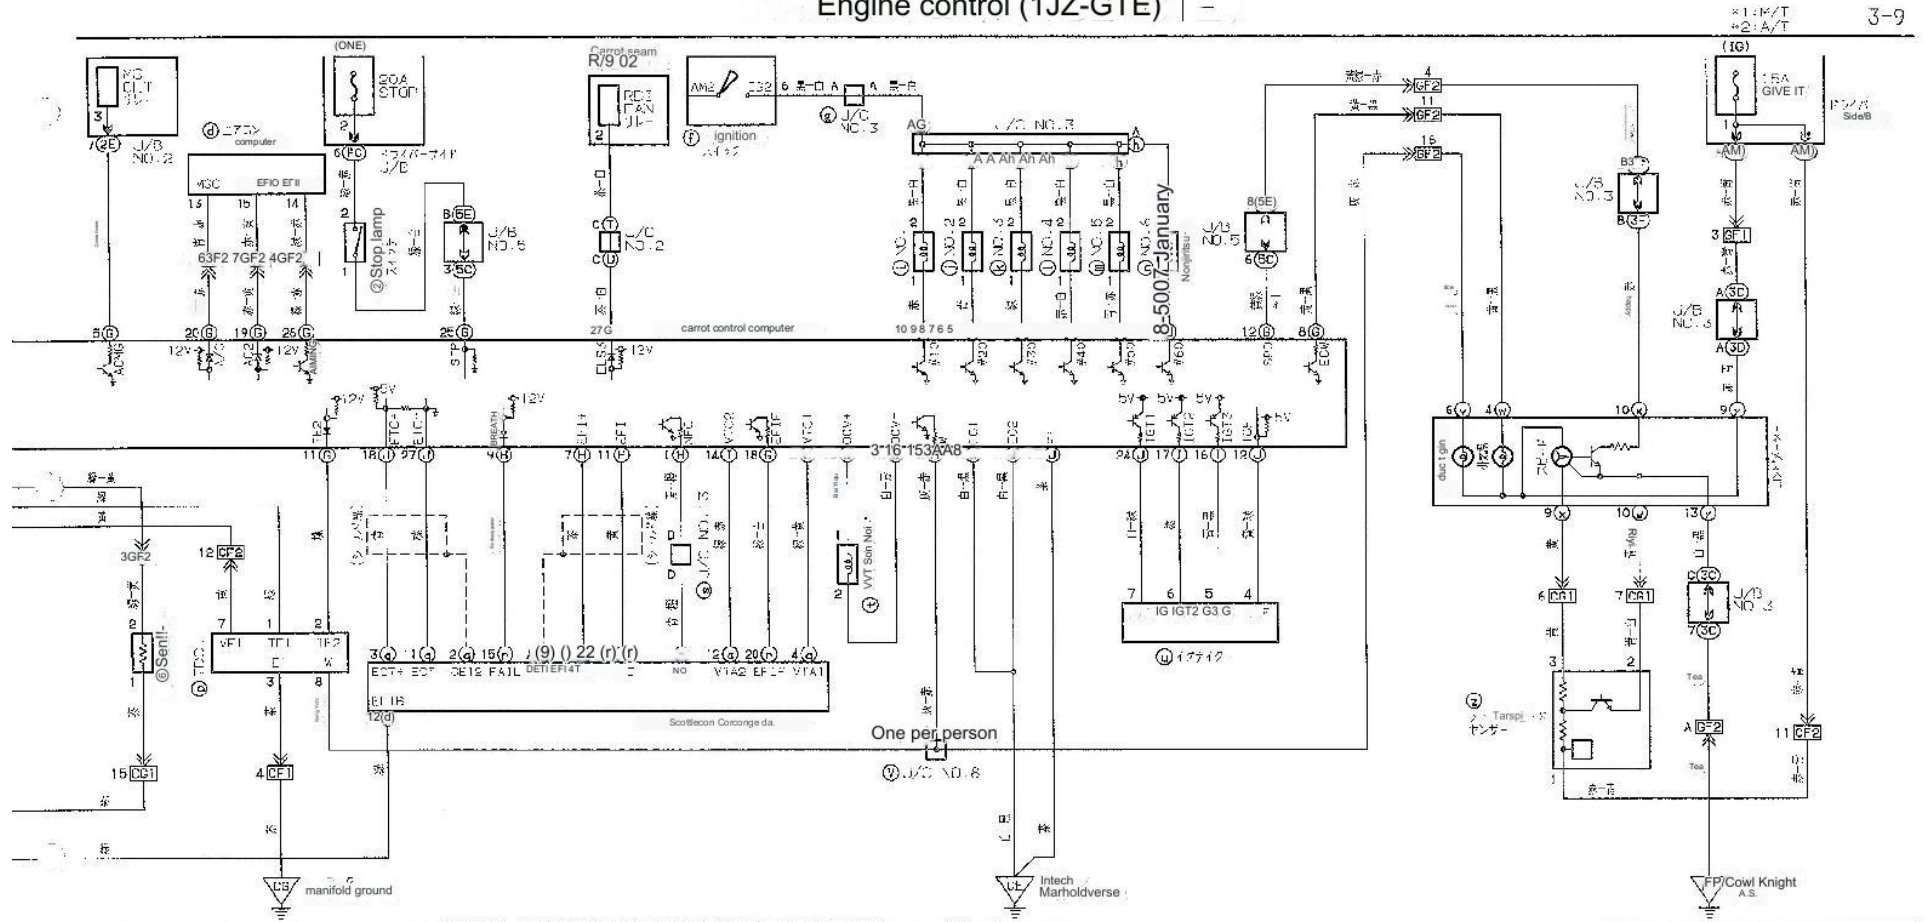


- Three colors 327
- 品番 ① F13
- Milky blue (-15)
- 品番 ② F40
- 品番 ③ C1
- Color 0066
- 品番 ④ C15
- 品番 ⑤ C50
- 品番 ⑥ C17
- 品番 ⑦ C143
- 品番 ⑧ C11
- 品番 ⑨ F7
- 品番 ⑩ C23
- Color F54
- 品番 ⑪ F4.5
- 品番 ⑫ C58
- 品番 ⑬ C58
- heat G4
- 品番 ⑭ C7
- 品番 ⑮ C6
- 品番 ⑯ C5
- 品番 ⑰ C55





Engine control (2JZ-GE)


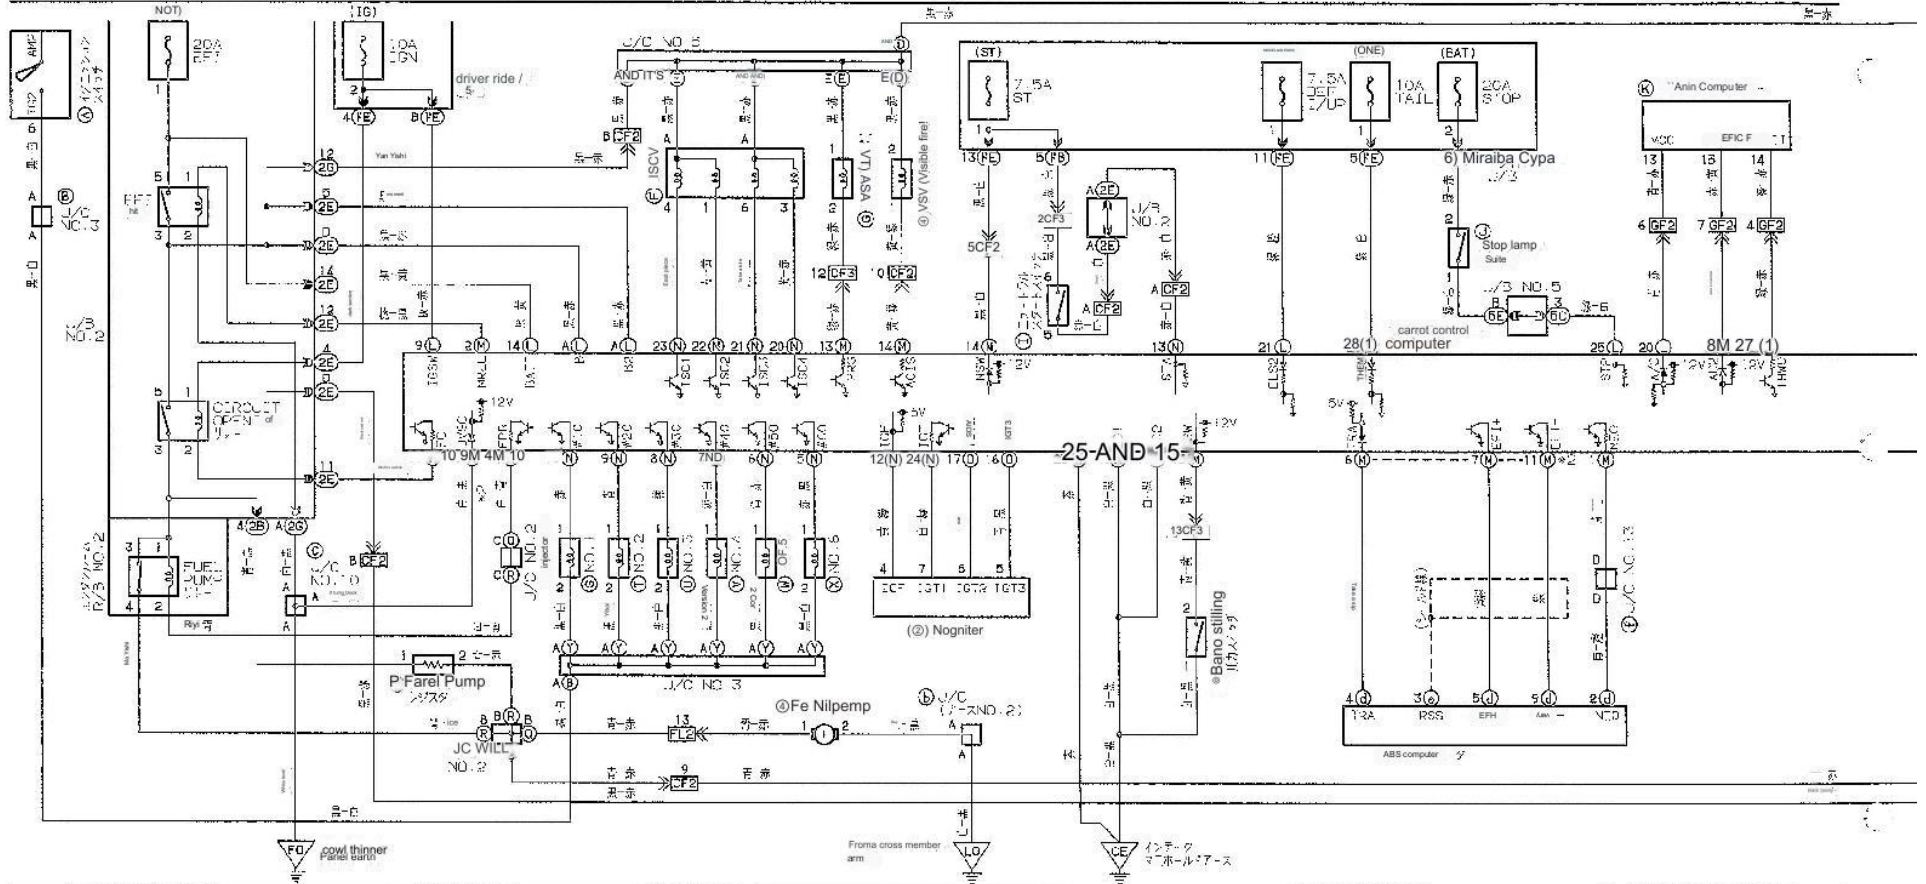


- | | | | | | | | | | | | | | |
|-------------------|-----------------|---------------|--------|---------|---------------------------|--------|--------|-------|--------|----------|----------|--------|--------|
| Regardless of F15 | 黒色 F20 | 黒色 Color CF39 | 黒色 C5 | 黒色 C6 | 黒色 C136 | 白色 C12 | 茶色 C15 | 茶色 C8 | 茶色 F3 | LEAK G27 | 黒色 L F25 | 黒色 F26 | |
| 茶色 N C3 | 茶色 C7
茶色 F33 | 茶色 A22 | 茶色 T43 | 黒色 R A4 | Change gas C204
茶色 C23 | 茶色 V20 | 茶色 C14 | F2 C1 | 黒色 C20 | 茶色 F3 | 黒色 L5 | 茶色 C17 | 茶色 F51 |

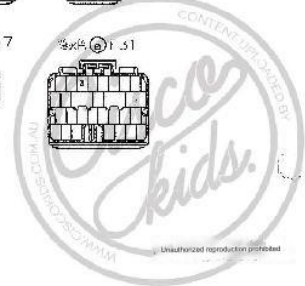

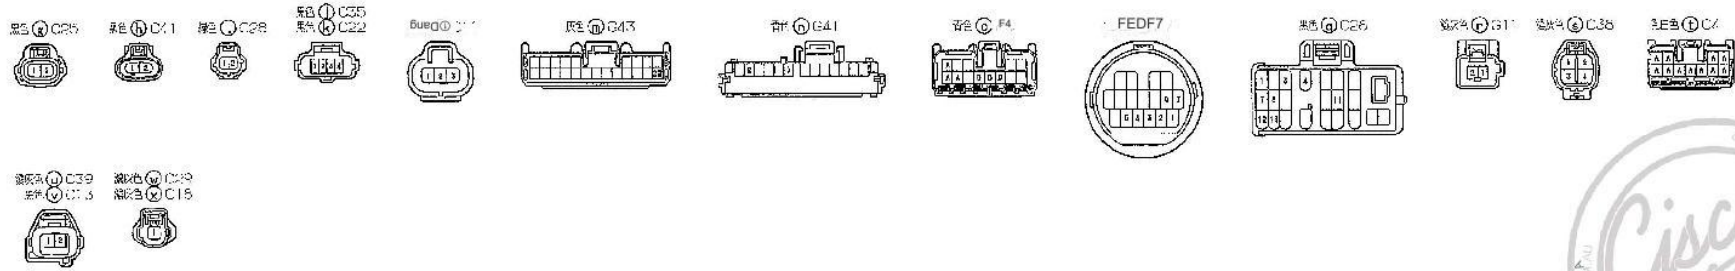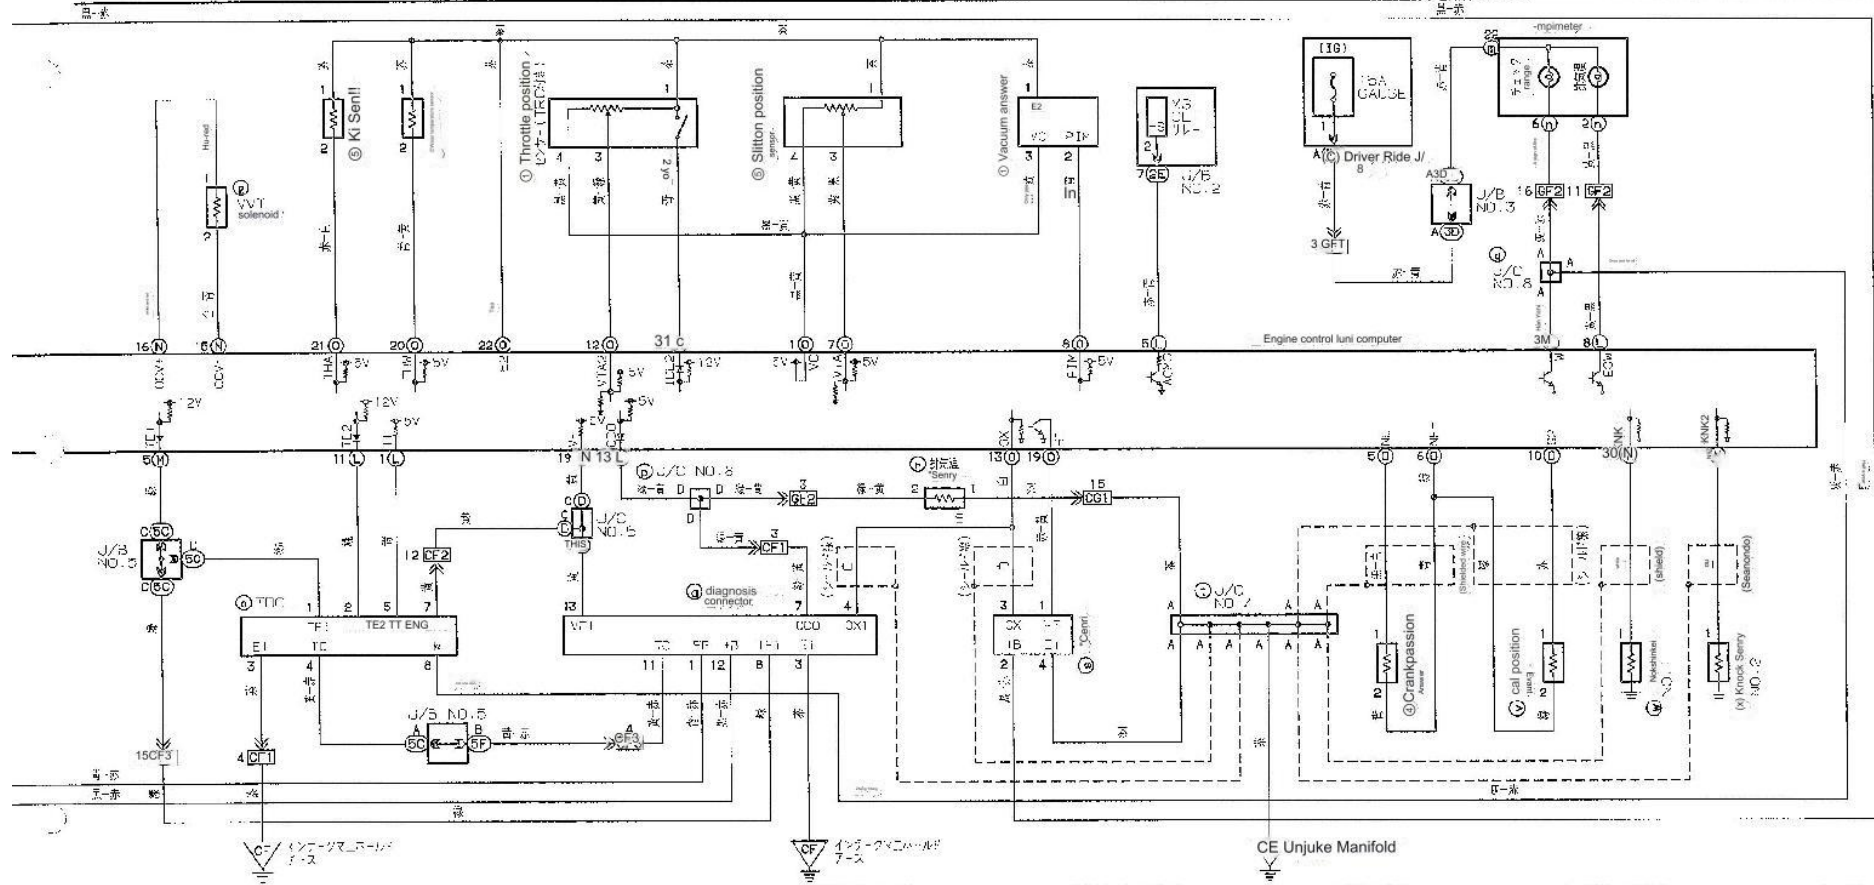







Engine control (diesel)

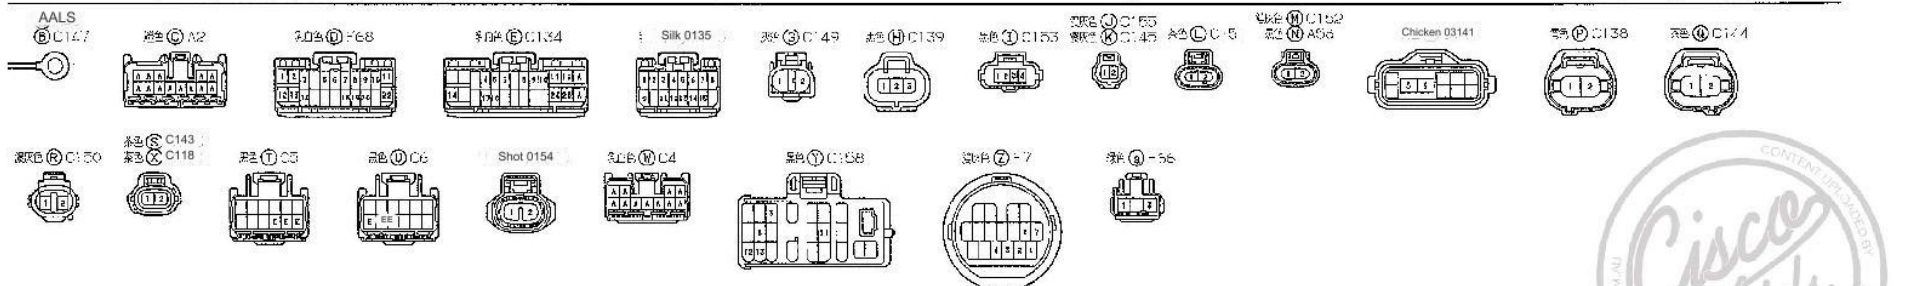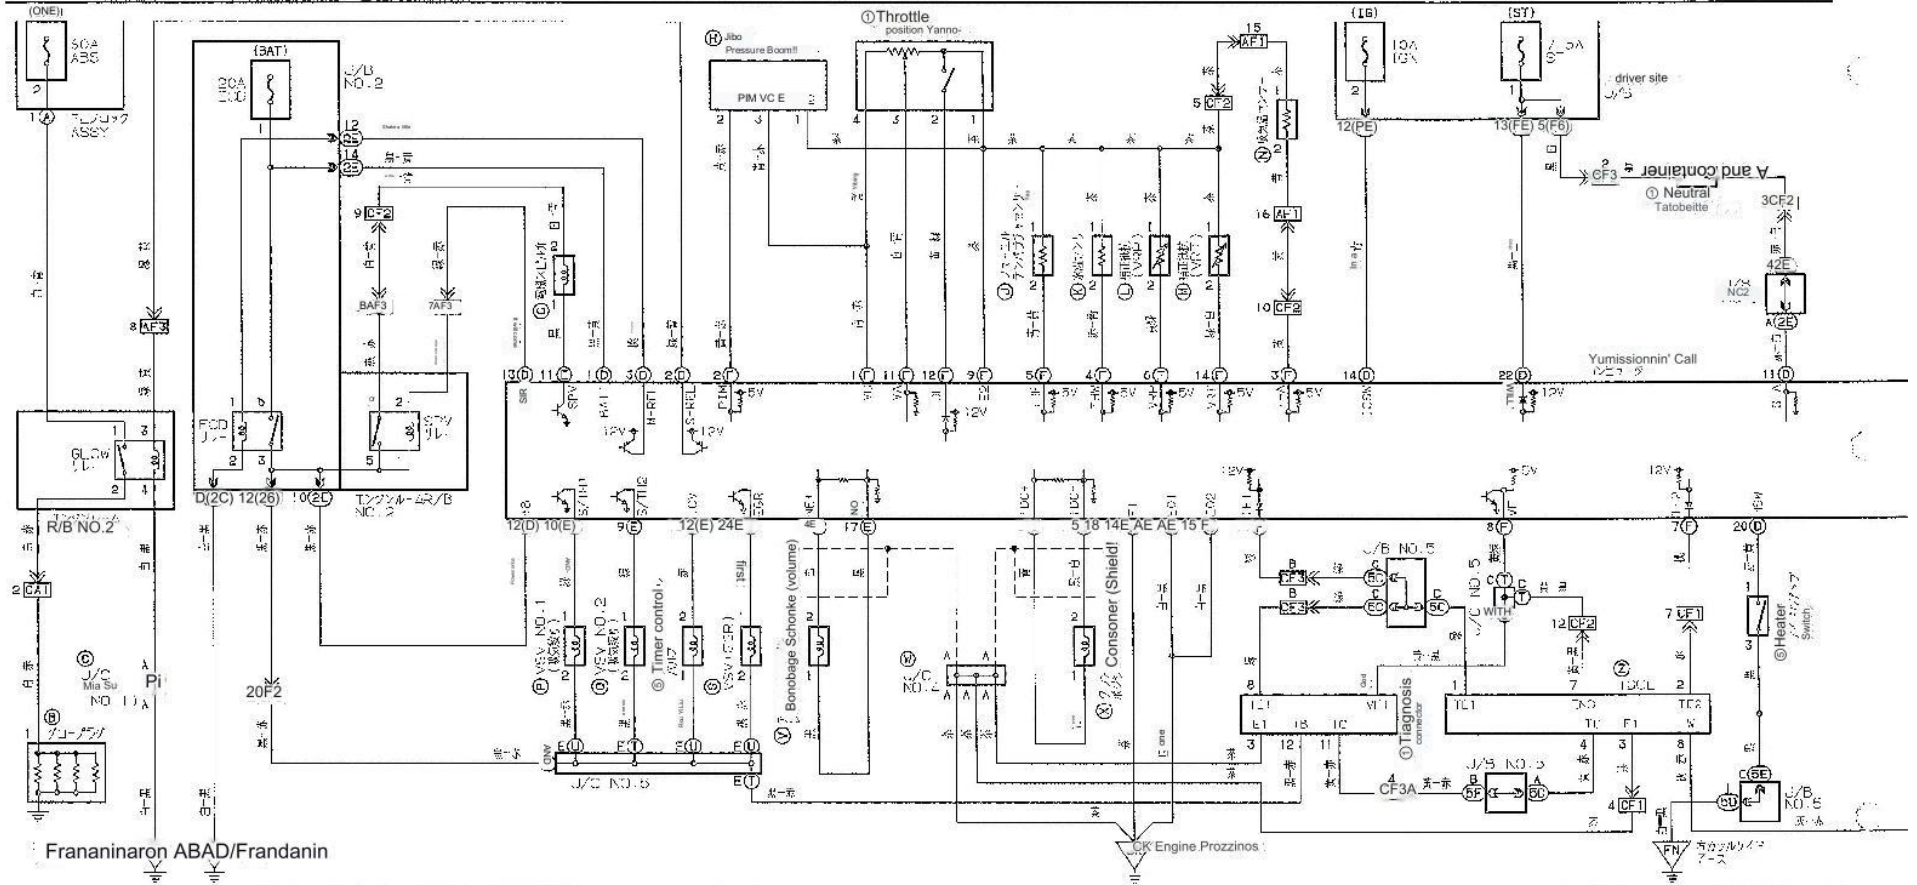

Engine control (diesel)



cooling fan

fuel pider (diesel) 3-13

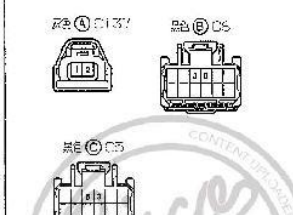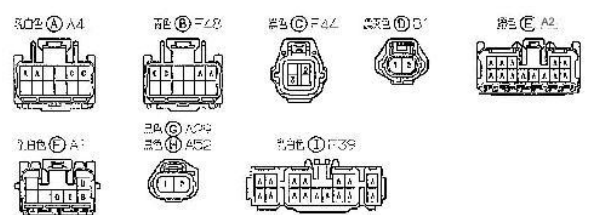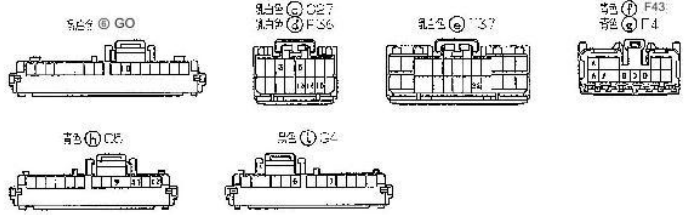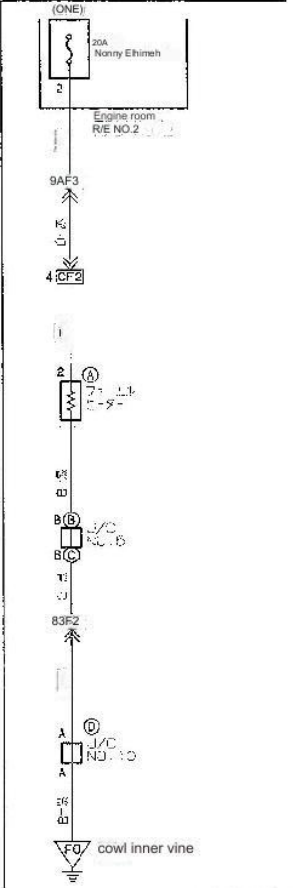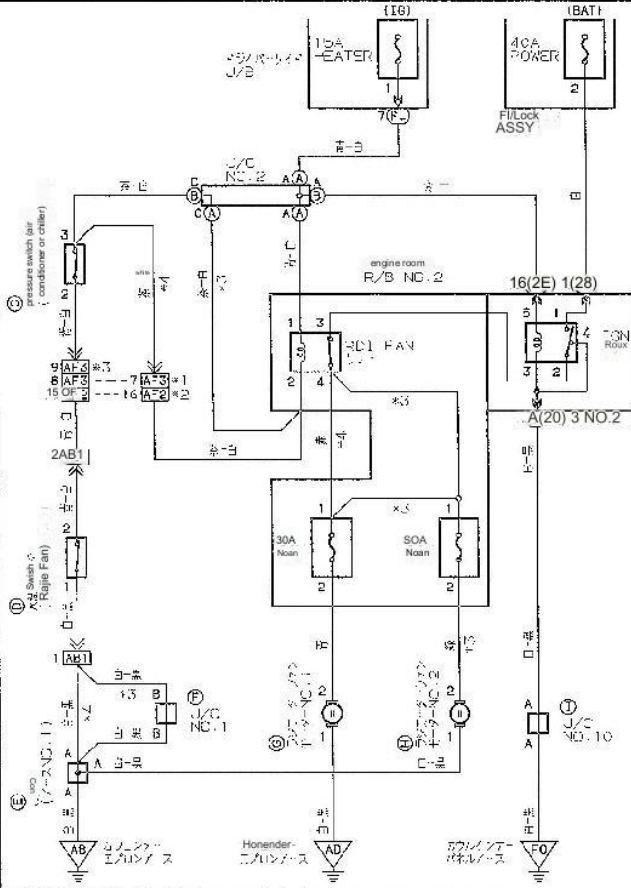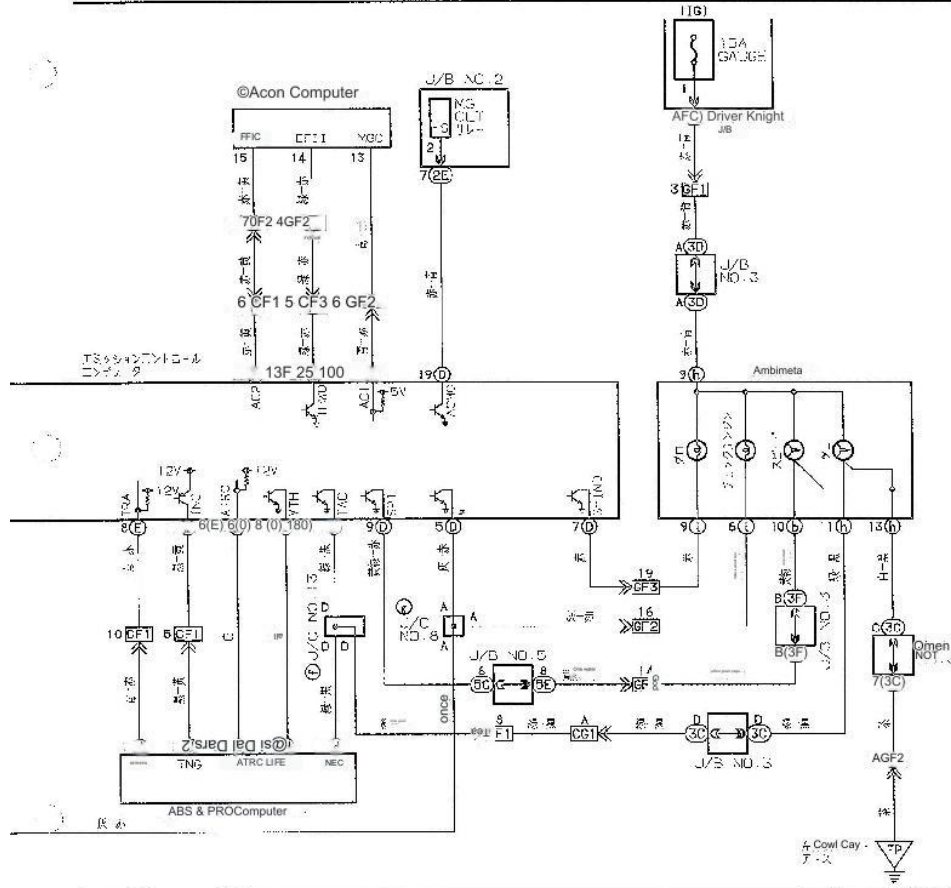

ECT (1JZ-GE)


* : D x3 Sgrade #52WTRC(L *A: Straight
 +22WD 赤: 2x2のTRC付き *G: 付: 付
 B: Anonymous/Ta... *A: Digital meter

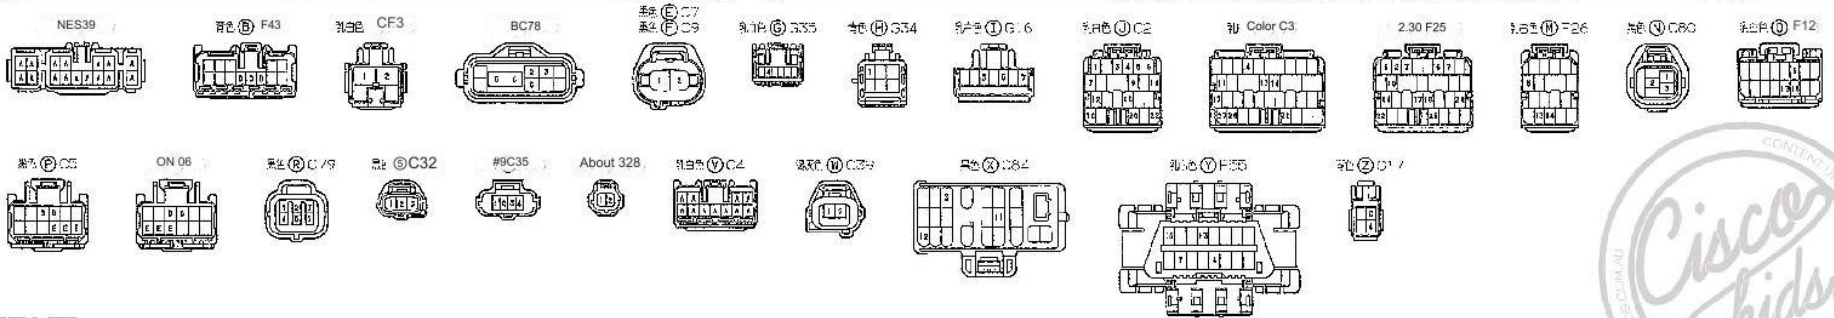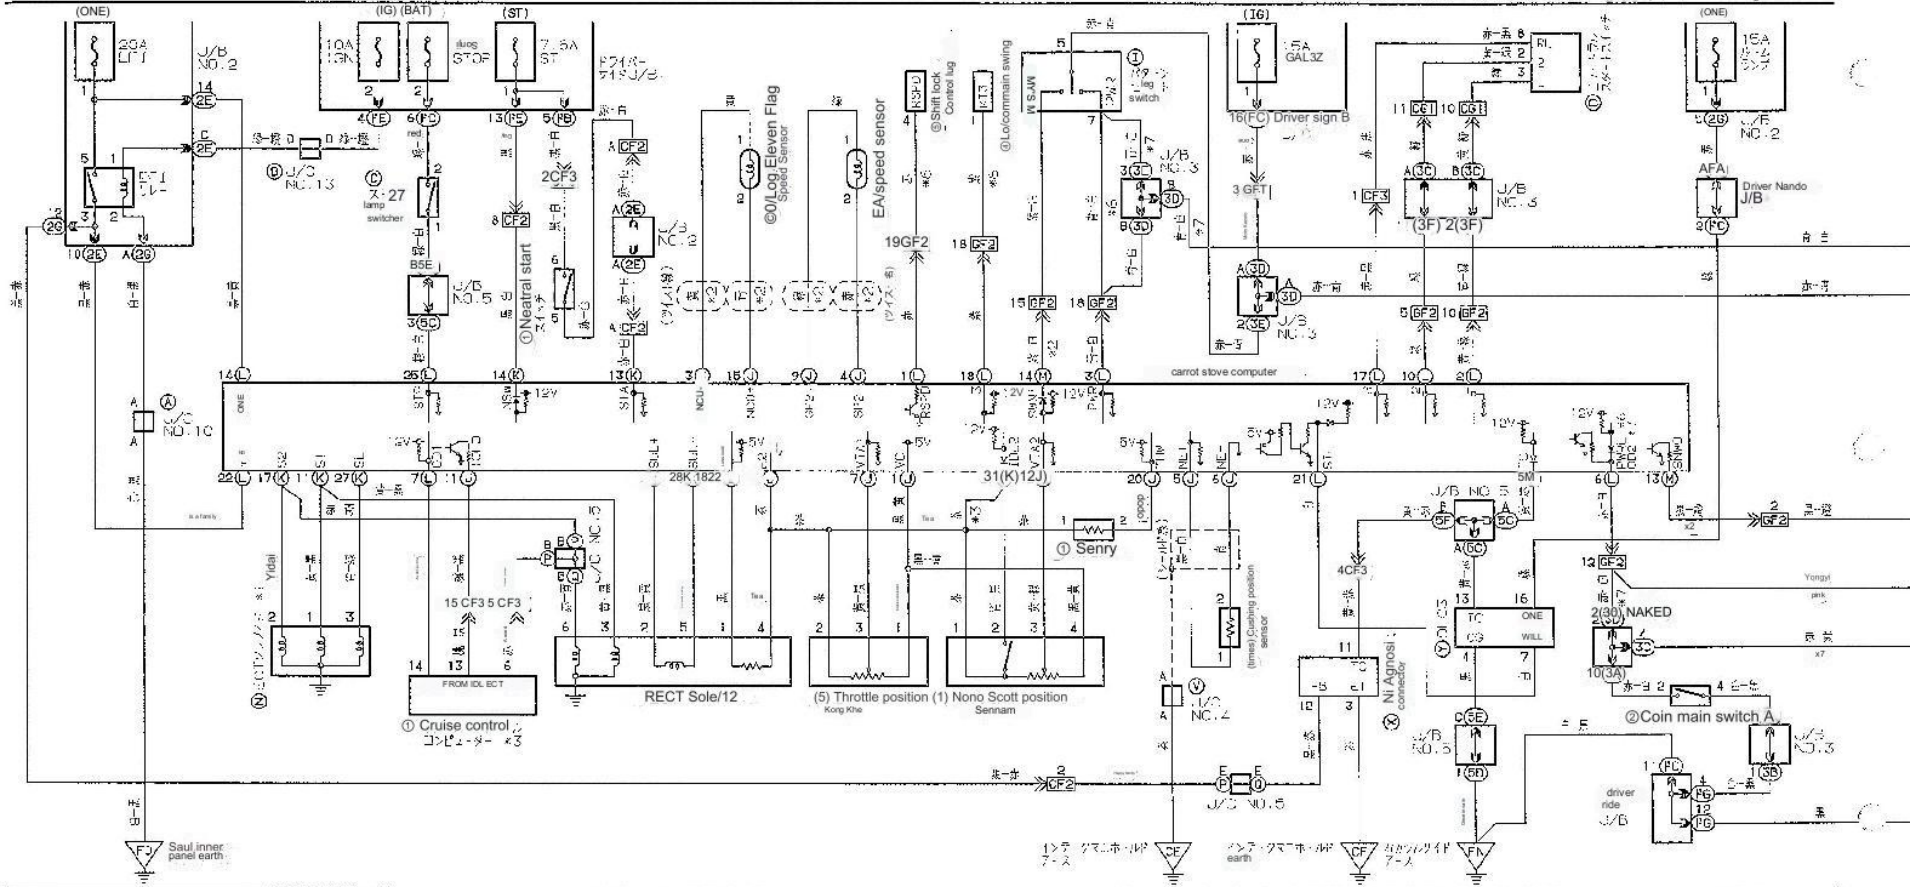


Product number 67478







ECT (1JZ-GTE)



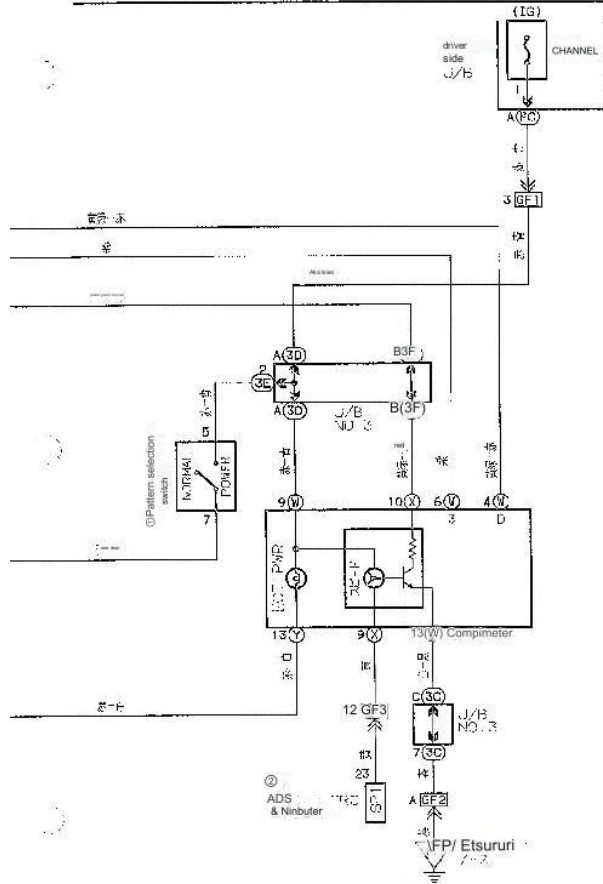


shift lock

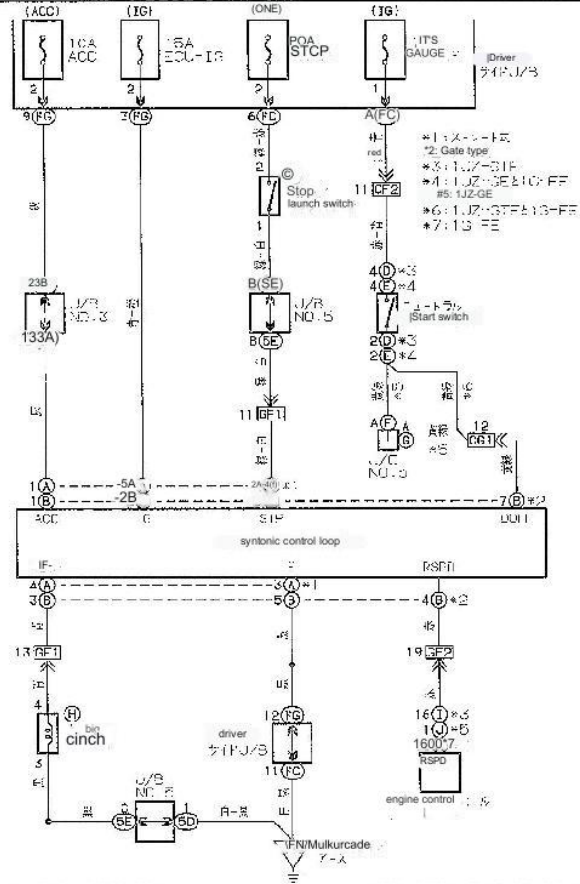



Overdrive (excluding <ECT>)

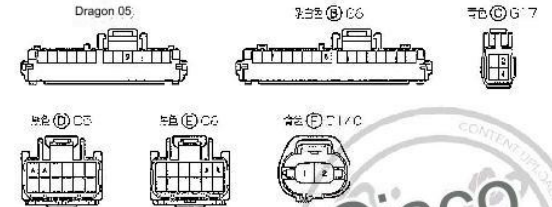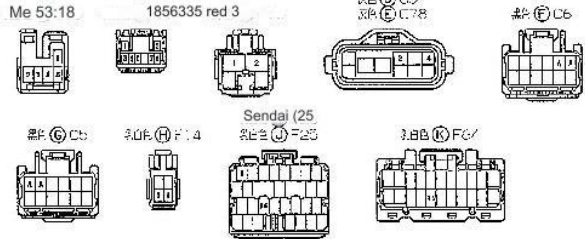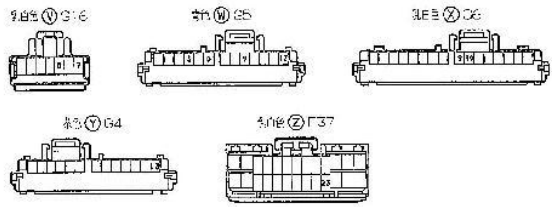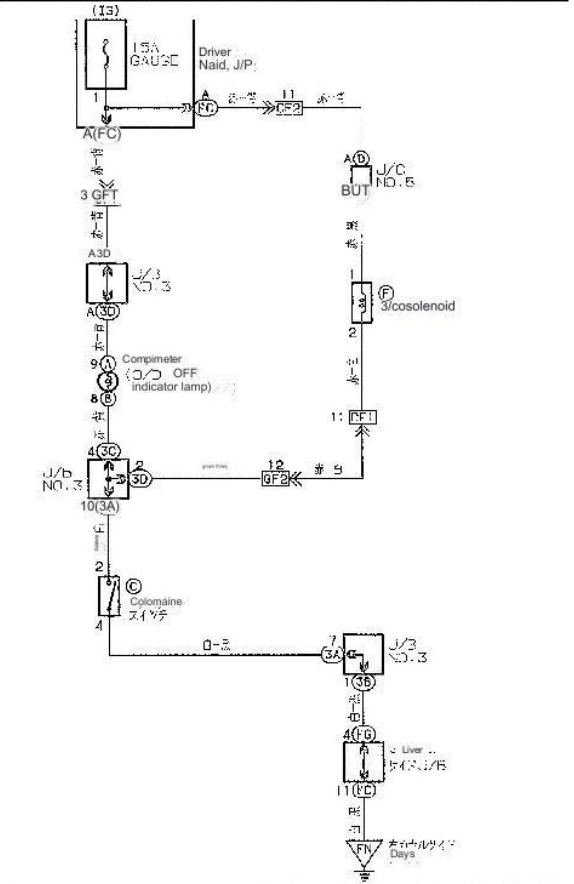

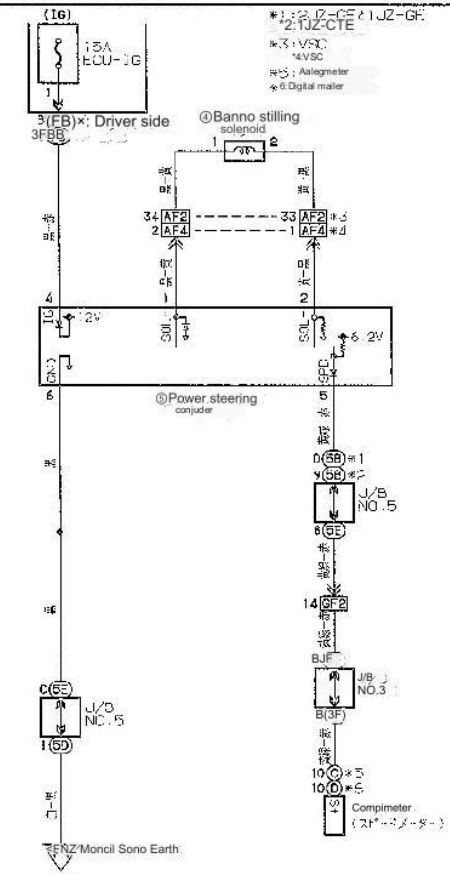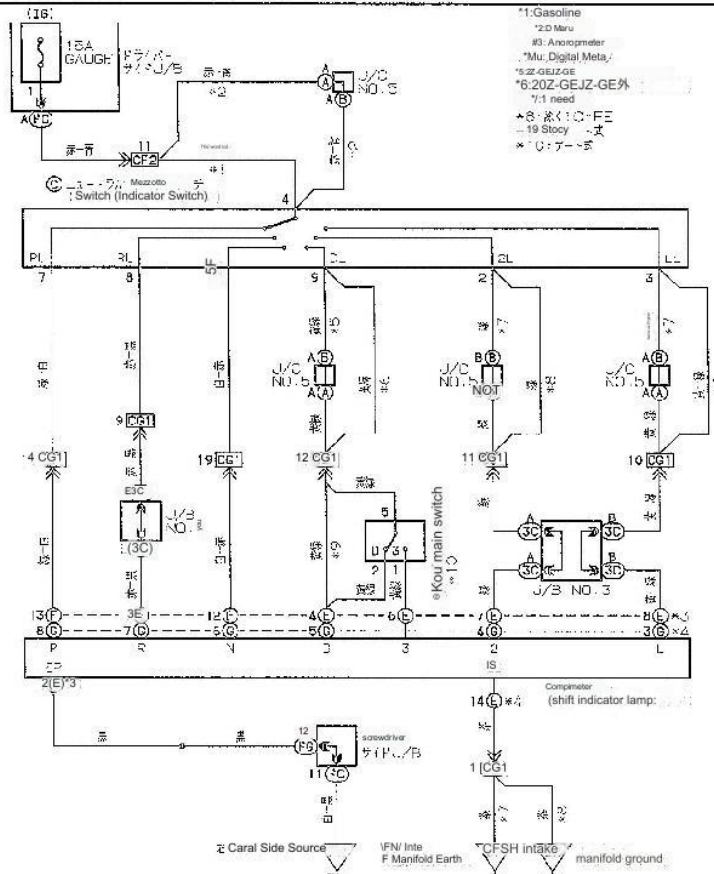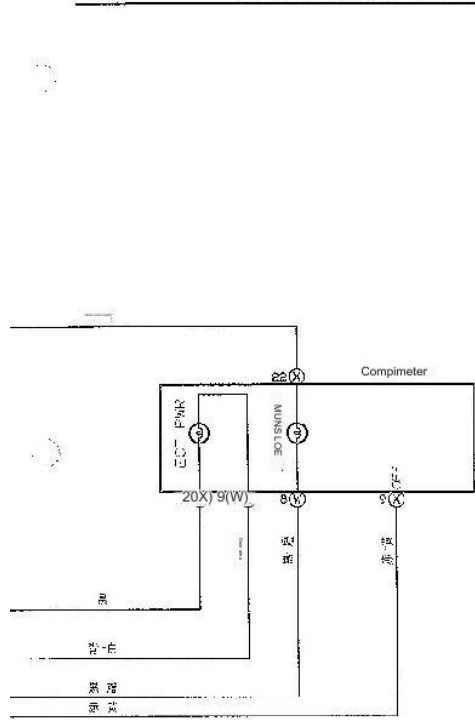

About 342

  ④ C43



④ C5

Taiwan(B) C6

Gray 08(2JZ-GE)
 ④ C51(1JZ-GTE)

④ C78(1JZ-GE & 1G-FE)
 ④ C74(1JZ-TE)

 
 
 
④ C34



④ C35

④ C36


④ C43




BAA23



④ F1

 ④ G3





④ C43

 

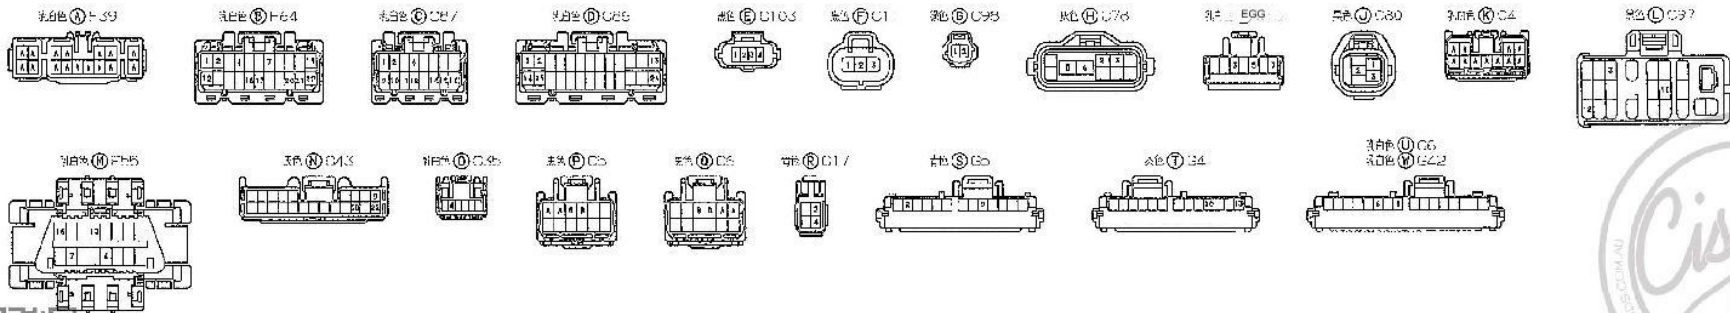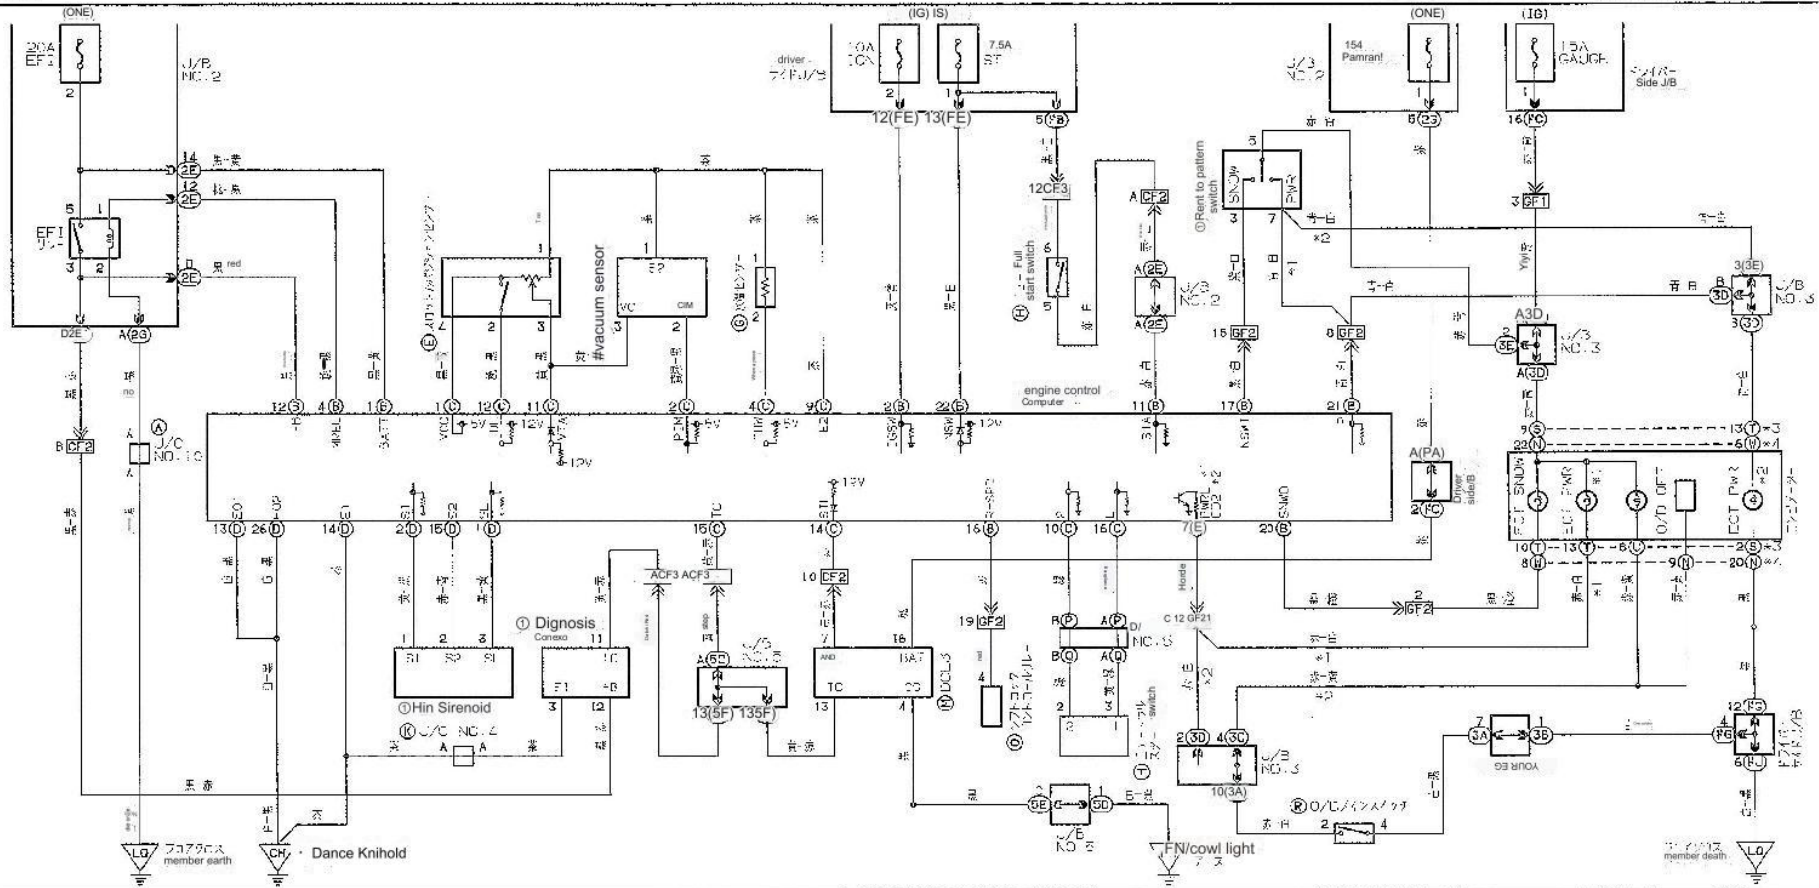


C9 67476)

near bag

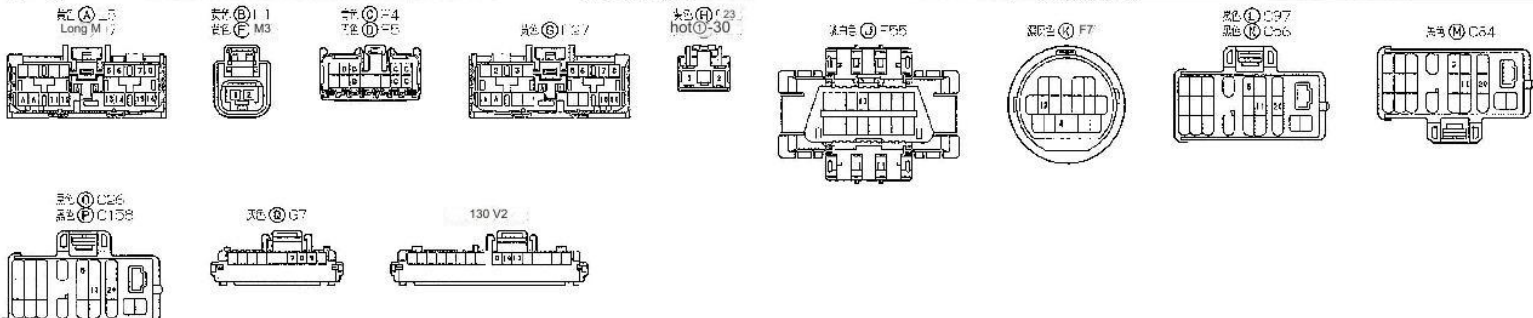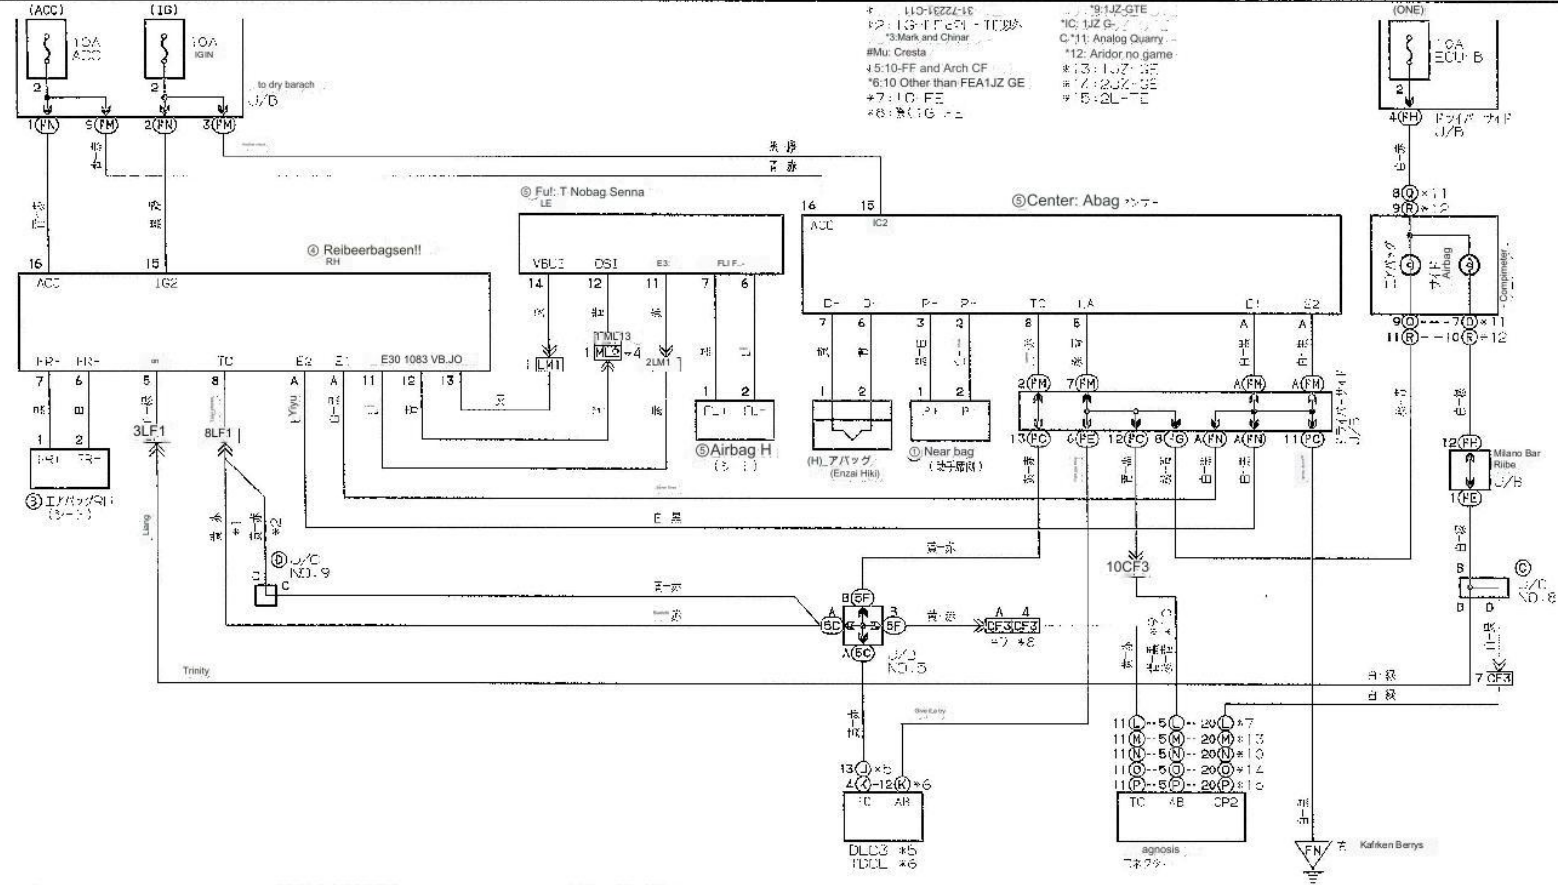

ABS (without TRC)


#1: Excluding grade
 #2: Pre-drill
 #3: 1G-FE
 #4: 2G-FE
 #5: 2G-TE
 #6: 2G-TE
 #7: 2G-TE
 #8: 2G-TE
 #9: 1G-FE
 #10: 2G-FE
 #11: 1G-GE
 #12: 2G-GE
 #13: 2G-GE


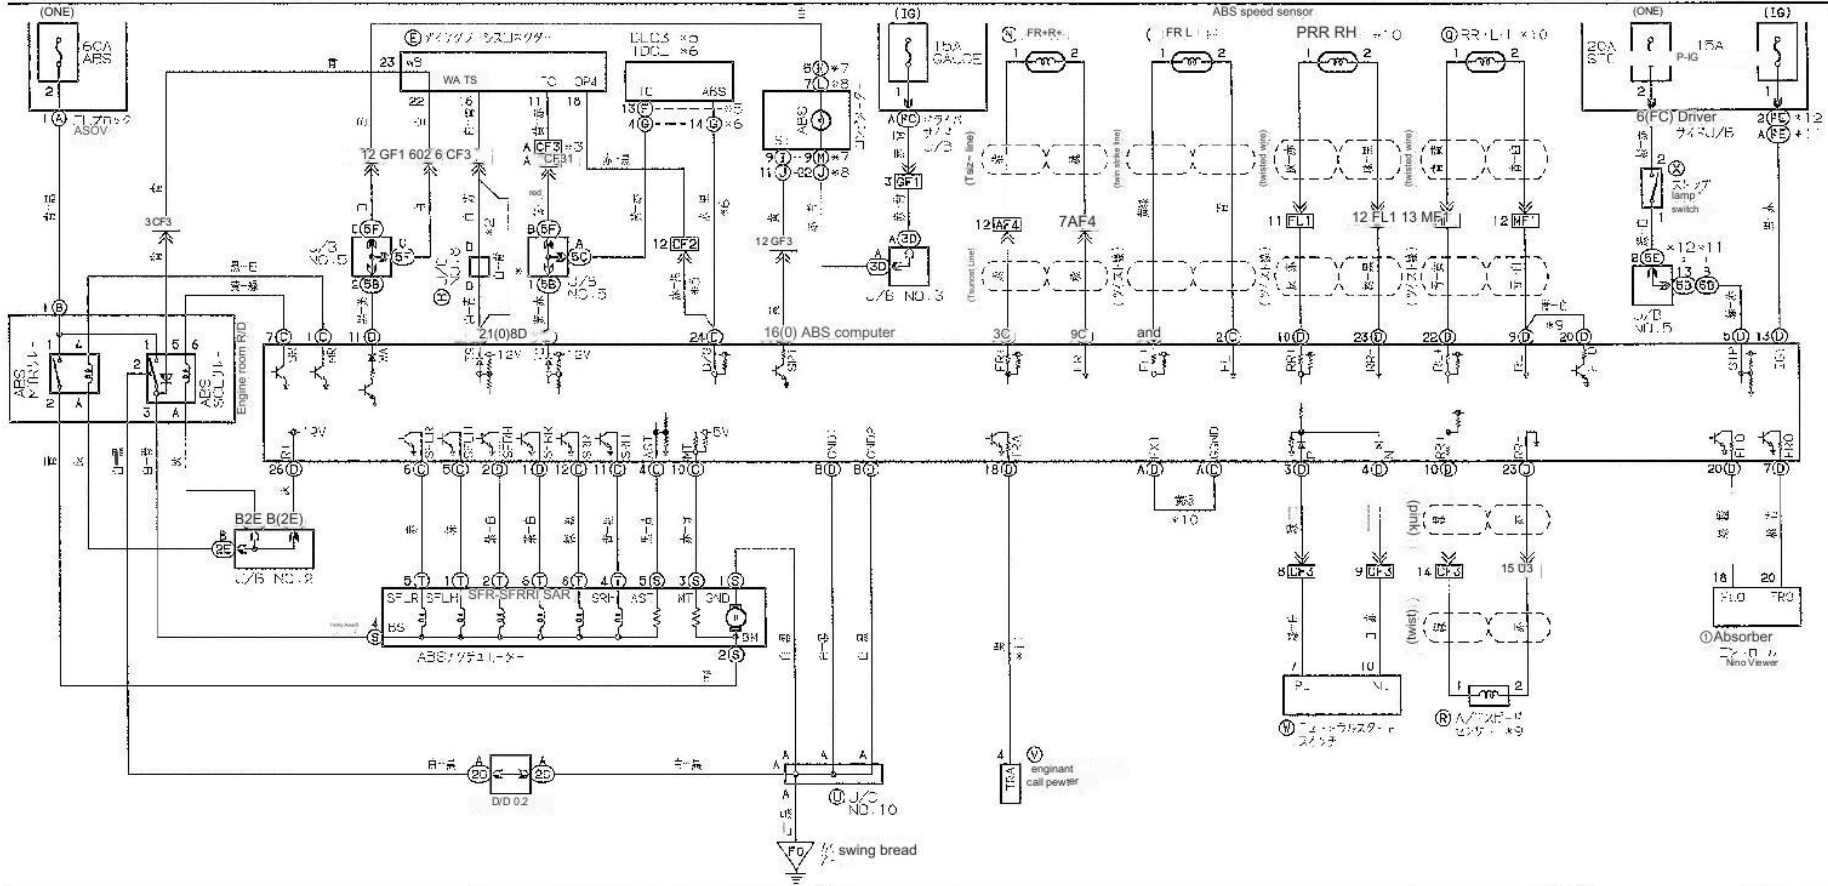


AA43E6442 Chi CF57 CHEF37 CS3 *5 CS4 *11 F53 Pool F7 F4 G6



G43 G4 G5 A6 L7 CS F44 FC3 White F35 F26 C785 C121 *8 F13

① Absorber
 ② Nino Viewer

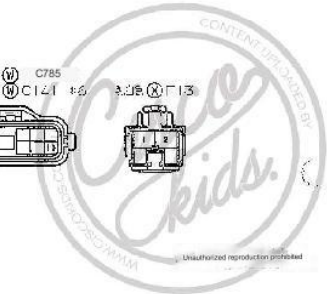

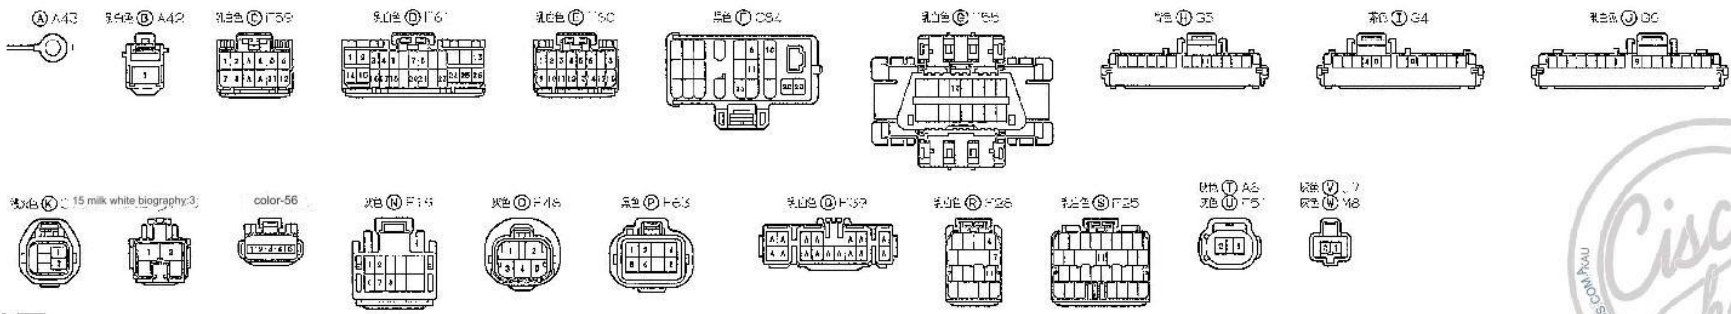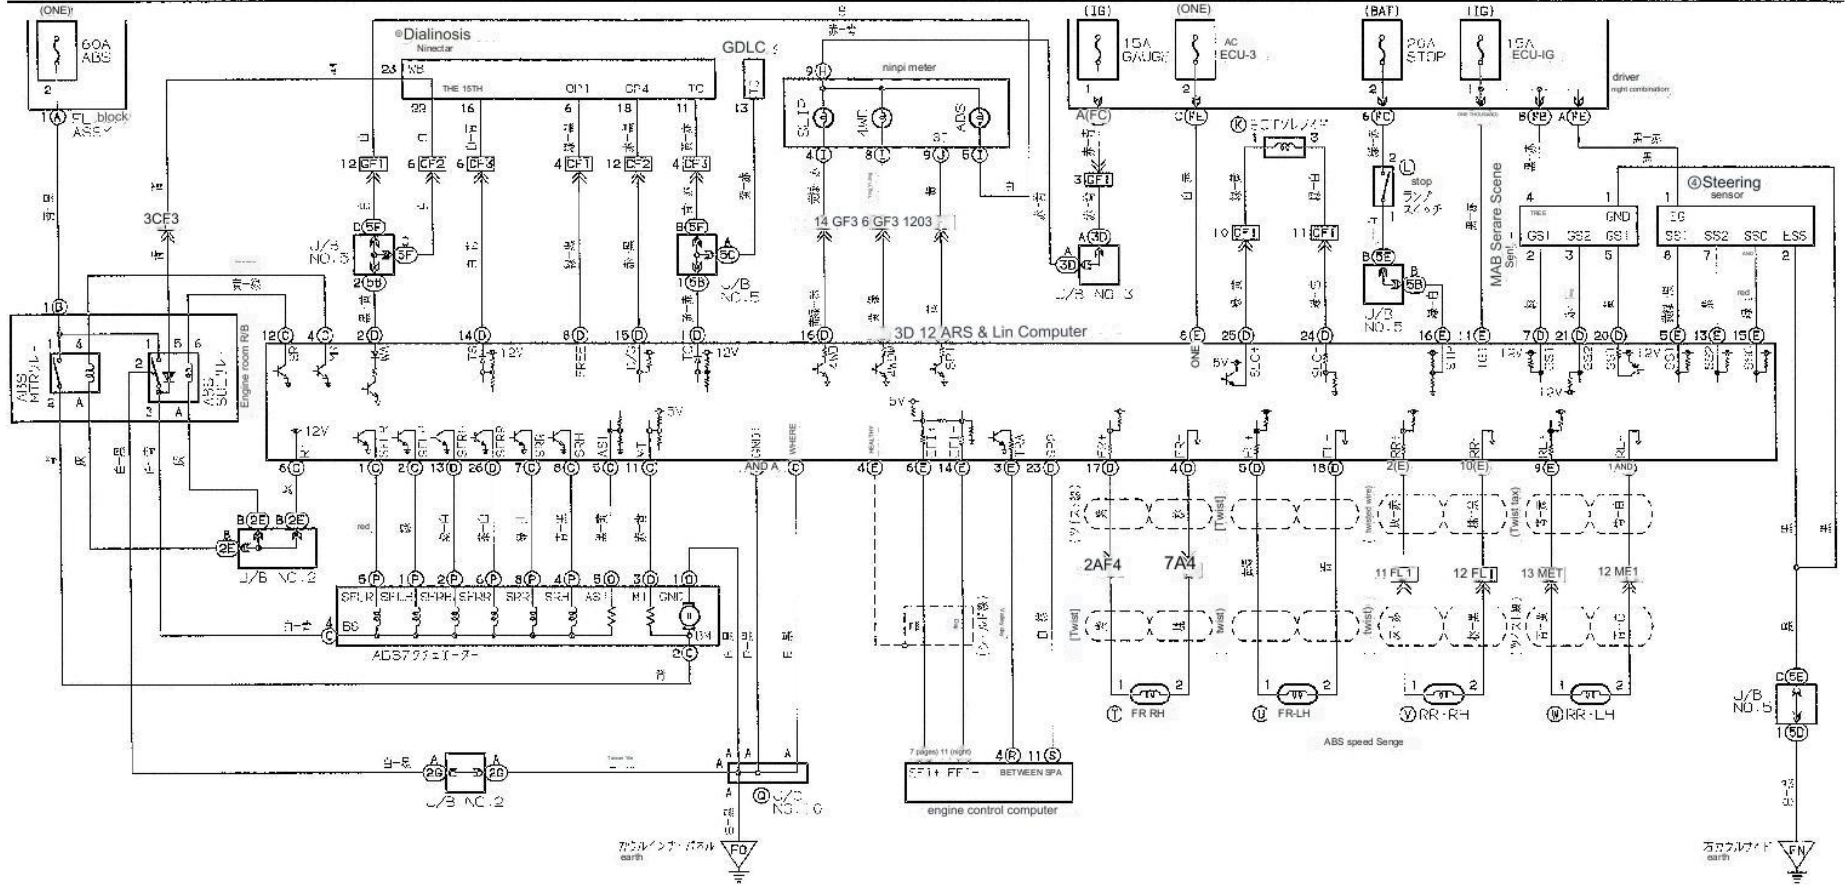


ABS & TRC (1JZ-GE)

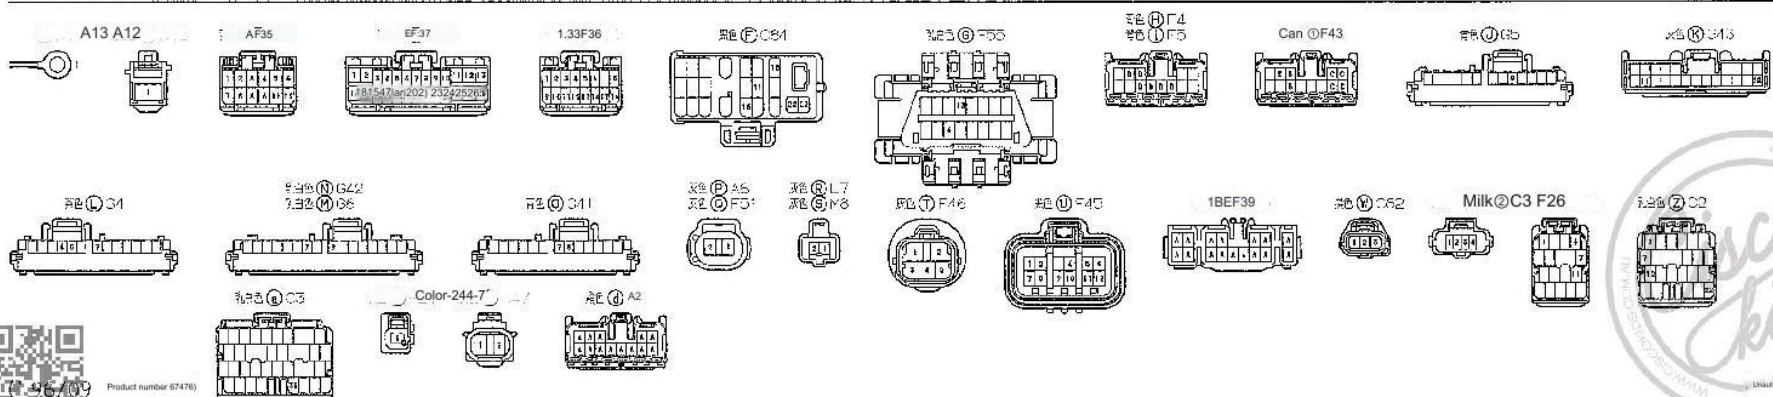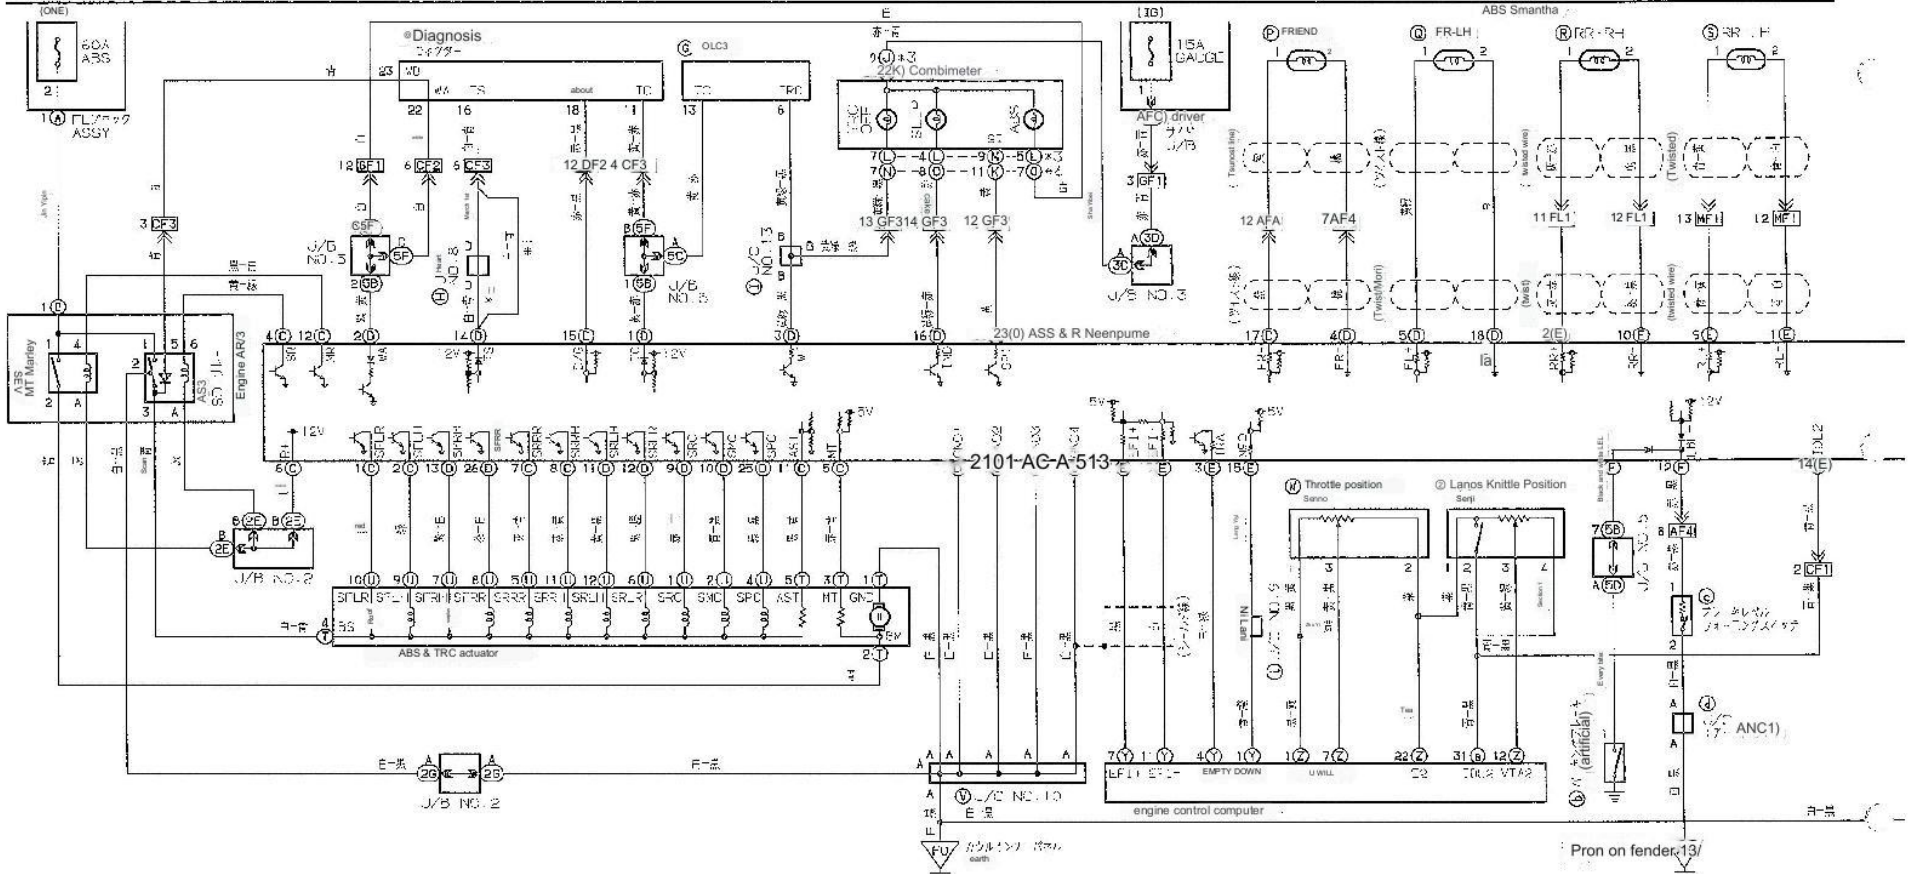

Product number 67476






ABS & TRC (1JZ-GE)


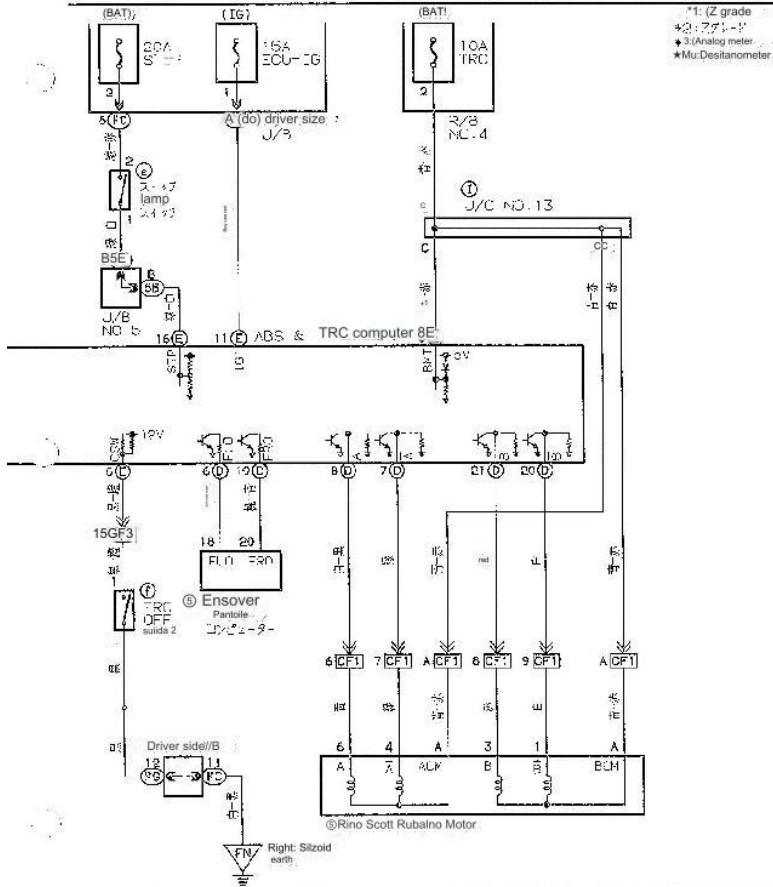


outer mirror

  Mirror heater included 3-25

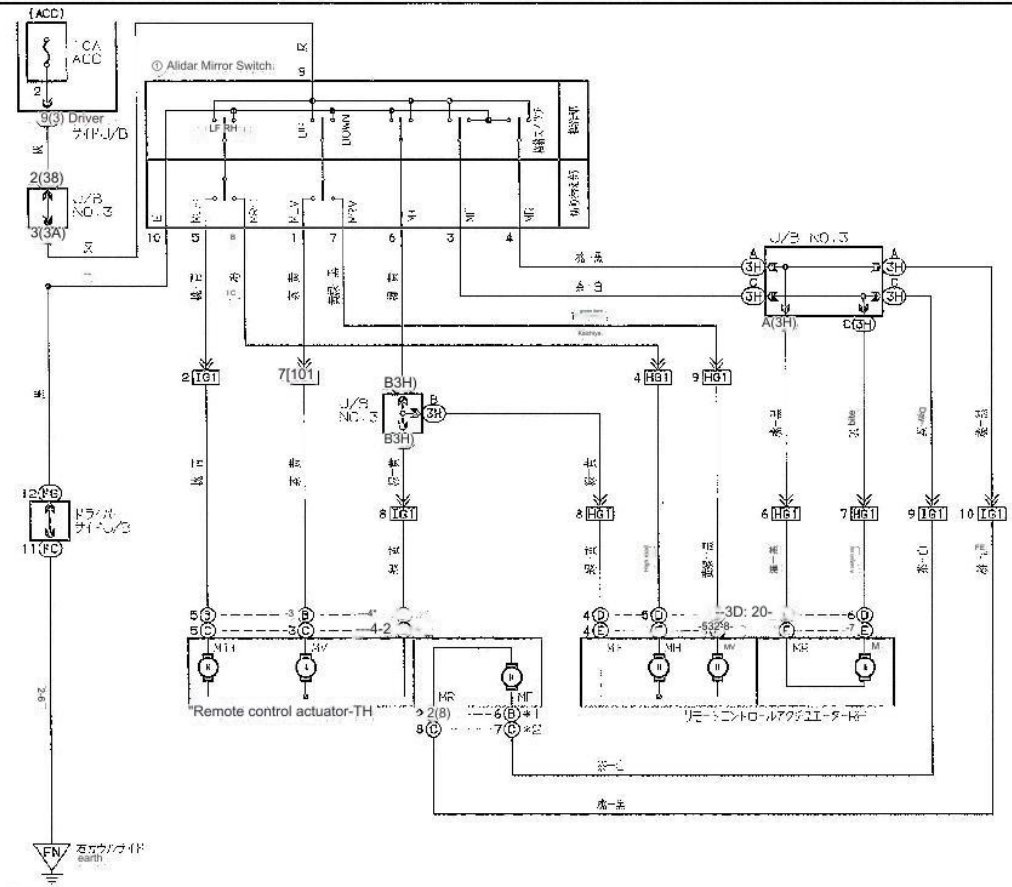


Electronically controlled throttle (1JZ-CTE)

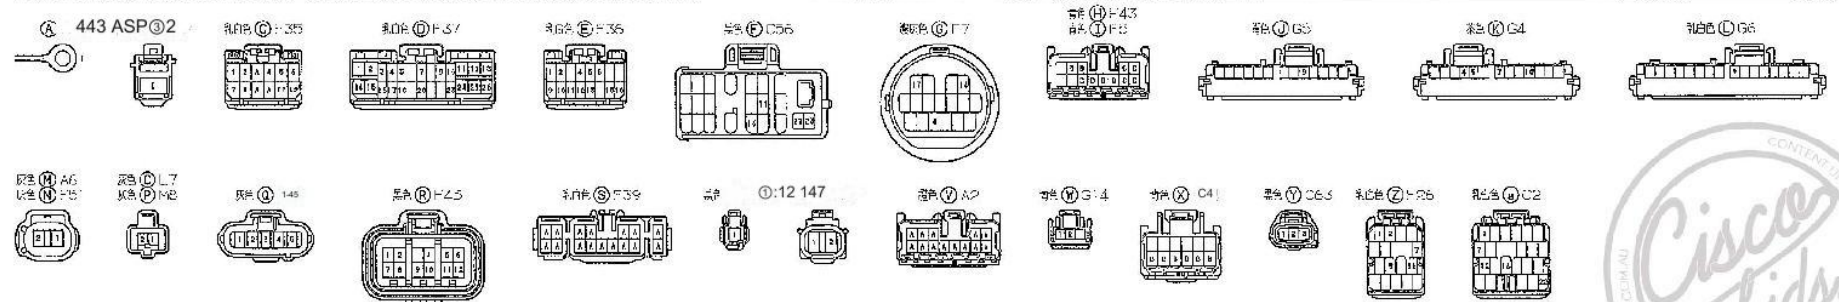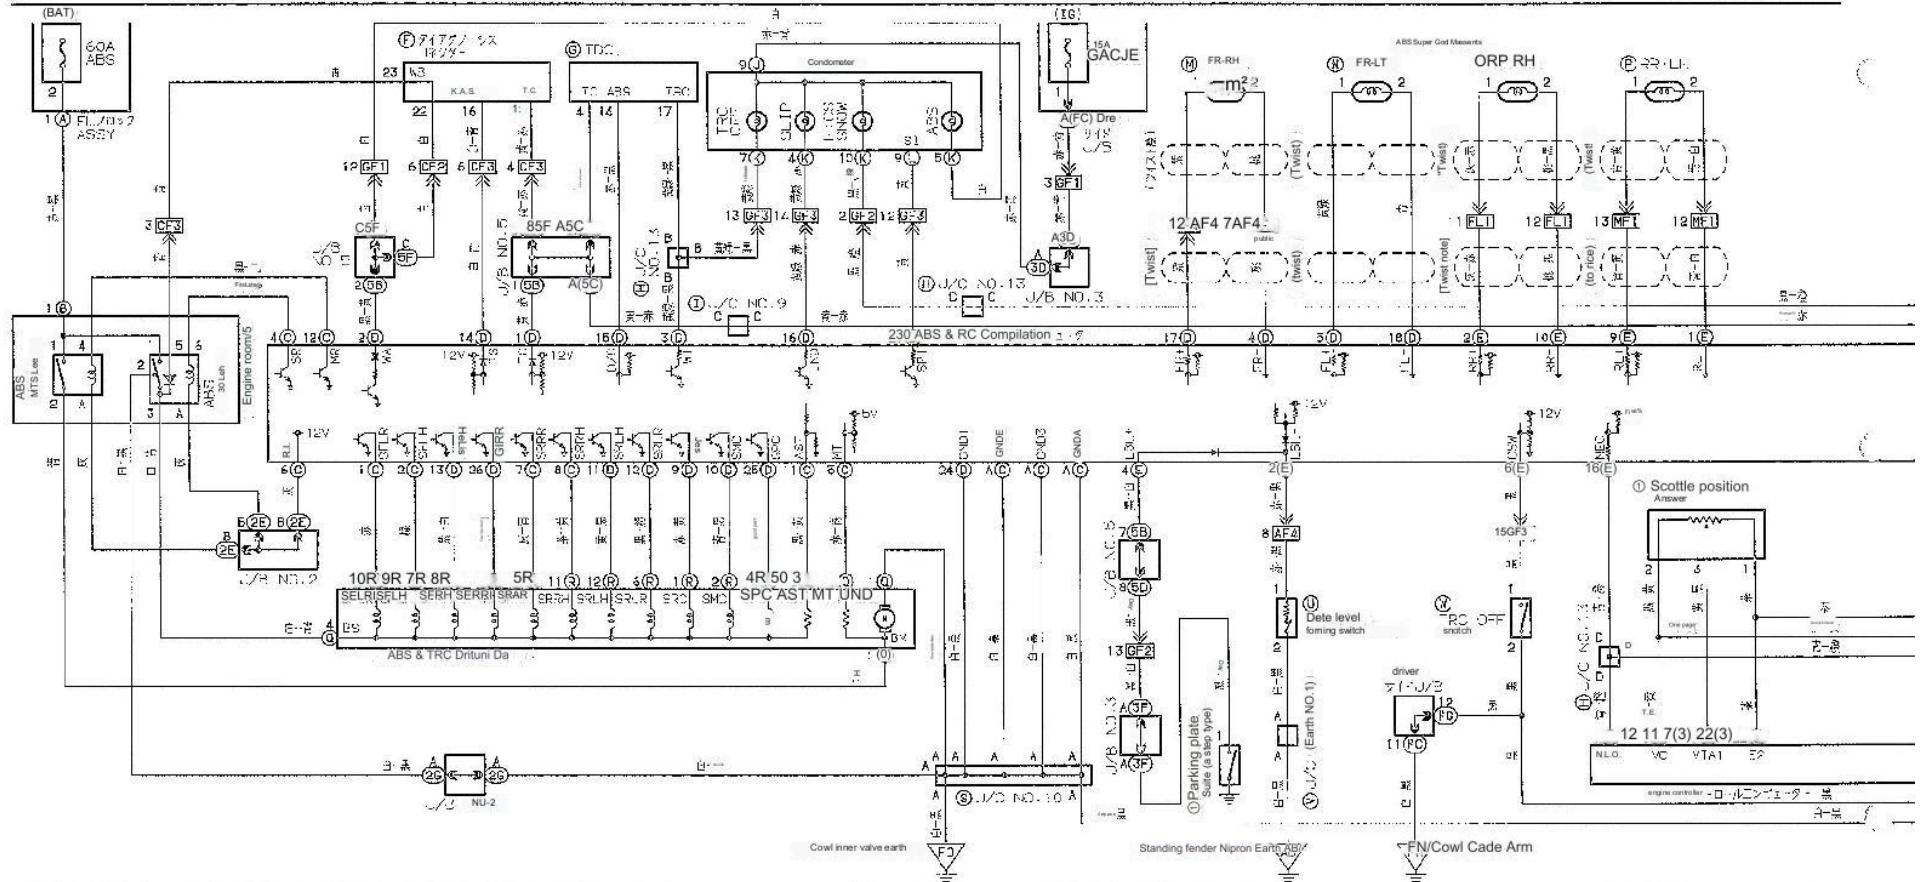

96/09 Product number 67476





Electronically controlled throttle (1JZ-GTE)

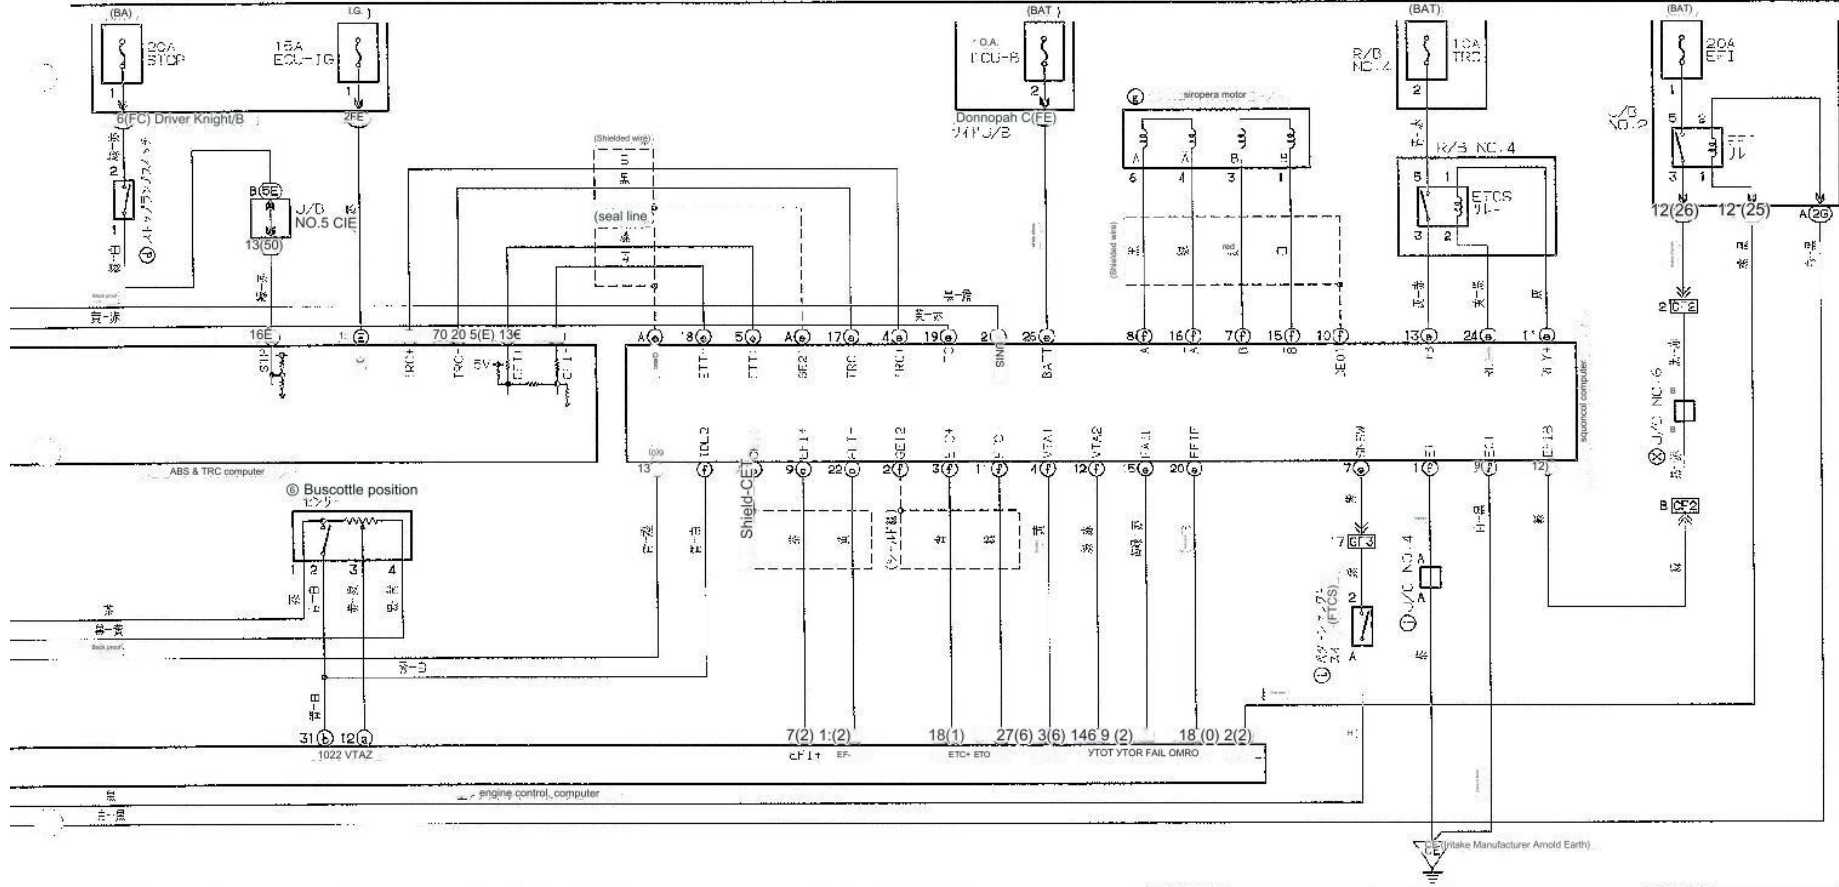

auto air conditioner



*1: UZ-GTE 2JZ-CEUN
 *2: Gasoline Noku 3-FE
 *3: JZ-GTE
 *4: Gasoline Noku 3-FE
 *5: 2L-E
 *6: JZ-GTE 1JZ-GTE
 *7: 2UZ-CE Gasoline
 *8: VA-1: Akkolimator
 *9: V9C
 *10: Digital Meta
 *11: 3JZ-GTE
 *12: JZ-GTE 2L-TT

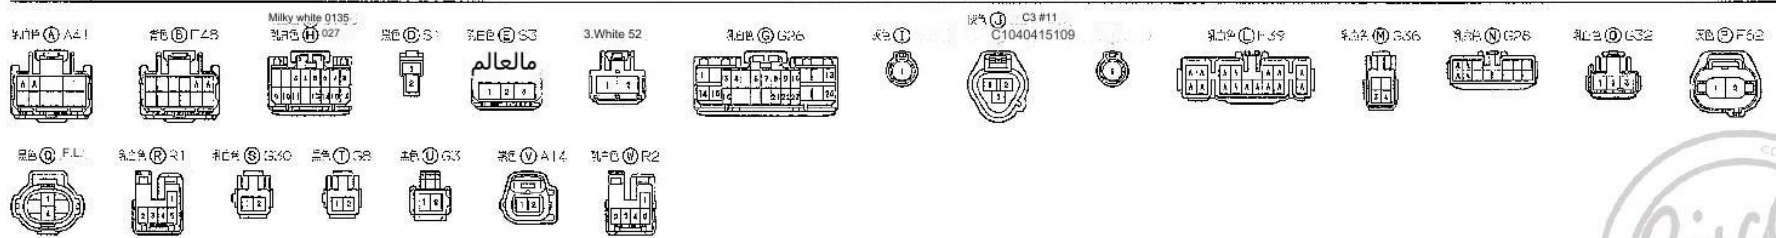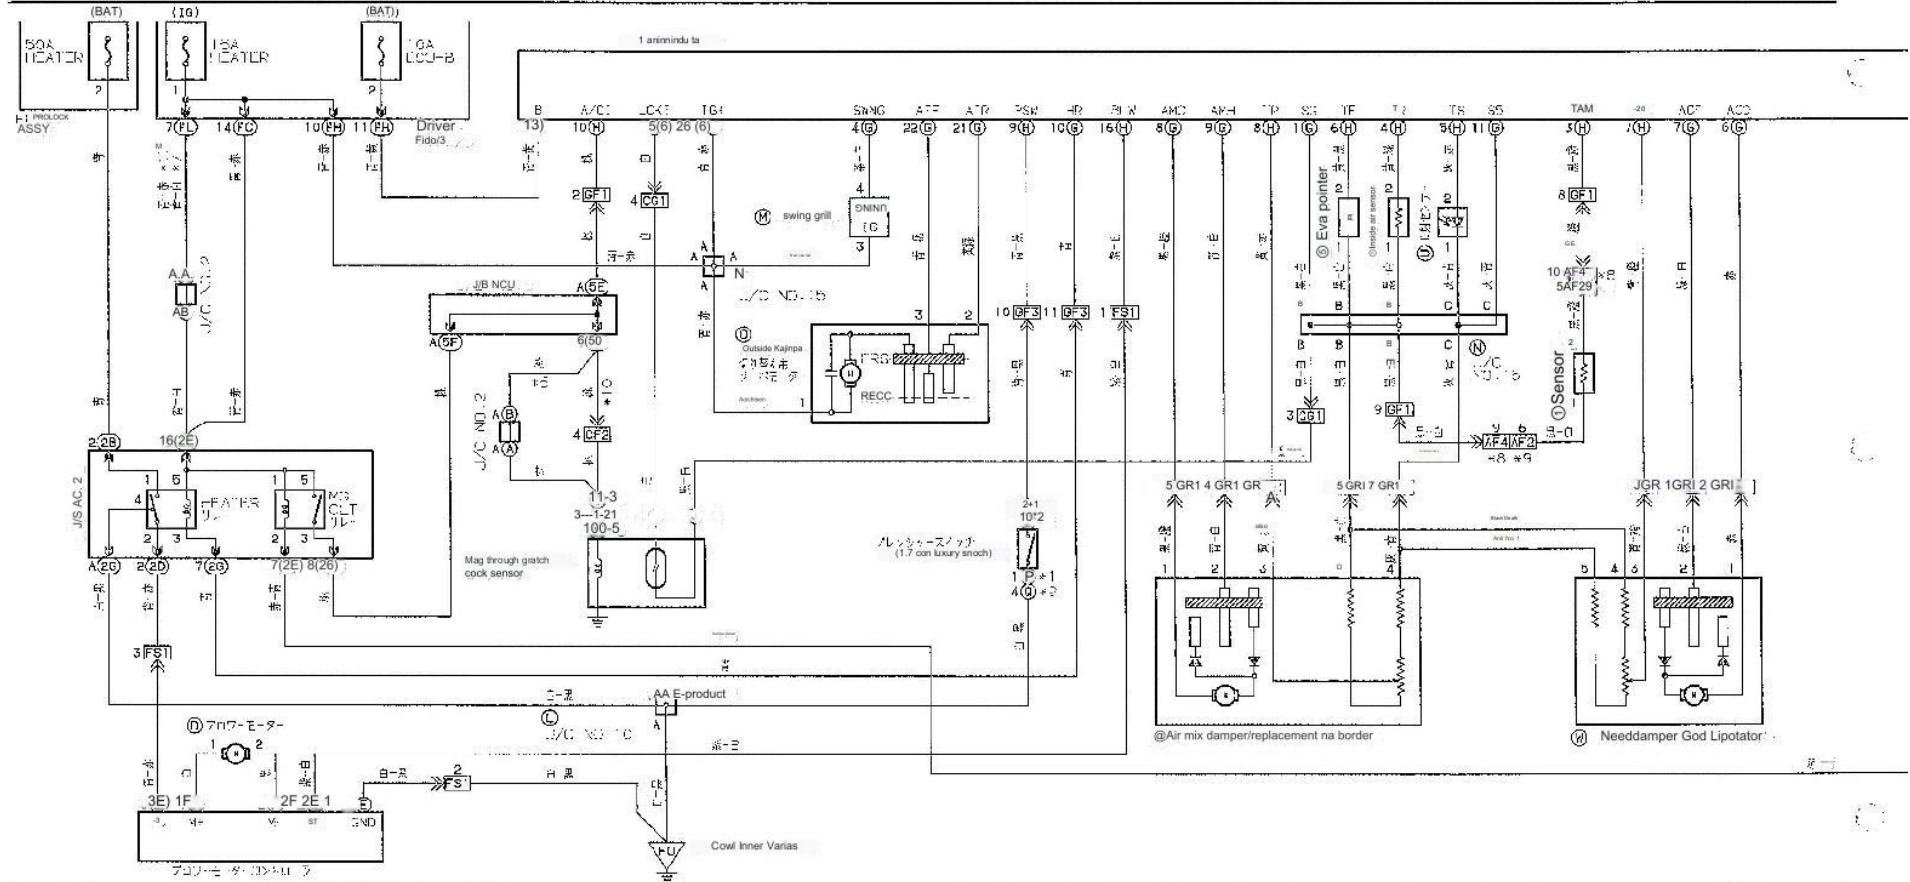

Product number 67476





ABS & TRC (diesel)

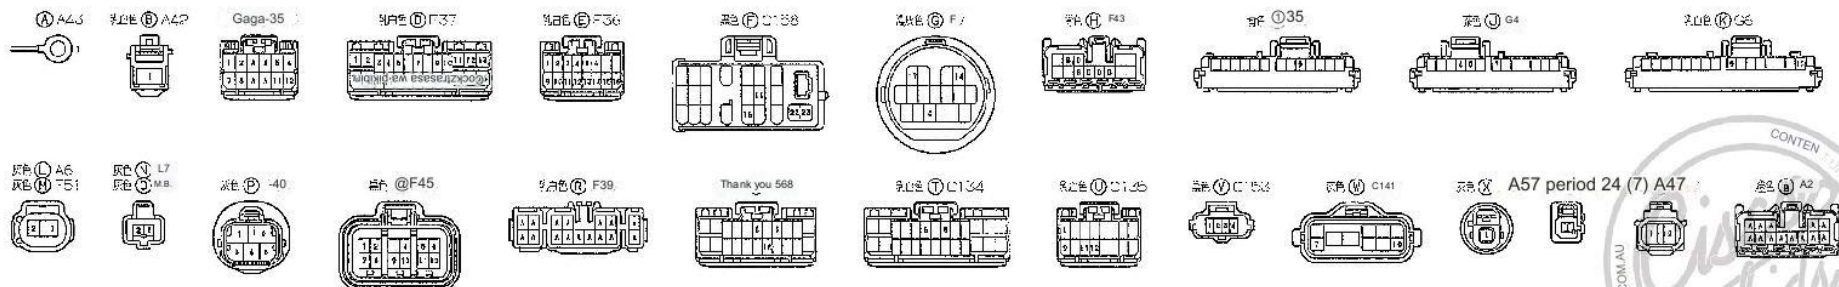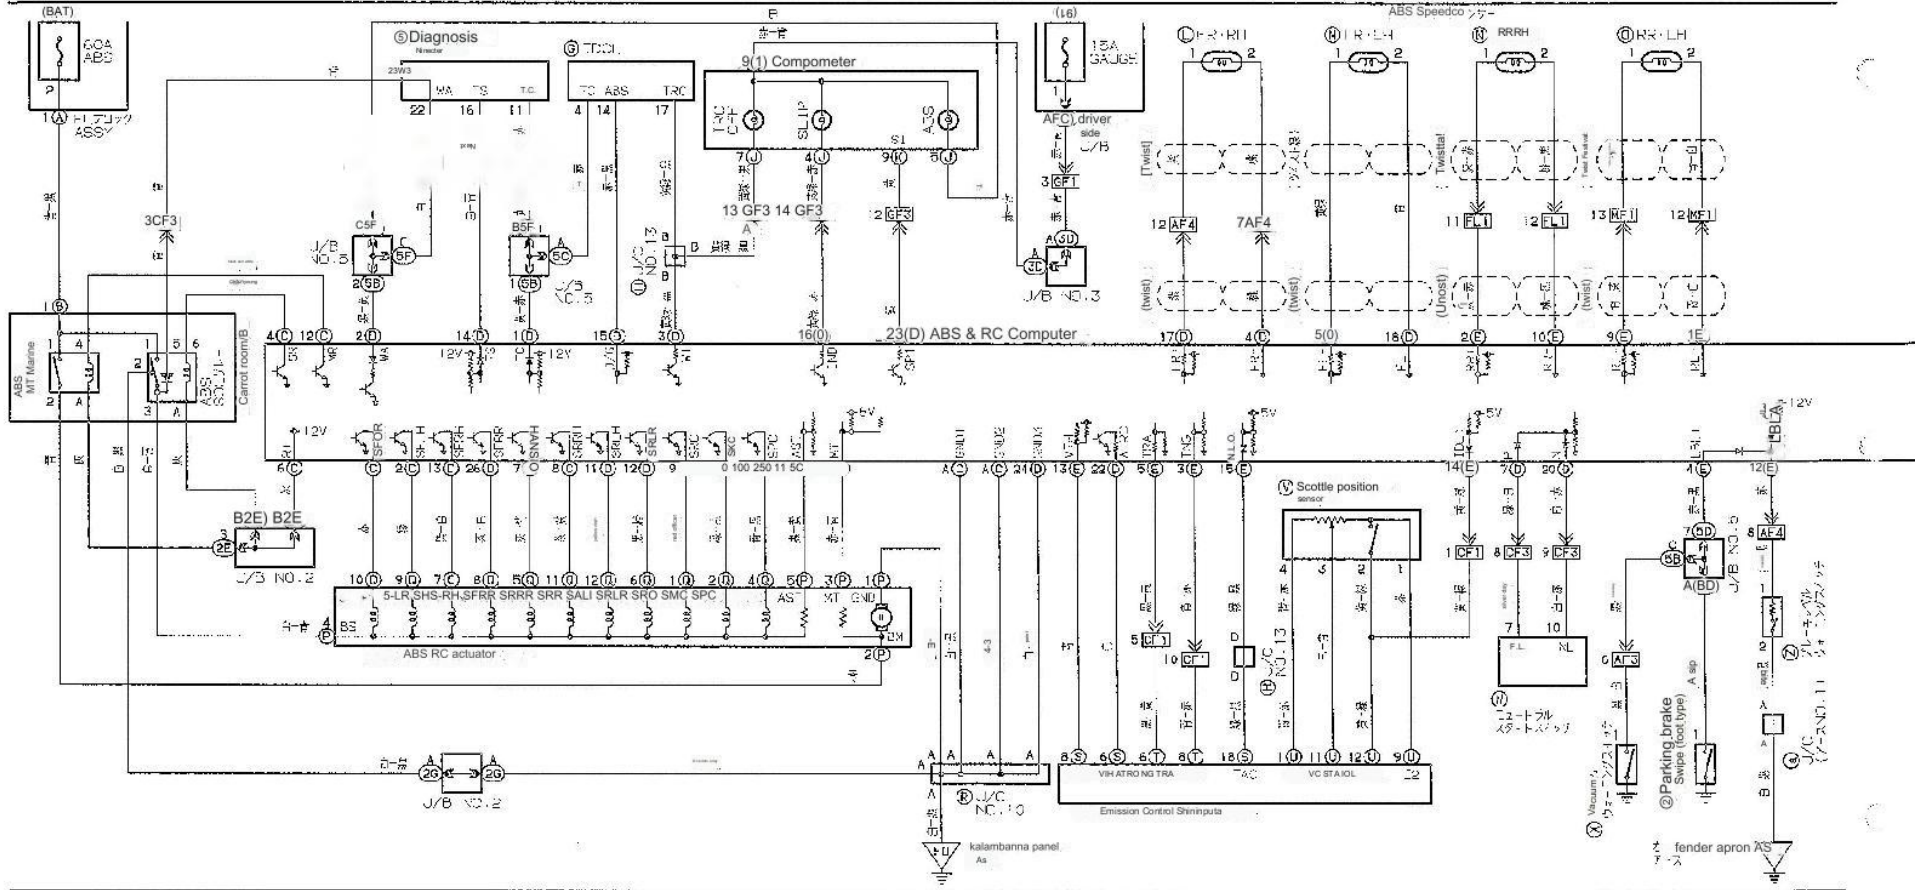



Product number 67476



 

ABS & TRC (diesel)

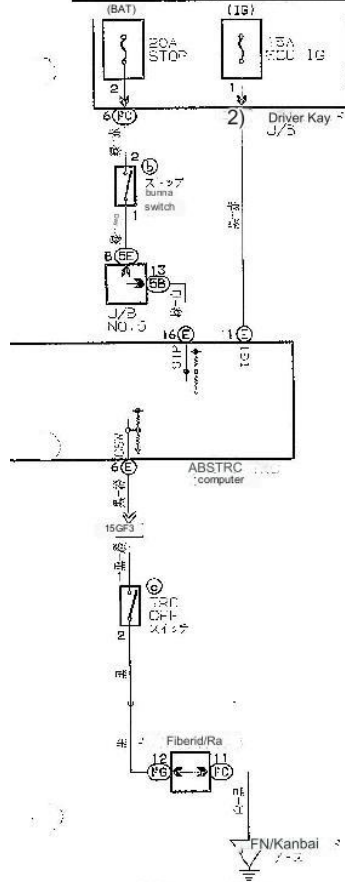




Seat belt warning & tension reducer

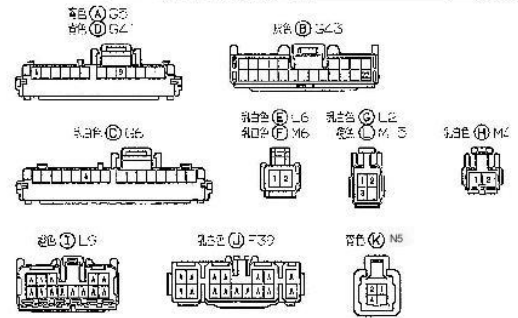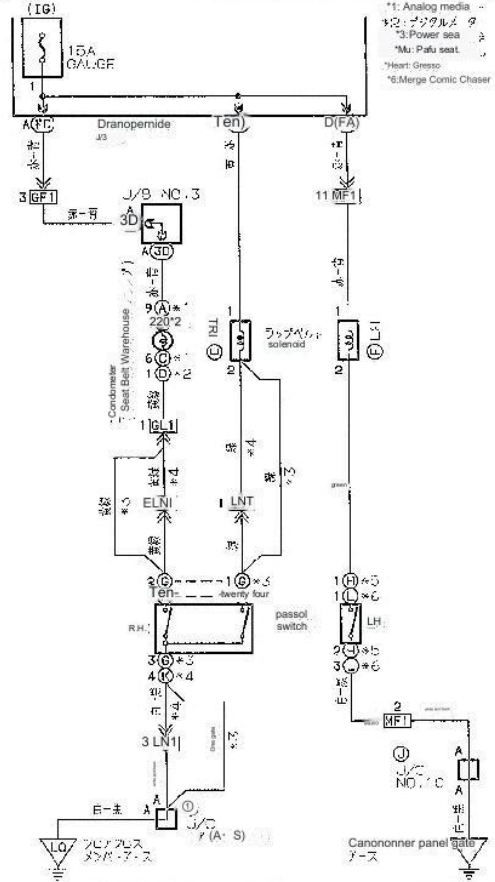

ABS (VSC)

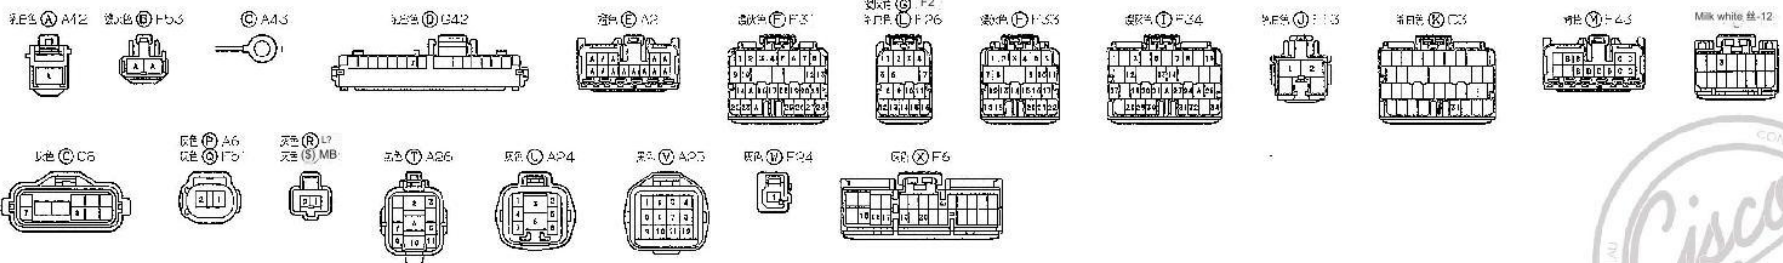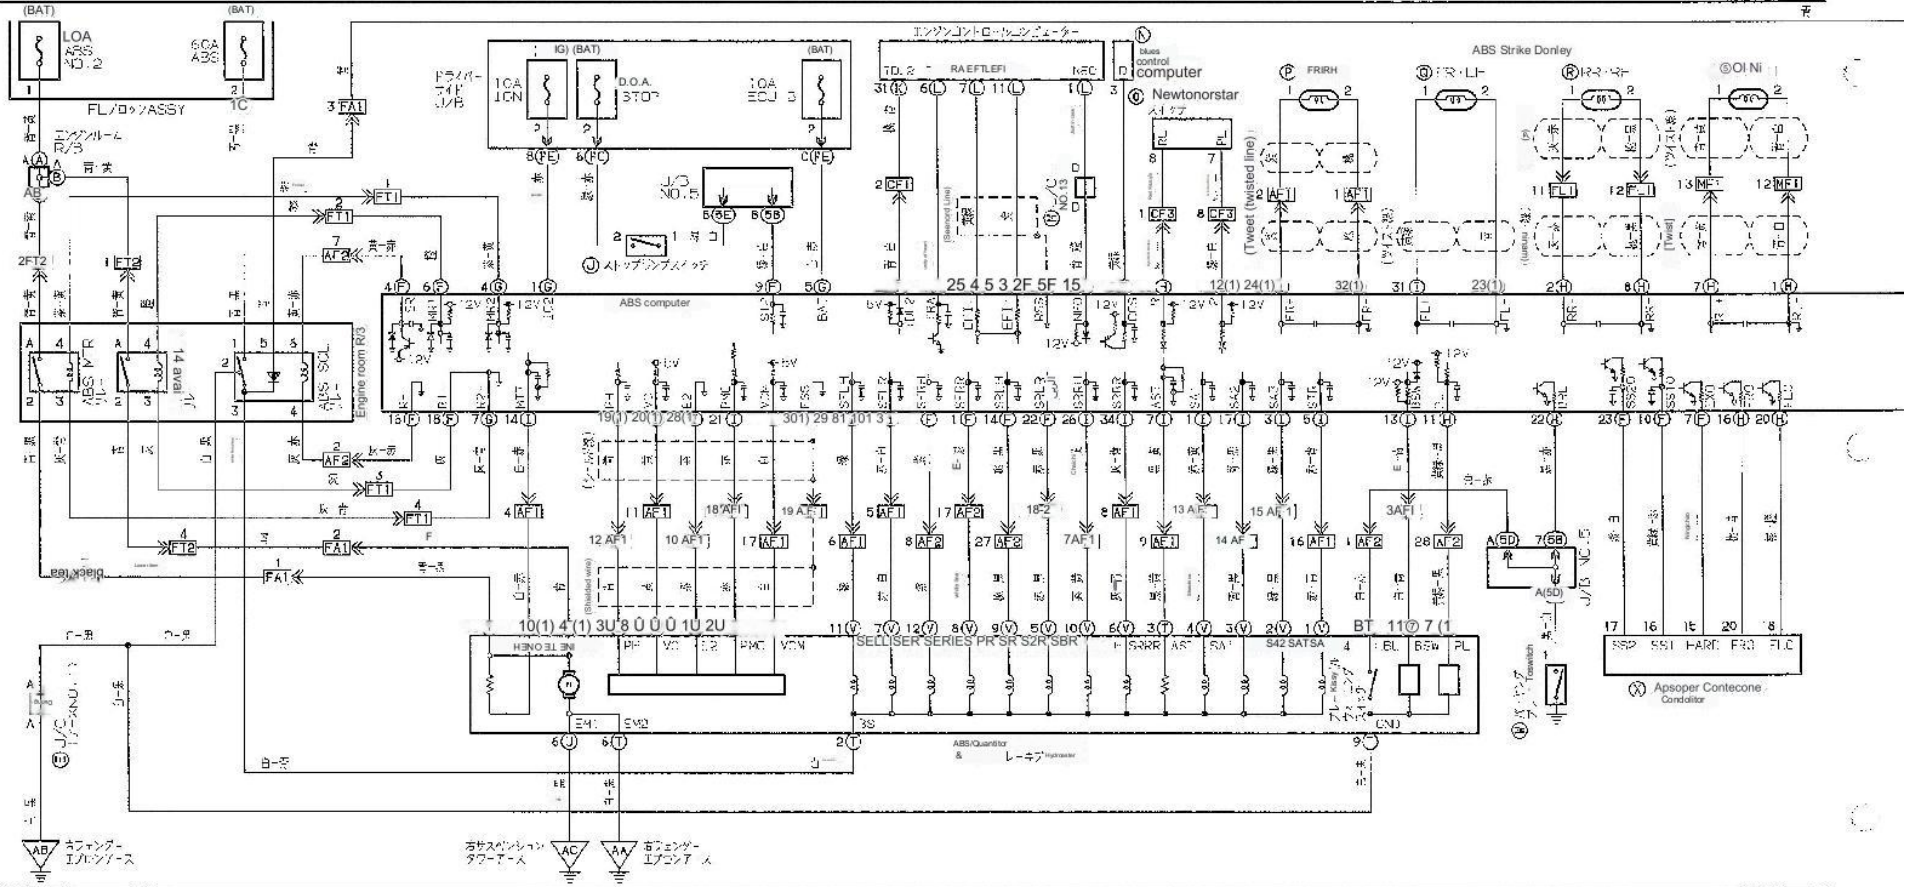





Product number 67476

 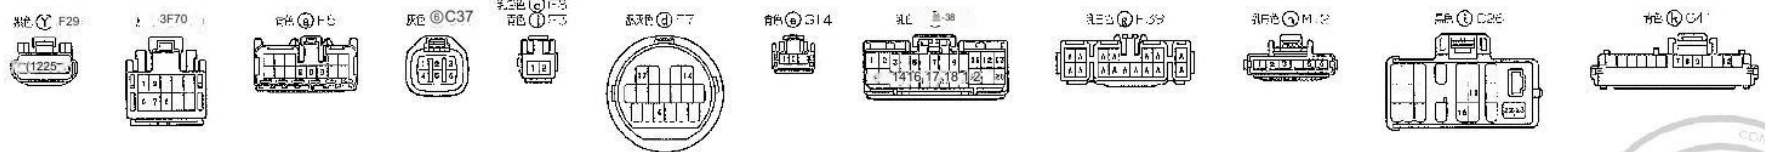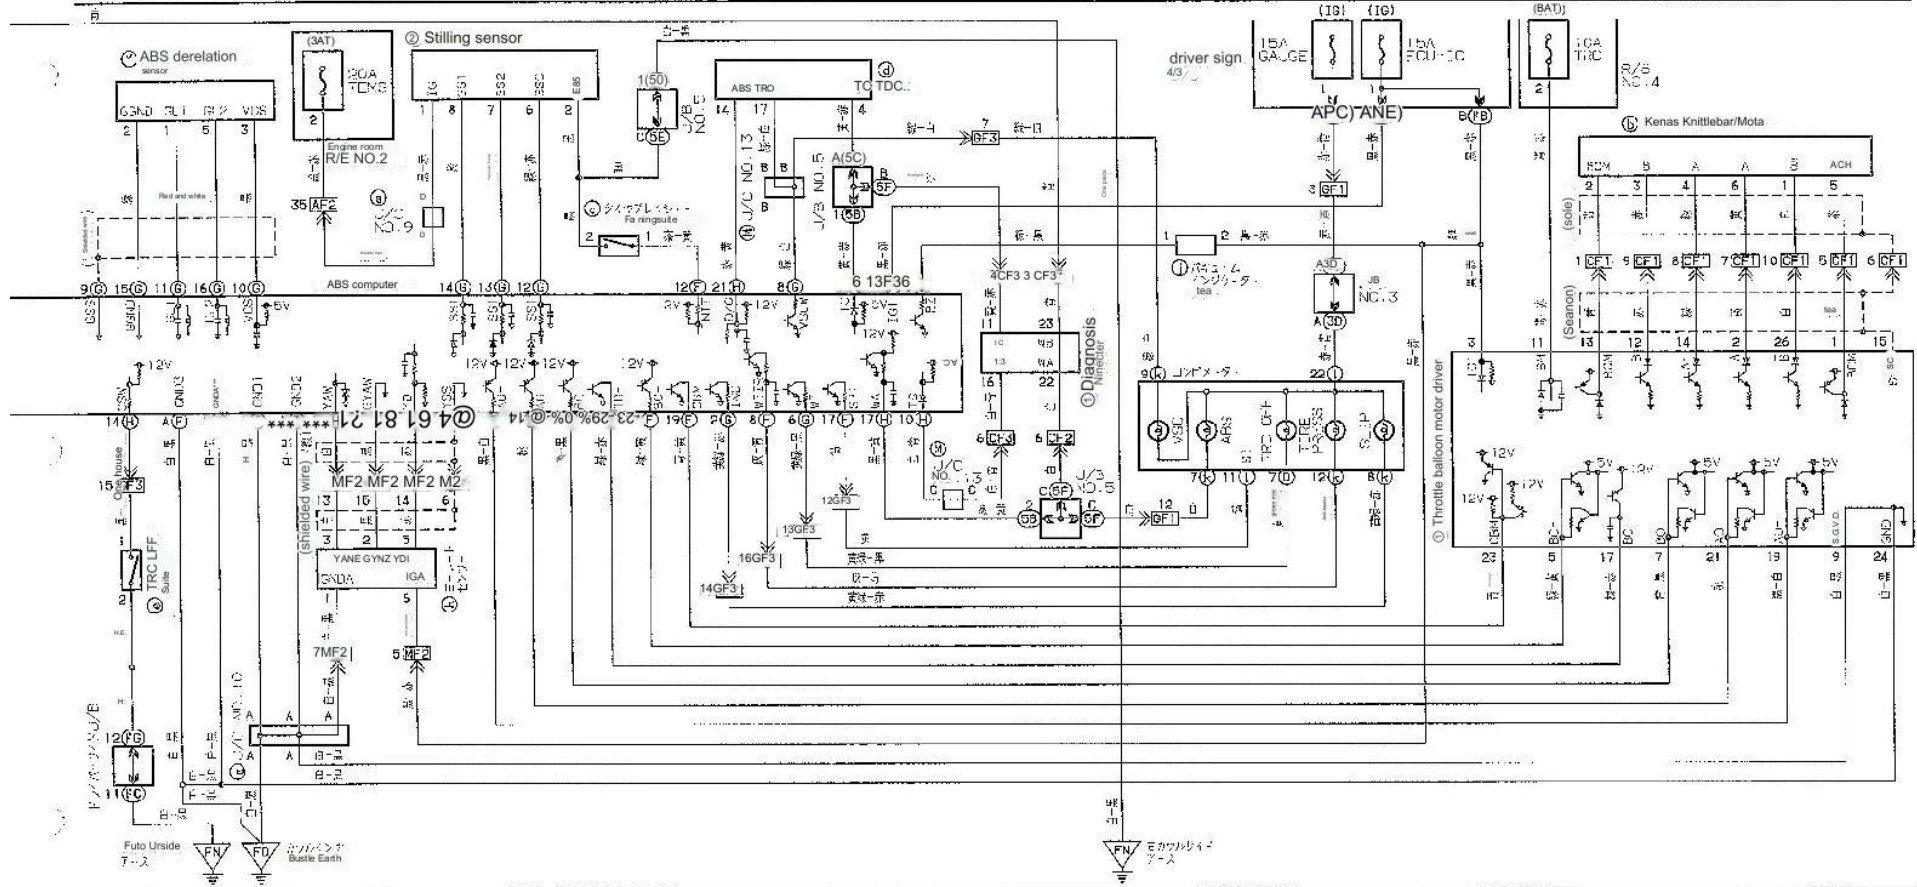

door lock

2: Mark and Denisser without meet-ontion... Cresta La Marconi and Cheyner's mirror heater... heater #fu... building #4: <1G-No Domicia option and Berg Cheyner's mirror... shortpa: Aha Amegoo 45: Digital Meter

rear window defogger

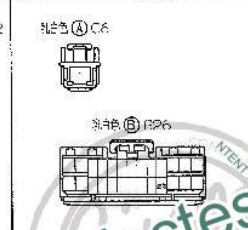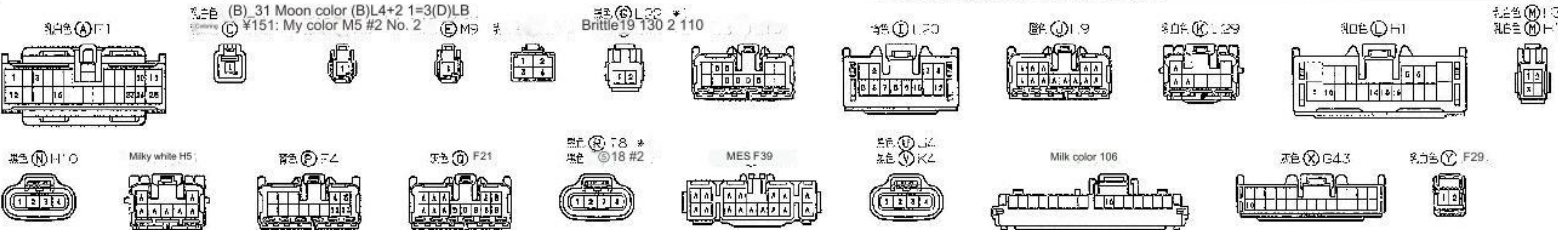
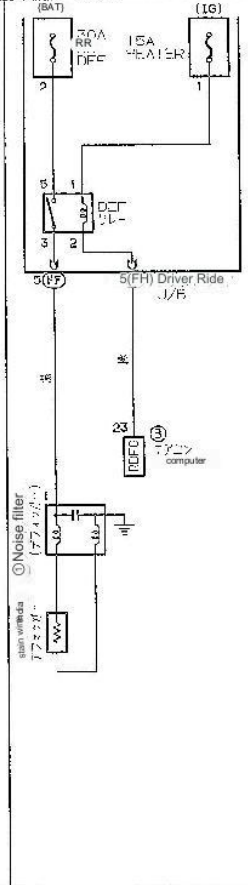
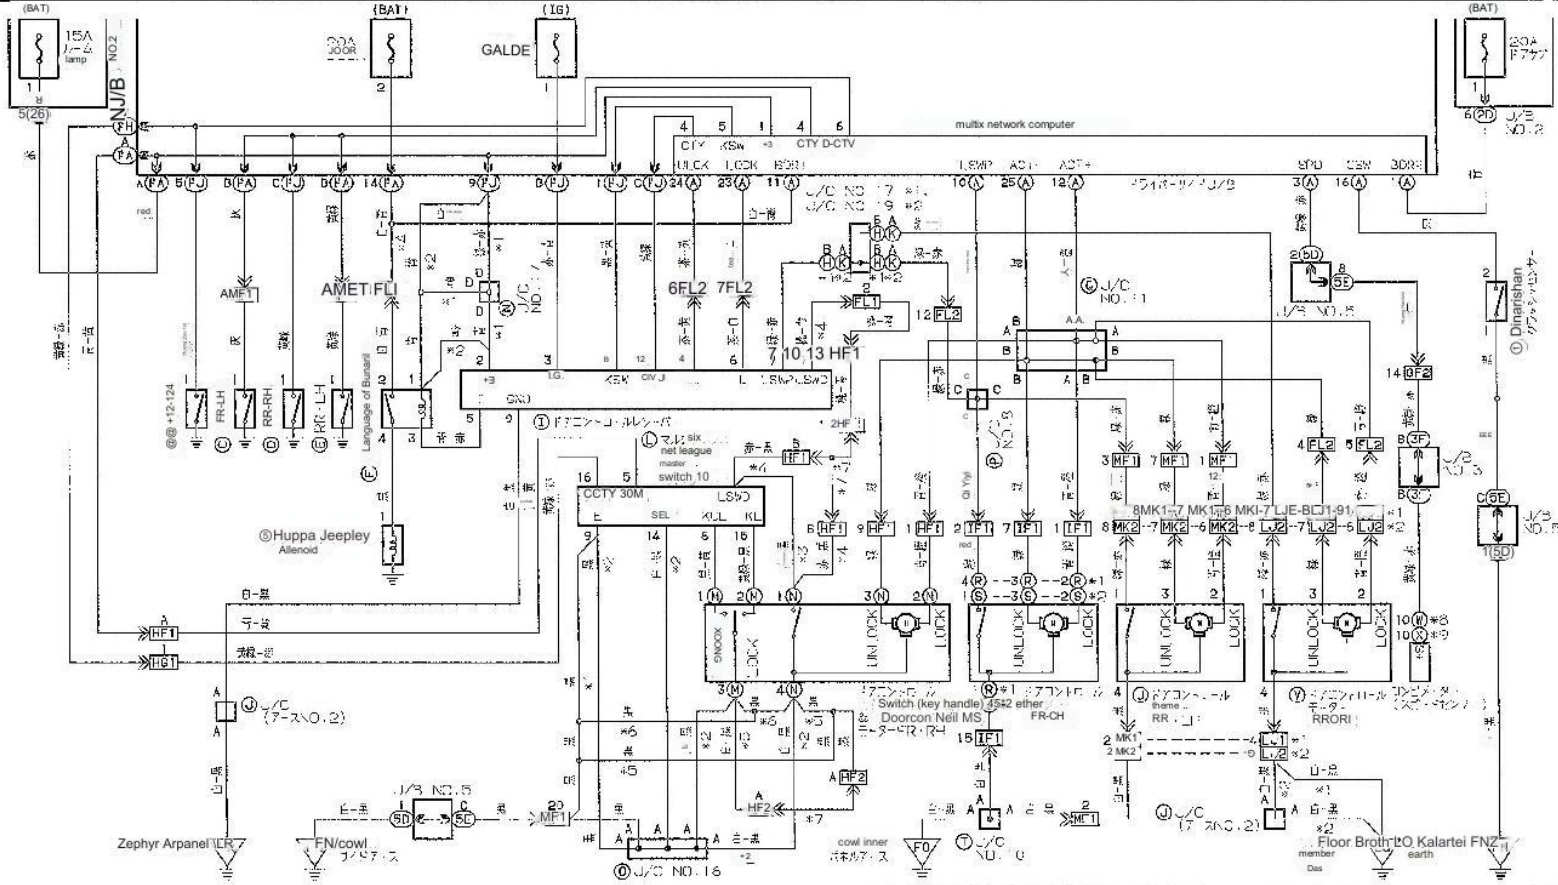


power window

*1: IC FE211/GE007, FA21-T
*2: 2.2 raid and JZO FE02-G Gresda
*3: 2-7107x17-


Cigarette Rider & Kukok

3-35

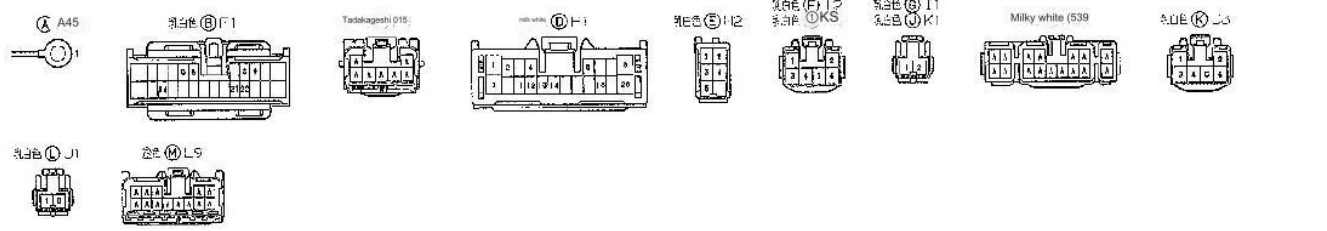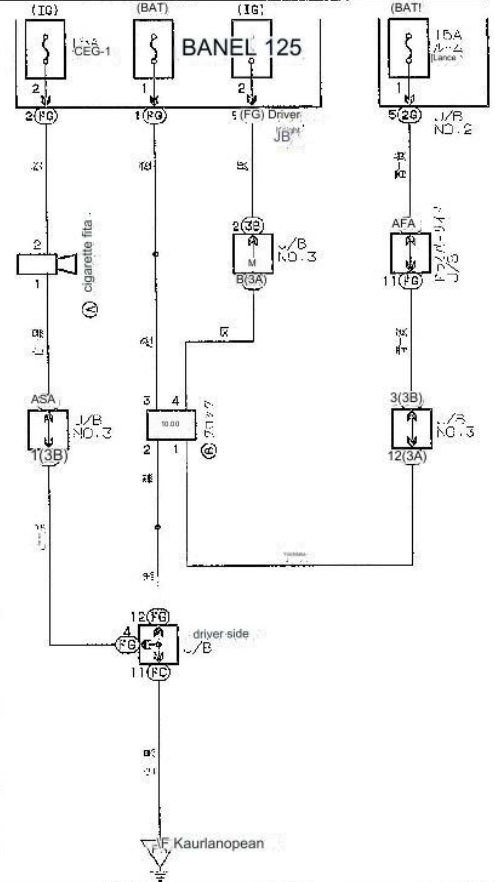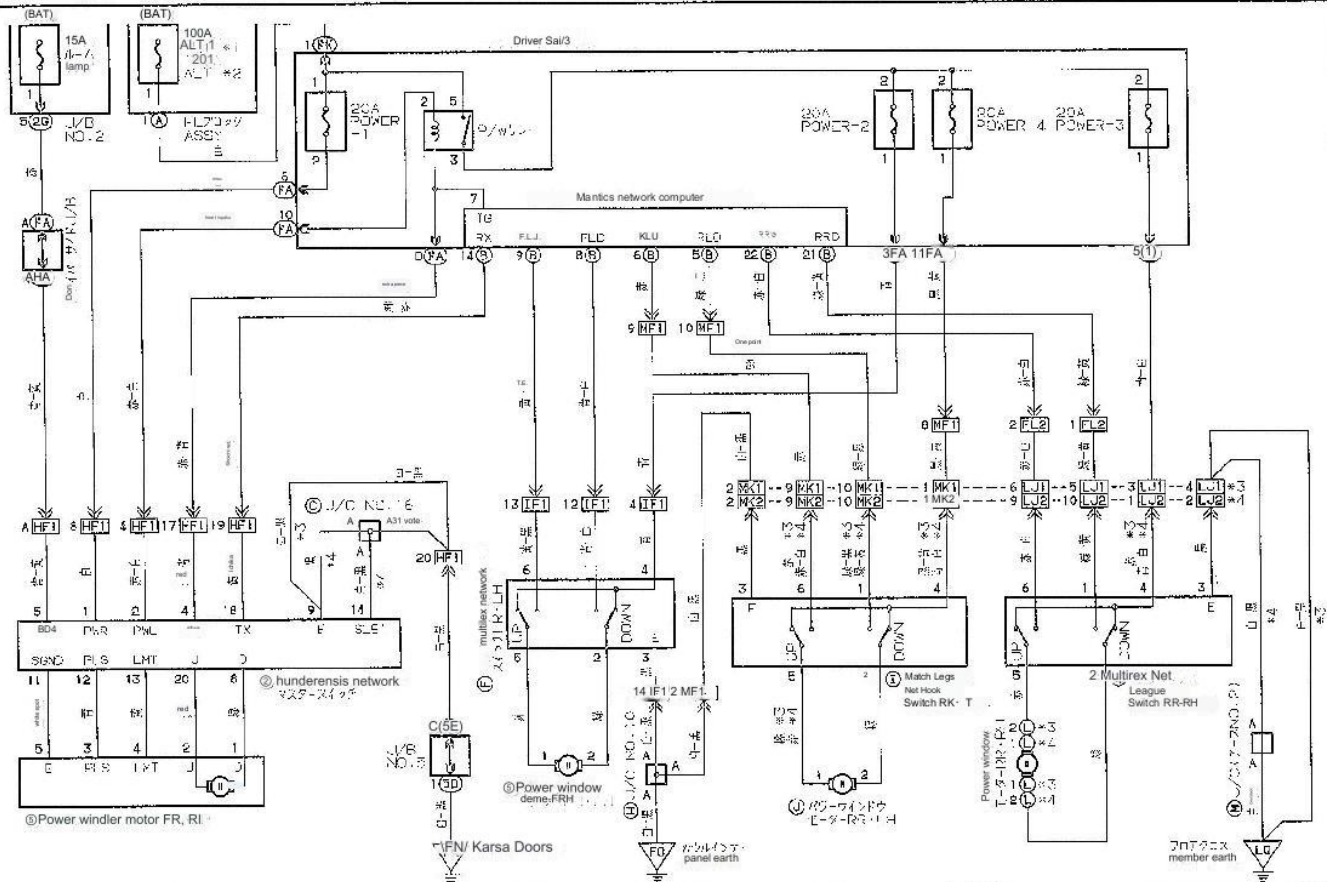


(196/09 品番67476)



front power seat




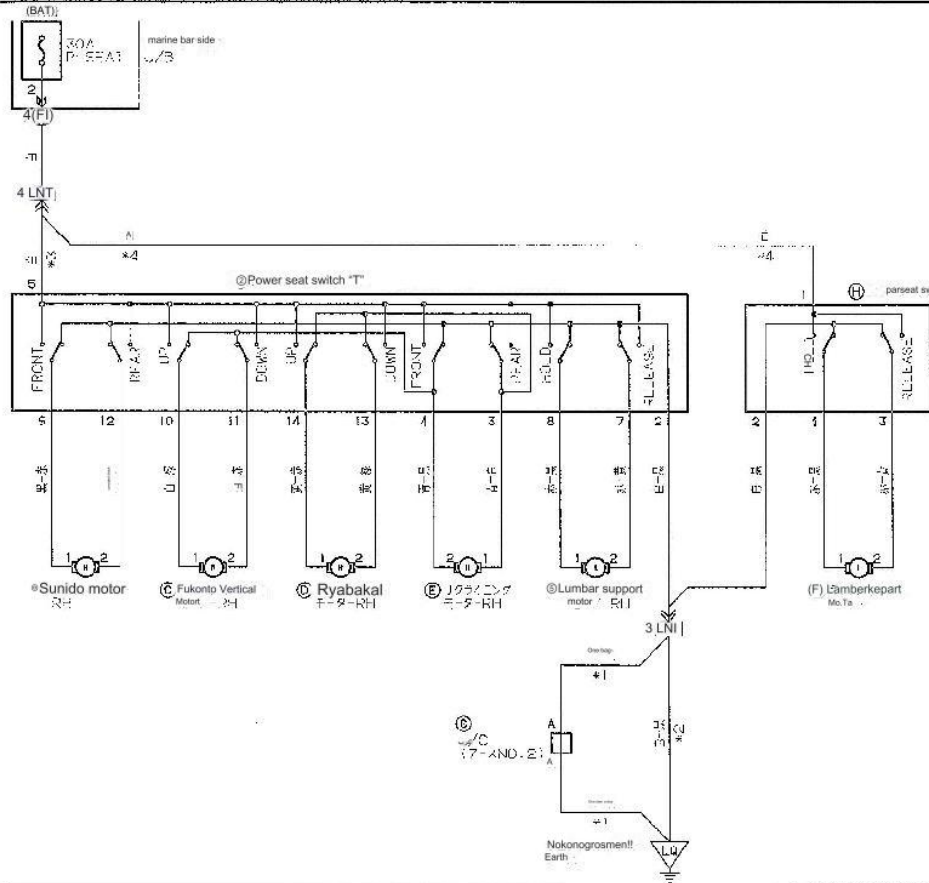


Mark II and Cherry
 Gokuto grade
 VAS/L

 

Rear wiper & washer

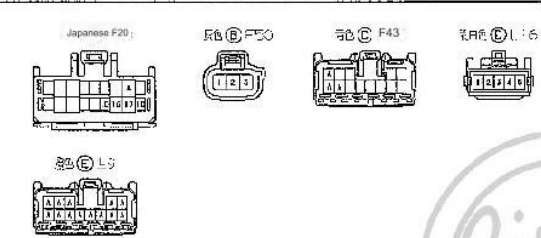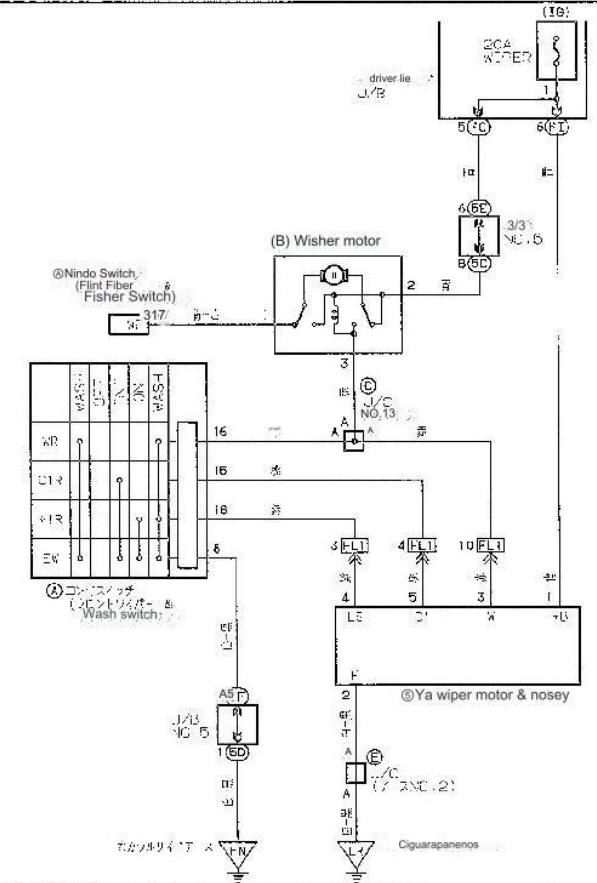


 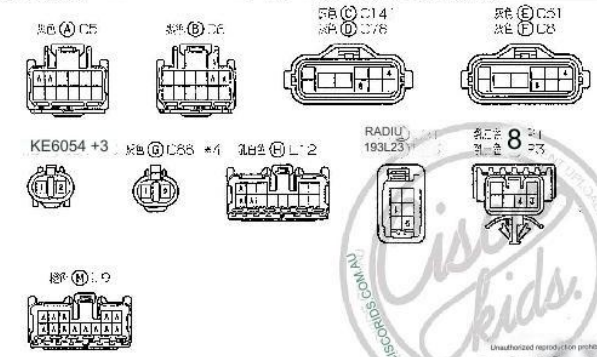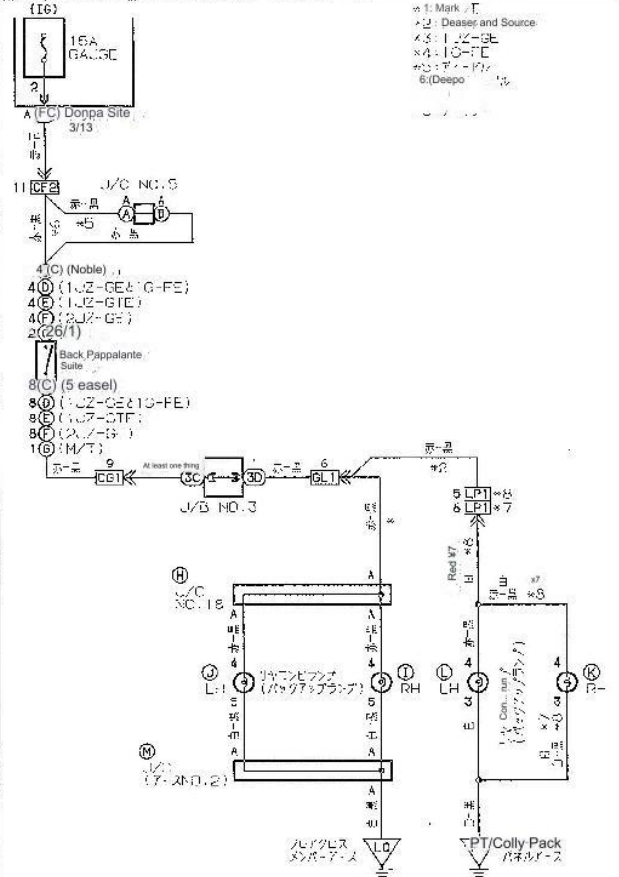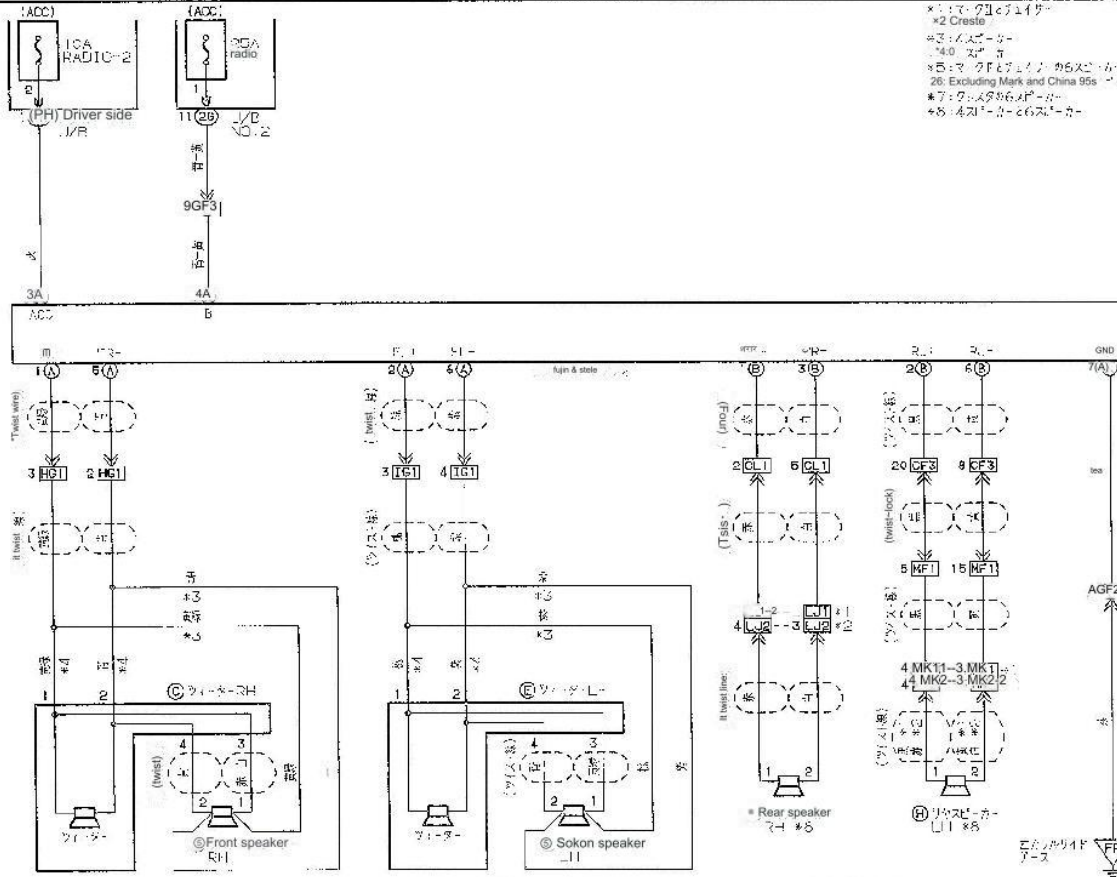

Audio (AV integrated type with built-in amplifier) E





Koryo: Ispeaker


- *4: 62D-5
- *5: 10-FE and 1JZDE
- *6: 1JZ2-G1E
- *7: 2JZ-G7
- *8: 2L-TC
- *9: 10: With avigation
- *10: With avigation
- *11: Maji Iwar's speaker
- *12: Opening Magna (Ike 26 Speaker La Solesme Speaker 1)


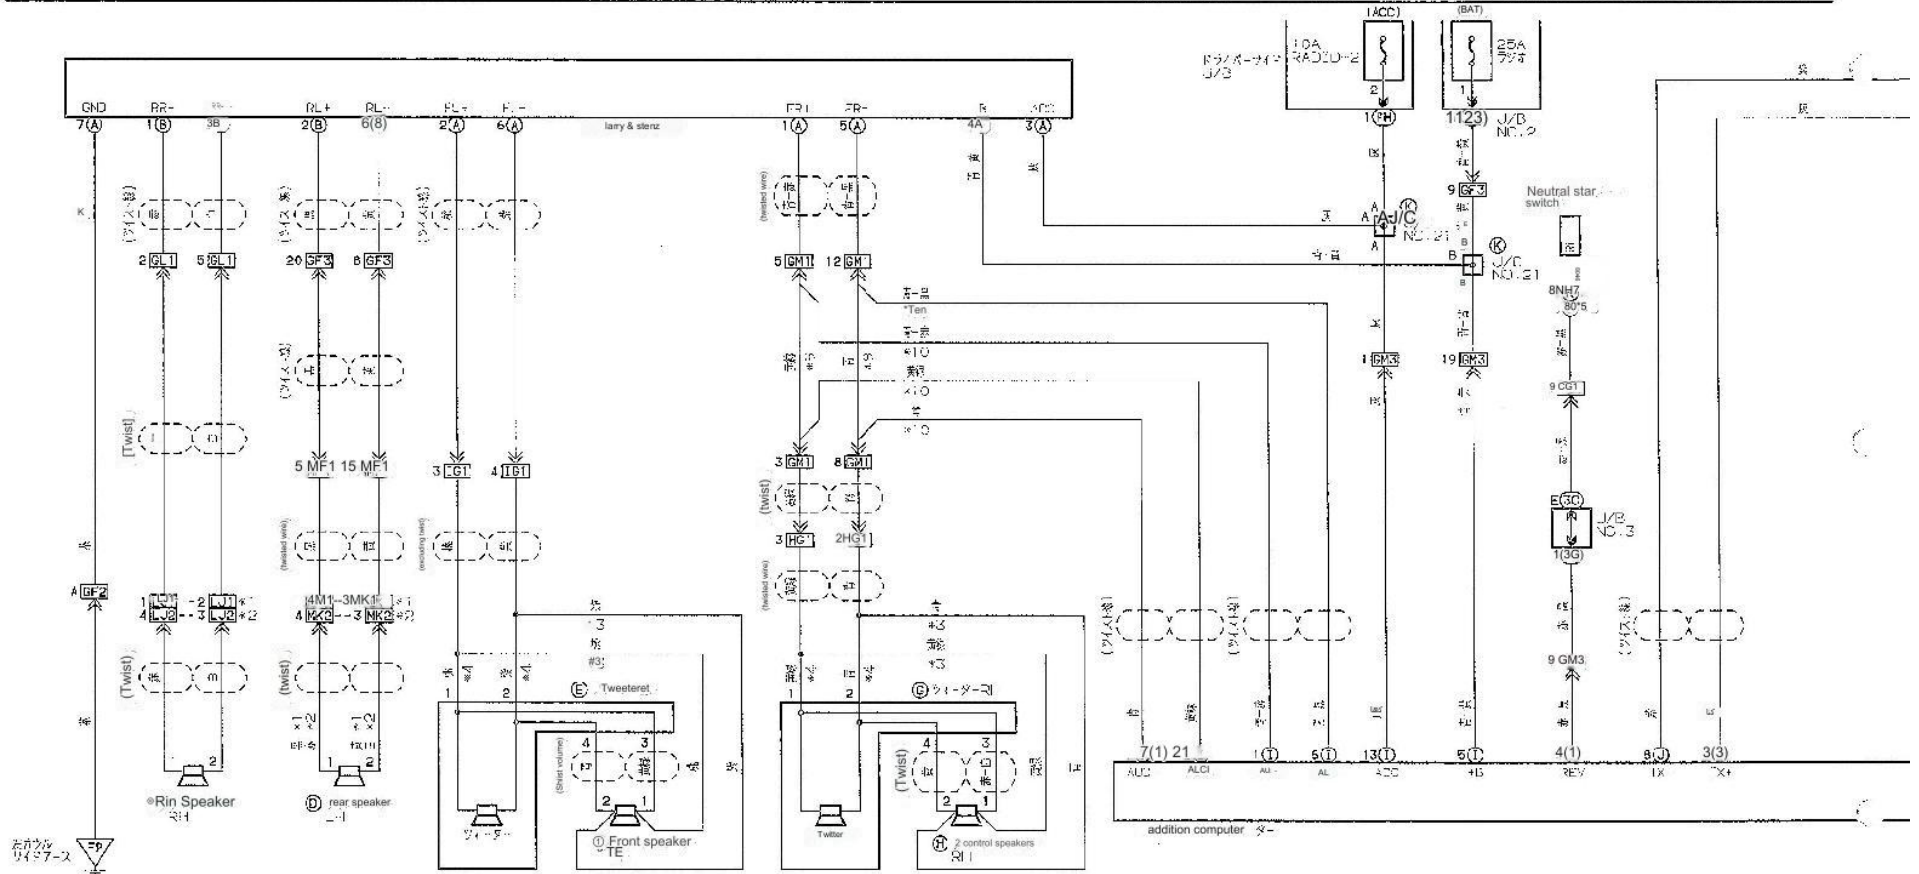


 - Breasts53625, Gapiro BC24, 32 14, K2 #13, K2 #14, 4 #13, 4*15 LES 13, *2018*51*1 White, M:3, M:4, 358 GLO, RE:078, RE:0121, RE:051, RE:008





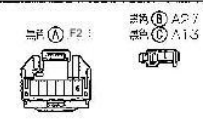
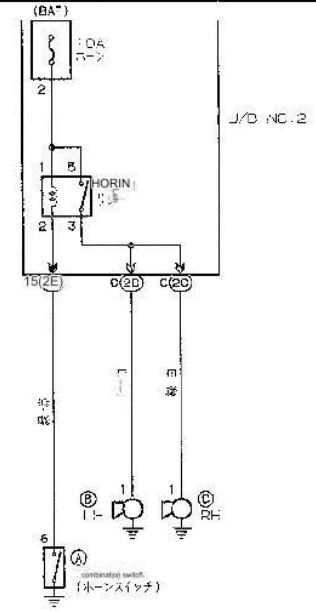
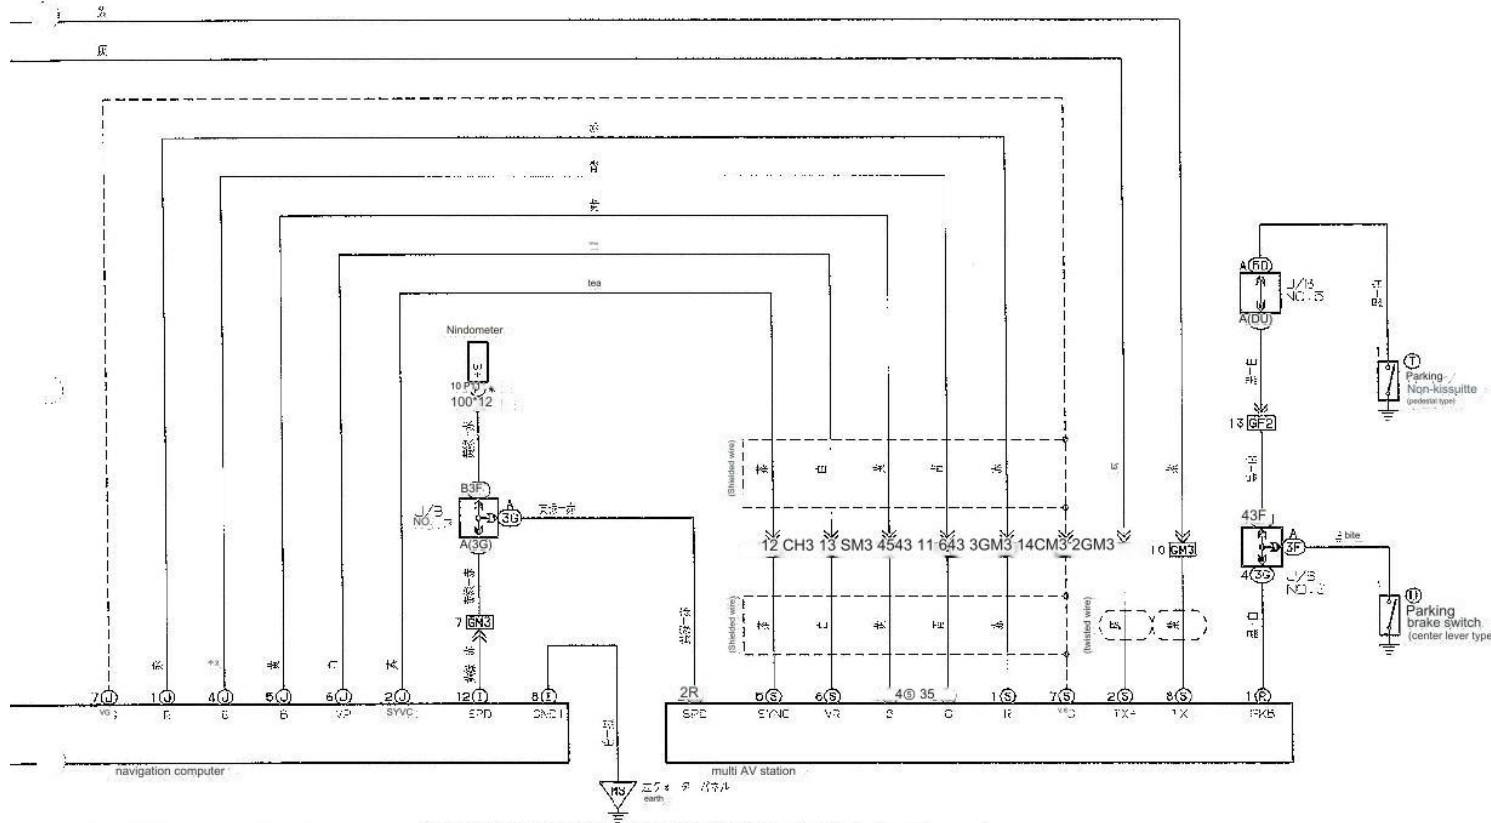


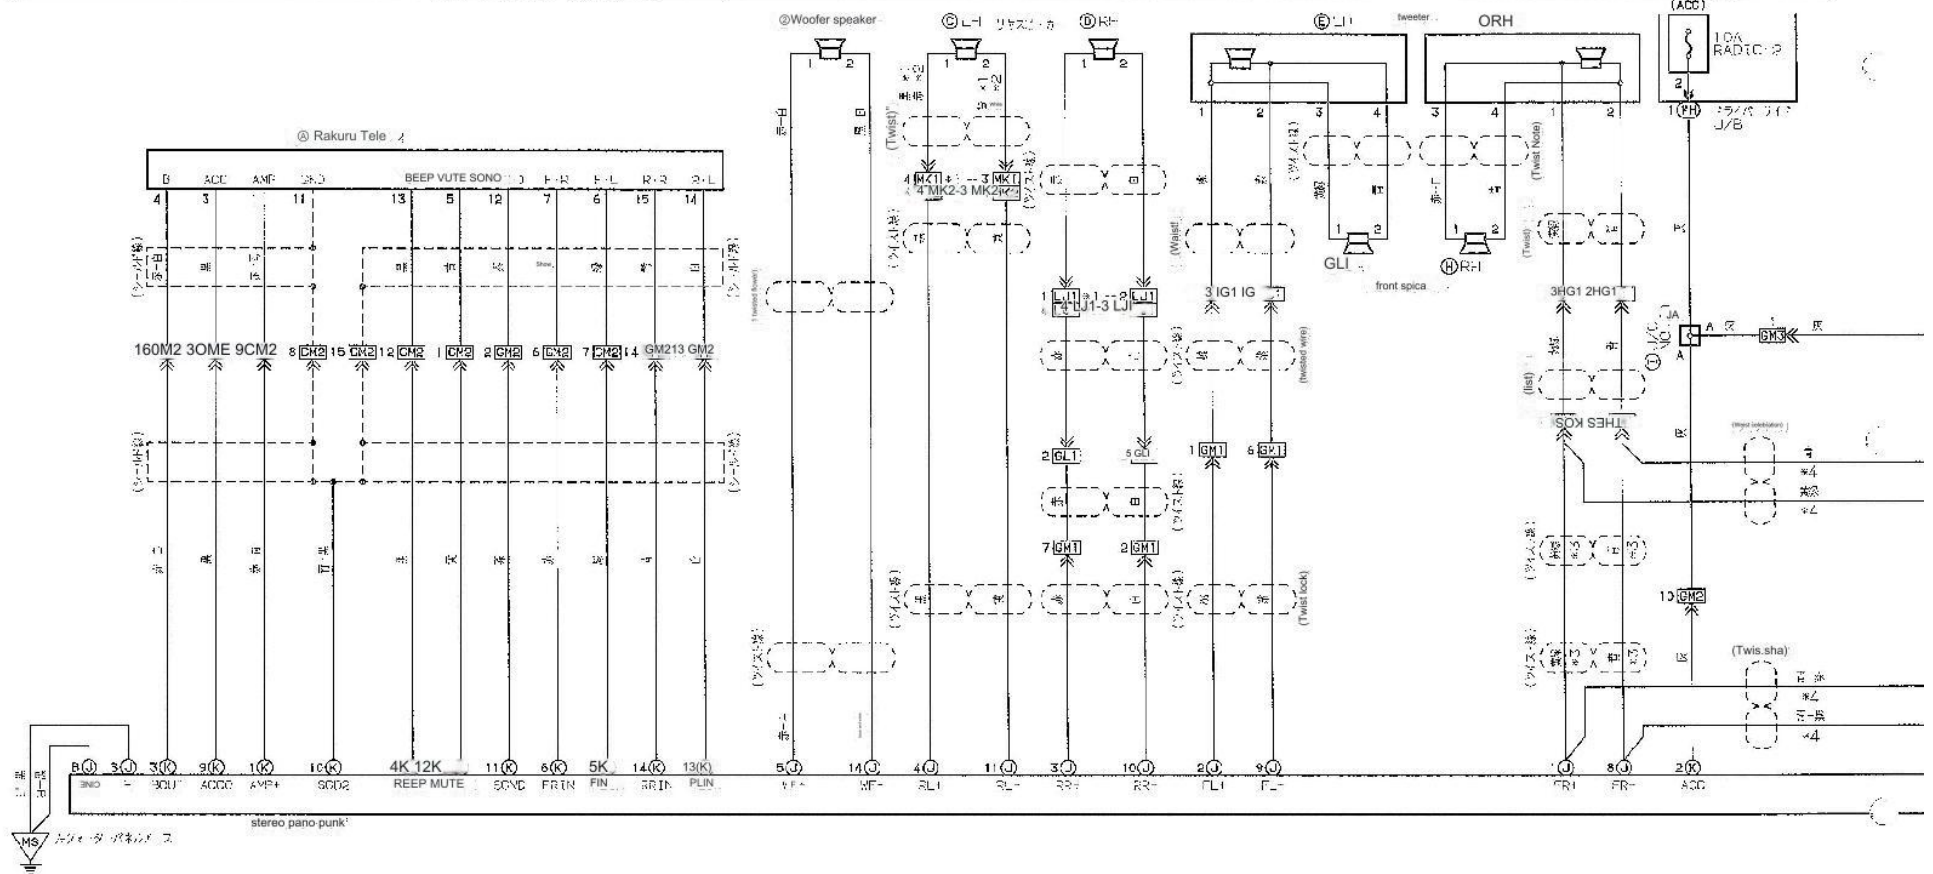

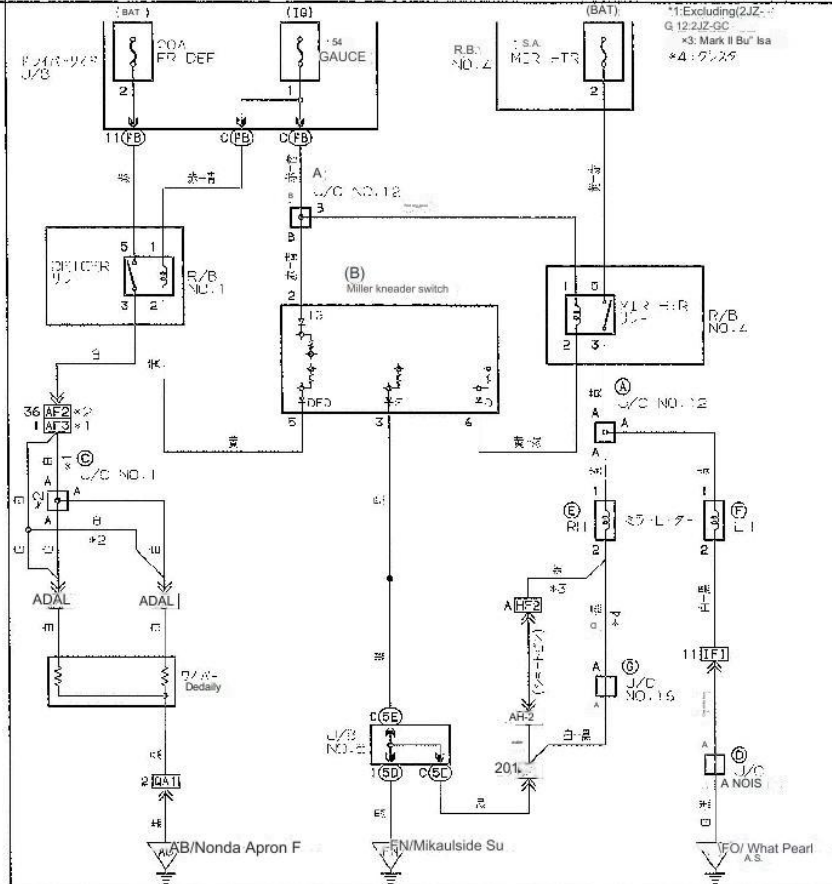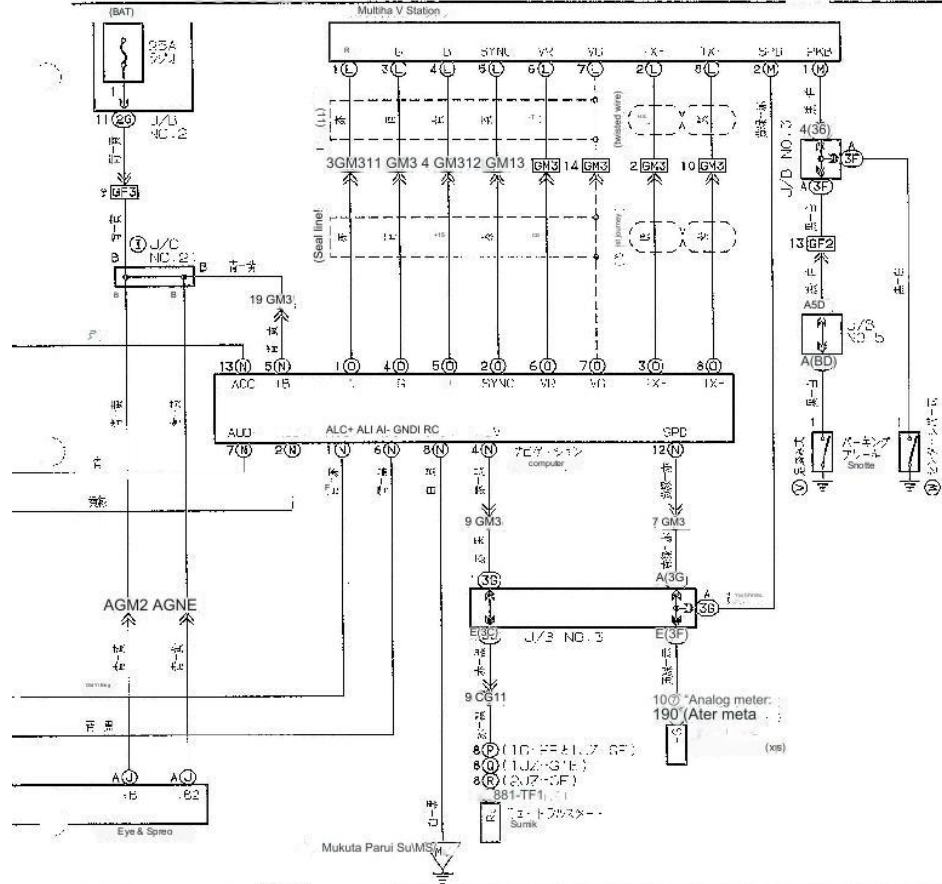

  
*1: Excluding (2JZ-GC)
*2: 12-2JZ-GC
*3: Mark II Bu'isa
*4: クレスタ

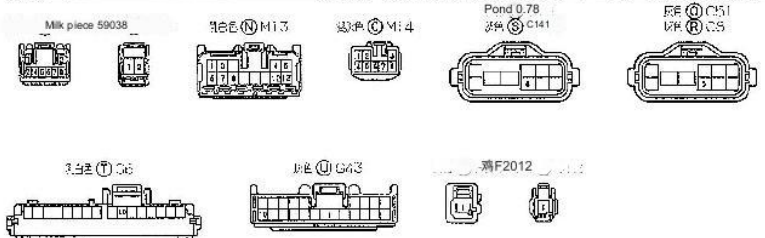


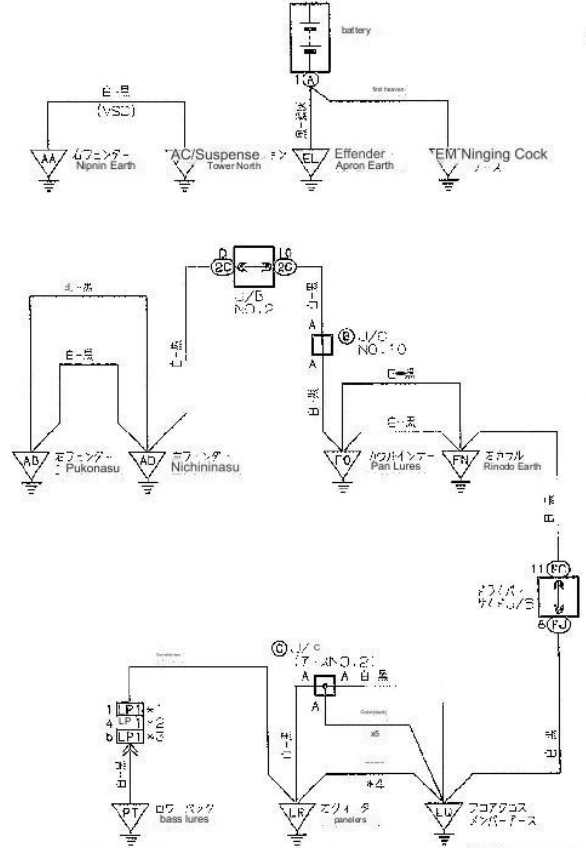
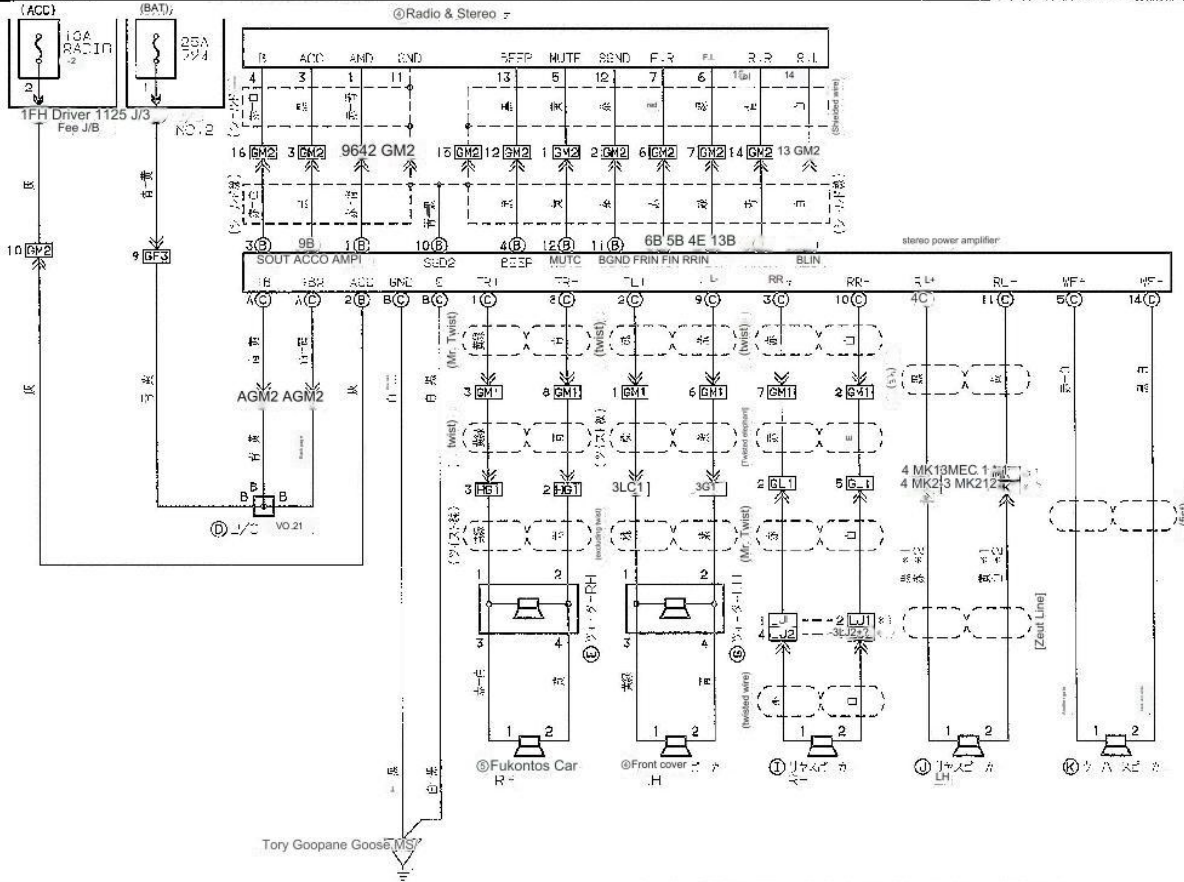


cruise control-

*1: With TRC *2: VSC *3: RCUL #5: Analog meter/digital meter


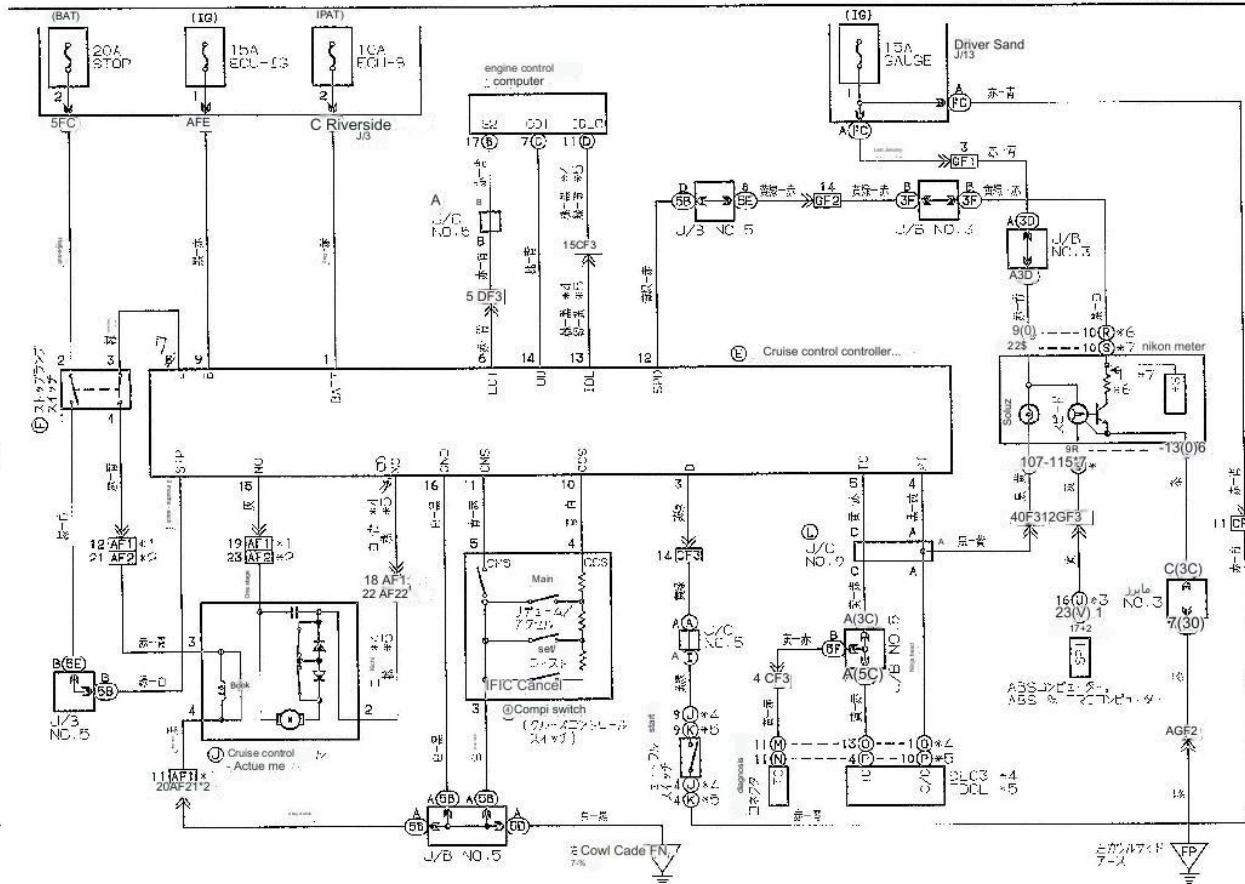


Front wiper & front wiper

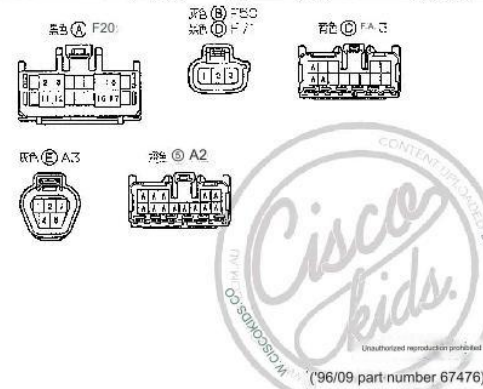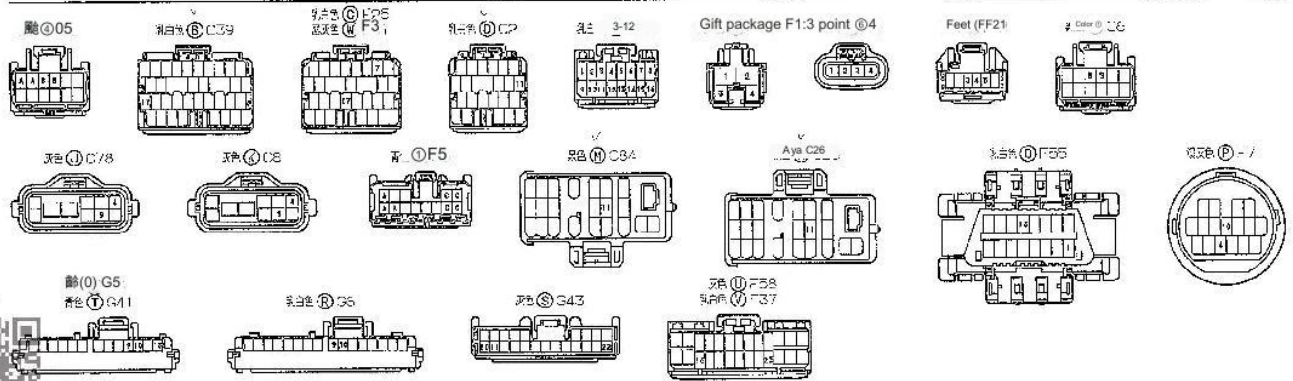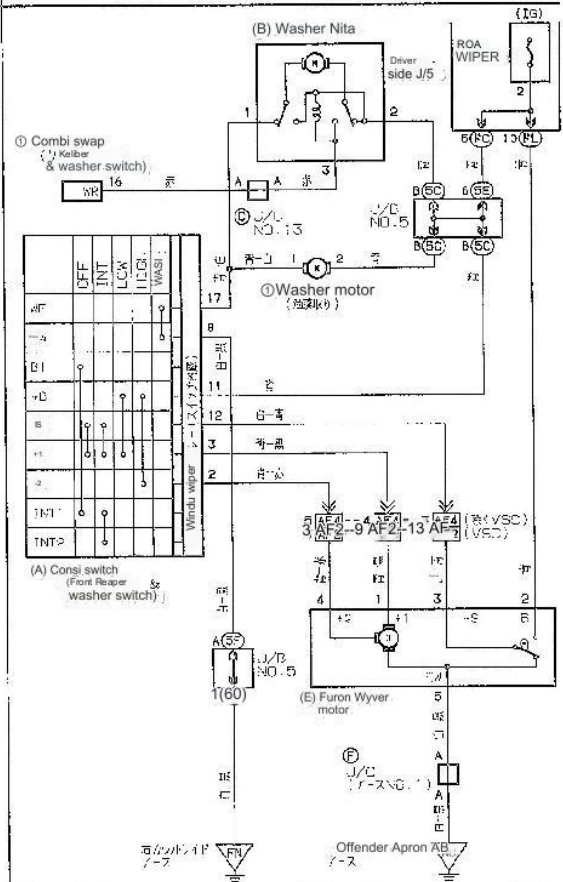


Condonation meter (analog meter)

*1: 1G-FE 20102-0-54/Easel 19.42 *2: 1GZ-SE&1GZ-GTE *3: 1GZ-GTE&1GZ-GTE
 *4: 1GZ-SE&1GZ-GTE *5: 1GZ-GTE *6: 1GZ-GTE
 *7: 1GZ-SE&1GZ-GTE *8: 1GZ-GTE *9: 1GZ-GTE
 *10: TRO216-c-J-0 *11: Gasoline AT11JZ Other than GTE

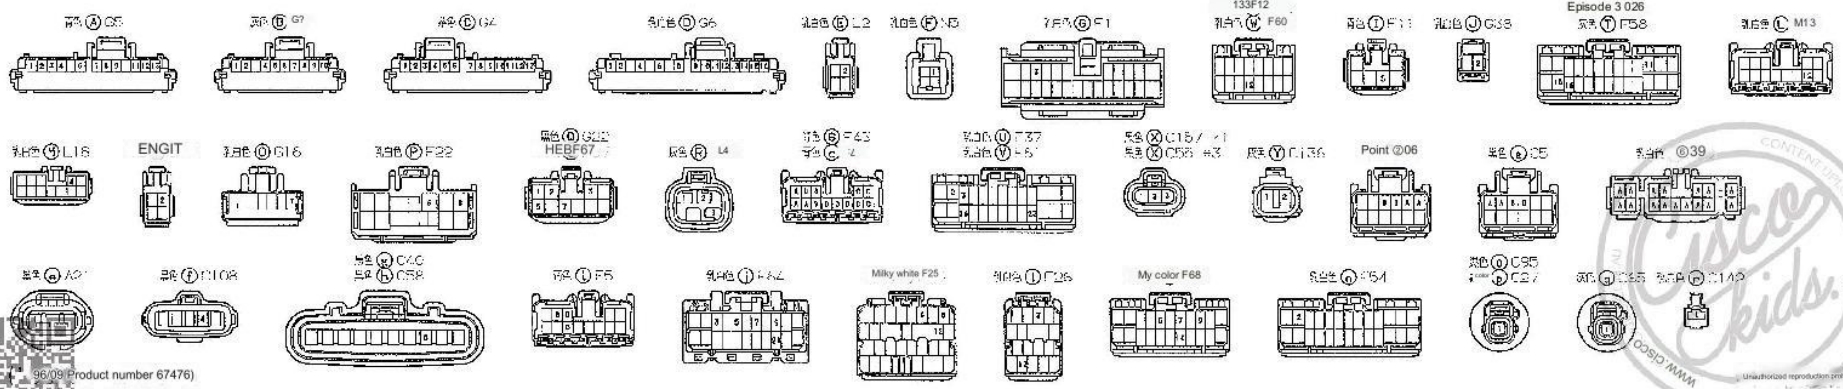
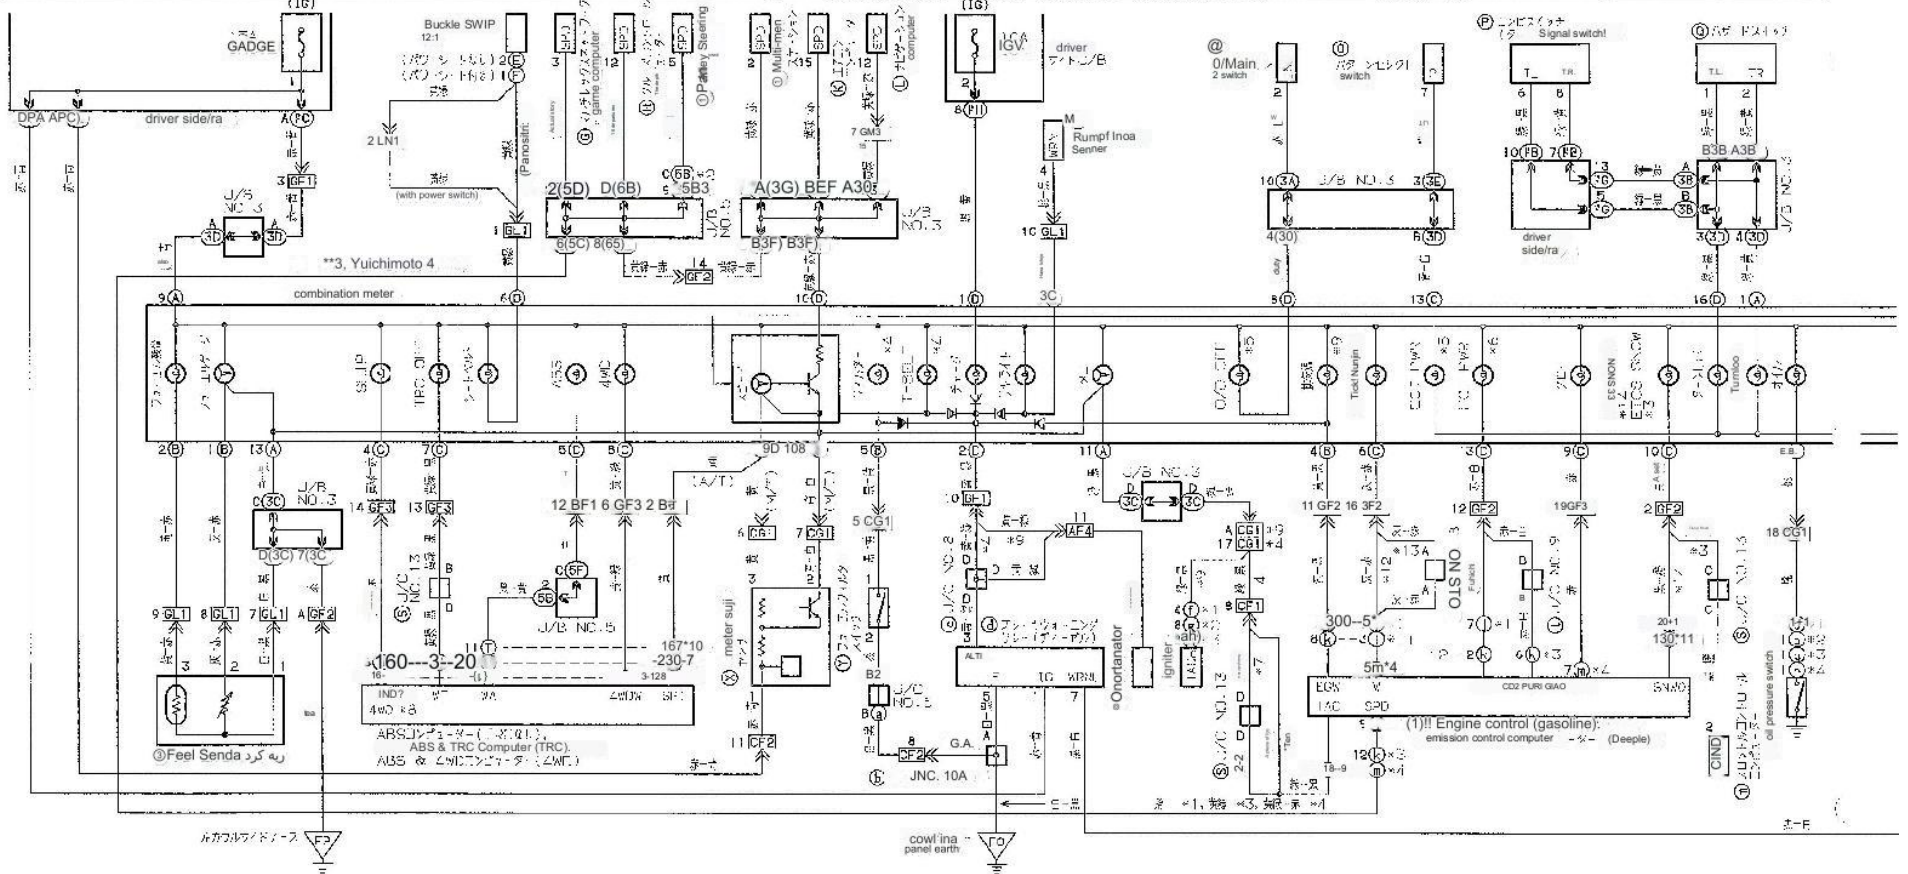


Product number 67476

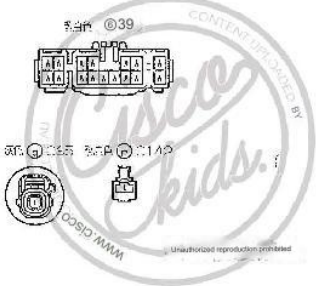





Unauthorized reproduction prohibited

コンビネーション Meter (analog meter)

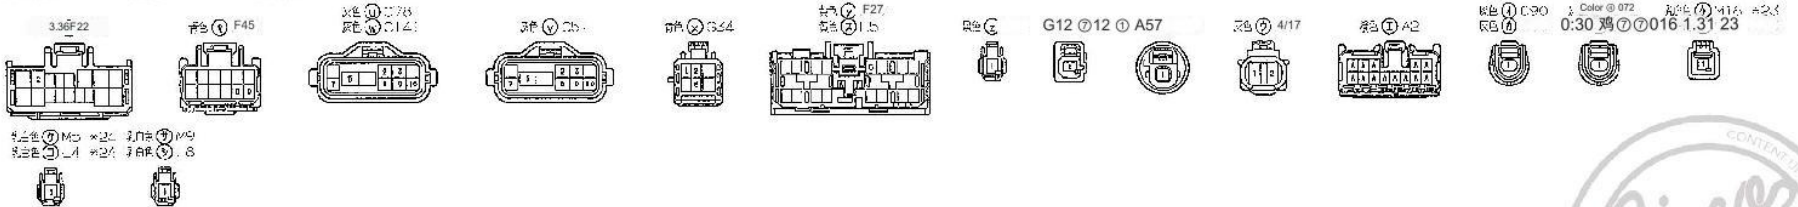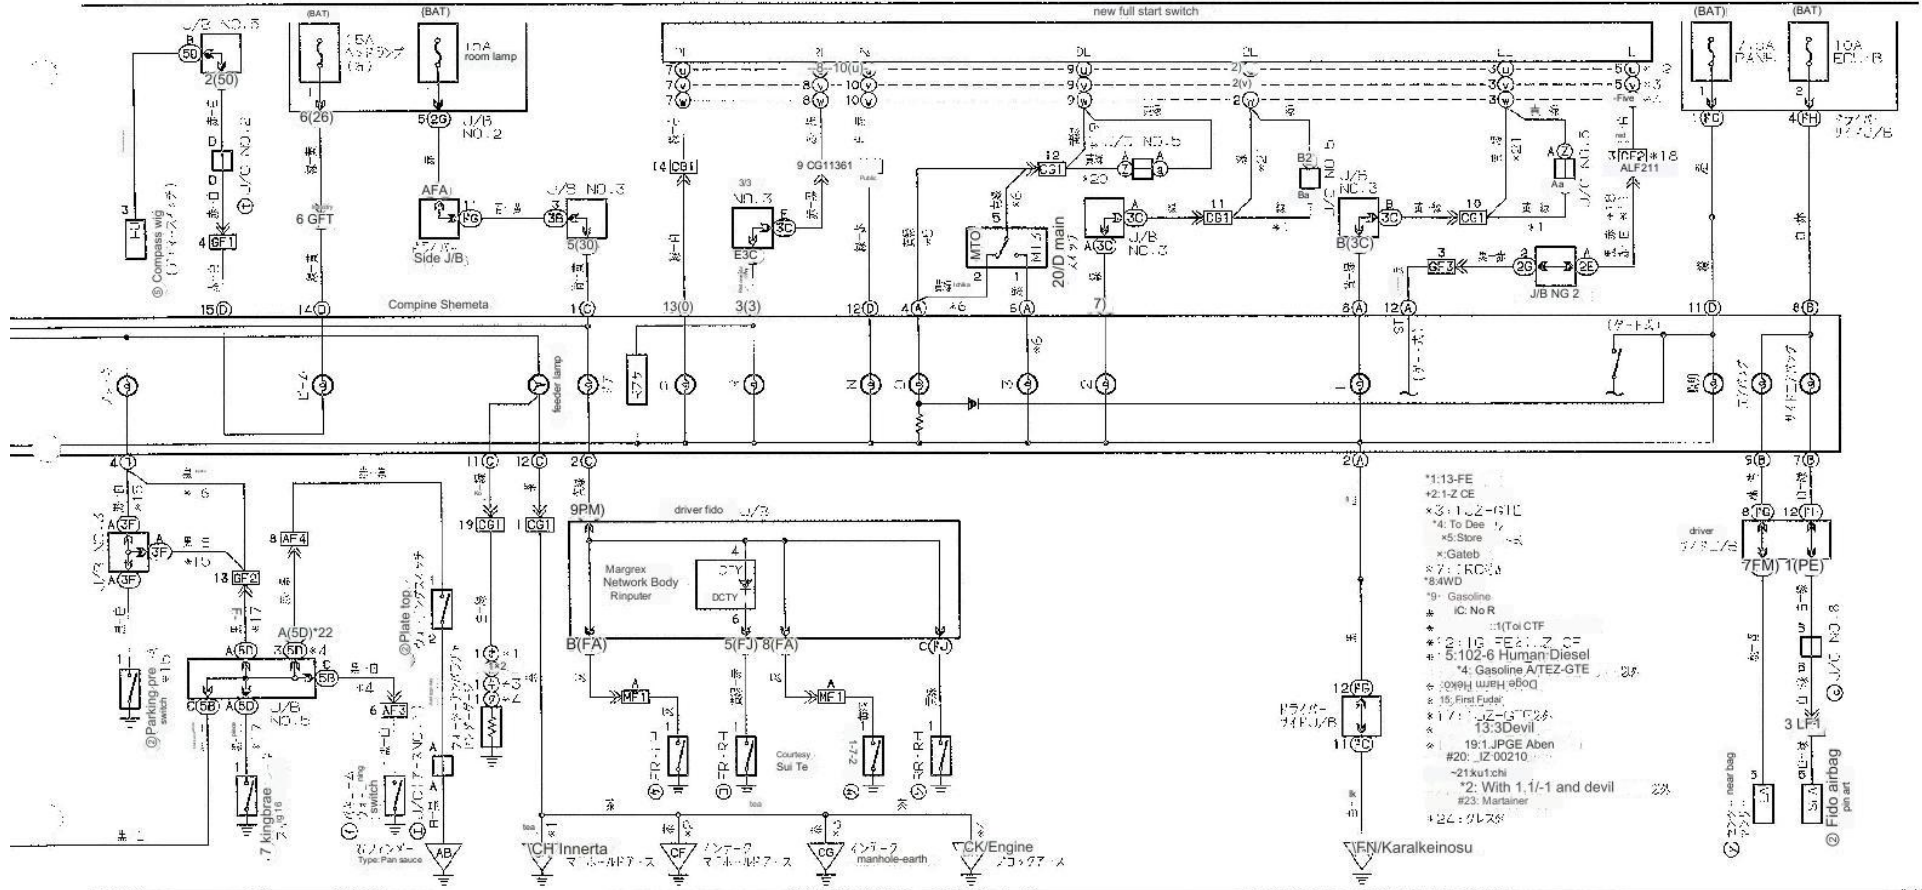


Combination meter (digital meter)




Conlite *1:0FE17 (ECCE 3-47)

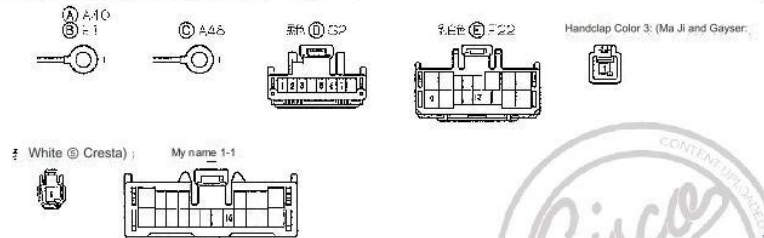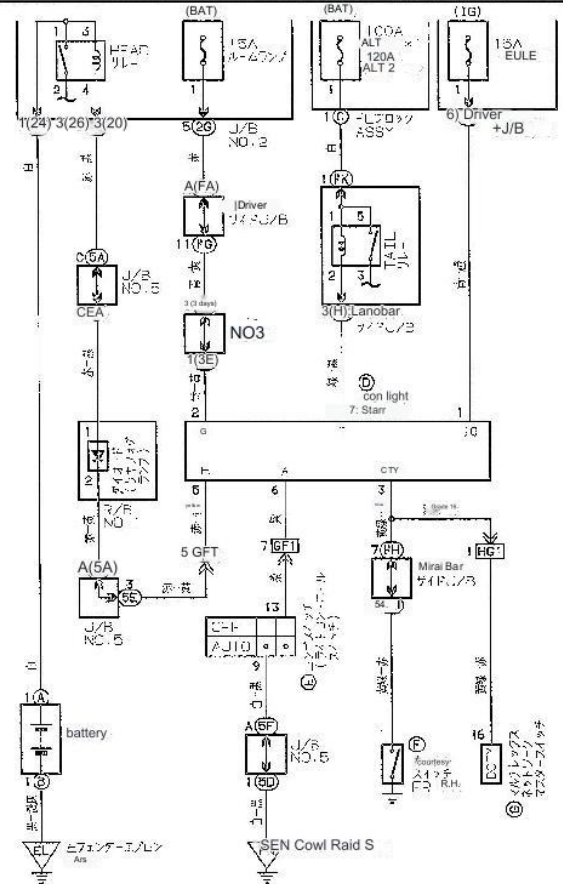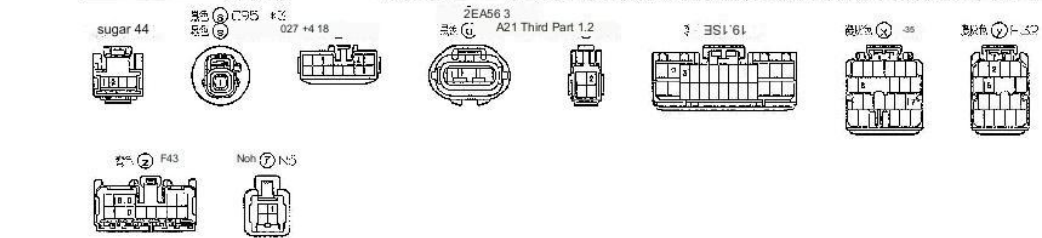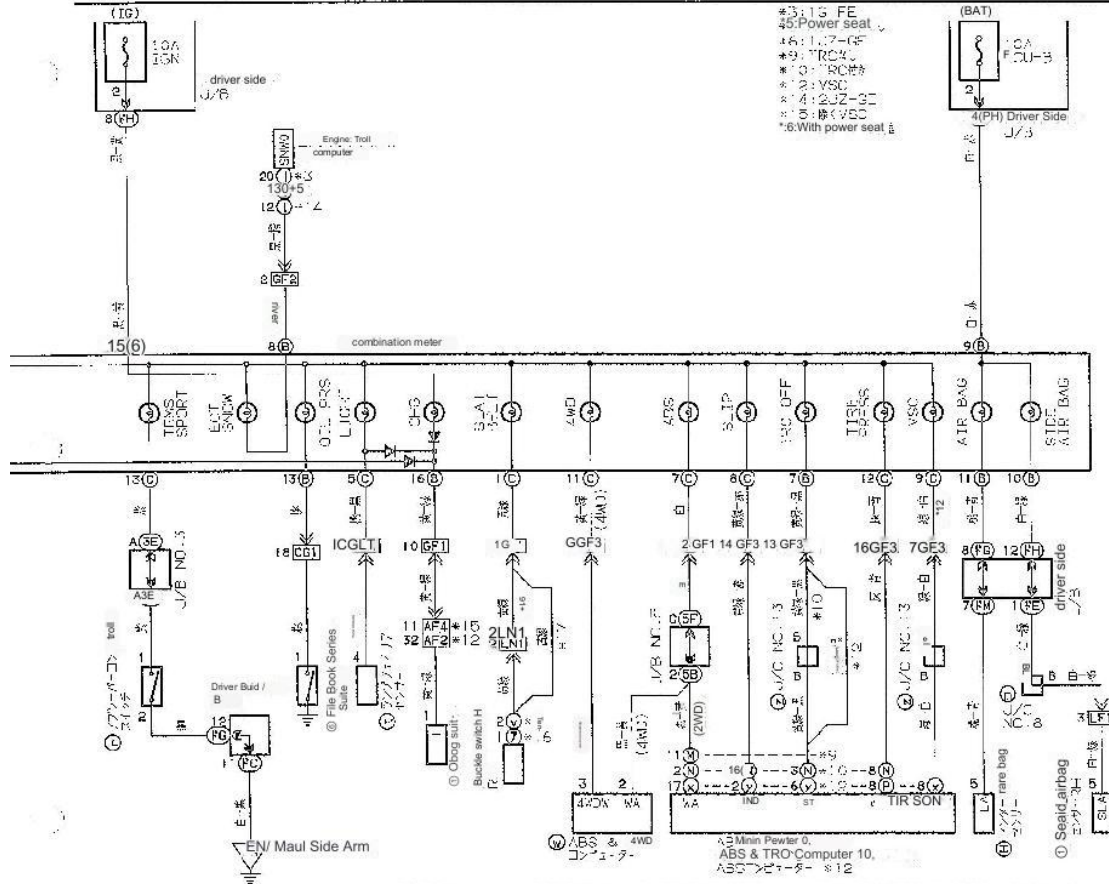


Stop lamp

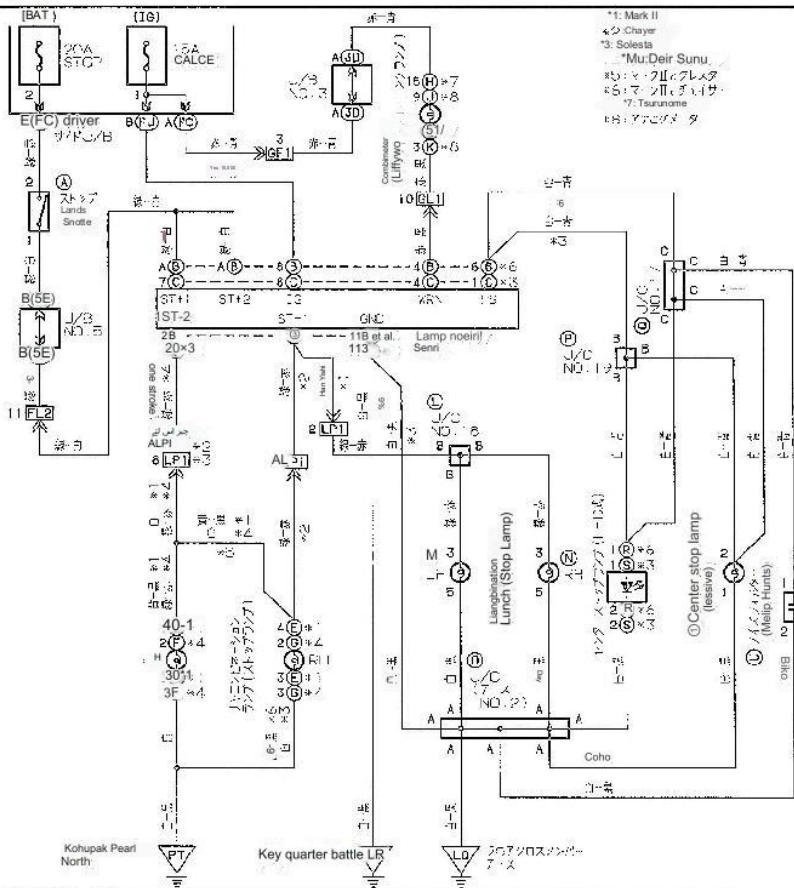


tail lamp

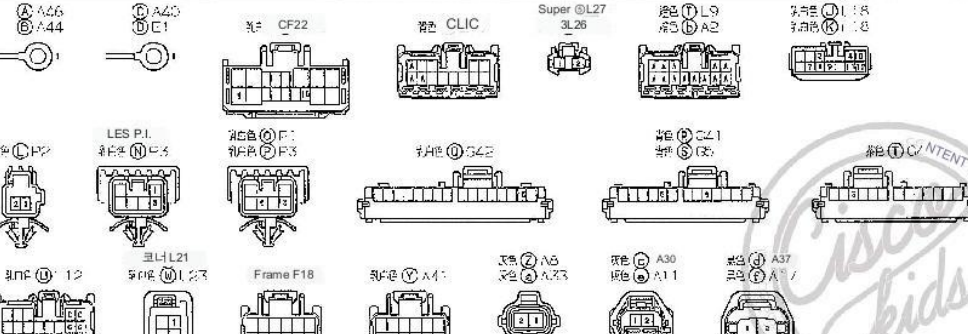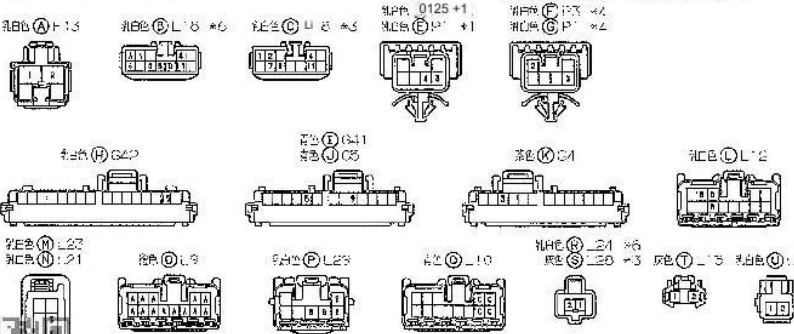
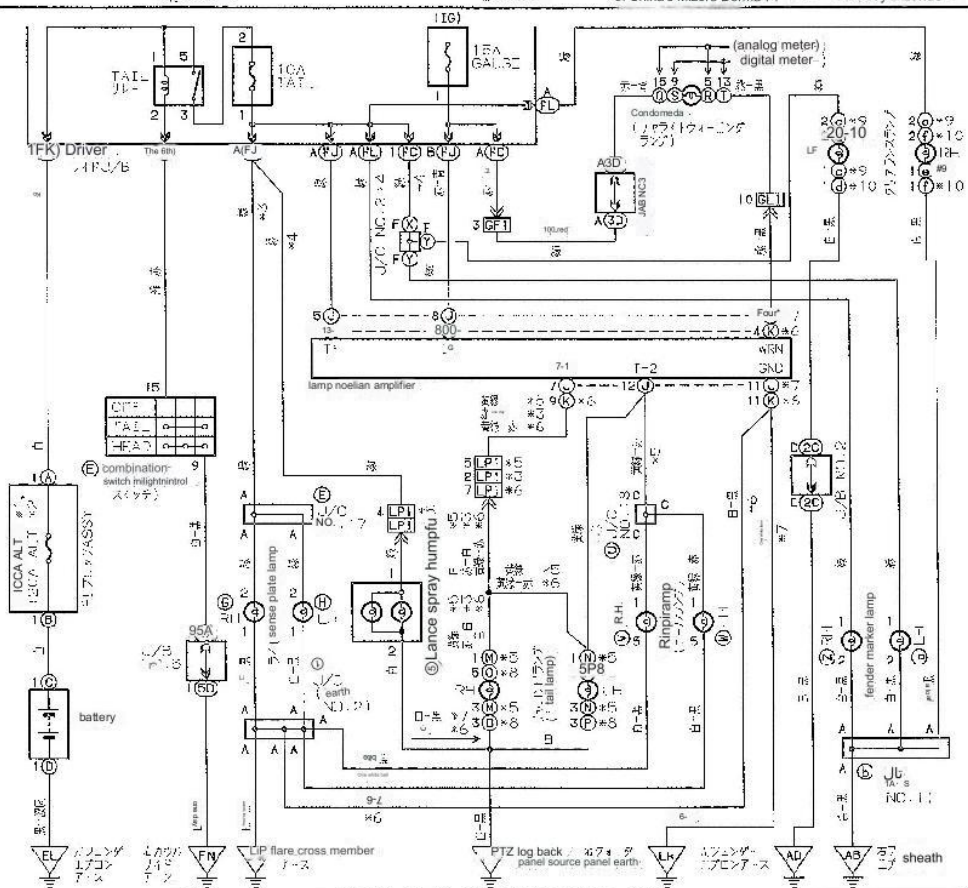


Product number 67476

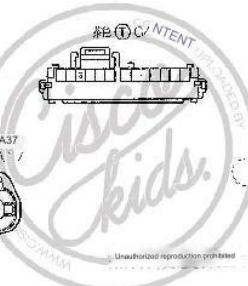

interior lamp

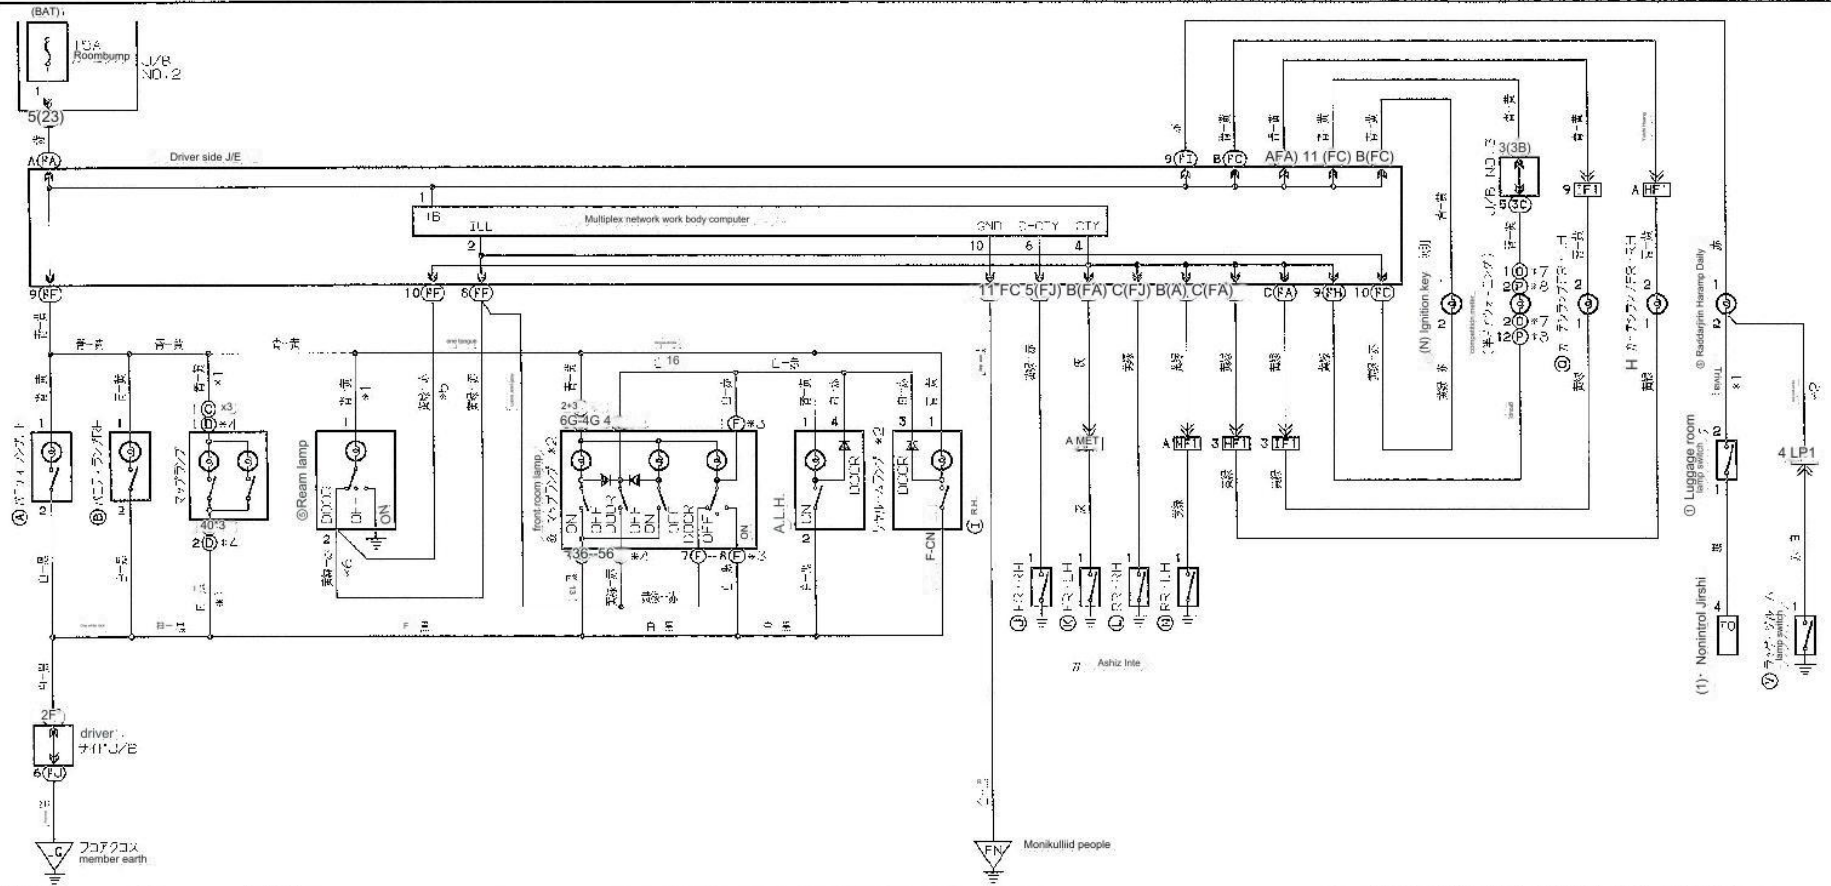


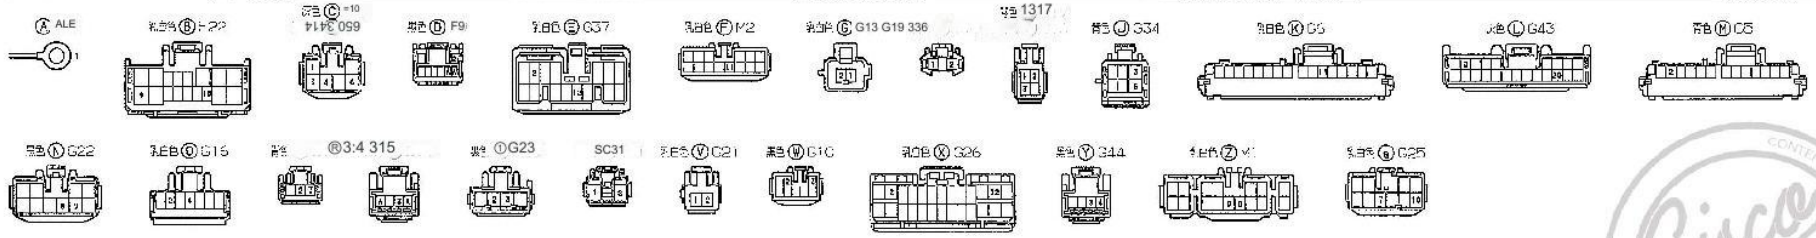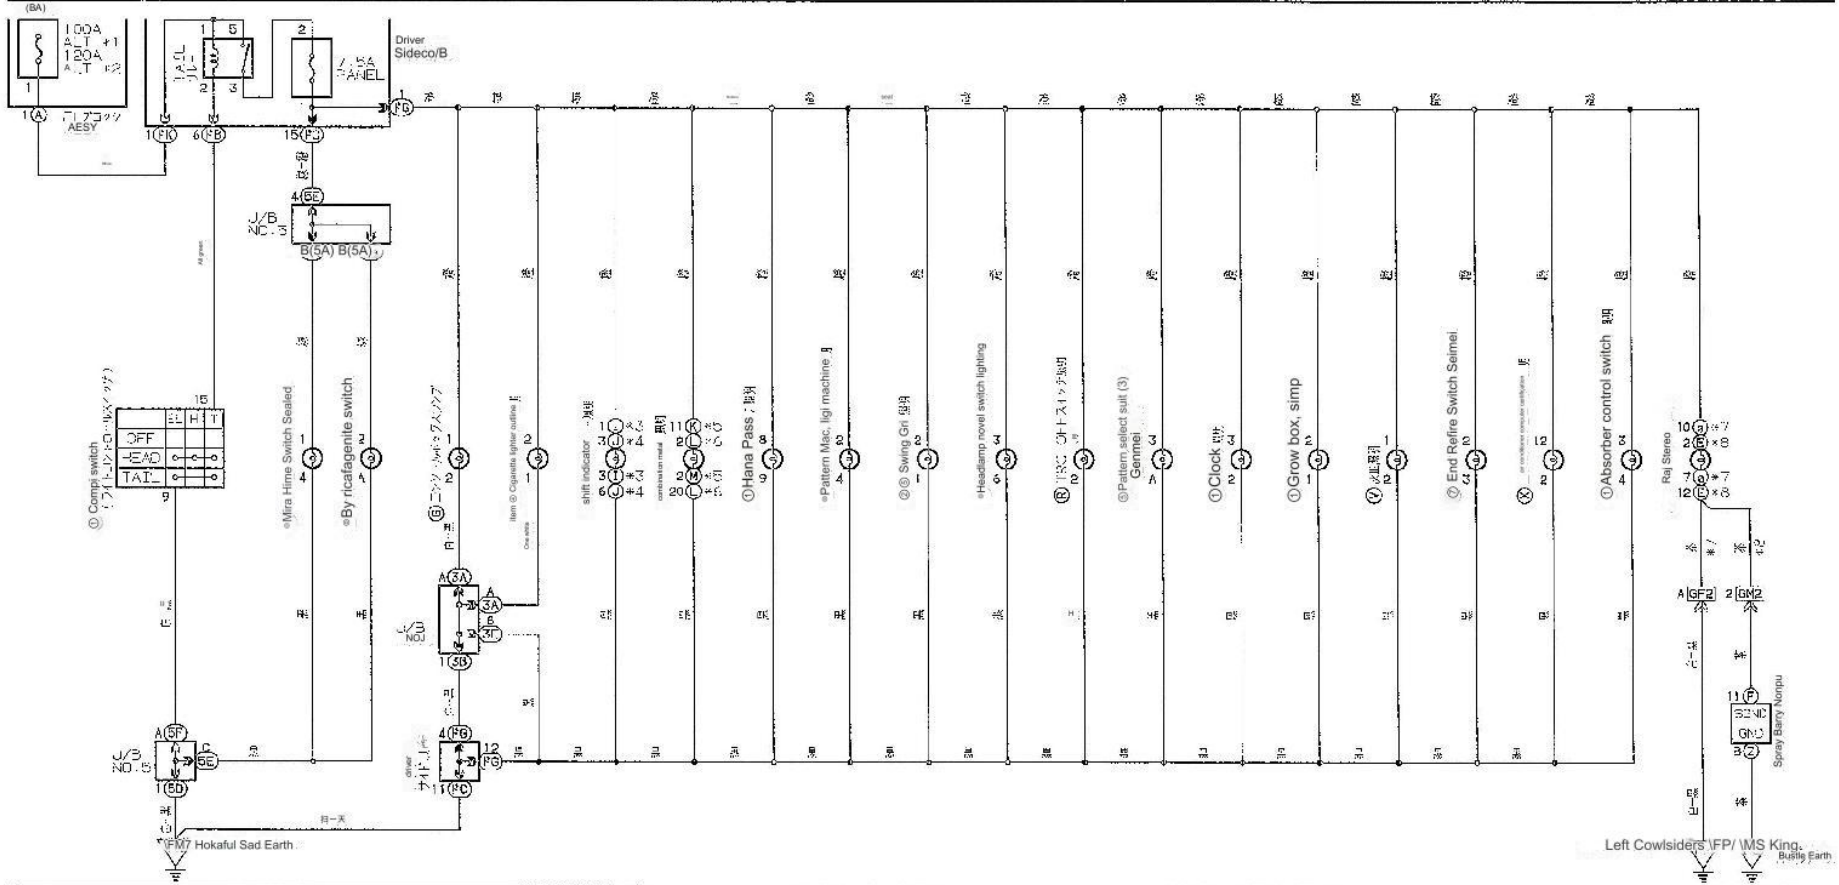


Product number 67476



fog lamp

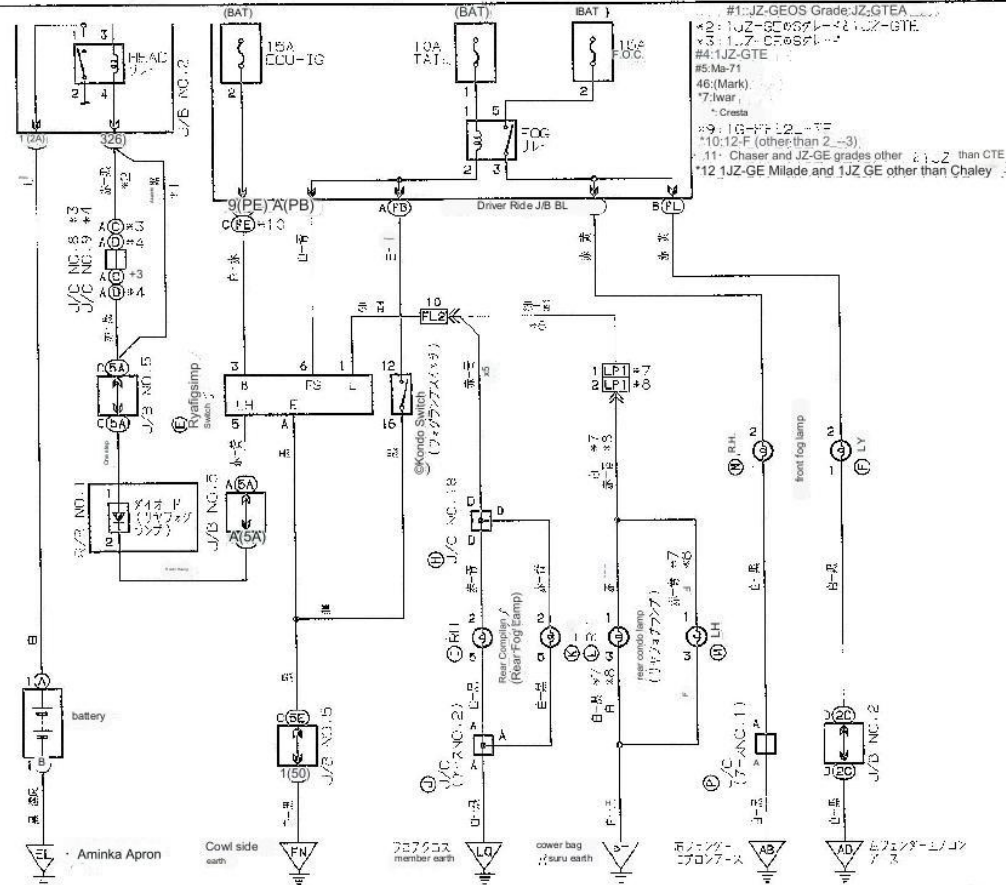





Turn signals & hazards

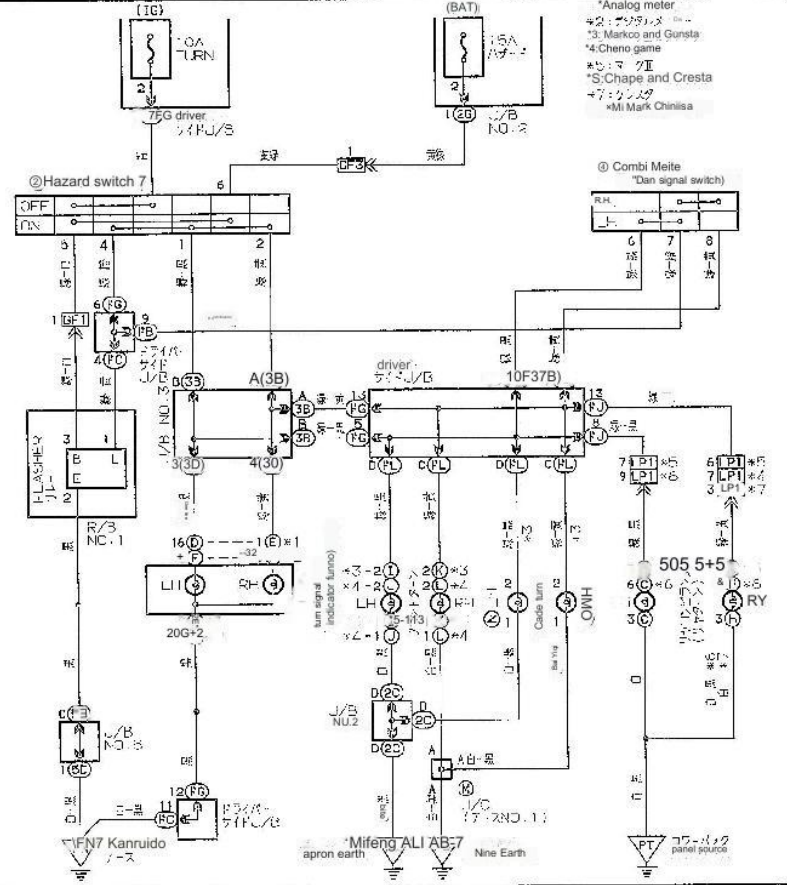

- A4C
- C1
- 4
- 4
- 4
- A35 #7
- A54 #12
- F22
- White L-12
- L21
- L23
- L9
- L2
- P3
- P1
- A10 S11
- A31 S1145-12
- NA19 #7

 - Story #322
- F22
- Color #23
- LAE P1322
- C5
- REG43
- A32
- A35
- A3
- A15
- A2
- A34
- A7




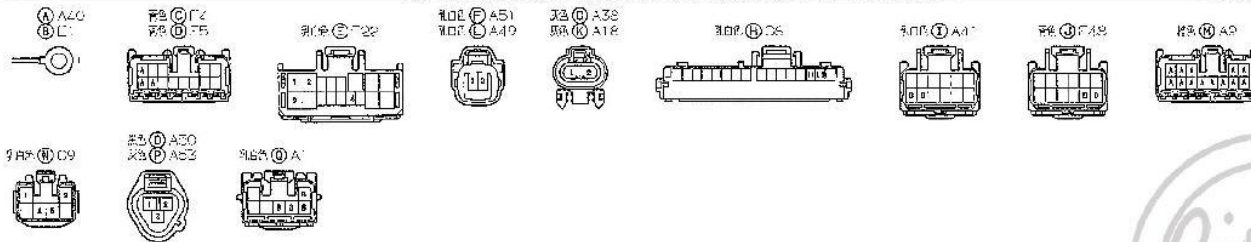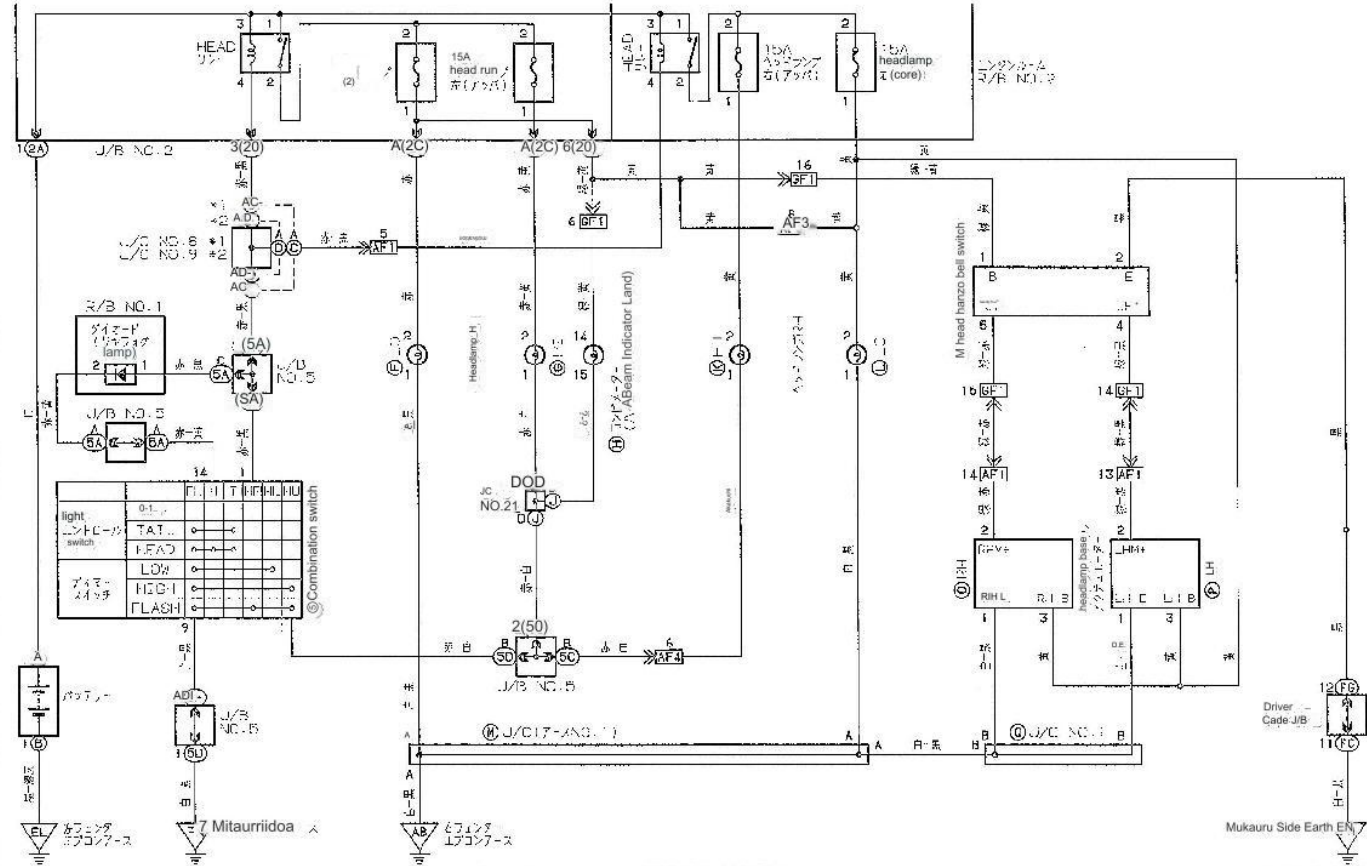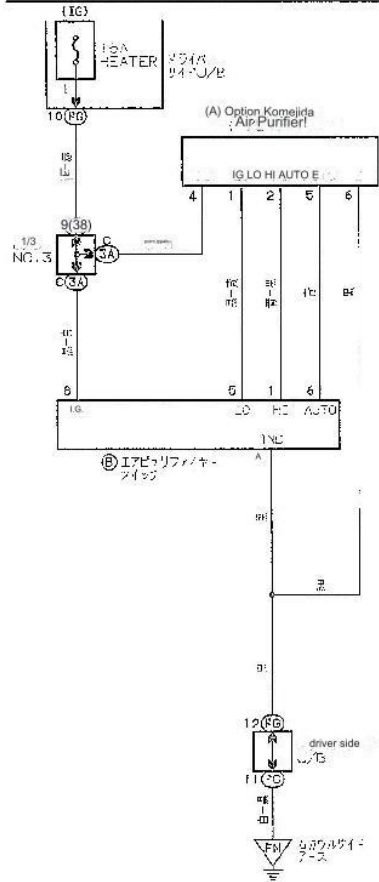

Product number 67476



fuse-load

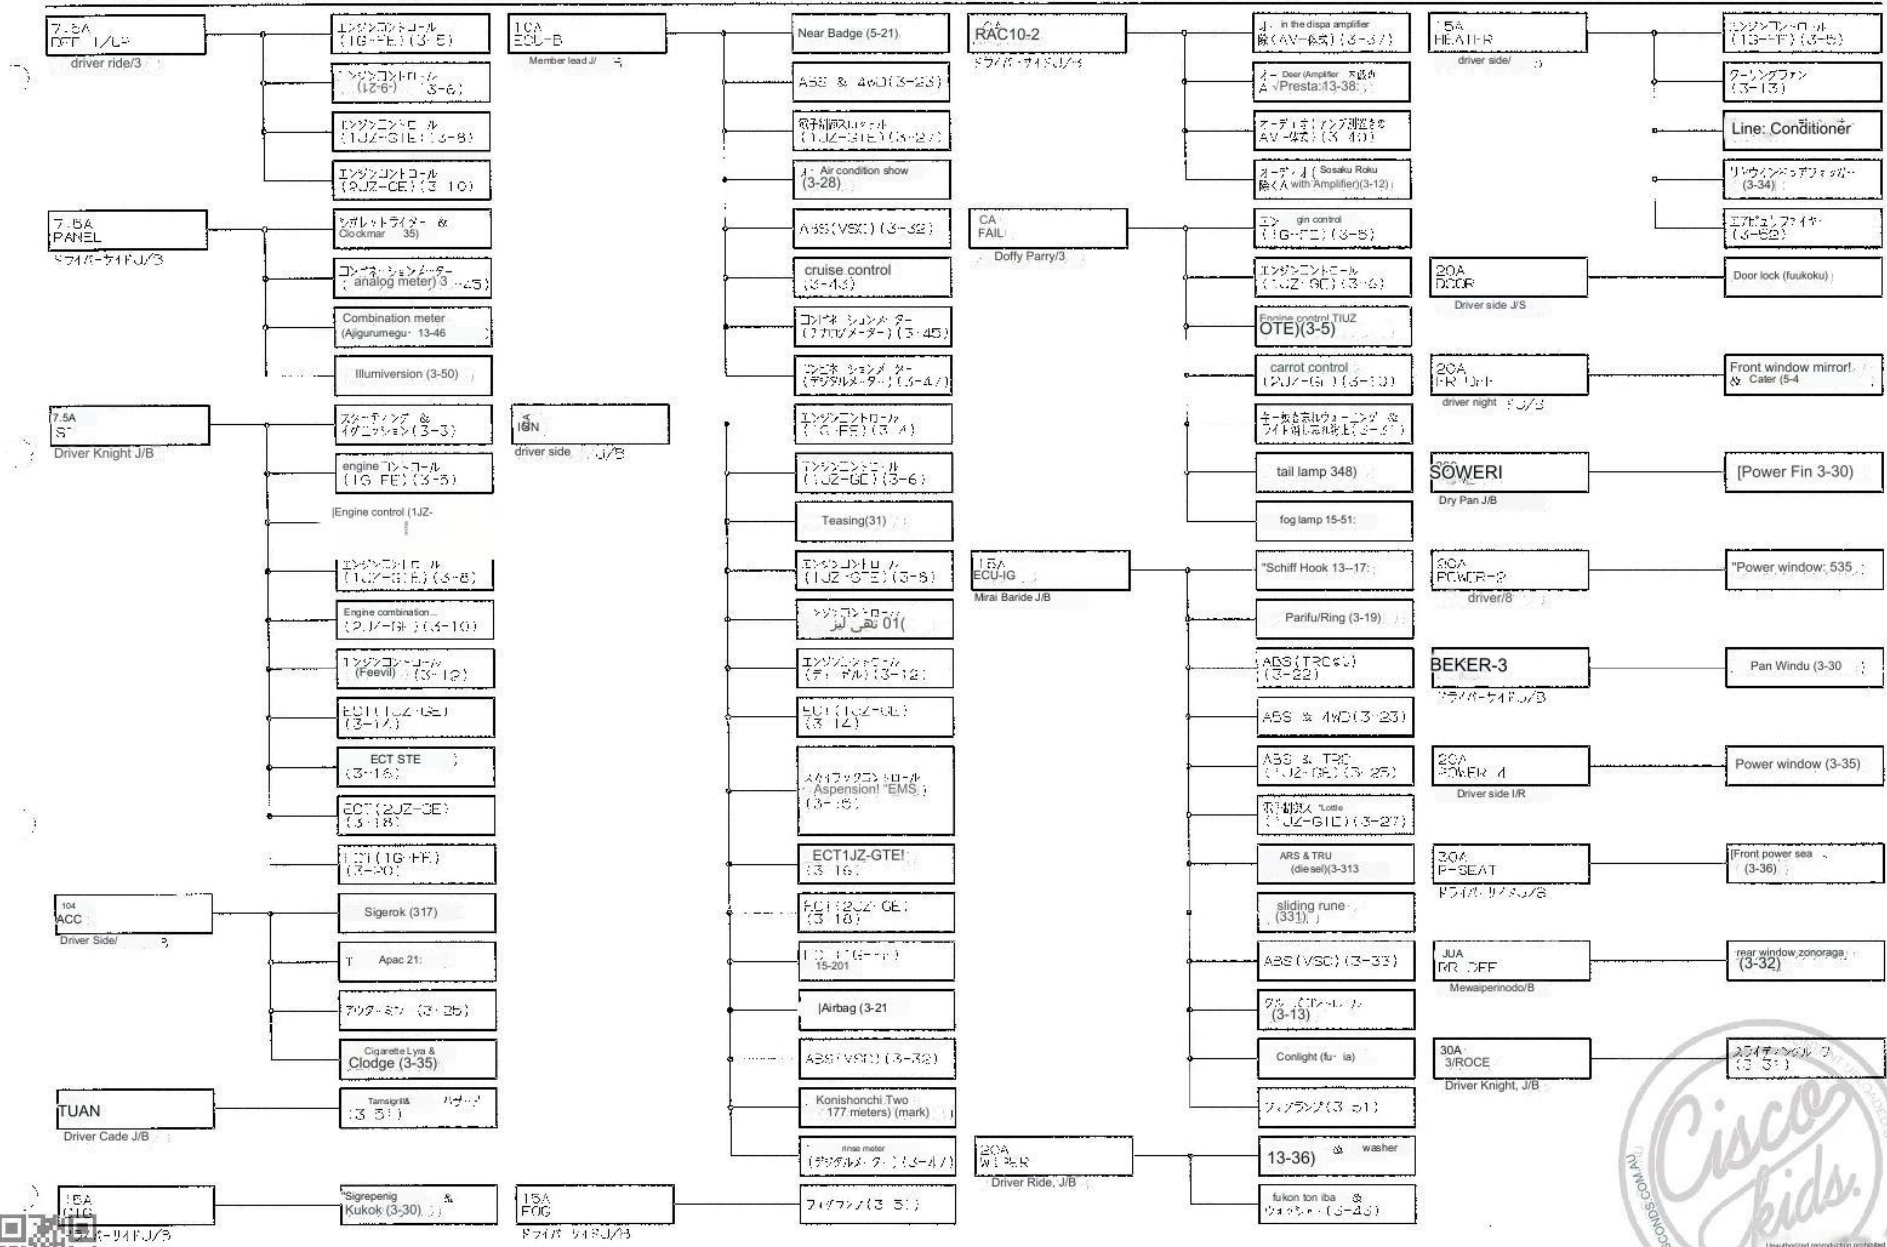


The order of food entry is different from the actual connection order.



fuse-load


*1: Excluding 1J7-CF's Dard and JZ-GTE *3:
Sorin *2: 1-GES/Seed and JZ-

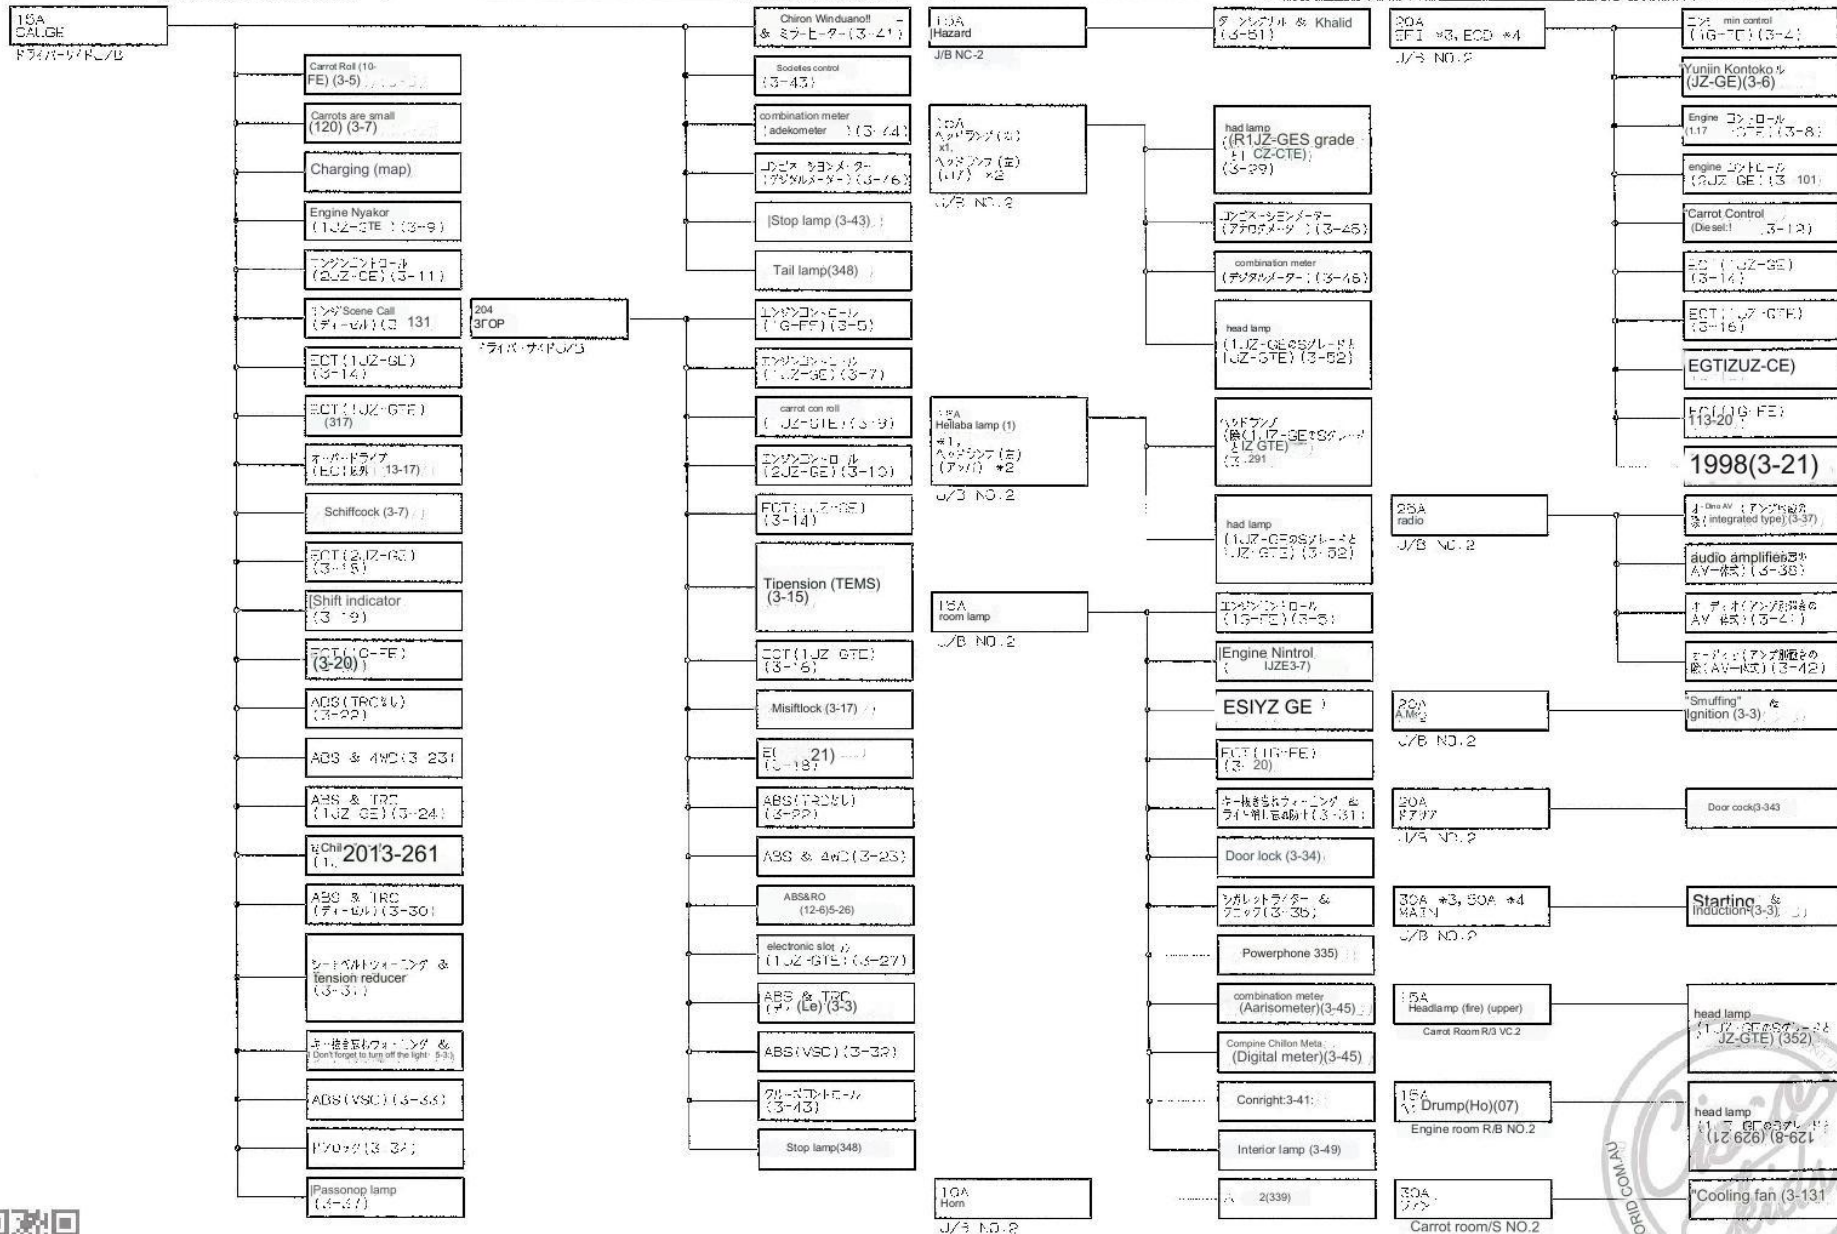

Product number 67476

*The load description order differs from the actual connection order.

Earth one load

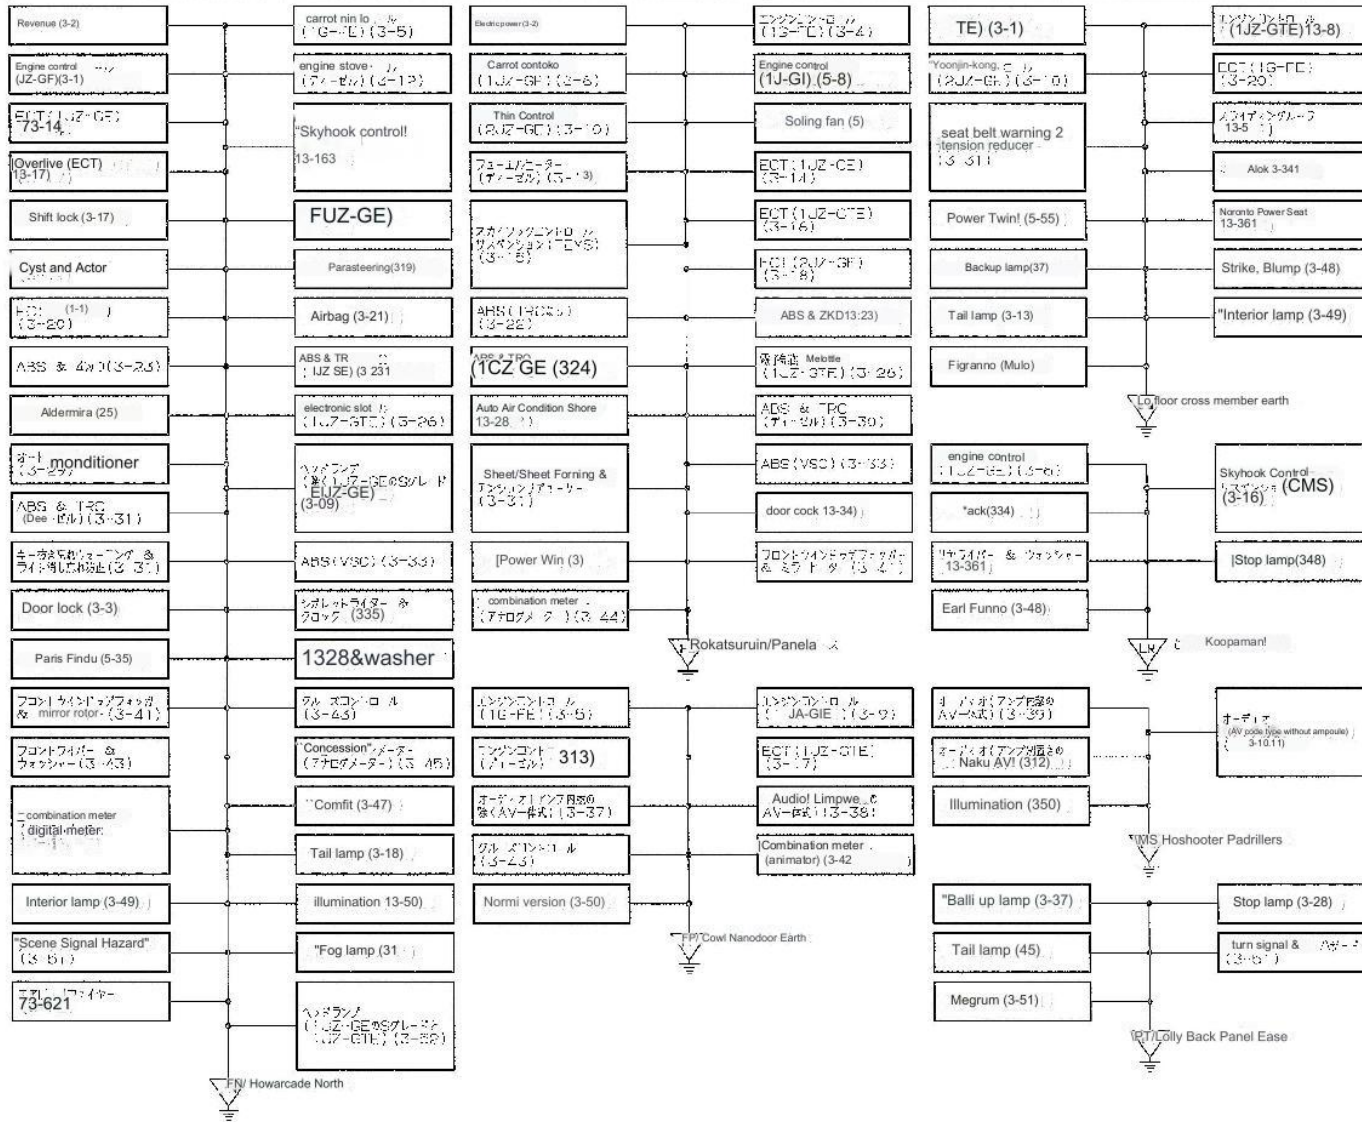

Product number 67476



The load description version is different from the actual connection request version.

4 Common connector

J / B, R / B


Driver side J/B & R/B No.1.....	4-2
Driver side J/B (inner road).....	4-3
J/B No. 2 & Engine room R/B & Engine room R/B No. 2 & 3.....	
FL block ASSY. 4-4.....	J/
B No.2 (internal circuit).....	
Engine room R/B (internal circuit).....	4-5
J / B No. 3.....	4-6
R/B No.4, J/B No.5.....	4-7 J/
B No.5 (internal circuit).....	
Engine R/3. J/C.....	4-9

wire to wire


wire to wire.....	4-9
-------------------	-----




Driver side J/B & R/B No.1 (right cowl side)

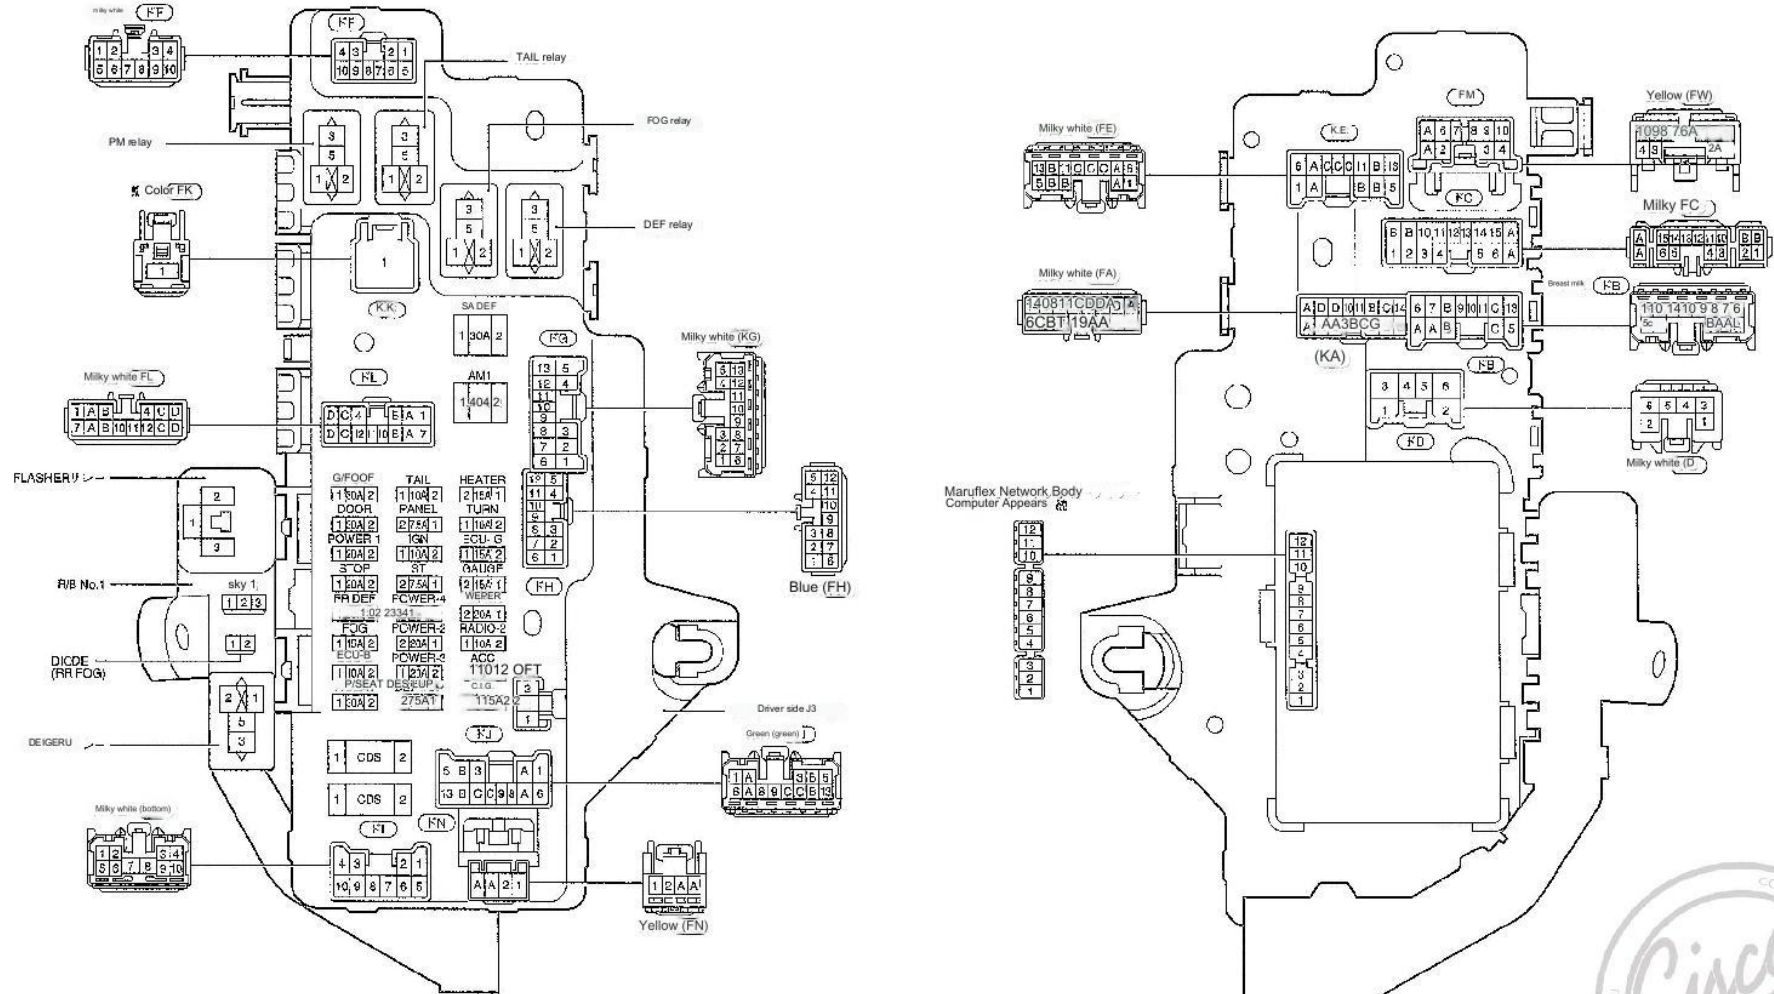


Driver side J/B (internal circuit)

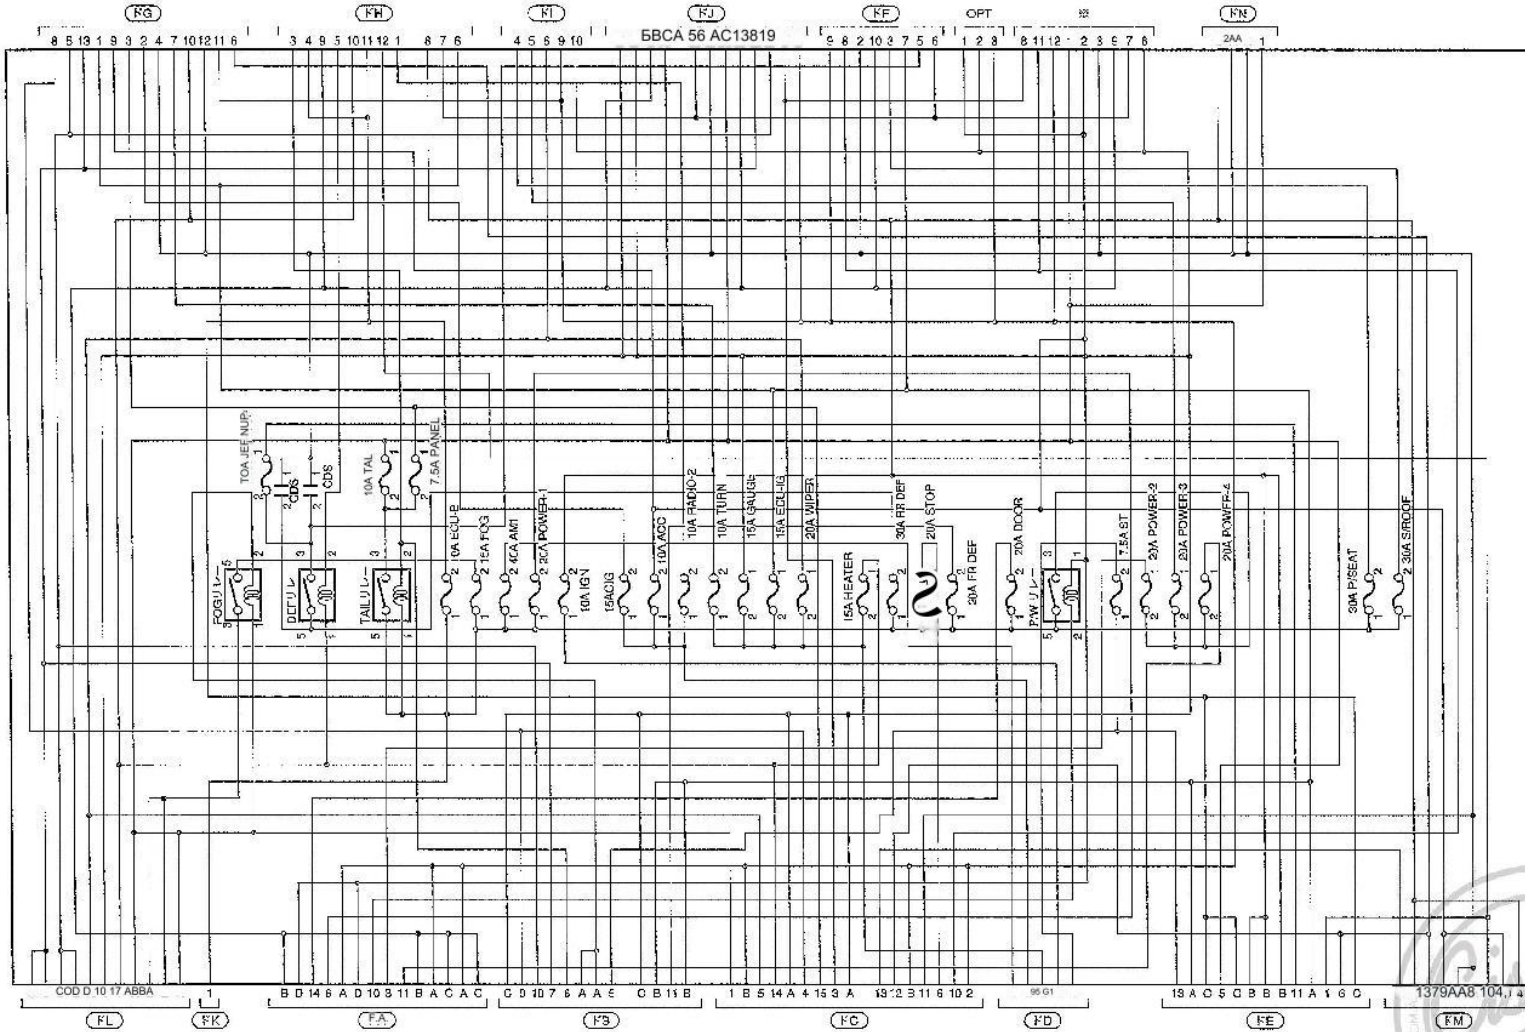

*The multi-lets network body...the computer is approx.

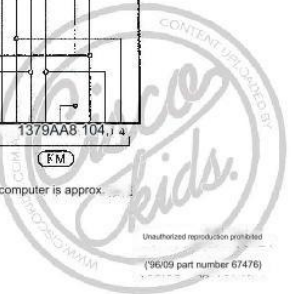


J/B No.2 (internal circuit)

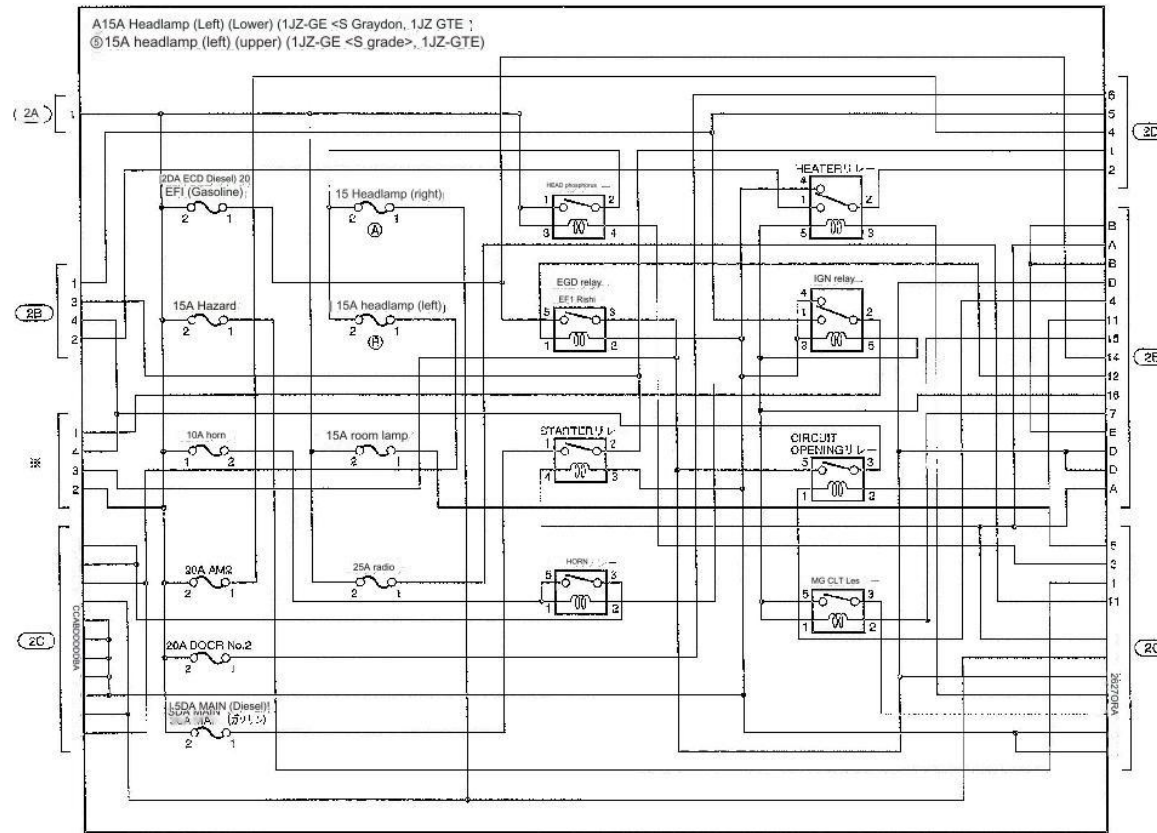

* indicates greeting to engine room RP.No.2. 5


Engine room R/B (internal circuit)

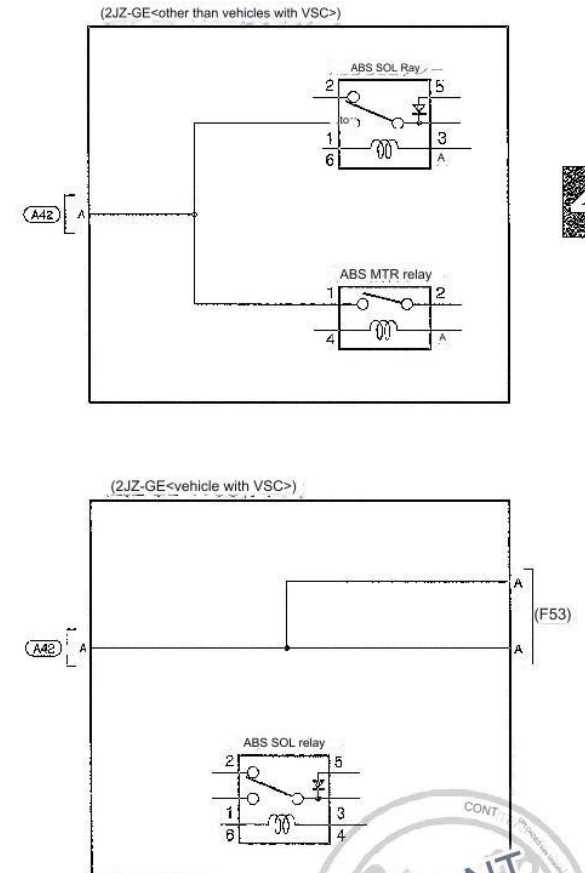


4




J/B No.3 (center of instrument panel)

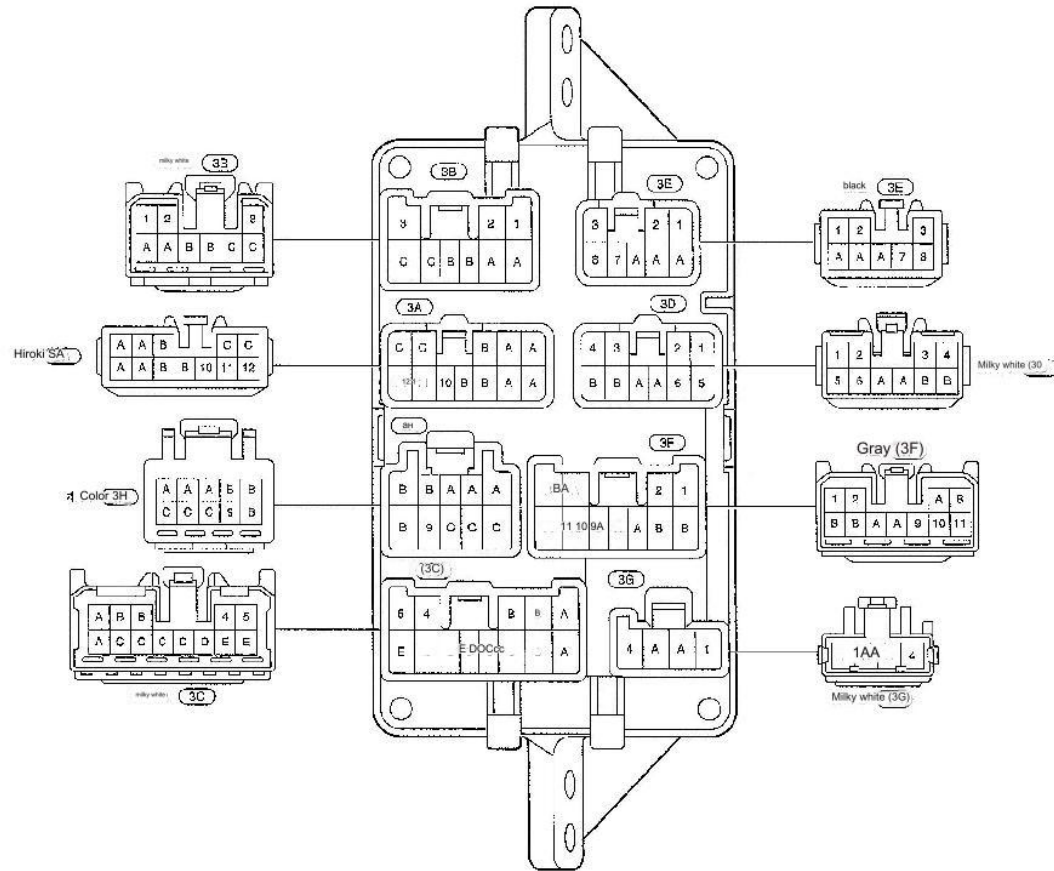


J/B No.3 (internal circuit)

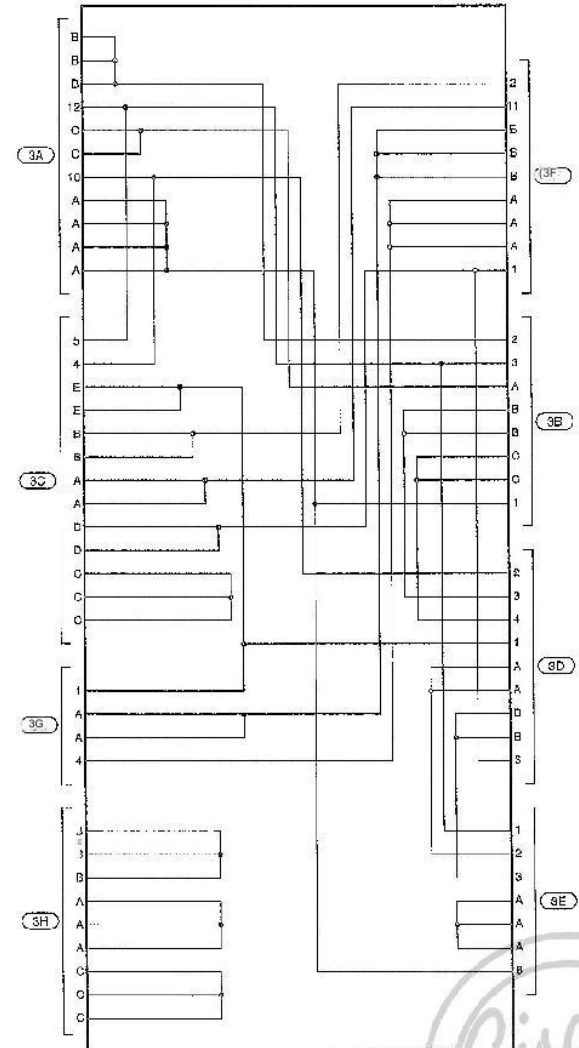



(28/09 part number 67476)

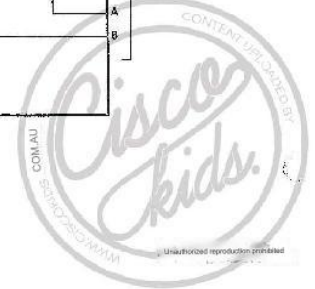


R/B No.4 (left cowl side)

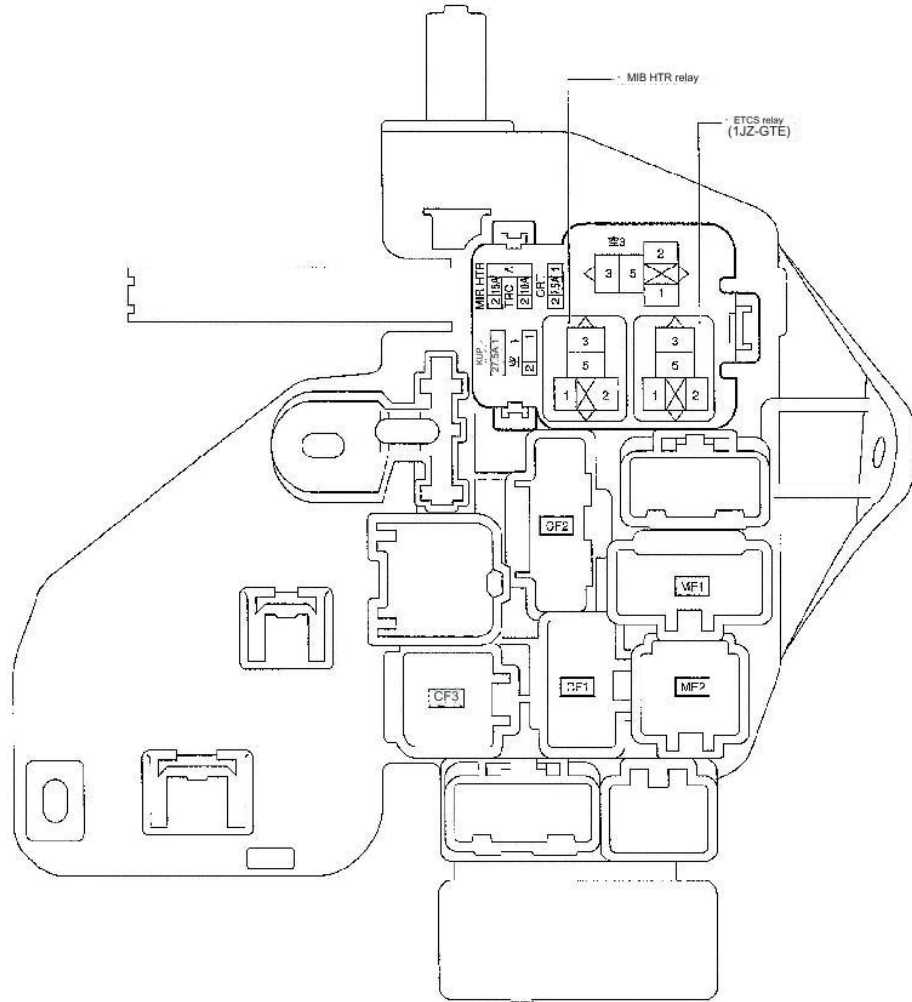


J/B No.5 (Instrument panel right side)

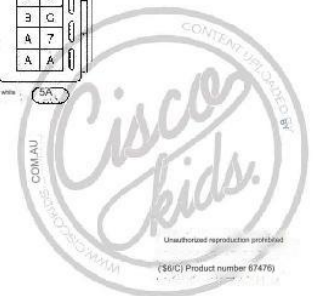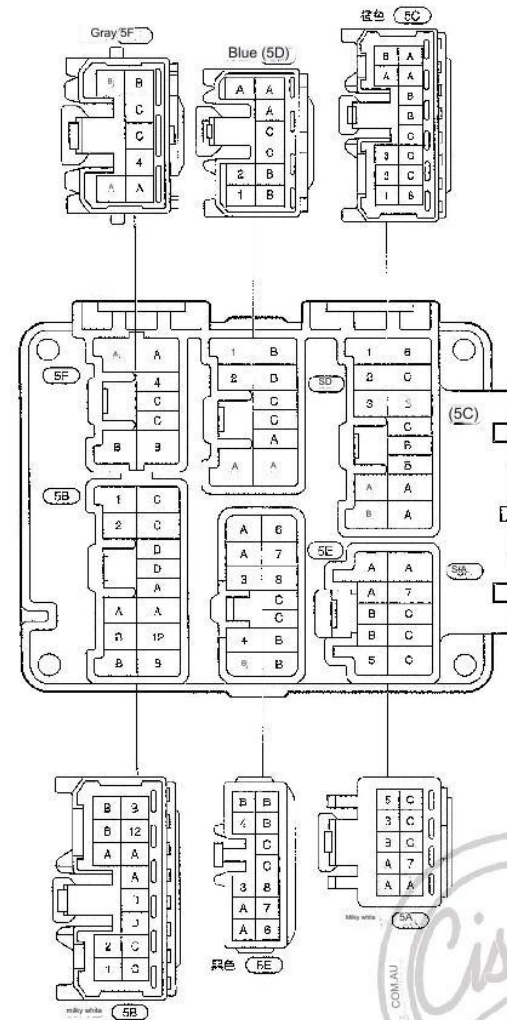

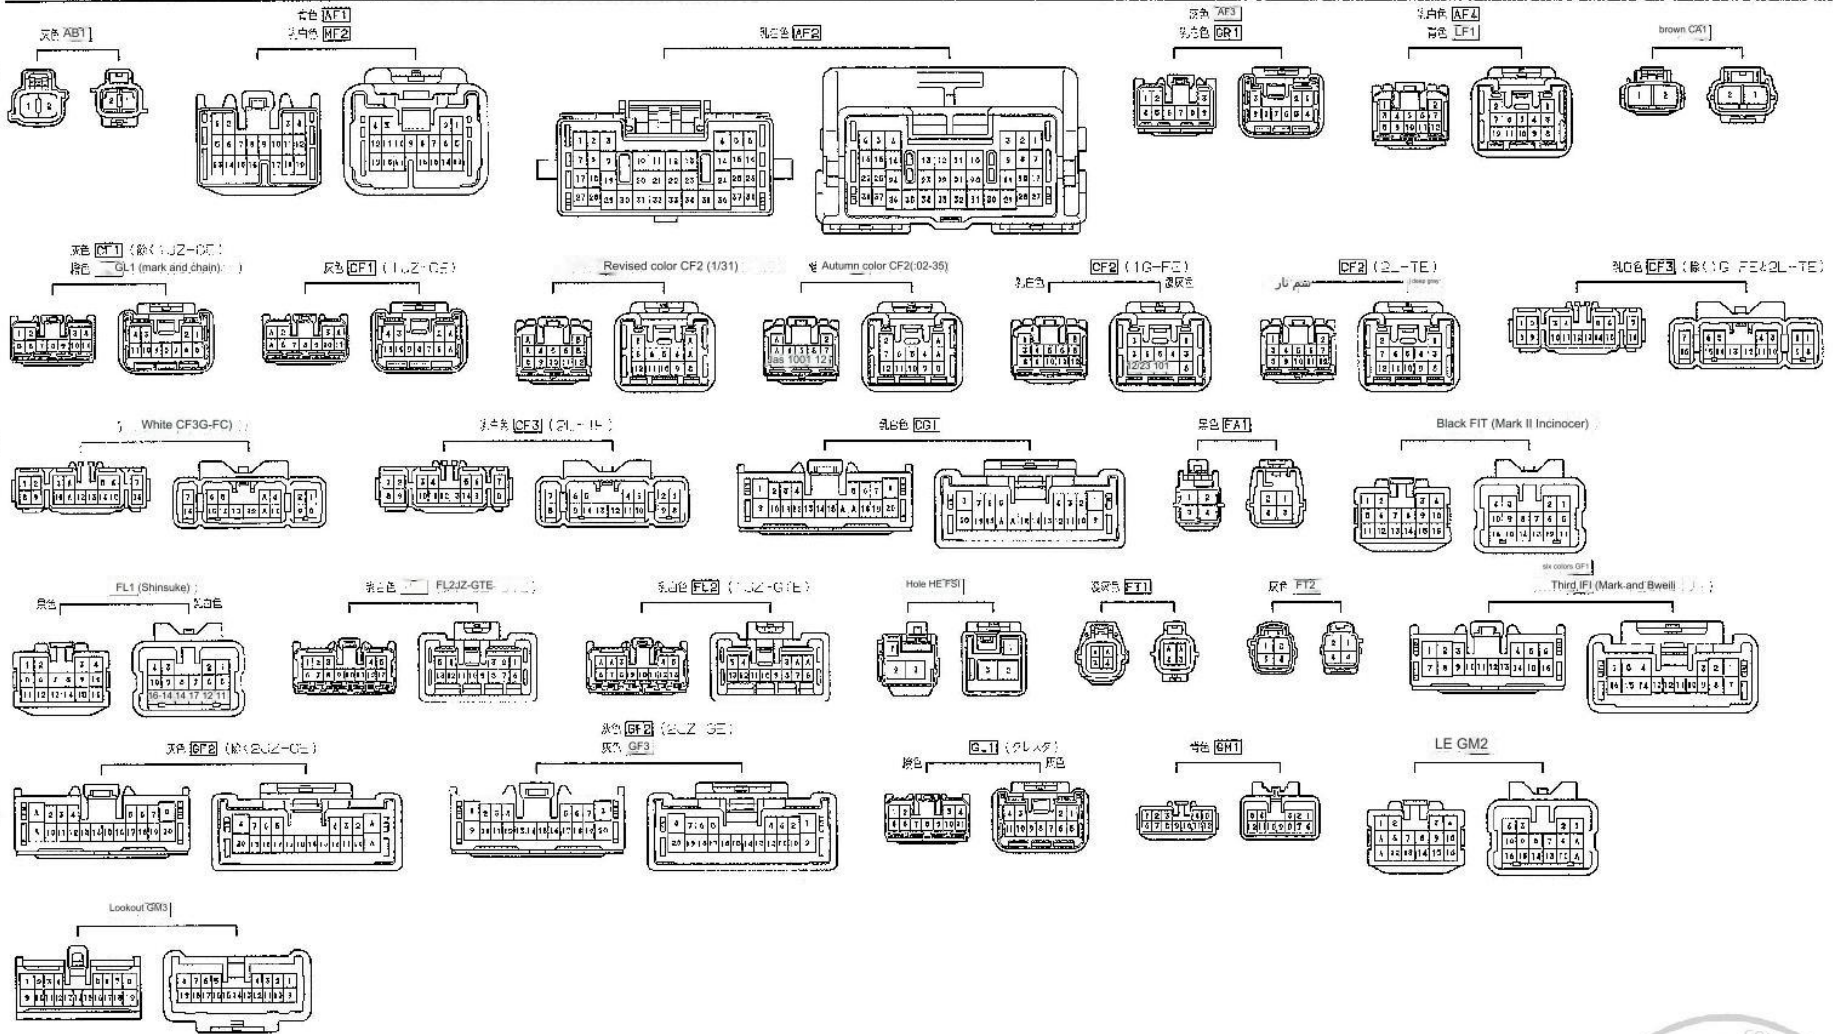

wire to wire

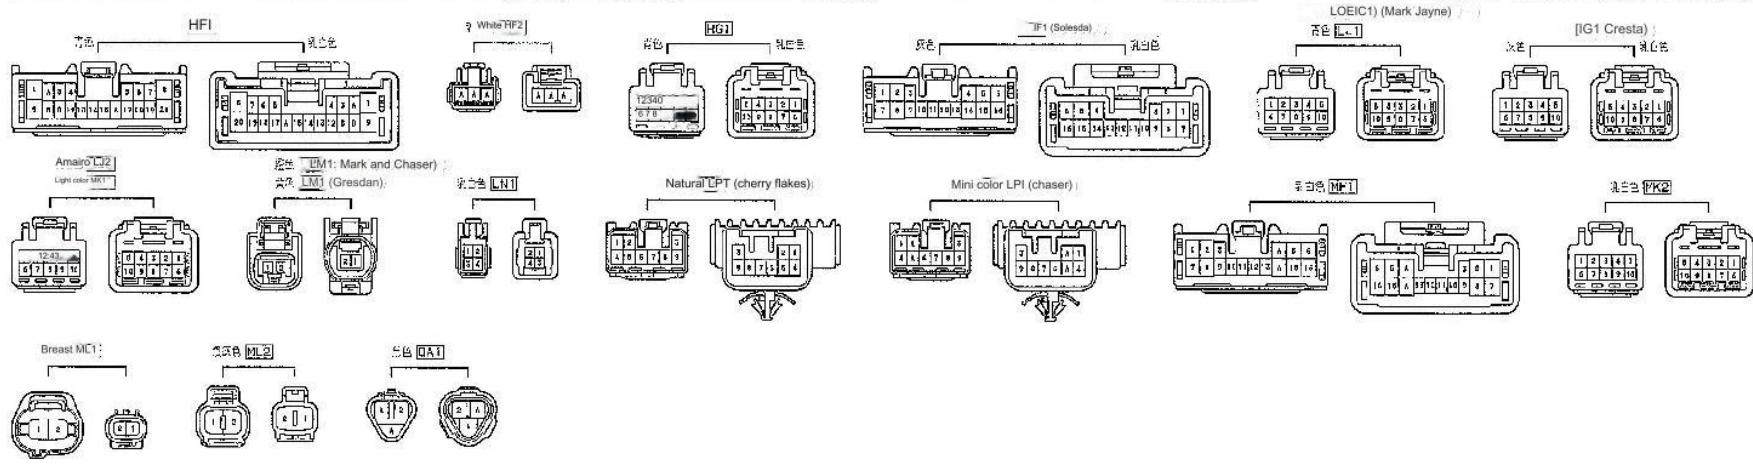

Product number 67476



部名	connector No.	Wiring diagram for each system page	wiring diagram Veggie
ABS & TRC Akram Baata	F 4 5	2-24, 26, 30	2-6, 9, 12, 13
ABS & TRC computer one	P	35-7, 24, 28, 30	2-18
ABS & TRC Computer	Y	38-7, 13, 24, 26, 30	2-18
ABS & TRC Computer	F 37	13, 15, 17, 22, 24, 26, 30, 13, 141, 40	2-18
ABS & 4WD Computer	F	503-23	2-20
AUS & 4WD Computer	F	603-7, 23, 14, 46	2-20
ASS & 4WD Computer	F 6 1	3-7, 23, 44, 47	2-20
ABS Anam Neater	A	2-4	2-12
ABS actuator	A	253-32	2-12
ABS actuator	A 2 6	3-23	2-12
ABS actuator	A	F463-22, 24, 25, 33	2-3, 6, 9, 12, 10
ABS actuator	F 6 3	3-22, 25	1-3, 6, 15
ABS actuator	F	F313-10, 15, 32, 43, 46	2-18
ABS actuator	F 3 2	3-15, 33, 47	2-18
ABS actuator	F	333-16, 10, 32, 17	2-18
ABS actuator	F 3 4	3-33	2-15
ABS actuator	F	573-22	2-20
ABS actuator	A	3583-7, 15, 43, 44, 46	2-20
ABS actuator	A	3513-22, 23, 24, 26, 30, 32	2-3, 6, 9, 12, 15
ABS actuator	A	63-22, 23, 24, 26, 30, 32	2-24
ABS actuator	M	83-22, 23, 24, 26, 30, 32	2-24
ABS actuator	L	73-22, 23, 24, 26, 30, 32	2-24
ABS actuator	F	F293-33	2-19
ABS actuator	F 5 6	3-23	2-13
ABS actuator	C	93-14, 16, 22	2-4, 7, 18
ABS actuator	C 3 2	3-16	2-10
ABS actuator	F 5 3	3-5, 7, 14, 15, 20, 21, 22, 25, 24, 43	2-18
ABS actuator	F 7	3-9, 11, 12, 25, 16, 18, 21, 22, 26, 310	2-18
ABS actuator	C	3-33, 48	2-19
ABS actuator	C	1	2-10
ABS actuator	C	C533-LG	2-7
ABS actuator	C	7 93-14	2-17
ABS actuator	C	C8U 314, 20	2-17
ABS actuator	C	C15 9	2-7
ABS actuator	A	4 3	2-3, 5, 12, 15
ABS actuator	A	4 4	2-3, 6, 9, 12, 15
ABS actuator	A	4 5	2-3, 6, 9, 12, 15
ABS actuator	A	4 6	2-3, 6, 9, 12, 15
ABS actuator	C	3 6	2-13
ABS actuator	C	4 6	2-10
ABS actuator	C	8 5	2-7
ABS actuator	C	C1023-4	2-4
ABS actuator	C	13-13, 32, 41, 52	2-13
ABS actuator	A 4 1	9-4, 6, 8, 10, 13, 28, 29, 48, 12	2-3, 6, 9, 12, 15
ABS actuator	F	483-4, 6, 8, 10, 13, 25, 29, 45, 46, 45, 53	2-3, 6, 9, 12, 15
ABS actuator	C	13-3, 4, 6, 9, 10	2-20
ABS actuator	F	40-3, 2, 3, 4, 5, 3, 10	2-20
ABS actuator	C	43-3, 4, 5, 6, 11, 12, 24, 16, 18, 20, 27, 19	2-20
ABS actuator	C	53-4, 6, 10, 12, 13, 14, 17, 18, 19, 20, 2-20	2-20
ABS actuator	C	337, 43, 44, 46	2-20
ABS actuator	C	63-4, 8, 10, 2, 13, 14, 12, 18, 19, 20, 2-20	2-20
ABS actuator	C	337, 43, 44, 46	2-20
ABS actuator	C 4 4	3-8, 16, 26	2-20
ABS actuator	C	45-3, 6, L.E.	2-20
ABS actuator	F	43-7, 8, 11, 13, 21, 22, 24, 34, 44, 46, 2 15	2-20
ABS actuator	F	3-51, 52	2-18
ABS actuator	F	33-7, 15, 15, 18, 21, 24, 26, 33, 43, 44	2-18
ABS actuator	F	3-16, 51, 52	2-20
ABS actuator	F 3 9	3-2, 4, 6, 8, 10, 13, 14, 15, 16, 18, 20	2-20
ABS actuator	F	3-22, 23, 24, 26, 26, 30, 31, 33, 34, 35	2-20
ABS actuator	F	3-11, 42, 44	2-20
ABS actuator	F 4 1	3-34	2-20
ABS actuator	F 4 2	3-42	2-20
ABS actuator	F 4 3	6-9, 10, 13, 14, 15, 24, 26, 29, 30, 2-20	2-20
ABS actuator	F	332, 86, 43, 44, 47	2-18
ABS actuator	F 5 2	3-15	2-20
ABS actuator	F 2 8	3-7, 8	2-20
ABS actuator	H	3-34, 33, 41	2-20
ABS actuator	L	L1C3-34, 48	2-24
ABS actuator	L	125-37, 45, 5	2-21
ABS actuator	L	295-31, 48	2-21
ABS actuator	C 4 C	3-38, 40, 42	5, 20

部名	connector No.	Wiring diagram for each system page	Wiring connection area page
J/C (Earth No.1)	A	25-12, 13, 15, 24, 26, 29, 30, 32, 43, 45, 2-18	2-18
J/C (Earth D.2)	J	7-46, 48, 51, 52	2-18
Konchi Direct Clutch Three Doyanser	C140 3 17	73-14, 18	2-18
3/D Direct Clutch Speed Sensor	C 5 0	3-16	2-20
Co/D main switch & shift non-indicator lighting (gate type)	G34	3-14, 16, 19, 15, 50	2-20
T/O/D main switch & shift indicator original light (A/T)	G17	3-14, 17, 13, 20, 44, 46, 0	2-19
Sensor	C 3 5	3-6, 11	2-10
Sensor	C 7 5	3-8	2-4
Sensor	C 1 0 3	3-4	2-19
TKC OFF switch VSV	G 1 4	3-25, 26, 31, 35, 30	2-18
No. (engraved crest)	C 1 3 8	3-12	2-14
VSV No. 2 (suction cover)	C144 3 12		2-14
VSV (E.C.R.)	C1433-12		2-13
VSV (Evapo)	C 1 2	3-6, 10	2-10
VSV (Nivabo)	C 4 5	3-5	2-10
VSV (Nivabo)	C 8 6	3-4	2-10
VSV (possible suction)	C 1 6	3-6, 10	2-10
VSV (suction switch)	C773-6		2-10
VSV (fuel, vertical)	C 4 8	3-8	2-10
VVT solenoid	C 2 5	3-7, 11	2-10
VVT solenoid	C	653-9	2-10
outer mirror switch	G	13-25	2-18
Absorber control actuator FH-1H (Skyhook)	F 4 7	3-15	2-12
Absorber control actuator FR, RH (Skyhook)	A 5	3-15	2-12
Absorber control actuator RRLH	M 1 0	3-15	2-2
ASOPER CONTROL ASHITUK RRRH	L	11-3-15	2-26
Absorber control computer (Skyhook)	F	637, 15, 23, 25, 32	2-18
Absorber control switch (Skyhook)	G 4 4	3-15, 47, 50	2-13
igniter	C 4 0	3-3, 6, 10, 29, 44, 46	2-13
igniter	C593 3, 9, 29, 44		2-10
igniter	C108 3, 4, 29, 44, 45		2-4
ignition key reference example	F 1 6	3-4, 6	2-18
ignition coil	C 1 0 9	3-13	2-1
ignition coil No.1	C	323-3	2-7, 13
ignition coil No.2	C	89-3	2-10
ignition coil No.3	C 3 5	3-3	2-18
ignition coil No.4	C	070-3-3	2-10
ignition coil No.5	C 3 4	3-3	2-7, 13
ignition coil No.6	C 7 1	3-3	2-10
ignition coil No.7	F 1 5	3-2, 3, 4, 5, 9, 10	2-18
ignition coil No.8	C 2 4	3-6, 13, 45	2-7, 13
ignition coil No.9	C 6 1	3-8	2-10
ignition coil No.10	C 6 5	3-9	2-110
ignition coil No.11	C 9 9	3-4	2-4
ignition coil No.12	C 2 3	3-10	2-13
ignition coil No.13	C 6 0	3-9	2-19
ignition coil No.14	C 8 3	3-6	2-7
ignition coil No.15	C 1 0 0	3-4	2-1
ignition coil No.16	C23 6, 10		2-7, 13
ignition coil No.17	C 5 9	3-9	2-13
ignition coil No.18	C101 3-4		2-4
ignition coil No.19	C 2 9	3-10	2-10
ignition coil No.20	C 4 7	3-6, 9	2-7, 10
ignition coil No.21	C913		2-4
ignition coil No.22	C15	3-6, 9, 10	2-7, 10, 13
ignition coil No.23	1923-4		2-4
ignition coil No.24	C 1 4	3-5, 9, 10	2-7, 10, 13
ignition coil No.25	C 9 3	3-4	2-4
Walker speaker one	M113	40-42	2-21
Walker Temperature Chapping Gauge	C 3 0	3-4, 46	2-7, 13
Water Temperature Chapping Gauge	C723-45		2-10
WATER TEN BARA CHAYA YANDAGE	C 9 0	3-45, 46	2-1
WATER TEN BARA CHAYANDAGE	60156	16-4	2-15
Its washer...	350 3-36, 43		2-3, 6, 9, 12, 15
Washer motor oil film removal?	F713-40		2-3, 6
air conditioner computer	G26 3-28, 34, 44, 46, 20		2-19
air conditioner computer	G 2 7	3-5, 7, 9, 10, 13, 18	2-19
Airbag LH (seat)	N	33-21	2-23
Airbag RH (seat)	L	13-21	3, 23, 26


5



Index (ordered by part name)


Part name	connector No.	Wiring diagram for each system		Wiring board diagram page
		page	page	
Airbag (advanced airbag) [bj]	F 2 3	3-21	2-13	
エアビュリソフイヤー	F 30 3-21		2-20	
air purifier switch	G333-32		2-20	
Koano_me...ta	G 1 0	3-30, 52	2-19	
Core mix damper switching support/queue sensor after evaluation	C 7 5	3-2	2-10	
YuMission Control Computer (21-Itchobon)	R 1	3-28	2-19	
GoMission Control Computer (21-TE)	G303-29		2-20	
Emission control convenience store... (21-TF) Carrot Control Conrator (1G-FE)	C 3 4	3-12, 29, 30	2-19	
Engine control computer (1)-FR Carrot control, reel control unit (JG-FH)	C 3 5	3-12, 29, 30	2-19	
Carrot control Marima talk...Kushi G-FE, 2L-T3	F 6 8	3-12, 33, 44, 51	2-19	
Carrot control computer (1G-FE, 2L-T	C85 3-3, 1, 20, 16		2-19	
Carrot control computer (1G-FE, 2L-T3)	C 8 7	3-4, 20, 29	2-19	
	F 6 4	3-4, 17, 20, 29, 41, 46	2-19	
	C	23-3, 6, 3, 10, 14, 16, 18, 24, 26, 45	2-19	
	C	13-3, 6, 3, 10, 14, 16, 13, 24, 27, 32, 46	2-19	
	F	25 3-5, 8, 20, 15, 16, 17, 18, 23, 27, 292-19		
Carrot control computer Neku1G-FE, 2L-TE	F	26 3-3, 8, 10, 14, 15, 16, 18, 22, 23, 24-19		
	F	3-26, 23, 32, 44, 4		
Carrot room R/S (ABS)	A	423-22, 23, 24, 25, 30, 32	2-3, 6, 9, 12, 15	
Engine room R/S (ABS)	F	83-32	2-12	
oil pressure switch	C	29-44-47	2-7, 13	
oil pressure switch	C	6 5	3-14	
oil pressure switch	C853-44, 47		2-4	
oil pressure sweep	C	103-11	2-19	
Optional connector	F	23-3	2-19	
Optional connector	F	49 3-21	2-3, 6, 9, 12, 15	
オルタネーター	A	2013-7	2-6, 9, 12, 15	
alternator	A	213-7, 44, 47	2-6, 9, 12, 15	
Or Quarter	A	5 5	3-7	
	A	563-17	2-4	
Courtesy Switch FR	M	5	3-34, 45, 46, 49	2-27
LII Courtesy Switch FRH (Mark) ChaserI	M	1 5	3-34, 45, 46, 49	2-23
Courtesy switch FRRH	L	4	3-31, 31, 45, 45, 47, 49	2-23
Car Ashimup FRRH (Mark II) Chaley:	L	1313-32, 34, 45, 46, 47, 49	2-21	
Courtesy switch KK-H	M	9	3-34, 45, 46, 49	12-23
Capacity switch RR/RIL	L	83 34, 45, 46, 49	2-22	
Courtesy lamp FR, LH	I	5-49	12-23	
Courtesy lamp FR/RH (Cureresta)	H	93-19	2-23	
Katesi lamp PR, RH (...ku, icer)	I	1113-19	2-23	
cam position sensor	C	13356-11	2-7, 10, 13	
Key lock solenoid & key unlock warning switch	A	143-28	2-6, 9, 12, 15	
Key lock solenoid & key unlock warning switch	F	143-17, 31	2-18	
light sensor intake	A	58 3-12	2-15	
temperature sensor	C	41 3-5, 11	2-7, 13	
intake sensor	C	073-4	2-4	
crank position sensor	C	39 3-3, 11, 14, 18, 43	2-7, 13	
crank position sensor one	C74 32, 16		2-10	
signature sensor	C	148 3-12	2-16	
Clearance lamp LH	A	3 5	3-8	2-3, 6, 9, 12, 15
Clearance lamp	A	13-48	2-3, 6, 9, 12, 15	
RH cruise control actuator	A	4	3-23	26, 12
cruise control computer	F	1 2	3-14, 13, 32, 43, 44, 46	2-18
clock	G	2 3	3-35, 52	2-19
abox lamp	G	3113-50	2-19	
har plug	C	147 3-12	2-16	
Console box lamp	G	1 3	3-50	2-10
condenser (radio)	C	423-3	2-7, 13	
condenser (radio)	C	5 7	3-3	2-10
capacitor indicator	C	1103-3	2-1	
combination switch	F	2 0	3-26, 33	2-18
Combapction switch	F	223-29, 44, 45, 46, 47, 48, 30, 31, 32	2-18	
cockhoration switch	F	223-29, 44, 45, 46, 47, 48, 30, 31, 32	2-18	
Congonation Meter (Pri-Huff)	C	4	3-5, 7, 9, 13, 15, 17, 23, 22, 23, 24, 25 2-19	
	C	3-30, 41, 48, 4	3-30, 41, 48, 4	
Combination... (antalg)	C	53-3, 5, 7, 9, 13, 15, 17, 19, 20, 22, 23 2-19		
	C	3-24, 25, 30, 31, 45, 44, 48 30, 3		
Combination meter... (Ar/Cog)	C	6 3-5, 7, 9, 13, 15, 27, 19, 20, 22, 23, 24 2-19		
	C	3-26, 20, 30, 31, 34, 39, 41, 43, 44, 56		
	C	3-51, 52		
Combination maker (Tsunakoji)	C	79-5, 7, 9, 21, 44	2-19	

Part name	connector No.	Wiring diagram for each system		Wiring board diagram page
		page	page	
Combination meter (dgital)	G413-5, 7, 11, 15, 22, 24, 29 31, 33, 43		2-9	
3-46, 48				
Ninjasion meter (dgital)	C42 3-7	15, 19, 20, 21, 24, 33, 46, 48, 40	2-19	
3-51				
Nimbination meter (Agital)		1363 3-3, 5, 7, 11, 15, 19, 20, 22, 31, 33 2-19		
3-34, 39, 41, 43, 48, 50, 51, 52				
Nymphish Scary	A	23-47	2-18	
Side air badge sensor LH	M	74-21	2-29	
Side airbag sensor RH	C	5 13-21, 45, 46	2-23	
Side turn LH (Mark II Cresta)	A	343-51	2-3, 3, 9, 12, 15	
Side Turn & I1 (Shahresta)	A	713-52	2, 3, 5, 9, 12, 15	
Saascottor Valve Motor...	C	3 7	3-25, 33	2-7, 13
523-27	C		2-10	
Saascottle position sensor	C	35 3-6, 11, 14, 17, 24, 28	2-7, 13	
Subboot position sensor...	C	67 3-8, 27	2-10	
cigarette lighter	G	203-35	2-19	
Cigarette lighter lighting	G	293-50	2-19	
Shift cock control type AT)	G	0363-14, 16, 20	2-19	
Shifa hook control straight type AT)	G	183-17	2-19	
Water bending switch (Rajreeta tm)	C	1	3-13	2-8, 12
水圧センサー	C	283-6, 11, 14, 18	2-7, 13	
water sensor	C	713-13	2-10	
water sensor	C	98 34, 33	2-4	
水圧センサー	C	145 3-12	2-16	
swing lock	C	363-28, 30	2-19	
starator	G	19 3-3	2-7, 10, 13	
starator	C	89 1-3	12-1	
starator	C	14613-3	2-18	
starator	C	23-3	2-4, 7, 10, 13, 16	
steering sensor	F	1 9	3-13, 23	2-15
Steering sensor (VSC) stereo power amplifier	F	7 0	3-15, 33	2-18
stereo power amplifier	M		3-40, 12, 70	2-23
Stop lamp switch	M	23-10, 43, 50	2-25	
F13 3-5, 7, 9, 10, 14, 15, 15, 17, 18, 22 23 2-20				
sliding roof control relay	C	3-25, 27, 31, 32, 43, 46	3-25	
Sliding Roof Switch Control Room Lamp	C	33-31	3-25	
Sliding Roof Switch & Map Lamp (Mark II, Chaley)	C	83-3149	2-22	
Sliding Roof Switch & Map Lamp (Mark II, Chaley)	C	23-3149	2-22	
Slide to do	33-36	2-25		
Throttle control convenience store... (1) Otsu GT3) Throttle control computer (1JZ-GT3)	C	433-9, 27	2-20	
54 3-9, 27, 44	F		2-20	
air valve motor driver	F	387-33	2-20	
throttle position sensor	C	2 2	3-11, 18	2-13
throttle position sensor	C	6 3	3-8, 15, 26	2-13
throttle position sensor	C	8 2	3-8, 11, 21	2-7
"Sukano Toppo Sonji Sensor"	C	1 0 3	3-4, 20	2-4
Throttle position sensor	C	133 13-12, 30	2-18	
Yantania bag sensor	F	273 21, 45, 46	2-19	
Center Stop Symp Indusion (Chaser)	L	2 8	3-46	2-24
Center Stop Lamp (LED) (Mark II Cresta)	L	1, 243, 48	2-24	
Monk stop lamp (with bulb)	L	153-48	2-24	
Turbo pressure sensor	C	1393-12	2-15	
Kumakontoribap	C	803-12	2-16	
Kumiya Pressure Weaning Suit	F	83-33	2-38	
Diagnosis connector	C	2 6	3-3, 11, 15, 18, 21, 33, 43	2-13
Diagnosis connector	C	533-3, 8, 10, 21, 20	2-10	
diagnosic connector	C	8 4	3-3, 7, 14, 15, 21, 52, 24, 43	2-7
diagnosic connector	C	9 7	3-3, 5, 20, 21	2-4
diagnosic connector	C	1533-12, 21, 22, 30	2-15	
Tweeter RR	I	4	3-37, 38, 40, 42	2-25
3-37, 39, 40, 12	M	3	3-37, 39, 40, 12	2-25
diesel carot revolution sensor	C	131 3-12	0-13	
Distributor	C	105 3-34	2-4	
Detection Crash Shin	F	283-34	2-13	
Telephone Subst	C	1493-12	2-15	
Maza control swig (for core escape side) (Cresta) High control swig (key oil effect) (mark, liner)	F	7	13-30	2-23
Pass control mark, F2-114	L	123-34	2-23	
Door control motor FR, RH	I	43-3	2-23	
Door control motor RR LH	H	103-30	2-23	
Door control motor RR LH	K	43-32	2-23	
Door control motor RR LH	J	43-34	2-23	
Door control receiver	L	2013-34	2-23	

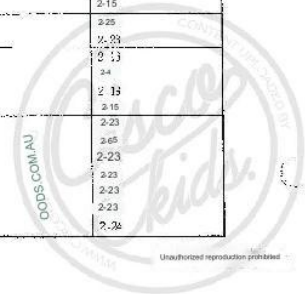

Part name	connector No.	Wiring diagram for each system page	Wiring diagram page
Small size for cutting open air damper...monitor	G338-25		2-20
navigation computer	U 85-52		2-14
navigation computer	M 133-38, 01, 44, 45		2-24
navigation computer	M 14 3-38, 41		2-24
day jumper	C 33-24		2-18
Nearshisk Toswig	C 83-3, 10, 16, 19, 32, 37, 38, 41, 43, 46		2-13
Nitru start switch	C 5 1 3-3, 8, 16, 17, 19, 37, 38, 41, 48		2-10
Ninrask Toswitch	C 7 8 3-3, 5, 6, 1, 17, 10, 20, 22, 37, 38, 41, 43, 45, 46		2-1, 7
New Mirai Start Switch	C14 1	3-3, 12, 19, 22, 30, 37, 38, 41, 46	2-16
Noise Filter (Stoppup)	L253-48		2-24
Noise filter defogger	D 6 322		2-23
Knock Sensor 5.1	C 2 9 3-6, 11		27, 13
Knock sensor...No.1	C 9 4 3-4		2-4
Knock sensor No.2	C 1 8 3-6, 2, 11		2-7, 10, 18
Non-temperature sensor	G 1 1 3-9, 11		2-10
Non-temperature sensor	L 3 3 4 6		2-23
Hazard switch	J 2 1 3-90		2-19
Vacuum indicator	F 223 44, 46, 50, 51		2-19
Vacuum sensor	P 3 13-33		2-16
Backup lamp switch	A 5 7 330, 15		2-15
Backup run/switch	C 113-48, 11, 20		2-4, 7, 13
Buckle switch LH	C 543-37		2-10
Buckle switch LHU (Il, Chu/Sr)	C 8 3 3-37		2-4
Buckle switch RH (without power seat)	M 4 331		2-23
Buckle switch KH (25) with lumbar support!	M 1 5 3-31		2-23
battery +	L 2 3-3146, 17		2-23
battery +	N 5 3-31, 44, 17		2-25
battery -	A 4 0 3-2, 3, 7, 29, 47, 48, 51, 52		2-3, 6, 9, 12, 15
vanity temp	D 1 3-3		2-4, 7, 10, 13, 16
Vanity Single	F 1 3-2, 3, 7, 29, 42, 47, 51, 52		2-4, 7, 10, 13, 16
Parking brake switch (foot operated)	O 4 3-19		2-22
Parking brake switch (lever type)	F 2 4 3-24, 30, 32, 39, 42, 45, 45		2-11
Pattern select switch (ECT)	G 1 2 3 36, 37, 41, 45		2-19
Pattern select switch (ETCS)	C 1 6 3-34, 17, 16, 20, 44, 46, 53		2-19
Power window motor SR LH	G 1 53-27, 50		2-19
Power window motor FR-RE	I 15-35		2-23
Power window motor RR, LE	II 2 3-30		2-23
Power window motor KR RE	K 1 335		2-33
Power Seat Switch	J 13-30		2-23
Power Seat Switch (Fumba Support River)	N 43-36		2-25
power spring dokamei	H 83-35		2-25
power steering computer	C 1 73-10		2-7, 11
power steering nomoid	F 1 1 3-38, 41, 45		2-13
Heater idle up switch (21-TE)	A 2, 3, 19		2-6, 9, 12
Shenda Markerran/LH (Mark II, Sylesta)	F 6 6 3-12		2-12
Fender marker lamp R (Mark, Cresta)	A 3 3 3-48		2-3, 6, 9, 12, 15
Skolissen	A 8-45		2-3, 6, 9, 12, 15
Rigid Jimbara Gyammonser	L 113-41, 0 hearts		2-21
Fe Elyster	C 1 5 5 3-12		2-16
fuel filter switch	C1373-18		2-16
fuel pump	C1363-4		2-16
Funiel Pump Register	1 13 34, 6, 8, 10		2-24
Front speaker LH	A 223-8, 10		2-9, 12
front speaker right	I 33-37, 38, 40, 42		2-23
Flint Turn (Booiser)	P 43-37, 38, 10, 12		2-23
Front LH Mark II Cresque	A 3 6 3-51		2-3, 6, 9, 12, 15
Front Tan RIT (Chaser)	A 3 2 3-51		2-3, 6, 9, 12, 15
Front bar/Cheekal mester	A 1 5 3-51		2-3, 6, 9, 13, 15
Front fog lamp LE (Chaser)	A 95-51		2-3, 6, 9, 12, 15
Front fog lamp (Mark, Cresque)	N 23-35		2-25
Front figure lamp LI (Mark II, Cresta)	A 3 5 3-51		2-3, 6, 9, 12, 15
Printed fog lamp RH (Geuor)	A 3 5 3-51		2-3, 6, 12, 15
Front fog lamp H (mark) (Cresta)	A 1 9 3-51		2-3, 6, 9, 12, 15
Front fog lamp KH (Mark II, Cresta)	A 1 0 3-51		2-3, 6, 12, 15
engine room lamp & map lamp	A 4 8 3-31		2-6, 3
front wiper motor	0113-10		2-22
Brake warning relay...Pushine	A 3 3 43		2-3, 6, 9, 12, 15
level lighting switch	F 6 7 3-42		12-18
	A17 324, 26, 28, 30, 15, 16		2-5, 6, 9, 12, 15


Part name	connector No.	Wiring diagram for each system suit	Wiring diagram page
pulser motor	S 3-28		2-20
scowmer motor controller	S 2 1-28		2-30
FI Bukori Mork Controller	S 3 3-28		2-30
Pressure Switch (Niacon Cold Low Pressure Switch & Pipesin/Children's Eye Nog)	F 4 4 3-13, 28		2-6, 12
Pressure switch ("switch" for near high and low)	P 3 2 3-2		2-3, 5, 15
Headlamp LH (H)	A 3 8 3-20, 32		2-3, 5, 6, 12, 15
Headlamp (O)	A 5 1 3-52		2-9
Headlamp LH (O) (Che/Key)	A 3 9 2-29		2-3, 6, 12, 15
Headlamp LH (Mark II Kushista)	A 2 8 3-29		2-3, 6, 12, 15
Headlamp RH (II)	A 1 82-29, 52		2-3, 6, 9, 12, 15
Headlamp RH	A 192-52		2-6, 9
(O) Headlamp RT (O) (Chrinisaa)	A 1 6 3-3		2-3, 6, 12, 15
Headlamp R (Mark II)	A 3212-29		2-3, 6, 12, 15
Nostal Headlamp bell actuator LH	A 532-52		2-6, 9
Headlamp bell actuator K1J	A 503-52		2-08
headlamp sibel switch	G 93-50, 52		2-19
Horn 1, IF	A 2 7 5-39		2-3, 6, 9, 13, 15
Horn RE (Back)	A 135-39		2-3, 6, 9, 12, 15
Positive Resistance IVRP	C 1 5 1 3-12		2-16
magnet dudge	C 1 5 2 3-12		2-16
magnet clutch	A 5 9 3-62		2-15
Magnetic clutch & cock sensor	C10 4 5-38		2-4
Magnetic clutch & cock sensor	C 3 1 6-52		2-13
map lamp	C 6 4 3-28		2-10
mult AV station	O 7 3-49		2-22
mult AV station	C3882, 41, 44, 46		2-10
Multilex Network Switchtbl LH	G39 3-39, 11		2-19
Marnalec Network Switch RR LH	I 23-35		2-23
Multilex network switch 2KKH	X 36-30		2-23
Multi-Rex Network Bodelin	J 3 3-35		2-23
Multi-Rex Network Master Switch	F 13-31, 35, 4, 16		2-13
Mirror beater switch	J 1 13-34, 36, 47		2-28
Beater speed sensor (M/T)	F 103-41, 50		2-16
Meter fuseeed sensor (M/T)	C 5 3 3-9, 44		2-10
Moma Damper Switching Blade Lean Motor	C13 7 3-54		2-4
Yoyounto Sentai	R 2 3-28		2-19
License plate lamp play H (chaser)	M 1 2 3-33		2-3
License Pre-Trump RH (Chaser)	L 2 63-18		2-24
Line Spray Lamp (Mark II, Sylesta)	L 2 7 3-48		2-2
Radiator Fin Molored C. 1	P 2 7 48		2-34
Rajneeta Fan Motor No.2	A 2 9 3-13		2-9, 12
old man & spray	A 3 2 3-13		2-9
Radio & Stereo	G 2 4 3-37, 36		2-19
Radio & Stereo	G253-37, 38, 511		7-19
Luggage opener solenoid (Sylesta)	G37340, 42, 50		2-19
Luggage opener runner	L 103-36		2-21
Luggage room, lamp switch	L 19 3-34, 10		2-21
Luggage room, lamp switch (left)	L 1 7 3-19		2-21
Lap vent solenoid FR 1	L 2 2 3-34, 49		2-24
H Lap belt solenoid KH	P 4 3 49		2-24
Lumbar support/Various items	M 6 3-31		2-23
lamp feria center	L 6 3-31		2-21
recliner motor	N 7 3-36		12-35
remote control actuator LE	I 8 3-44, 47, 48		2-21
Remote Control Actuator TH & Mirror Heated	N 6 3-36		3-25
Redate Control Cushionier 3H	J 5 3-25		2-23
Remote Control Apple Aethers H & Mirror Heater RE	I 6 3-25, 41		2-23
Rear combination lamp remote	I 6 3-25		12-23
control donation lamp LH	E 7 3-25, 41		2-23
Rear combination lamp RK	L 2 3 3-37, 48, 51		2-21
Rear combination lamp RE	P 33-37, 48, 31		2-21
Riyasuka CH	L 2 1 3-37, 48, 51		2-24
rear speaker R	P 1 3-37, 48, 51		2-21
rear vertical motor	K 23-37, 38, 40, 2		2-23
Rear fog lamp switch	J 2 3-37, 38, 40, 42		2-23
Rear room lamp II	N 33-35		2-25
Rear wiper motor & relay	F 3 3-50, 51		2-25
room lamp	C 33-44		2-22
	C10349		2-22
	L 153-36		2-21
	C 313-10		2-22

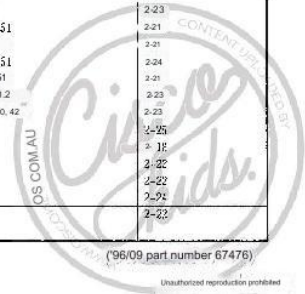

Index (in order of connector number)

connector No.	Part name	Wiring diagram for each system page	Wiring equipment page	Part No.
A 1	J/C No. 1	3-13, 32, 41, 52	12-18	11529
A 2	J/C No. 1	3-13, 15, 25, 24, 36, 29, 30, 32, 18	12-18	11542
A 3	3) Front wiper motor	3-43, 45, 46, 48, 51, 52		
A 4	cruise control actuator	3-43	12-3, 6, 9, 12, 15	11509
A 5	Absorber Control Actenuic-R- RH (Sty Hook)	3-43	2-6, 12	11150
A 6	ABS speed sensor FR R	3-43	2-6, 12	10789
A 7	Sanomi Turn RH (Mark, Cresta)	3-23, 23, 24, 26, 20, 32	2-3, 6, 9, 12, 15	11002
A 8	Fender marker lamp R (Mark, Cresta)	3-51	2-3, 6, 9, 12, 15	11149
A 9	9) Front Turn RH (Mark II, Kunsta)	3-48	2-3, 6, 9, 12, 15	11074
A 10	1) Maronto fog lamp RH (Mark II Cresta)	3-53	2-3, 6, 9, 12, 15	11019
A 11	11) Clearance lamp R	3-51	2-3, 6, 12, 15	11860
A 12	12) Headlamp RH (Mark II, Cresta)	3-48	2-3, 6, 9, 12, 13	11039
A 13	13) Homyo	3-29	2-3, 6, 12, 15	11314
A 14	14) Outside temperature sensor	3-39	2-3, 6, 9, 12, 15	10619
A 15	15) Front Turn RE (Chaser)	3-28	2-3, 6, 9, 12, 15	11070
A 16	16) Headlamp R (TO) (Chaser)	3-51	2-3, 6, 12, 15	11019
A 17	17) Headlamp RH (II)	3-53	2-3, 6, 12, 15	11880
A 18	18) Front fog lamp RH (Chaser)	3-29, 52	2-3, 6, 9, 12, 15	11859
A 19	19) Alternator	3-51	2-3, 6, 9, 12, 15	10481
A 20	20) Alternator	3-7	2-6, 9, 12, 15	-
A 21	21) Tutanator	3-7, 44, 47	2-6, 9, 12, 13	1039
A 22	22) Fuel pump register	3-8, 10	2-9, 12	11075
A 23	23) Power steering solenoid	3-19	2-6, 9, 12	11089
A 24	24) ABS actuator	3-32	2-12	10895
A 25	25) ABS actuator	3-32	2-12	11087
A 26	26) ABS actuator	3-32	2-12	11200
A 27	27) Horn H	3-39	2-3, 6, 5, 12, 15	1099
A 28	28) Had lamp H (Mark II, Cresta)	3-29	2-3, 6, 12, 15	1104
A 29	29) Radiator fan motor No.	3-13	8-9, 12	11237
A 30	30) Clearance One Pre	3-18	2-3, 6, 9, 12, 15	11059
A 31	31) Front Fog Lamp LI (Mark II, Cresta)	3-31	2-3, 6, 12, 15	11260
A 32	32) Front turn (Book II, Cresta)	3-51	2-3, 6, 9, 12, 15	1103
A 33	33) Fender marker lamp, H (Mark, Cresta)	3-48	2-3, 6, 9, 12, 15	11074
A 34	34) Side turn LH (Mark, Cresta)	3-51	2-3, 6, 9, 12, 15	1149
A 35	35) Front fog lamp LI (Bu Nir)	3-51	2-3, 6, 9, 12, 15	10481
A 36	36) Front turn L (Chaser)	3-51	2-3, 6, 9, 12, 15	11019
A 37	37) Headlamp LH (HI)	3-29, 52	2-3, 6, 9, 12, 15	11859
A 38	38) Headlamp LH (LC) (Chinisaal)	3-29	2-3, 6, 12, 15	11060
A 39	39) batteries	3-2, 3, 7, 29, 47, 48, 51, 53	2-3, 6, 12, 38	-
A 40	40) J/C Nu. 2	3-4, 6, 8, 10, 13, 28, 29, 48, 52	2-3, 6, 9, 12, 15	11661
A 41	41) A42 Carrot Room R/B (ABS)	3-22, 23, 24, 26, 30, 32	2-3, 6, 9, 12, 16	10995
A 42	42) FL (ABS & VTR)	3-12, 22, 23, 24, 26, 30, 32	2-3, 6, 9, 12, 15	-
A 43	43) FL (Orthane)	3-2, 7, 48	2-3, 6, 9, 12, 16	-
A 44	44) FL (Alter)	3-7	2-3, 5, 5, 12, 15	-
A 45	45) FL (Alter)	3-2, 35, 47, 48, 30	2-3, 6, 9, 12, 15	-
A 46	46) Brake level warning switch 18	3-24, 26, 28, 30, 45, 46	12-3, 6, 9, 12, 15	11217
A 47	47) Front fog lamp RH (Mac II, Kunsa small)	3-51	2-5, 9	10431
A 48	48) Headlamp RH (LC)	3-52	2-9	123
A 49	49) Headlamp Level Adjuster RH	3-52	2-3, 9	10916
A 50	50) Headlamp LH (LC)	3-52	2-3, 9	11257
A 51	51) Radiator fan motor No.2	3-13	2-9	11237
A 52	52) Headlamp repel actuator turn H	3-52	2-5, 9	11016
A 53	53) Front fog lamp LI (Mark II, Cresta)	3-51	2-5, 9	10431
A 54	54) Maltanator	3-7	2-4	-
A 55	55) Alternator	3-57	2-4	11345
A 56	56) Nocuum Journeying Switch	3-30, 45	2-15	11252
A 57	57) Intake sensor	3-12	2-15	11165
A 58	58) Magnetic clutch	3-52	2-15	11271
A 59	59) Water temperature switch (radiator fan)	3-13	2-5, 12	11235
B 1	J/C No. 3	3-3, 4, 3, 9, 10	2-20	11061
B 2	J/C No. 3	3-3, 6, 3, 10, 14, 16, 18, 24, 23, 2-19	3-13	11220
B 3	J/C No. 3	3-3, 6, 3, 10, 14, 16, 18, 24, 27, 12-19	13, 32, 43	1221
B 4	J/C No. 4	3-3, 4, 3, 8, 11, 12, 14, 16, 18, 202-15	3-27	11339
B 5	J/C No. 5	3-4, 6, 10, 12, 13, 14, 17, 18, 19	2-20	1166
B 6	J/C No. 5	3-20, 32, 43, 44, 46	3-4, 6, 10, 12, 13, 14, 17, 18, 19, 20	1166
B 7	J/C No. 5	3-20, 37, 43, 44, 46	3-4, 6, 10, 12, 13, 14, 17, 18, 19, 20	1166
B 8	CC/D direct clutch speed hint	3-14, 18	2-7, 13	1155

connector No.	Part name	Wiring diagram for each system page	Wiring knee Invol page	Part No.
C 8	8) Nitrinal start switch	1-1, 10, 18, 19, 32, 37, 38, 41, 432-13		11232
C 9	9) A/T speed sensor	3-46	3-14, 18, 22	24, 7, 13
C 10	10) ECT sensor	3-18	3-13	11891
C 11	11) Vacuum sensor	3-4, 8, 11, 20	2-4, 7, 13	13816
C 12	12) VSV (L/R)	3-6, 10	12-7, 13	11150
C 13	13) Cam position sensor	5-6, 6, 11	2-7, 10, 13	13947
C 14	14) Injector No.	13-6, 9, 20	2-7, 10, 13	11153
C 15	15) Injector v.5	5-6, 9, 20	2-7, 10, 13	11153
C 16	16) VSV	26, 10	2-7, 13	11149
C 17	17) Power steering pressure switch	5-7, 10	2-7, 13	10974
C 18	18) Knock sensor No.2	2-6, 8, 13	2-7, 10, 13	11065
C 19	19) Starter	2-3	2-7, 10, 13	1408
C 20	20) Injector No.4	3-10	2-03	1153
C 21	21) Injector No.3	2-6, 10	2-7, 13	1153
C 22	22) Scuttle position sensor	3-11, 18	2-13	10711
C 23	23) Injector No.2	3-10	12-13	1153
C 24	24) Injector No.1	3-6, 10, 46	2-7, 13	1153
C 25	25) VV Solenoid	3-7, 11	12-7, 13	11162
C 26	26) Diagnosis Connector	3-3, 11, 12, 18, 21, 23, 43	12-13	11095
C 27	27) Nail Pressure Sute	3-44, 47	1-7, 13	11203
C 28	28) Waterfall Hint	3-6, 11, 14, 18	2-7, 13	10737
C 29	29) Knock sensor No.1	136, 11	2-7, 13	11166
C 30	30) Water Temperature Cender Purge	3-45, 46	2-7, 13	11428
C 31	31) Magnet Coat & Thick Sensor	3-52	2-7, 13	10916
C 32	32) Ignition coil No.1	3-3	2-7, 13	10846
C 33	33) Ignition coil No.2	3-3	2-7, 13	12126
C 34	34) Ignition InnoM1.3	3-3	12-7, 13	1246
C 35	35) Pilot, position sensor	3-5, 11, 14, 17, 54, 28	12-7, 13	1071
C 36	36) SCV	3-10	3-13	1144
C 37	37) Purson Pulp Ta	13-20, 38	3-7, 13	11144
C 38	38) sensor	36, 1	27, 13	11028
C 39	39) crank position sensor	3-6, 11, 16, 18, 43	2-7, 13	10447
C 40	40) igniter	3-3, 5, 13, 29, 44, 46	3-7, 13	11153
C 41	41) Igniter	3-6, 11	2-7, 13	11163
C 42	42) Condenser (Radio)	3-3	2-7, 13	10843
C 43	43) Throttle Control Computer (JZ-GTE)	3-0, 27	2-20	11389
C 44	44) J/C No. 6	3-8, 25, 20	12-20	11661
C 45	45) J/C No. 6	3-8, 16	2-20	11661
C 46	46) ISCV	3-4	2-10	11114
C 47	47) Injector No.4	13-6, 9	2-7, 10	11153
C 48	48) VSV	3-6	2-10	11146
C 49	49) VSV (Komba/Water)	3-6	2-10	11158
C 50	50) O/U dynoct clutch speed sensor	3-16	2-10	11156
C 51	51) Toral start switch	3-3, 8, 16, 17, 19, 37, 38, 41, 45	2-10	11332
C 52	52) A/T speed tip C	3-16	3-10	11166
C 53	53) RCT solenoid	3-16	2-10	10891
C 54	54) backup lamp snock	3-27	2-10	11143
C 55	55) Meter Pete Sensor (M/T)	3-9, 01	2-10	11143
C 56	56) Diagnosis Connector	13-3, 8, 16, 21, 28	2-10	11195
C 57	57) Condenser (Radio)	3-3	2-10	10843
C 58	58) Igniter	3-3, 9, 29, 41	2-10	11653
C 59	59) Injector No.3	3-0	2-10	11153
C 60	60) Injector No.2	3-9	2-10	11153
C 61	61) Injector No.1	3-8	2-10	11156
CG2	CG2) Supplementary valve motor	3-27	2-10	11145
C 62	62) Throttle position key	13, 8, 16, 26	2-10	11261
C 63	63) Magnetic clutch lock sensor	3-28	2-10	11016
C 64	64) oil pressure switch	3-44	2-10	11353
C 65	65) Ignitor NU	3-9	2-10	11153
C 66	66) Sun throttle position sensor	3-8, 27	2-10	11711
C 67	67) VVT solenoid	3-9	2-10	11162
C 68	68) Ignition Wld	3-3	2-10	11246
C 69	69) Ignition coil No.2	3-3	2-10	11246
C 70	70) Ignition coil No.3	3-3	12-10	11246
C 71	71) Water Kunbancha Shinzo Gauge	3-45	2-10	11246
C 72	72) Water humidity sensor	3-8, 16	2-10	11246
C 73	73) crank position sensor	3-8, 16	2-10	11246
C 74	74) Caminp flow meter	3-8	2-10	11246
C 75	75) sensor	3-8	2-10	11246
C 76	76) VSV	3-8	2-10	11246

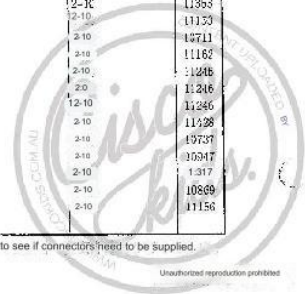

Please check the housing part number list in the WH repair manual to see if connectors need to be supplied.

Unauthorized reproduction prohibited

Index (in order of connector number)


connector-IND.	品名	Wiring diagram for each system page	Arrangement diagram page	品番
	C8 neutral star switch	3.2, 5, E, 14, 17, 19, 20, 22, 37, 24, 7		11832
	C9 ECT solenoid (2WD)	3-58, 41, 43, 45		10854
C 3 0	throttle position sensor	3-4	2-7	11261
C 3 2	Injector No.2	3-4, 20, 24	2-4, 7	11261
C 3 3	Injector No.2	3-6, 14, 24	2-7	11261
C 3 4	Injector No.2	2-4	11-53	11261
C 3 5	Injector No.2	3-3, 7, 14, 15, 22, 22, 23, 24, 43, 7		11261
C 8 5	Engine Control Lamp/Indicator (15-FE)	3-6	2-7	11745
C 8 7	Carrot control computer (1G-FE)	3-3, 4, 20, 46	2-19	11745
C 8 8	88 Backup lamp switch (M/T)	3, 4, 20, 29	2-19	11745
C 3 9	skater	3-37	2-4	11442
C 3 0	Folk Template Senna	3-3	2-4	11400
C 3 1	Injector No. a	3-46, 46	2-4	11428
C 3 2	Injector No. a	3-4	2-1	11133
C 3 3	33 Non-juctor No.6	3-4	12-4	11156
C 3 4	34: NokseV.1	3-44, 47	2-4	11563
C 9 6	VSV	3-6	2-3	11566
C 9 7	Diagnosis Connector	3-3, 5, 20, 21	2-6	11295
C 9 8	Injector No.1	3-20	12-1	10737
C 1 0 1	Injector No.2	3-4	2-4	11153
C 1 0 2	Injector No.3	3-4	2-4	11153
C 1 0 3	ISC	3-4	2-4	11334
C 1 0 4	21031 Throttle position sensor	3-4, 20	2-4	10711
C 1 0 5	Magnetic clutch	3-28	2-4	11271
C 1 0 6	Nobilator	3-3, 4	2-1	11150
C 1 0 7	sensor	3-4	2-4	11028
C 1 0 8	English language server	3-1	2-4	11163
C 1 0 9	Ignition coil	3-3, 29, 44, 40	12-4	11028
C 1 1 0	capacitors (radio)	3-3	2-4	10843
C 1 1 1	Emission control computer (21-TE)	3-12, 29, 30	2-19	11390
C 1 1 2	Emission control computer (2L-TE)	3-12, 29, 30	2-19	11391
C 1 1 3	Farnil Filter	3-0, 4	2-16	11218
C 1 1 4	Farnil Filter	3-0, 4	2-16	10887
C 1 1 5	turbo ranger sensor	3-13	2-16	11156
C 1 1 6	0/D Solenoid	3-17	2-16	10845
C 1 1 7	Neutral Scoot Switch	3-3, 12, 19, 22, 30, 37, 38, 41, 45	2-16	11392
C 1 1 8	Oil pressure switch	3-16	2-16	10739
C 1 1 9	VSV (RGR)	3-12	2-16	11132
C 1 2 0	VSV No.2 (suction aperture) C145	3-12	12-16	11149
C 1 2 1	Water temperature sensor	3-12	2-15	10737
C 1 2 2	glow plug	3-3	2-15	1154
C 1 2 3	crank position sensor	3-12	2-16	11182
C 1 2 4	Electromagnetic spin	3-12	12-16	11286
C 1 2 5	Timer control valve	3-12	2-16	11038
C 1 2 6	V&P	3-12	2-16	11278
C 1 2 7	VRT	3-12	2-16	11163
C 1 2 8	Pistle Position Sensor C154	3-12, 33	2-16	10711
C 1 2 9	Diesel Engine Revolution Fusion Sensor	3-12	2-16	11260
C 1 3 0	bulging barage sensor	3-12	2-16	10737
C 1 3 1	Water Sun Parameter Center Gauge	3-45	2-16	11428
C 1 3 2	Meta Speedmond (M/T)	3-5, 44	2-4	1149
C 1 3 3	Diagnosis: Nectar	3-12, 21, 22, 30	2-16	11195
C 1 3 4	ECTsolenoid	3-23	2-7	10919
D 1	battery	3-3	12-4, 7, 10, 13, 16	-
D 2	battery	13-3	24, 7, 10, 13, 16	-
E 1	battery	3-2, 3, 7, 29, 42, 47, 51, 52	24, 7, 10, 13, 15	-
F 1	Multitex Network Body Computer 2	3-34, 36, 44, 48	3-18	11058
F 2	Option Connector	3-21	2-18	11031
F 3	Vacuum indicator	3-33	2-18	10825
F 4	J/C No. 5	31, 8, 11, 13, 21, 22, 24, 34, 44, 2-18	11162	
F 5	J/C No. 9	3-48, 51, 52		
F 6	Absorber control consumer (Skyhook)	3-7, 15, 16, 18, 21, 24, 26, 33, 43, 2-18		11352
F 7	DLC3 (1G-FE, 1JZ-GSE)	3-44, 45, 52, 52		1408
F 8	DLC3 (1G-FE, 1JZ-GSE)	3-7, 15, 22, 25, 32	2-18	1417
F 9	DLC3 (1G-FE, 1JZ-GSE)	3-9, 11, 12, 15, 15, 18, 21, 22, 26, 16		1417
F 10	DLC3 (1G-FE, 1JZ-GSE)	3-50, 33, 43		1417

connector No.	Part name	Wiring diagram for each system page	Wiring diagram page	品番
F 3	Tire pressure warning switch	13-30	2-18	10825
F 4	Rear fog lamp switch	13-30, 51	2-18	10533
F 5	10Mirahi Tarswitch	3-41, 50	2-18	10797
F 6	Power steering computer	3-19, 44, 46	3-18	10797
F 7	Cruise control computer	3-14, 18, 32, 43, 44, 45	2-18	11391
F 8	13 Stop Thump Switch	3-5, 7, 9, 10, 14, 15, 16, 17, 192-19	11118	
F 9	14, Key gok solenoid & key unlock warning switch	13-22, 23, 25, 27, 31, 32, 43, 48		
F 10	15 Ignition switch	23-17, 31	2-18	10795
F 11	1st, ignition key lighting	3-2, 3, 4, 3, 0, 10	2-18	11613
F 12	1y Steering sensor	13-19	2-18	10065
F 13	20 Combination switch	3-15, 23	2-18	11614
F 14	21 Combination swing	3-35, 41	2-18	11591
F 15	22 Combination switch	13-39, 63	2-18	11615
F 16	23 Airbag (unryo)	3-29, 44, 45, 45, 47, 48, 50, 51, 2-18	11671	
F 17	F26 Parking brake switch (foot type)	3-53		
F 18	F25 Engine control Rune Pewlar (<1G-FE, 2L-TE)	3-21	2-18	10850
F 19	F 25 Engine control computer (1G-FE, 2L-TE)	3-24, 30, 32, 39, 41, 45, 46	2-19	11146
F 20	F 27 Center coat bag sensor	3-6, 8, 10, 14, 16, 17, 18, 23, 22, 2-19	11218	
F 21	F 29 ABS computer	13-29, 43, 44, 42		
F 22	F 31 ABS computer	3-5, 8, 10, 14, 15, 16, 18, 22, 23, 2-19	11219	
F 23	F 32 ABS computer	3-24, 25, 29, 32, 44, 46		
F 24	F 33 ABS computer	3-21, 45, 46	2-19	11681
F 25	F 34 ABS computer	3-34	2-19	11636
F 26	F35ABS & TRC Computer	3-30	2-19	11182
F 27	316 ABS & TRC Computer	3-21	2-20	10850
F 28	7 37 TABS & TRC/Plinta	3-10, 15, 32, 44, 26	11218	
F 29	F 38 Scottie Valve Knee Sea Driver	3-15, 32, +7	2-18	11219
F 30	F 40 J/C No. 3	3-10, 15, 32, 47	2-18	11220
F 31	F 41 J/C No. 1, 1	3-7, 24, 25, 30	2-18	11424
F 32	F 42 J/C No. 1, 2	3-7, 13, 24, 26, 30	2-18	11391
F 33	F 43 J/C No. 1, 3	3-13, 14, 17, 22, 24, 26, 30, 41	2-18	11390
F 34	F 44 J/C No. 1, 4	3-44, 45		
F 35	F 45 ABS & TRC actuator	3-33	2-20	11423
F 36	F 46 ABS actuator	3-2, 4, 5, 9, 10	2-20	10845
F 37	F 47 Zozohar Control Nokuna Unique Dodo LH (Skyhook)	3-20, 22, 23, 24, 26, 30, 31		
F 38	F 48 J/C No. 2	3-33, 34, 35, 41, 62, 14	2-20	11661
F 39	F 49 Optional connector	3-2, 3, 4, 5, 9, 10	2-20	11661
F 40	F 50 Washer motor	3-41	2-20	11542
F 41	F 51 5 ABS Med Domincor FKLH	3-6, 9, 10, 13, 14, 15, 24, 26, 29	2-20	11542
F 42	F 52 J/C No. 1, 4	3-30, 32, 36, 43, 44, 47		
F 43	F 53 Engine compartment R/B (ABS)	3-13, 28	2-19	10840
F 44	F54 Throttle Control Computer (1JZ-GTEI F 55)	3-24, 26, 30	26, 6, 13, 15	11608
F 45	DLC3 (1G-FE, 1JZ-GE)	3-22, 23, 24, 25, 30	2-3, 6, 9, 12, 15	11413
F 46	F 56 ABS hinge (4WD)	3-15	2-12	10789
F 47	F 57 ABS computer cable	3-4, 6, 8, 10, 13, 28, 29, 43, 49, 2-3, 6, 9, 12, 15	11661	
F 48	F 58 ABS Shooter	3-48, 52		
F 49	F 59 ABS & 1W Coconbinia	3-21	2-3, 6, 9, 12, 15	11028
F 50	F 60 ABS & 1WD Computer	3-21	2-3, 6, 9, 12, 13	10981
F 51	F 61 ABS & 4WD computer	3-22, 23, 24, 23, 30, 32	2-3, 6, 9, 12, 15	11002
F 52	F 62 condition commercial low pressure side switch) Pressure	3-15	2-18	11542
F 53	F 63 ABS actuator... Switch Air	3-32	2-18	10916
F 54	F 64 Engine control computer (1G-FE) 66	3-27, 44	2-21	11390
F 55	Heater idle up switch (2 days a day)	3-5, 7, 14, 15, 20, 21, 22, 23, 24, 2-18	11695	
F 56	367/Rake Keorning Relay	3-43		
F 57	Ni Mission Control... 2) JL-TEI	3-23	2-19	11182
F 58	F 70 Steering sensor (VSC)	3-22	2-20	11426
F 59	F 71 Washer motor (Haraon)	37, 15, 43, 44, 48	2-20	11390

5



Please check the housing part number list in the WH repair manual to see if the connector is supplied.

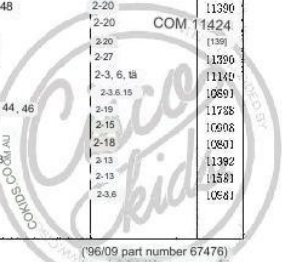

(96/09 part number 67476)

Unauthorized reproduction prohibited

Index (in order of connector number)


Connector No.	Part	Wiring diagram for each system page	配線図 page	
C	Outer mirror switch	3-25	2-18	1430
C 2	Conlight Scanner	3-47	2-18	1433
C 3	コンライト	3-28	2-15	11330
G 4	combination arch (analog)	3-3, 7, 9, 13, 15, 17, 19, 20, 21, 19		
G 5	Amblination meter analog	3-3, 23, 20, 44, 48, 49		
		3-3, 8, 7, 9, 13, 15, 17, 19, 20, 22, 219		11114
		13, 33, 25, 26, 20, 31, 48, 44, 48		
		13-30, 51		
G 6	Bi-Combination Maker Analog	3-3, 7, 9, 13, 15, 17, 19, 20, 22, 13-23, 24, 26, 29, 30, 31, 34, 39	2-19	11113
		3-41, 43, 44, 50, 51, 52		
		3-5, 7, 9, 21, 44		11116
G 7	Combination meter (analog)	3-42	2-19	10825
G 8	Headlamp level switch	3-60, 52	2-19	10797
GIC	Near vinyl, fire switch	3-50, 52	2-19	10799
G11	exhaust sensor	3-9, 11	2-19	10824
C12	Tong plate swing lever type)	335, 39, 41, 45	1087	
G18	Console box lamp	3-60	2-19	11290
G 14	TRC OFFスイッチ	3-25, 26, 31, 33, 50	2-19	11471
G15	Baku Sharekumi Switch (FTCS)	3-27, 50	2-19	11494
	C 16 Pattern select switch (ECT)	3-14, 27, 18, 20, 44, 40, 50	2-19	
C 170	Remain switch Shift indicator 確認 (straight type A/T)	3-14, 17, 18, 20, 44, 46, 50	2-19	10795
G 18	Shift lock control relay (straight type A/T)	3-17	2-19	11319
G 19	cigarette lighter lighting	13-50	2-19	11158
G20	cigarette lighter	3-35	2-19	10750
G21	hazard switch	3-50	2-19	10825
C 23	Clock	3-44, 46, 50, 51	2-19	10801
G21	Razin stereo	3-35, 50	2-19	11043
G25	Geo & Stereo	3-37, 38	2-19	10996
G 26	ユアンミンビンライ	3-37, 38, 50	2-19	10997
G 27	Yuanminbin-Lai	3-28, 34, 34, 46, 50	2-19	11290
G28/C No.5		3-5, 7, 9, 13, 15, 17, 19, 20	2-19	11021
G30	Coilover rear sensor	3-28	2-20	10807
C 31	Glove box lamp	3-28	2-20	10825
G32	Rokugaichi damper cutting servo motor	3-30	2-20	11096
G 33	Abilifer...	3-38	2-20	10808
G 34	Main switch and Shino indicator lighting (gate type A/T) Shift lock control relay (gate A/T)	3-52	2-30	13737
G35	swing grill	3-14, 16, 19, 45, 50	2-19	11493
G37	radio stereo	3-14, 16, 20	2-19	11533
G 38	Marie V Station	3-28, 50	2-19	10795
G39	Multi AV Station	3-39, 4	2-19	11251
G 40	J/C No. 2 1	3-38, 40, 42	2-20	10837
G41	combination meter (digital)	3-5, 7, 15, 22, 24, 29, 32, 33, 2-13	1014	
		3, 13, 16, 45		
	G42 combination meter (digital)	3, 7, 15, 19, 20, 21, 24, 33, 45, 48	2-19	11119
		3-49, 5		
G 43	コンビネーションメーター (デジタル)	3-3, 5, 11, 10, 19, 20, 22, 24	2-19	11332
		3-31, 33, 34, 39, 41, 43, 46, 50		
		3-51, 52		
G 44	RID Absorbent Control Switch (Shylock)	3-15, 47, 50	2-19	11306
E 1	Igex Network Master Switch	3-34, 35, 17	2-13	11459
E 2	Power Window Motored	3-37	2-23	11011
H 31	Door control switch (Keyikegekiba) (Cresta)	3-31	2-23	10735
H 4	Connect the front speakers	3-37, 38, 40, 42	2-23	10835
H 5	5C No.13 (Crestan)	3-34, 35, 41	2-23	11529
H 6	Remote Control Actugoder RH	3-35	2-23	10735
H 7	1Mote control actuator...RH Mirror heater RH	3-25, 41	2-23	11632
H 8	Tweeter	3-37, 38, 40, 42	2-23	11013
H 9	KH (Cresta)	3-49	2-23	11146
H 10	Nakontro Luota FR-RH	3-34	2-23	11150
H 11	11 Courtesy lamp JR/RH (Mark II, Chaser)	3-44	2-23	11148
H 12	Door control switch (Eleven Inma Blade) (Mark I, Chex...)	3-34	2-23	10735
I 1	Power window motor FR-1H	13-35	2-23	10860
I 2	Multitex network switch FR, li	3-35	2-23	10797
I 3	Front speaker	13, 37, 35, 40, 42	2-23	10696
I 4	フロントスピーカー	13-37, 38, 40, 62	2-23	11013
I 5	For remote control...le actuator	3-25	2-23	10796
I 6	Remote Control Tectunia LH & Mihi Beetale	3-25, 41	2-23	11632
I 7	autosharpama	3-10	2-23	11148
I 8	Door control motor FR/H	3-31	2-23	2150

connector No.	Part	Wiring diagram for each system page	Wiring box contents page	
J 1	Power window motor RRR/RH	3-35	2-23	10860
J 2	Rear speaker RH	3-37, 38, 43, 42	2-23	10835
J 3	Multi Rex Network Suit RRR-RH	3-35	2-23	10797
J 4	Odob control unit KR, RH	3-4	1-23	11510
K 1	Power window...RR/RH	3-35	2-23	10860
K 2	Rear speaker 1!	3-37, 38, 42, 42	2-23	10835
K 3	Multirex Net Quick RRLH	3-35	12-23	10797
K 4	Door Control Eater KRLH	3-34	2-23	11150
L 1	Airbag RH (Seat)	3-21	2-23, 25	11790
L 2	Buckle switch KII (no power seat!)	3-31, 44, 45	2-23	10795
L 3	Exhaust sensor	3-48	2-23	10833
L 4	Courtesy fitted RRH	3-31, 34, 45, 46, 47, 49	12-23	10871
L 5	side door bag sensor	3-21, 45, 45	2-28	11661
L 6	Huppetsenoid FR-RH	3-31	2-24	11359
L 7	ABS speed sensor RRR/RH	3, 22, 23, 24, 26, 30, 32	12-24	11060
L 8	Courtesy switch RR/RH	3-34, 45, 46, 49	2-24	10871
L 9	9/C(As No.2)	3-4, 6, 8, 13, 15, 31, 34, 35, 36	2-24	11542
L 10	J/C No. 1 7	3-37, 42, 43, 51		
L 11	Afsoba Control Actuator RR, RII 2/	33, 48	2-24	11542
L 12	C 190.18	3-19	12-24	10789
L 13	1137 Ninshi Pump	3-31, 48, 51	2-24	11542
L 14	Parasol	3-18, 8, 10	2-24	10655
L 15	Center mesh lamp (bangle) Rear	3-44, 40	2-24	10891
L 16	seat bar heater & relay	3-48	2-24	11148
L 17	Luggage room lamp	3-36	2-24	11789
L 18	Lamp Punor rear sensor	3-44, 47, 45	2-24	13803
L 19	Hug gauge opener relay	3-54, 10	2-24	11371
L 20	Door control receiver	3-31	2-21	11175
L 21	Rear combination runRH	3-37, 18, 51	2-24	11587
L 22	luggage room lamp switch	3-34, 4	2-24	10825
L 23	Rear condom lamp!	3-37, 48, 51	2-24	11587
L 24	Center Stop Lamp (LED) (Markle, Crestan)	3-48	2-24	11060
L 25	Noise filter (stop lamp)	3-48	2-24	10825
L 26	License Pre-Trump LH (Chaley)	1-18	2-20	11158
L 27	License Pre-Trump RH (G'inar)	3-18	2-20	11148
L 28	Center stop ring (LED type) (Chaser)	1-48	2-25	11000
L 29	J/C No. 1 8	3-34, 18	2-24	11502
L 30	Luggage opener solenoid crease	3-34	2-24	10855
L 31	Courtesy switch FR-RE (Mark II, Chaser)	3-31, 34, 45, 46, 47, 49	2-25	10626
M 1	stereo power amplifier	3-40, 12, 80	2-23	10818
M 2	Stenopower amplifier	3-40, 42, 50	12-23	10807
M 3	Airbag (seat)	3-21	12-23	11790
M 4	Buckle switch	13-31	1-23	10660
M 5	Courtesy switch FR-LH	3-31, 13, 16, 49	1-23	10871
M 6	Lap belt solenoid door	3-31	3-23	11309
M 7	RH Side Airbag Kinishi H	3-21	2-23	11581
M 8	ABS speed sensor/RR/LE	3-22, 23, 24, 26, 30, 32	12-21	11060
M 9	Zuan Switch, LH	3-34, 15, 16, 40	2-24	10871
M 10	Absorber Control Actuator RR LH	3-16	2-21	10796
M 11	woofer speaker	3-4, 12	2-24	10935
M 12	yawley sensor	3-30	2-34	10912
M 13	Navigation Computer	3-38, 41, 44, 45	2-24	11542
M 14	Navigation Computer	3-38, 11	2-21	10791
M 15	Buckle switch L (Mark, Tennis)	3-31	2-23	10795
M 16	Courtesy switch FRLH (mark, chinisa)	3-34, 45, 46, 49	12-23	10795
N 1	フロントドアモーター	3-36	2-25	10825
N 2	Front bar decal motor	3-36	2-25	10825
N 3	Rear perch can...ta...	3-36	2-25	10825
N 4	power seat swing	3-35	2-25	10807
N 5	Buckle switch RH (with lumbar support)	3-31, 44, 47	12-25	10858
N 6	recliner motor	3-35	2-25	10825
N 7	Lumbar Support Neeta	8-35	2-25	10825
N 8	Power seat switch (electric ramp...support) ; 1;	3-36	2-250	1000
O 1	Vanity lamp&H	3-49	2-32	11360
O 2	Sliding Roof Switch & Map Lamp (Eek II Bunixer)	3-31, 49	2-22	10387
O 3	Illiator Tsukon Roly Sea	3-31	12-22	10801
O 4	Bertie Lampre	3-18	2-20	11359
O 5	Room lamp	3-49	2-22	10935
O 6	6 noise filter...(defogger)	3-34	2-22	11259
O 7	map lamp	3-49	2-22	10936
O 8	Sliding Husuit & Fucontre Mulamp & Sop Lamp(Kunsta)	3-31, 49	2-22	11533

Please check the housing part number list in the WH repair manual to see if connectors need to be supplied.



67476 part number 67476

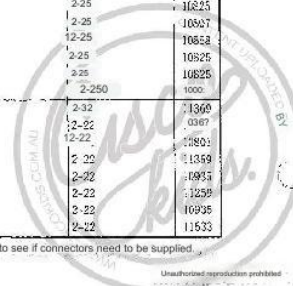

Unauthorized reproduction prohibited

Index (in order of connector number)

connector No.	部名	Wiring diagram for each system page	wiring diagram page
U 0 6	Rear room lamp LE	3-49	3-22
U 0 10	リヤルームランプJ/B	3-49	3-22
U 11	Blomfi Room Lamp & Map Lamp	3-49	3-22
P 1	Rear combination lamp	3-37,48,52	2-34
P total 2	Front plate lamp mark Cresta	3-18	2-21
P 3	Ya combination lamp LU	13-33,48,51	3-24
P 4	Stirage room lamp switch (Cresta)	3-49	2-24
R 1	Amix damper switching	3-28	2-10
R 2	mode damper switching servo motor	3-28	2-15
S 1	blower motor	3-28	2-20
S 2	Allory Motor Nintro...	3-28	2-20
S 3	Broly Motor Nintroller	3-28	2-20

connector No.	部名	Wiring diagram for each system page	Wiring diagram page
5	50 Cowl rear to 1/5 No.1	3-5,7,12,14,15,17,19,20,23,228 3-26,23,20,30,32,34,34,35,36,30 3-41,13,14,15,46,47,48,50,51,52	11,87
5	カウルワイヤ J/B No.1	5,3,1,9,10,13,14,15,16,17,18,19,28 5,20,22,23,25,27,28,31,32,33,34 3-35,35,41-13,44,45,47,48,50,52	10367
5	Akauru wire to J/B No.	3-5,7,1,12,14,15,26,21,22,23,218 3-24,26,28,29,30,32,36,43,44,47 3-39,52	

connector No.	部名	Wiring diagram for each system page	配線図表
FA	Owlwire 10 Driver Side J/B	3-5,7,14,20,31,34,35,44,45,45 3-47,49	8-20
FB	"Cowl Fire Lo Arrival Side"	3-1,6,6,2,10,12,14,10,18,15,20,12-20 3-29,43,41,44,46,48,50,51	
FC	Cowl rear driver sign/R	3-2,5,7,9,10,11,13,14,15,16,17,20 3-18,19,20,21,22,23,24,25,26,27 3-28,29,30,31,32,33,35,36,37,42 3-49,44,45,46,47,48,49,50,51,52	
YD	Kaushwanoya to driver side/do	3-2,3,6	2-26
FZ	Cowl Wanyoa Lo Driver Side/B	3-4,5,6,5,10,12,24,13,18,20,21 3-22,23,25,27,31,32,33,43,45,47 3-61	2-20
FT	Luma No.1: Driver side/3	3-31,34,49	2-20,22
FC	Non-strumnet panel wire driver side F/J/B	3-14,15,17,18,19,20,21,25,36,29,2-20 3-31,30,23,44,45,46,47,49,50,31 3-52	
FI	Instrument panel wire driver side J/L	3-7,15,21,28,29,34,37,38,40,42-20 3-14,16,46,47,49	2-20,22
FI	Pro Alinoya (K Liver)K/J/R	3-29,32,35,36,49	2-20,22
FJ	Floor Wanyoa: Driver Side J	1-20,32,84,42,43,46,47,48,49,51	2-20,22
FK	Carrot Room Main Wire Driver Side J/B	3-2,35,47,48,50	2-20
FL	Carrot Loom Main Wire to Driver Side J/B	3-7,12,20,43,48,01	2-20
FM	Cowl Wire to Driver Cad J/B	32,45,47	2-20
FN	Floor Sya to Driver...Cada J/B	3-21	2-20,22
FO	Engine room main wire lu J/B No.2	3-2,3,22,47,51,32	2-3,6,9,12,15
FP	Carrot Loom Main Wire 11 JR No.?	3-2,3,4,6,8,16,13,28	2-3,6,10,12,14
FQ	Carrot Loom Main Wire 1v J/B No.2	3-3,12,28,39,42,48,51,52	2-3,6,5,12,15
FR	*Katsuru Tweed 10 J/B No.2	3-2,3,28,34	2-3,6,9,13,15
FS	Custid LB No. 2	3-3,4,5,6,8,9,10,11,12,13,14,16 3-18,20,22,23,24,28,27,28,30,39 3-15,16	2-3,6,9,12,15
FT	Kousurya te UD No.2	3-2,4,5,6,7,8,10,12,13,14,16,18 3-20,22,23,24,25,27,28,29,30,33,1 3-34,35,37,38,41,42,45,46,47,49 3-51,52	
JA	Instrument panel 7/B No.	3-14,17,15,20,25,35,45,46,50,52,219	
JB	Instrument panel wire to B No.	3-14,17,18,20,25,35,11,45,1,472-19 13-40,50,51,82	
JC	Instrument panel wire Lo/B No.3	3-3,5,9,13,14,18,17,18,19,20,2912-19 3-37,38,41,43,44,45,46,49	
JD	10 Instrument panel rinoke Lo 1/8 No.3	3-3,5,7,9,11,13,14,17,18,20,22,129 3-23,24,25,30,31,33,37,43,44,46 3-48,51	
JE	Instrument panel wire to 1/3 No.3	3-14,15,17,18,25,14,46,47	2-9
JF	Instrument panel width to 1/8 No.3	3-5,9,13,14,15,17,18,25,24 3-34,38,41,43,44,45,46	2-9
JG	80 Instrument panel Wanyoa co J/B No.3	3-38,39,41,44,45	2-19
JH	Instrument Panel Wanyoya to J/B No.5	3-2	2-9
JA	Cowl wire: 0/B No.5	3-29,47,48,50,52,52	28
JB	Gatsuru wire 0/B No.5	3-12,19,22,23,24,25,26,27,30,31,2-18 3-32,33,43,44,45,16,47	
5	5 Cowl wire 10 JR No.5	3-5,7,8,9,10,11,12,13,14,15,16,2-18 3-18,20,21,22,23,24,26,29,30,33 3-36,43,44,45,40,32	

connector No.	部名	Wiring diagram for each system page	配線図表
FA1	Engine room main wire "Engine room Tsuneya No.2	3-13	2-9,12
FA2	Engine room main wire is cowl wire	3-12,112,13,52	2-15
AF2	Engine room main rear (cowl ear)	3-7,13,15,19,28,23,32,53,41,43,2-18 3-11	
AF3	Engine room main rear LU cowl wire	3-8,12,13,15,30,41,45,32	2-19
AF4	Engine room main wire to cowl fly	3-7,29,22,23,24,23,28,29,30,4312-13 3-44,45,43,47,52	
CA1	Engine wire to engine room main wire	1-2,32	2-10
CF1	Engine wire to cowl wing	3-8,9,11,12,13,16,18,23,24,25,200 3-23,30,32,33,35,41	2-10
CF2	Conson Wight LC Cowl Wire	3-2,4,5,8,8,9,10,11,12,23,14,16,20 3-17,18,19,20,22,23,24,26,27,28 3-30,33,37,13,4,45,46	
CF3	Engine wire to cowl rear	3-24,5,6,7,8,10,11,12,13,14,15,20 3-25,15,20,21,22,23,24,26,23,30 3-32,33,43	
CG1	Engine wire to instrument panel rear	3-13,5,7,9,11,13,14,16,17,18,19,12-19 13,23,28,37,35,41,44,45,46,47	
FA1	Kariya LV Ranging Ha Main Wire	3-37	2-12
FL1	Kariya to Floor Wire	13-13,22,24,24,26,30,32,54,33 3-4,6,8,10,34,35,18,51	2-18,22
FL2	Cowl wire to floor sawyer	3-21	2-20
FSL	Cowl wire of cooler earring	3-21	2-20
FT1	harness to engine room relay block ASSY	3-32	2-13
FT2	Cowl rear Lo engine room Lining block ASSY	3-32	2-13
GF1	Instrument panel wire LU cowl wire	3-3,7,9,11,13,14,17,18,20,22,23-2,15 3-20,25,26,29,30,31,33,43,44,45 3-06,47,48,51,52	
GF2	Instrument panel screwdriver 10 Cowl Wire	2-5,7,9,10,11,18,14,15,16,17,18,2-13 3-19,20,26,29,34,37,38,39,41,43 3-44,5,16,17,00	
GF3	Instrument panel rear LU cowl fire	3-13,17,22,23,24,25,26,27,28,30,2,20,22 3-31,33,37,38,42,42,13,16	
GL1	Instrument panel rear to floor rear	1-47,31	
GM1	Instrument panel wire in Flobunlyadro 2	3-31,37,35,10,12,44,45,47,25,2-13,22 3-38,40,42	2-19,22
GM2	Instrument Panel Wire to Floriad, 2	3-40,41,12,10	2-22,22
GM3	Instrument panel Maya to Floriad, 2	3-38,39,40,41,44,40	2-23,22
GR1	Instrument Panel Wire to Kerall Earring Harness No.1	3-28	2-21
HFI	Front door RIU LU canal rig	3-338,30,41,49	2-13,22
HHF?	Front door wire RIL to Wolf	3-81	2-13,22
HG1	Front dryer KH to instrument panel wire	3-25,34,37,38,40,42,47	2-18,22
IF1	Fend dop wire II to cowl wire	3-34,35,41,49	2-23,22
IF2	Control door wire 11 to instrument panel wire	3-25,37,38,10,12	2-23,22
IF3	fan wire in cowl wire	3-21,45,47	2-23,22
IJ1	Fairwire (u Rear door Anya Xc.1	3-34,35,37,38,42,42	2-23
IJ2	Fairwights co rear door wire NC.1	3-34,35,37,38,46	2-23
IMI	Flare wire "Floor Reitz No.2	3-23	2-23
IN1	Floor wire co sheet wire No.1	3-21	2-21
IN2	What is LPI floor seat? Drink panel (luggage compartment door) Wire No.1	3-31,36,44,17 3-37,42,48,49,51	2-23,25
MF1	Floor Wight No.2 L out wire	3-15,22,23,34,28,360,31,32,34,35,2-20,22 3-37,38,45,46,44	2-24
MF2	Floor light No.2 to cowl wire	3-15,83	2-20,22
MJ1	MK1 Floor Rear No.2 to Rear Door Wide.2	3-34,35,37,38,40,42	2-23
MJ2	MK2 Floor/Ritsu No.2 to Rear Door Wide.2	3-31,35,37,48,43,42	2-23
ML1	Floyd 21 (Antewire)	3-21	2-21
ML2	Furia Wireba O 2 L Freon Wide	3-21	2-21
QA	Front Win doubufuga switch wire 1a carrot roux	3-11	2-3,6,9,12,15



Please check the housing part number list in the WH repair manual to check if connector needs to be replenished.

(96/09 part number 67476)