

## 4 Common connector

### J / B, R / B


Driver side J/B & R/B No.1.....	4-2
Driver side J/B (inner road).....	4-3
J/B No. 2 & Engine room R/B & Engine room R/B No. 2 &.....	
FL block ASSY. 4-4.....	J/
B No.2 (internal circuit).....	
Engine room R/B (internal circuit).....	4-5
J / B No. 3.....	4-6
R/B No.4, J/B No.5.....	4-7 J/
B No.5 (internal circuit).....	
Engine R/3. J/C.....	4-9

wire to wire


wire to wire.....	4-9
-------------------	-----




Driver side J/B & R/B No.1 (right cowl side)

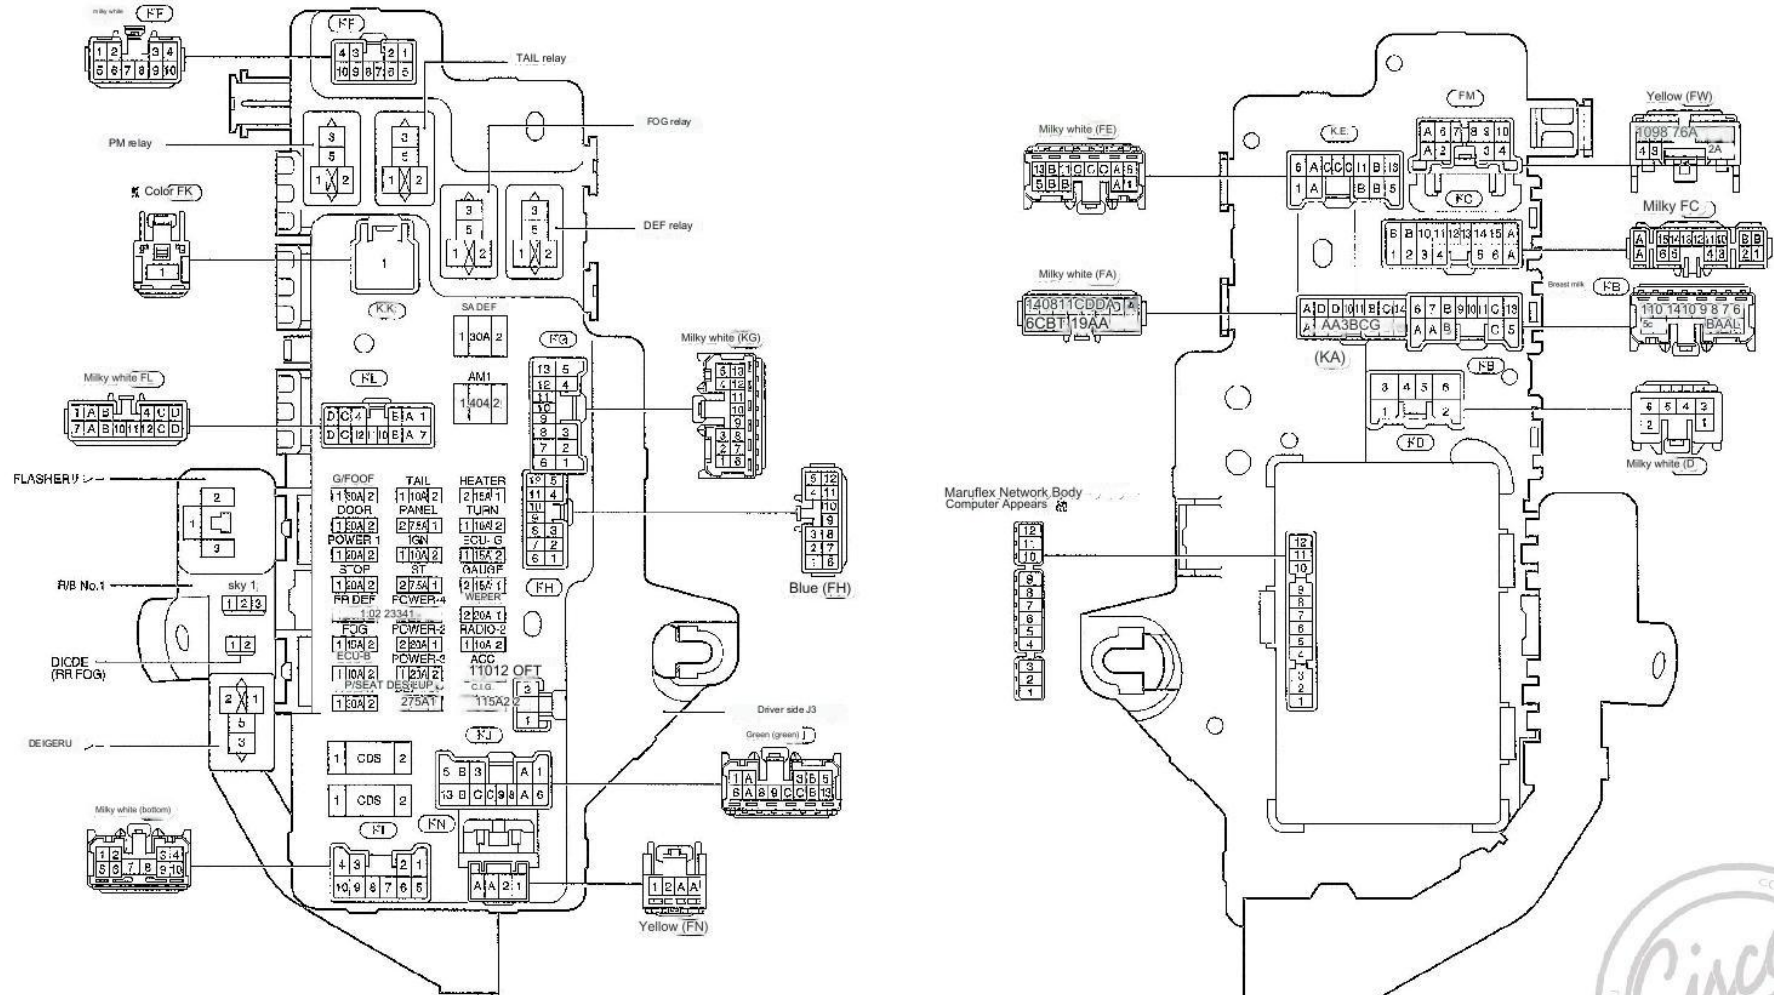

Driver side J/B (internal circuit)


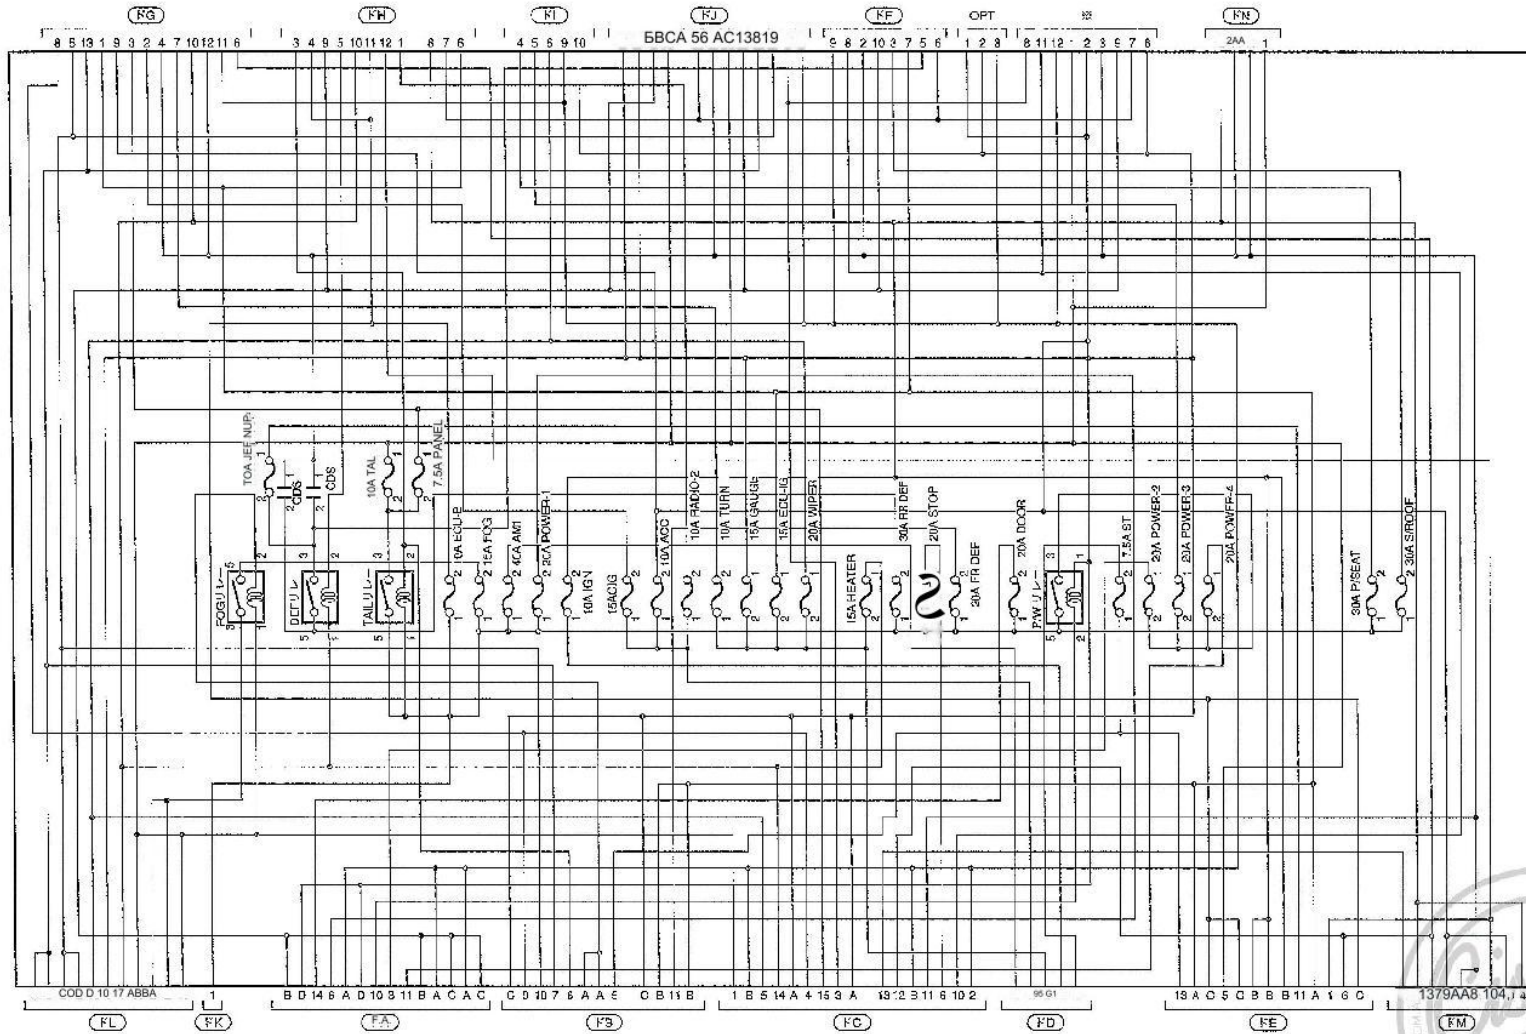


\*The multi-lets network body...the computer is approx.

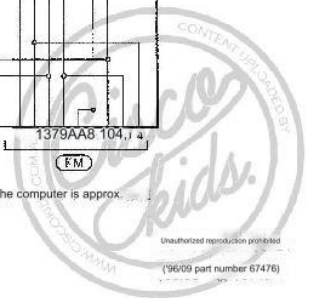


(96/09 part number 67476)

J/B No.2 & Engine room R/B & Engine room R/B No.2 & FL block ASSY (Left side of engine room)

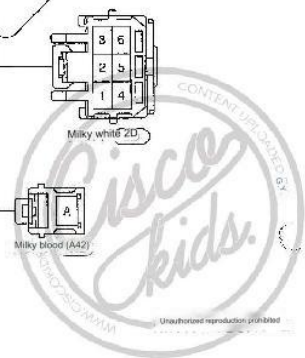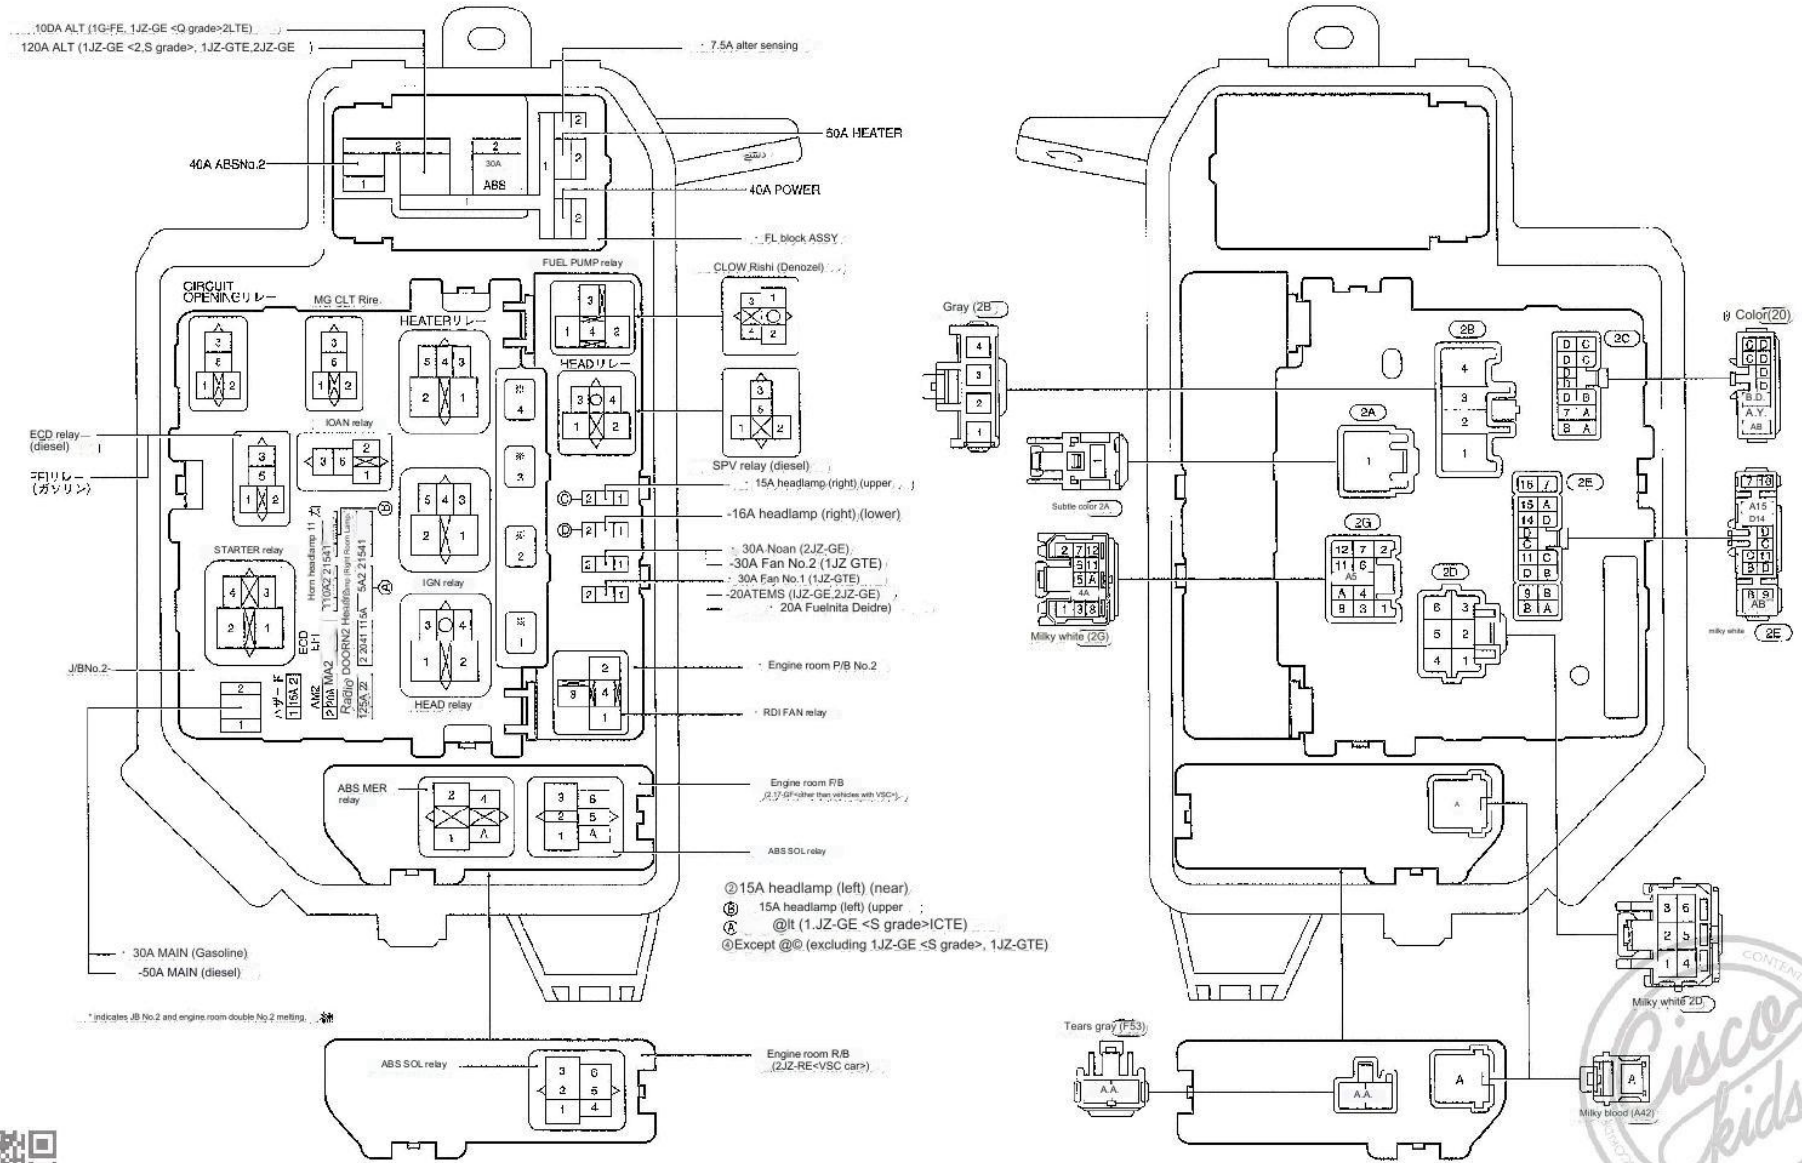




J/B No.2 (internal circuit)

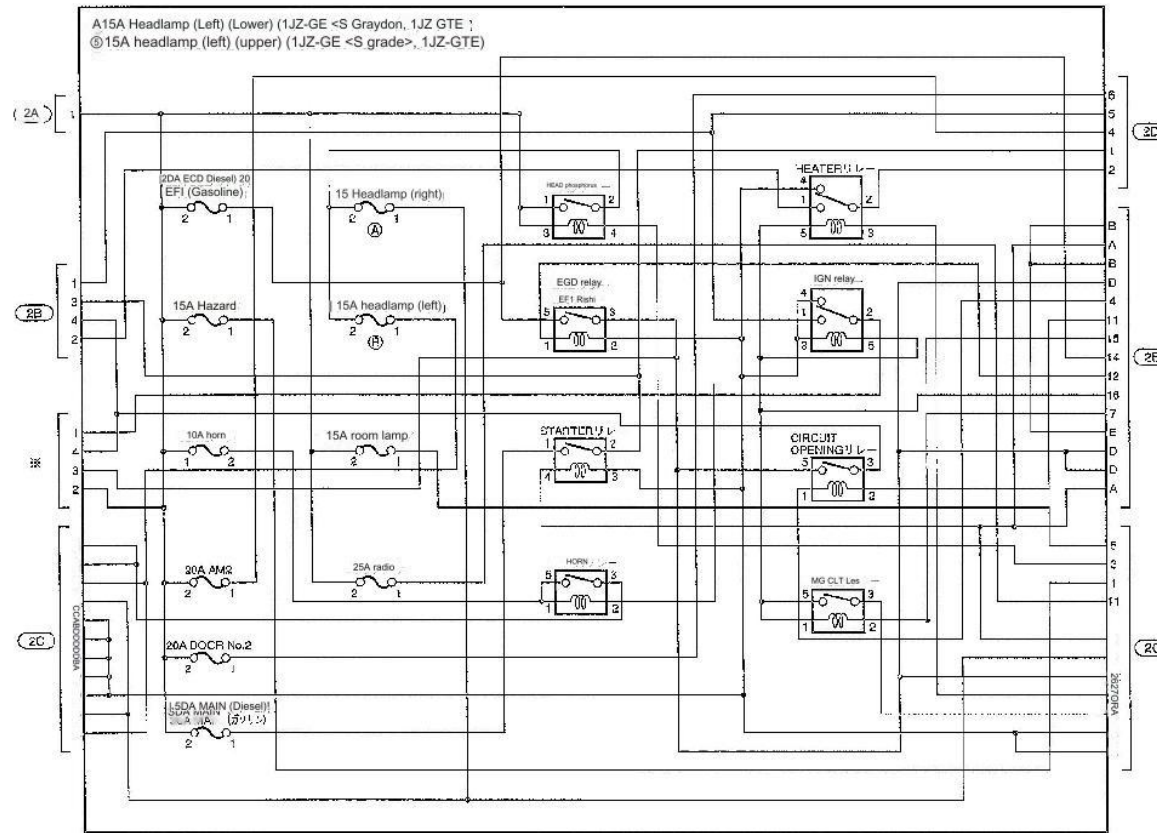

\* indicates greeting to engine room RP.No.2. 5


Engine room R/B (internal circuit)

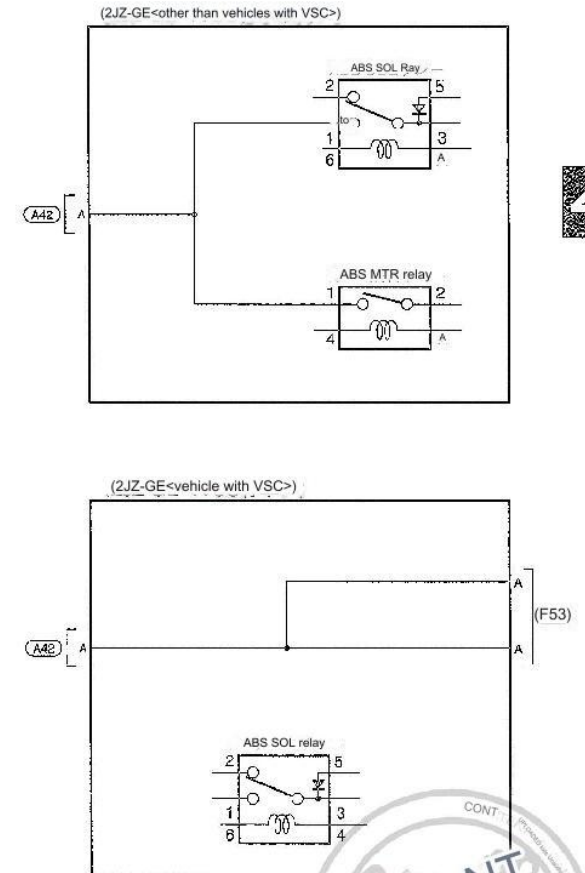


4




J/B No.3 (center of instrument panel)

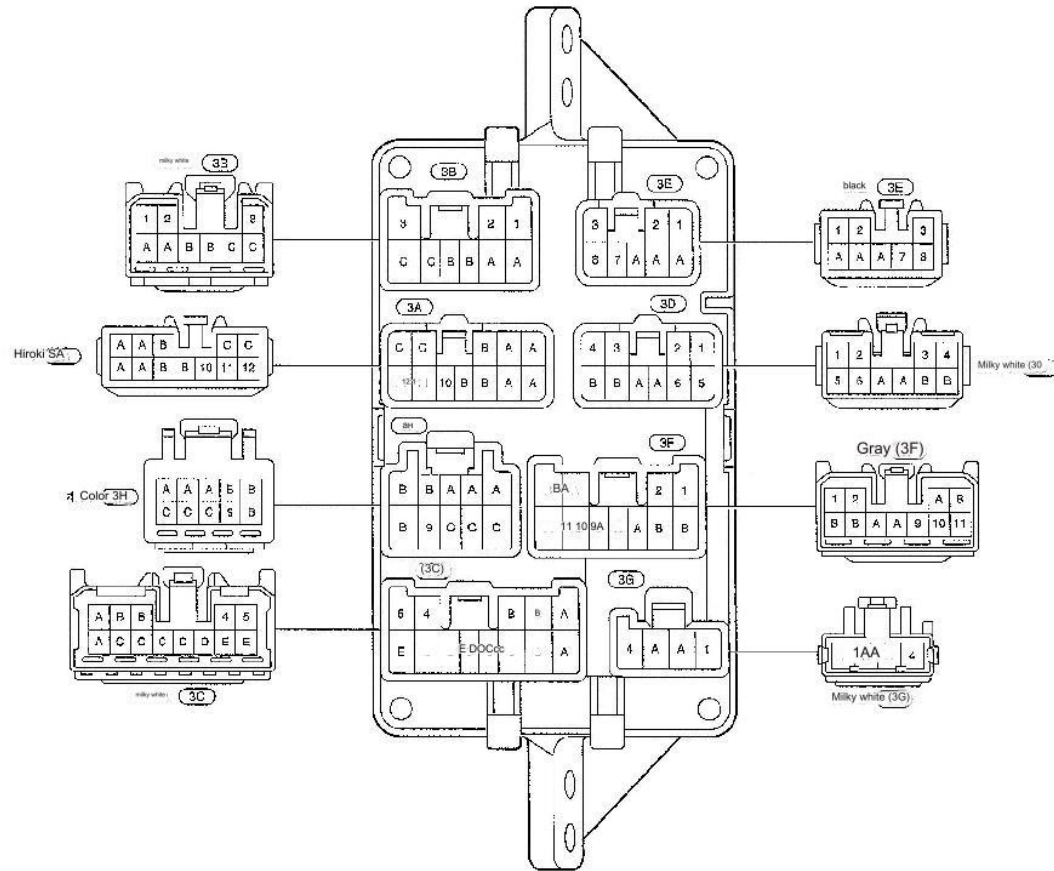

J/B No.3 (internal circuit)

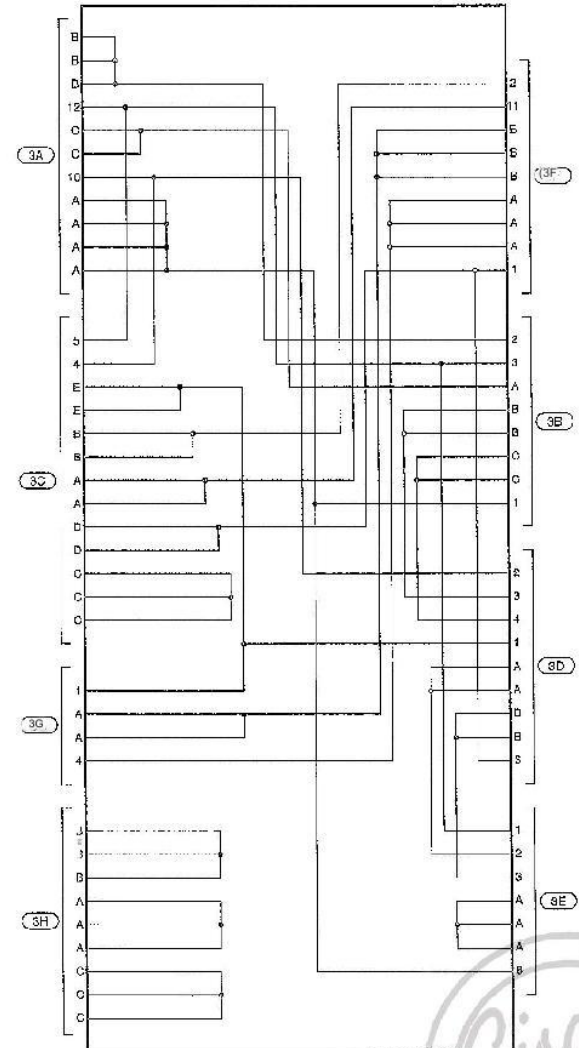


(28/09 part number 67476)

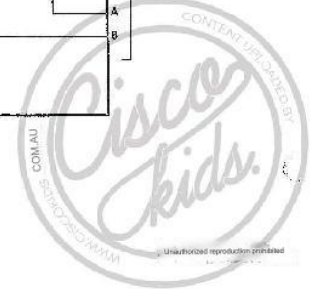








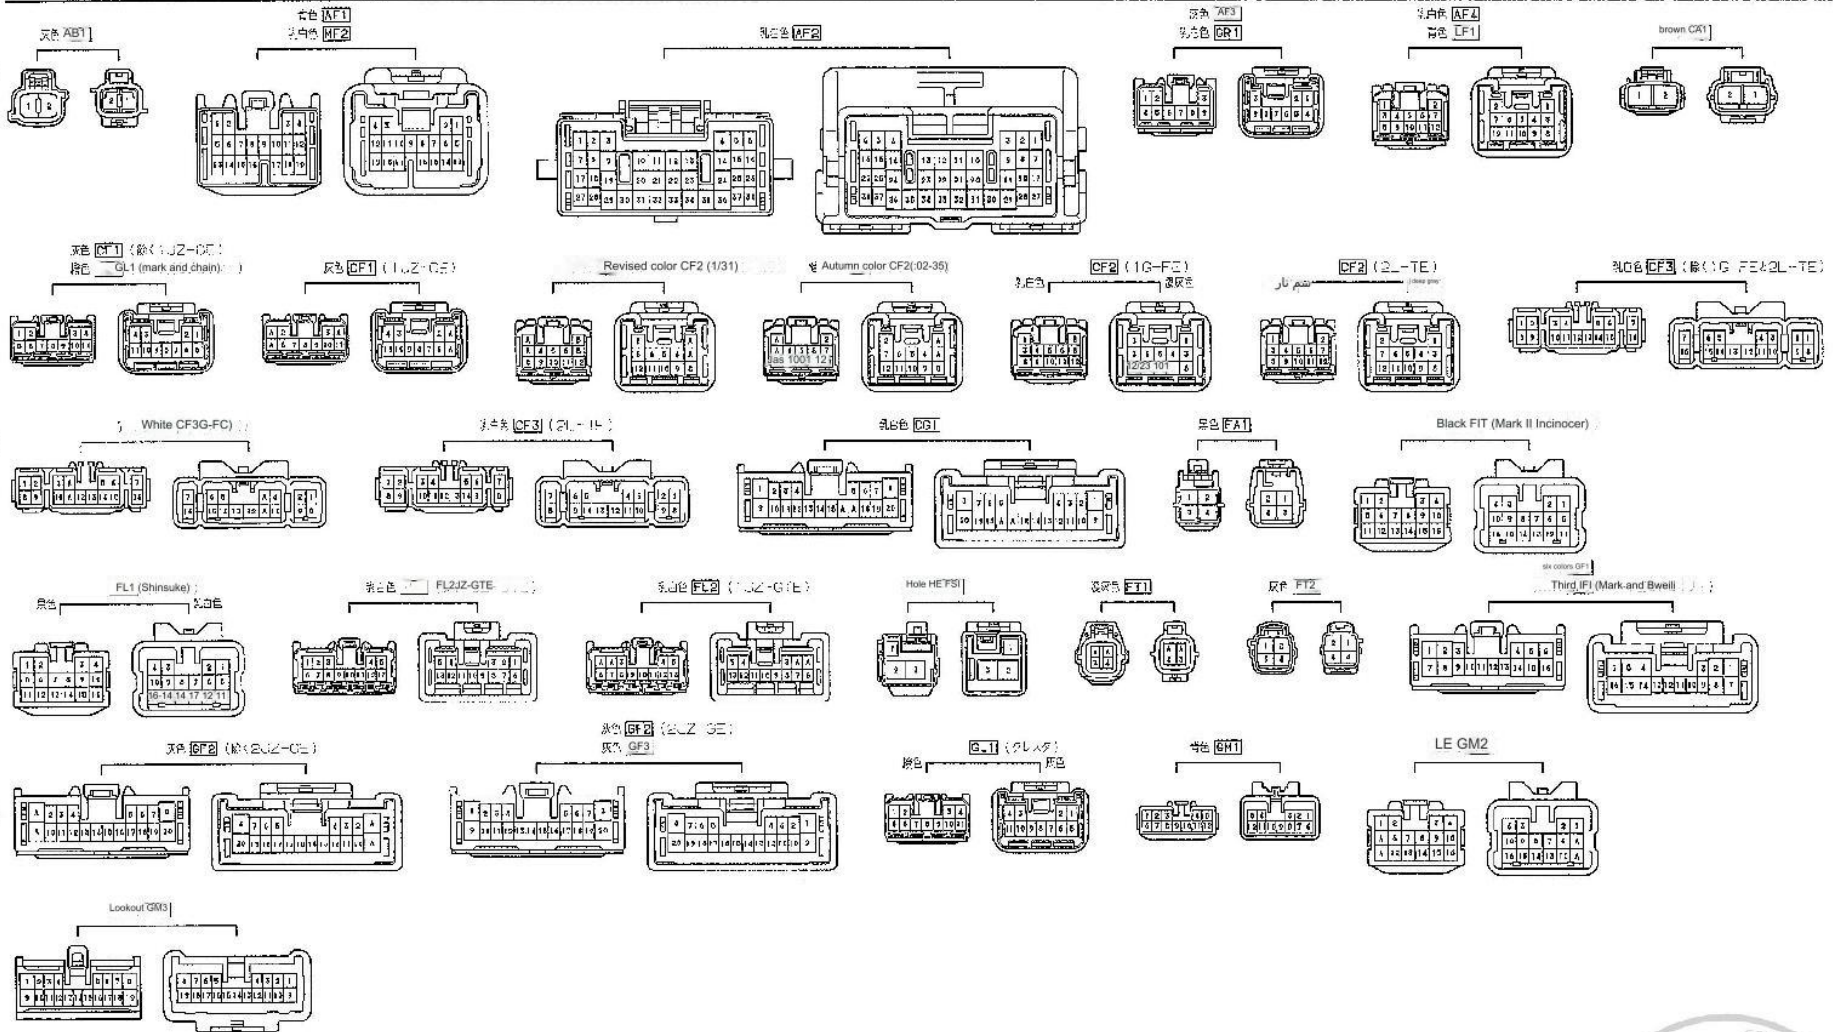

# wire to wire

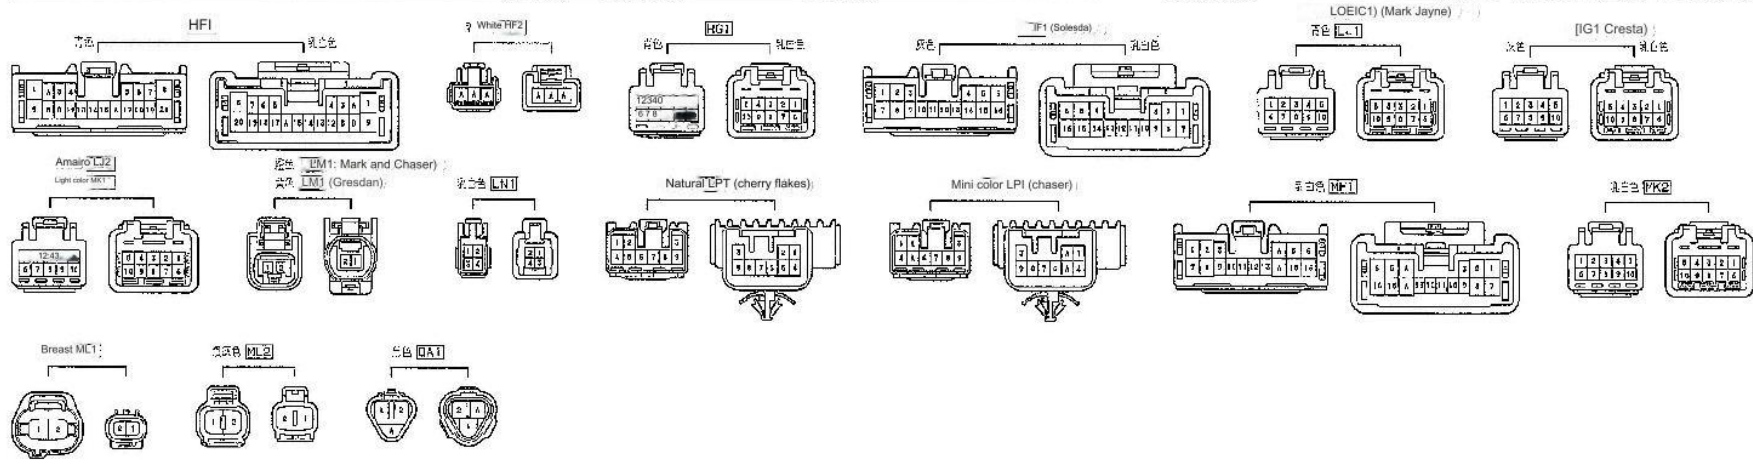

Product number 67476

