

部名	connector No.	Wiring diagram for each system page	wiring diagram Veggie
ABS & TRC Akram Baata	F 4 5	2-24, 26, 30	2-6, 9, 12, 13
ABS & TRC computer one	P	35-7, 24, 28, 30	2-18
ABS & TRC Computer	Y	38-7, 13, 24, 26, 30	2-18
ABS & TRC Computer	F 37	13, 15, 17, 22, 24, 26, 30, 13, 141, 40	2-18
ABS & 4WD Computer	F	503-23	2-20
AUS & 4WD Computer	F	603-7, 23, 14, 46	2-20
ASS & 4WD Computer	F 6 1	3-7, 23, 44, 47	2-20
ABS Anam Neater	A	2-4	2-12
ABS actuator	A	253-32	2-12
ABS actuator	A 2 6	13-23	2-3, 6, 9, 12, 10
ABS actuator	F 6 3	3-22, 25	1-3, 6, 15
ABS actuator	F 3 2	3-15, 33, 47	2-18
ABS actuator	F	333-16, 10, 32, 17	2-18
ABS actuator	F 3 4	3-33	2-15
ABS actuator	F	573-22	2-20
ABS actuator	A	3583-7, 15, 43, 44, 46	2-20
ABS actuator	A	3513-22, 23, 24, 26, 30, 32	2-3, 6, 9, 12, 15
ABS actuator	A	63-22, 23, 24, 26, 30, 32	2-24
ABS actuator	M	83-22, 23, 24, 26, 30, 32	2-24
ABS actuator	L	73-22, 23, 24, 26, 30, 32	2-19
ABS actuator	F 5 6	3-23	2-13
ABS actuator	C	93-14, 16, 22	2-4, 7, 18
ABS actuator	C	3-2	2-10
ABS actuator	F 5 3	3-5, 7, 14, 15, 20, 21, 22, 25, 24, 43	2-18
ABS actuator	F 7	3-9, 11, 12, 25, 16, 18, 21, 22, 26, 310	2-18
ABS actuator	C	3-33, 48	2-19
ABS actuator	C	533-1G	2-10
ABS actuator	C	7-93-14	2-7
ABS actuator	C	8U 314, 20	2-17
ABS actuator	C	15-9	2-7
ABS actuator	A	4-3	2-3, 5, 5, 12, 15
ABS actuator	A	4-4	2-3, 6, 5, 12, 15
ABS actuator	A	4-5	2-3, 6, 9, 12, 15
ABS actuator	A	4-6	2-3, 6, 9, 12, 15
ABS actuator	C	3-6	2-13
ABS actuator	C	4-6	2-10
ABS actuator	C	8-5	2-7
ABS actuator	C	1023-4	2-4
ABS actuator	F	13-13, 32, 41, 52	2-13
ABS actuator	A 4 1	9-4, 6, 8, 10, 13, 28, 29, 48, 12	2-3, 6, 9, 12, 15
ABS actuator	F	483-4, 6, 8, 10, 13, 25, 29, 45, 46, 45, 53	2-3, 6, 9, 12, 15
ABS actuator	C	13-3, 4, 6, 9, 10	2-20
ABS actuator	F	40-3, 2, 3, 4, 5, 3, 10	2-20
ABS actuator	C	4-3-3, 4, 5, 6, 11, 12, 24, 16, 18, 20, 27, 19	2-20
ABS actuator	C	5-3-4, 6, 10, 12, 13, 14, 17, 18, 19, 20, 2-20	2-20
ABS actuator	C	337, 43, 44, 46	2-20
ABS actuator	C	63-4, 8, 10, 2, 13, 14, 12, 18, 19, 20, 2-20	2-20
ABS actuator	C	3-37, 43, 44, 46	2-20
ABS actuator	C	4-4	2-20
ABS actuator	C	45-3-6, L.E.	2-20
ABS actuator	F	43-7, 8, 11, 13, 21, 22, 24, 34, 44, 46, 2 15	2-18
ABS actuator	F	3-51, 52	2-18
ABS actuator	F	33-7, 15, 15, 18, 21, 24, 26, 33, 43, 44	2-18
ABS actuator	F	3-16, 51, 52	2-20
ABS actuator	F	3-2, 4, 6, 8, 10, 13, 14, 15, 16, 18, 20	2-20
ABS actuator	F	3-22, 23, 24, 26, 26, 30, 31, 33, 34, 35	2-20
ABS actuator	F	3-11, 42, 44	2-20
ABS actuator	F	4-1	2-20
ABS actuator	F	4-2	2-20
ABS actuator	F 4 3	6-9, 10, 13, 14, 15, 24, 26, 29, 30, 2-20	2-20
ABS actuator	F	3-32, 86, 43, 44, 47	2-18
ABS actuator	F	5-2	2-20
ABS actuator	F	2-8	2-20
ABS actuator	H	3-34, 33, 41	2-20
ABS actuator	L	11C3-34, 48	2-24
ABS actuator	L	125-37, 45, 5	2-21
ABS actuator	L	295-31, 48	2-21
ABS actuator	C	4-4	5-28, 40, 42

部名	connector No.	Wiring diagram for each system page	Wiring connection area page
J/C (Earth No.1)	A	25-12, 13, 15, 24, 26, 29, 30, 32, 43, 45, 2-18	2-18
J/C (Earth D.2)	J	7-46, 48, 51, 52	2-18
Konchi Direct Clutch Three Doyanser	C140 3 17	73-14, 18	2-18
3/D Direct Clutch Speed Sensor	C	5-0	2-20
Co/D main switch & shift non-indicator lighting (gate type)	C	G34 3-14, 16, 19, 15, 50	2-20
T/O/D main switch & shift indicator original light (A/T)	C	G17 3-14, 17, 13, 20, 44, 46, 0	2-19
Sensor	C	3-5	2-10
Sensor	C	7-5	2-4
Sensor	C	1-0 3	2-19
TKC OFF switch VSV	G	1-1	2-18
No. (engraved crest)	C	1-3 8	2-14
VSV No. 2 (suction cover)	C	144-3 12	2-14
VSV (E.C.R.)	C	1433-12	2-7, 13
VSV (Evapo)	C	1-2	2-10
VSV (Nivabo)	C	4-5	2-4
VSV (Nivabo)	C	8-6	2-7, 13
VSV (possible suction)	C	1-6	2-10
VSV (suction switch)	C	773-6	2-10
VSV (fuel, vertical)	C	4-8	2-10
VVT solenoid	C	2-5	2-13
VVT solenoid	C	653-9	2-10
outer mirror switch	G	13-25	2-18
Absorber control actuator FH-1H (Skyhook)	F	4-7	2-12
Absorber control actuator FR, RH (Skyhook)	A	5	2-12
Absorber control actuator RRLH	M	1-0	2-2
ASOPER CONTROL ASHITUK RRRH	L	11-3-15	2-26
Absorber control computer (Skyhook)	F	637, 15, 23, 25, 32	2-18
Absorber control switch (Skyhook)	G	4-4	2-13
igniter	C	4-0	2-13
igniter	C	593, 9, 29, 44, 46	2-10
igniter	C	108, 3, 4, 29, 44, 45	2-4
ignition key reference example	F	1-6	2-18
ignition coil	C	1-0 9	2-1
ignition coil No.1	C	323-3	2-7, 13
ignition coil No.2	C	89-3	2-10
ignition coil No.3	C	3-5	2-18
ignition coil No.3	C	070-3-1	2-10
ignition coil No.3	C	3-4	2-7, 13
ignition coil No.3	C	7-1	2-10
ignition swing	F	1-5	2-18
Injinkuku No.1	C	2-4	2-7, 13
Injector N.1	C	6-1	2-10
Injectors c.1	C	6-5	2-10
Injector No.1	C	9-9	2-4
Injector No.2	C	2-3	2-13
Injector No.2	C	6-0	2-19
Injector No.3	C	8-3	2-7
Injector No.2	C	1-0 0	2-1
Injector No.3	C	23-6, 10	2-7, 13
Injector No.3	C	5-9	2-13
Injector No.3	C	101-3-4	2-4
Injector No.3	C	2-0	2-10
Injector No.4	C	4-7	2-7, 10
Injector No.4	C	913-6	2-4
Injector No.5	C	15-3-6, 9, 10	2-7, 10, 13
Injector No.5	C	1923-4	2-4
Injector No.6	C	1-1	2-7, 10, 13
Injector No.6	C	9-3	2-4
Injector No.6	C	113-40, 42	2-21
Walker Temperature Chapping Gauge	C	3-0	2-7, 13
Water Temperature Chapping Gauge	C	723-45	2-10
WATER TEN BARA CHAYA YANDAGE	C	9-0	2-1
WATER TEN BARA CHAYANDAGE	C	60156 16-4	2-15
Its washer...	C	350-3-36, 43	2-3, 6, 9, 12, 15
Washer motor oil film removal?	C	7713-40	2-3, 6
air conditioner computer	G	2-7	2-19
air conditioner computer	M	3-1	2-23
Airbag LH (seat)	L	13-21	3-23, 26
Airbag RH (seat)	L	13-21	3-23, 26


5



Index (ordered by part name)

Part name	connector No.	Wiring diagram for each system		Wiring board diagram page
		page	page	
Airbag (advanced airbag) [bj]	F 2 3	3-21	2-13	
エアビュリソフイヤー	F 30 3-21		2-20	
air purifier switch	G333-32		2-20	
Koano_me...ta	G 1 0	3-30, 52	2-19	
Core mix damper switching support/queue sensor after evaluation	C 7 5	3-2	2-10	
YuMission Control Computer (21-Itchobon)	R 1	3-28	2-19	
GoMission Control Computer (21-TE)	G303-29		2-20	
Emission control convenience store... (21-TF) Carrot Control Conrator (1G-FE)	C 3 4	3-12, 29, 30	2-19	
Engine control computer (1)-FR Carrot control, reel control unit (JG-FH)	C 3 5	3-12, 29, 30	2-19	
Carrot control Marima talk...Kushi G-FE, 2L-T3	F 6 8	3-12, 33, 44, 51	2-19	
Carrot control computer (1G-FE, 2L-T Carrot control computer (1G-FE, 2L-T3)	C85 3-3, 1, 20, 16		2-19	
	C 8 7	3-4, 20, 29	2-19	
	F 6 4	3-4, 17, 20, 29, 41, 46	2-19	
	C 23-3, 6, 3, 10, 14, 16, 18, 24, 26, 45		2-19	
	C 13-3, 6, 3, 10, 14, 16, 13, 24, 27, 32, 46	2, 19		
	F 25 3-5, 8, 20, 15, 16, 17, 18, 23, 27, 29, 19			
Carrot control computer Neku1G-FE, 2L-TE	F 26 3-3, 8, 10, 14, 15, 16, 18, 22, 23, 24, 19			
	F 83-32		2-12	
Carrot room R/S (ABS)	A 423-22, 23, 24, 25, 30, 32		2-3, 6, 9, 12, 15	
Engine room R/S (ABS)	F 83-32		2-12	
oil pressure switch	C 25-44-47		2-13	
oil pressure switch	C 6 5	3-14	2-10	
oil pressure switch	C853-44, 47		2-4	
oil pressure sweep	C 423-11		2-19	
Optional connector	F 49 3-21		2-3, 6, 9, 12, 15	
Optional connector	A 2013-7		2-6, 9, 12, 15	
オルタネーター	A 213-7, 44, 47		2-6, 9, 12, 15	
alternator	A 5 5	3-7	2-4	
Or Quarter	A 563-17		2-4	
Courtesy Switch FR	M 5	3-34, 45, 46, 49	2-27	
LII Courtesy Switch FRH (Mark) ChaserI	M 1 5	3-34, 45, 46, 49	2-23	
Courtesy switch FRRH	L 4	3-31, 31, 45, 45, 47, 49	2-23	
Car Ashimup FRRH (Mark II) Chaley:	L 1313-32, 34, 45, 46, 47, 49		2-21	
Courtesy switch KK-H	M 9	3-34, 45, 46, 49	12-23	
Capacity switch RR/RIL	L 83 34, 45, 46, 49		2-22	
Courtesy lamp FR, LH	L 5-49		12-23	
Courtesy lamp FR/RH (Cureresta)	H 93-19		2-23	
Katesi lamp PR, RH (...ku, icer)	I 1113-19		2-23	
cam position sensor	C13356-11		2-7, 10, 13	
Key lock solenoid & key unlock warning switch	A 143-28		2-6, 9, 12, 15	
Key lock solenoid & key unlock warning switch	F143-17, 31		2-18	
light sensor intake	A 58 3-12		2-15	
temperature sensor	C 41 3-5, 11		2-7, 13	
intake sensor	C 073-4		2-4	
crank position sensor	C 39 3-3, 11, 14, 18, 43		2-7, 13	
crank position sensor one	C74 32, 16		2-10	
signature sensor	C148 3-12		2-16	
Clearance lamp LH	A 3 5	3-8	2-3, 6, 9, 12, 15	
Clearance lamp	A13-48		2-3, 6, 9, 12, 15	
RH cruise control actuator	A 4	3-23	26, 12	
cruise control computer	F 1 2	3-14, 13, 32, 43, 44, 46	2-18	
clock	G 2 3	3-35, 52	2-19	
abox lamp	G3113-50		2-20	
har plug	C147 3-12		2-16	
Console box lamp	G 1 3	3-50	2-10	
condenser (radio)	C423-3		2-7, 13	
condenser (radio)	C 5 7	3-3	2-10	
capacitor indicator	C 1103-3		2-1	
combination switch	F 2 0	3-26, 33	2-18	
Combapction switch	F213-39, 43		2-18	
cockhoration switch	3 223-29, 44, 45, 46, 47, 48, 30, 31, 32		2-18	
Congonation Meter (Pri-Huff)	C 4	3-5, 7, 9, 13, 15, 17, 23, 22, 23, 24, 25, 2-19		
Combination... (antalg)	C 53-3, 5, 7, 9, 13, 15, 17, 19, 20, 22, 23, 2-19			
Combination meter... (Ar/Cog)	C 6 3-5, 7, 9, 13, 15, 27, 19, 20, 22, 23, 24, 2 19			
	C 3-26, 20, 30, 31, 34, 39, 41, 43, 44, 56			
	C 3-51, 52			
Combination maker (Tsunakoji)	C 79-5, 7, 9, 21, 44		2-19	


Part name	connector No.	Wiring diagram for each system		Wiring board diagram page
		page	page	
Bombination meter (dgital)	G413-5, 7, 11, 15, 22, 24, 29 31, 33, 43		2-9	
Ninjasion meter (dgital)	C42 3-7	15, 19, 20, 21, 24, 33, 46, 48, 40	2-19	
Nimbination meter (Agital)		1363 3-3, 5, 7, 11, 15, 19, 20, 22, 31, 33, 2-19		
Nymphish Scary	A 23-47		2-18	
Side air badge sensor LH	M 74-21		2-20	
Side airbag sensor RH	C 5 13-21, 45, 46		2-23	
Side turn LH (Mark II Cresta)	A 343-51		2-3, 3, 9, 12, 15	
Side Turn & I1 (Shahresta)	A 713-52		2, 3, 5, 9, 12, 15	
Saascottor Valve Motor...	C 3 7	3-25, 33	2-7, 13	
Saascottle position sensor	C 523-27		2-10	
Subboot position sensor...	C 35 3-6, 11, 14, 17, 24, 28		2-7, 13	
	C 67 3-8, 27		2-10	
cigarette lighter	G203-35		2-19	
Cigarette lighter lighting	G 293-50		2-19	
Shift cock control type AT)	G383-14, 16, 20		2-19	
Shifa hook control straight type AT)	G 183-17		2-19	
Water bending switch (Rajreeta tm)	J 1	3-13	2-8, 12	
水圧センサー	L 283-6, 11, 14, 18		2-7, 13	
	C 71 3-13		2-10	
	C 98 34, 33		2-4	
水圧センサー	C145 3-12		2-16	
swing lock	G363-28, 30		2-19	
starator	G 19 3-3		2-7, 10, 13	
starator	C89 1-3		12-1	
starator	C14613-3		2-18	
starator	J 23-3		2-4, 7, 10, 13, 16	
steering sensor	F 1 9	3-13, 23	2-15	
Steering sensor (VSC) stereo power amplifier	F 7 0	3-15, 33	2-18	
stereo power amplifier	M 3-40, 12, 70		2-23	
Stop lamp switch	M 23-10, 43, 50		2-25	
	F13 3-5, 7, 9, 10, 14, 15, 15, 17, 18, 22, 23, 2-20			
	J 3-25, 27, 31, 32, 43, 46			
sliding roof control relay	C 33-31		3-25	
Sliding Roof Switch Control Room Lamp	C 83-3149		2-22	
Sliding Roof Switch & Map Lamp (Mark II, Che...)	C 23-3149		2-22	
Slide to do	N 33-36		2-25	
Throttle control convenience store... (1) Otsu GT3) Throttle motor computer (1JZ-GT3)	C433-9, 27		2-20	
air valve motor driver	M 54 3-9, 27, 44		2-20	
throttle position sensor	F387-33		2-20	
throttle position sensor	C 2 2	3-11, 18	2-13	
throttle position sensor	C 6 3	3-8, 15, 26	2-13	
"Sukano Toppo Sonji Sensor"	C 8 2	3-5, 11, 21	2-7	
Throttle position sensor	C 1 0 3	3-4, 20	2-4	
	C133 13-12, 30		2-18	
Yantania bag sensor	F273 21, 45, 46		2-19	
Center Stop Symp Indusion (Chaser)	L 2 8	3-46	2-24	
Center Stop Lamp (LED) (Mark II Cresta)	L 1, 243, 48		2-24	
Monk stop lamp (with bulb)	L 153-48		2-24	
Turbo pressure sensor	C1393-12		2-15	
Kumakontoribap	C 803-12		2-16	
Kumiya Pressure Weaning Suit	F 83-33		2-38	
Diagnosis connector	C 2 6	3-3, 11, 15, 18, 21, 33, 43	2-13	
Diagnosis connector	C533 3-8, 10, 21, 20		2-10	
diagnosic connector	C 8 4	3-3, 7, 14, 15, 21, 52, 24, 43	2-7	
diagnosis connector	C 9 7	3-3, 5, 20, 21	2-4	
diagnosis connector	C1533-12, 21, 22, 30		2-15	
Tweeter RR	I 4	3-37, 38, 40, 42	2-25	
diesel carot revolution sensor	M 3	3-37, 39, 40, 12	2-20	
Distributor	C131 3-12		2-13	
Detection Crash Shin	C105 3-34		2-4	
Telephone Subst	F 283-34		2-13	
	C149 3-12		2-15	
Maza control swig (for core escape side) (Cresta) High control swig (key oil effect) (mark, liner)	F 7	13-30	2-23	
Paso control mock, F2-114	L 123-34		2-25	
Door control motor FR, RH	I 103-3		2-23	
Door control motor RR LH	H 43-32		2-23	
Door Rontol Louis Cou...RR RM	K 43-34		2-23	
IDoor control receiver	J 2013-34		2-26	

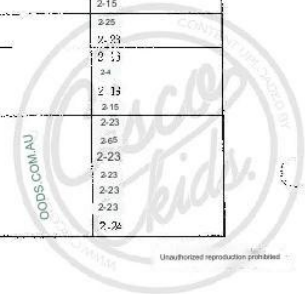



Part name	connector No.	Wiring diagram for each system page	Wiring diagram page
Small size for cutting open air damper...bonior	G338-25		2-20
navigation computer	U 85-52		2-14
navigation computer	M 133-38, 01, 44, 45		2-24
navigation computer	M 14 3-38, 41		2-24
day jumper	C 33-24		2-18
Nearbrisk Towsig	C 83-3, 10, 16, 19, 32, 37, 38, 41, 43, 46		2-13
Nutru start switch	C 5 1 3-3, 8, 16, 17, 19, 37, 38, 41, 48		2-10
Ninbrisk Towswitch	C 7 8 3-3, 5, 6, 1, 17, 10, 20, 22, 37, 38, 41, 43, 45, 46		2-1, 7
New Mirai Start Switch	C14 1	3-3, 12, 19, 22, 30, 37, 38, 41, 46	2-16
Noise Filter (Stoppup)	L253-48		2-24
Noise filter defogger	D 6 322		2-23
Knock Sensor 5.1	C 2 9 3-6, 11		27, 13
Knock sensor...No.1	C 9 4 3-4		2-4
Knock sensor No.2	C 1 8 3-6, 2, 11		2-7, 10, 18
Non-temperature sensor	G 1 1 3-9, 11		2-10
Non-temperature sensor	L 3 3 4 6		2-23
Hazard switch	J 2 1 3-90		2-19
Vacuum indicator	F 223 44, 46, 50, 51		2-19
Vacuum sensor	P 3 13-33		2-16
Backup lamp switch	A 5 7 330, 15		2-15
Backup run/switch	C 113-48, 11, 20		2-4, 7, 13
Buckle switch LH	C 543-37		2-10
Buckle switch LH (without power seat)	C 8 8 3-37		2-4
Buckle switch RH (with lumbar support)	M 4 331		2-23
Battery +	M 1 5 3-31		2-23
Battery -	L 2 3-3146, 17		2-23
Battery +	H 5 3-31, 44, 17		2-25
Battery -	A 4 0 3-2, 3, 7, 29, 47, 48, 51, 52		2-3, 6, 9, 12, 15
Battery +	D 1 3-3		2-4, 7, 10, 13, 16
Battery -	F 1 3-2, 3, 7, 29, 42, 47, 51, 52		2-4, 7, 10, 13, 16
Battery +	O 4 3-19		2-22
Battery -	O 1 3-19		2-22
Vanity Single	F 2 4 3-24, 30, 32, 39, 42, 45, 45		2-11
Parking brake switch (foot operated)	G 1 2 3 36, 37, 41, 45		2-19
Parking brake switch (lever type)	C 1 6 3-34, 17, 16, 20, 44, 46, 53		2-19
Pattern select switch (ECT)	G 1 53-27, 50		2-19
Pattern select switch (ETCS)	I 15-35		2-23
Power window motor SR LH	II 2 530		2-23
Power window motor FR-RE	K 1 335		2-33
Power window motor RR, LE	J 13-30		2-23
Power window motor KR, RE	N 43-36		2-25
Power Seat Switch	H 83-35		2-25
Power Seat Switch (Fumba Support River)	C 1 73-7, 10		2-7, 11
power spring dokamei	F 1 1 3-33, 41, 45		2-13
power steering computer	A 2, 3, 19		2-6, 9, 12
power steering nomoid	F 6 6 3-12		2-12
Heater idle up switch (21-TE)	A 3 3 3-48		2-3, 6, 9, 12, 15
Shenda Markerran/LH (Mark II, Sylesta)	A 8-45		2-3, 6, 9, 12, 15
Fender marker lamp R (Mark, Cresta)	L 113-41, 0 hearts		2-21
Sokolisen	C 1 5, 5 3-12		2-16
Rigid Jimbara Gyammonser	C1373-18		2-16
Fuel filter switch	C1363-4		2-16
Fuel pump	1 13 34, 6, 8, 10		2-24
Fuel Pump Register	A 223-8, 10		2-9, 12
Front speaker LH	I 33-37, 38, 40, 42		2-23
front speaker right	P 43-37, 38, 10, 12		2-23
Flint Turn (Booiser)	A 3 6 3-51		2-3, 6, 9, 12, 15
Front Turn LH Mark II Cresque	A 3 2 3-51		2-3, 6, 9, 12, 15
Front Tan RIT (Chaser)	A 1 5 3-51		2-3, 6, 9, 13, 15
Front turn	A 95-51		2-3, 6, 9, 12, 15
Front bar/Cheekal mester	N 23-35		2-25
Front fog lamp LE (Chaser)	A 3 5 3-51		2-3, 6, 9, 12, 15
Front fog lamp (Mark, Cresque)	A 319-4		2-3, 6, 12, 15
Front figure lamp LI (Mark II, Cresta)	A 5 4 3-52		2-6, 3
Printed fog lamp RH (Geuor)	A 1 9 3-52		2-3, 6, 9, 12, 15
Front fog lamp H (mark) (Cresta)	A 1 0 3-51		2-1, 4, 12, 15
Front fog lamp KH (Mark II, Cresta)	A 4 8 3-31		2-6, 0
engine room lamp & map lamp	O113-10		2-22
front wiper motor	A 3 3 43		2-3, 6, 9, 12, 15
Brake warning relay...Pushine	F 6 7 3-42		12-18
level lighting switch	A17 324, 26, 28, 30, 15, 16		2-5, 6, 9, 12, 15

Part name	connector No.	Wiring diagram for each system suit	Wiring diagram page
pulser motor	S 3-28		2-20
scowmer motor controller	S 2 1-28		2-20
FI Bukori Mork Controller	S 3 3-28		2-20
Pressure Switch (Niacon Cold Low Pressure Switch & Pipesin/Children's Eye Nog)	F 4 4 3-13, 28		2-6, 12
Pressure switch ("switch" for near high and low)	P 3 2 3-22		2-3, 5, 15
Headlamp LH (H)	A 3 8 3-20, 32		2-3, 5, 6, 12, 15
Headlamp (O)	A 5 1 3-52		2-6
Headlamp LH (O) (Che/Key)	A 3 9 2-29		2-3, 6, 12, 15
Headlamp LH (Mark II Kushista)	A 2 8 3-29		2-3, 6, 12, 15
Headlamp RH (II)	A 1 82-29, 52		2-3, 6, 9, 12, 15
Headlamp RH	A 192-52		2-6, 5
(O) Headlamp RT (O) (Chrinisaa)	A 1 6 3-53		2-3, 6, 12, 15
Headlamp R (Mark II)	A 3212-29		2-3, 6, 12, 15
Nostal Headlamp bell actuator LH	A 532-52		2-6, 5
Headlamp bell actuator K1J	A 503-52		2-08
headlamp sibel switch	G 93-50, 52		2-19
Horn 1	A 2 7 5-39		2-3, 6, 9, 13, 15
Horn RE (Back)	A 135-39		2-3, 6, 9, 12, 15
Positive Resistance IVRP	C 1 5 1 3-12		2-16
Power seat motor (RH)	C 1 5 2 3-12		2-16
magnet dodge	A 5 9 3-62		2-15
magnet clutch	C10 4 5-38		2-4
Magnetic clutch & cock sensor	C 3 1 6-52		2-13
Magnetic clutch & cock sensor	C 6 4 3-28		2-10
map lamp	O 7 3-49		2-22
mult AV station	C3882, 41, 44, 46		2-10
mult AV station	G39 3-39, 11		2-19
Multilex Network Switchtbl LH	I 23-35		2-23
Marnalec Network Switch RR LH	X 36-30		2-23
Multilex network switch 2KKH	J 3 3-35		2-23
Multi-Rex Network Bodelin	F 13-31, 35, 4, 16		2-13
Multi-Rex Network Master Switch	J 1 13-34, 36, 47		2-28
Mirror beater switch	F 103-41, 50		2-16
Beater speed sensor (M/T)	C 5 3 3-9, 44		2-10
Meter fussed sensor (M/T)	C13 7 3-54		2-4
Moma Damper Switching Blade Lean Motor	R 2 2 3-28		2-19
Yoyounto Sentai	M 1 2 3-33		2-5
License plate lamp play H (chaser)	L 2 63-18		2-24
License Pre-Trump RH (Chaser)	L 2 7 3-48		2-2
Line Spray Lamp (Mark II, Sylesta)	P 2 7 48		2-3
Radiator Fin Molored C. 1	A 2 9 3-13		2-6, 12
Rajneeta Fan Motor No.2	A 3 2 3-13		2-9
old man & spray	G 2 4 3-37, 36		2-19
Radio & Stereo	G253-37, 38, 511		7-19
Radio & Stereo	G37340, 42, 50		2-19
Luggage opener solenoid (Sylesta)	L 103-36		2-21
Luggage opener solenoid	L 1 9 3-34, 10		2-21
luggage room runner	L 1 7 3-19		2-21
Luggage room, lamp switch	L 2 2 3-34, 49		2-24
Luggage room lamp switch (left)	P 4 3 49		2-24
Lap vent solenoid FR 1	M 6 3-31		2-23
H Lap belt solenoid KH	L 6 3-31		2-21
Lumbar support/Various items	N 7 3-36		12-35
lamp feria center	I 8 3-44, 47, 48		2-21
recliner motor	N 6 3-36		3-25
remote control actuator LE	J 5 3-25		2-23
Remote Control Actuator TH & Mirror Heated	I 6 3-25, 41		2-23
Redate Control Cushioner 3H	li 6 3-25		12-23
Remote Control Apple Aethers H & Mirror Heater RE	E 7 3-25, 41		2-23
Rear combination lamp remote	L 2 3 3-37, 48, 51		2-21
control donation lamp LH	P 33-37, 48, 51		2-21
Rear combination lamp RK	L 2 1 3-37, 48, 51		2-24
Rear combination lamp RE	P 1 3-37, 48, 51		2-21
Riyasuka CH	K 23-37, 38, 40, 2		2-23
rear speaker R	J 2 3-37, 38, 40, 42		2-23
rear vertical motor	N 33-35		2-25
Rear fog lamp switch	F 3 3-50, 51		2-12
Rear room lamp II	C 33-44		2-22
Rya Mulamp RH	C10349		2-22
Rear wiper motor & relay	L 153-36		2-21
room lamp	C 313-10		2-22

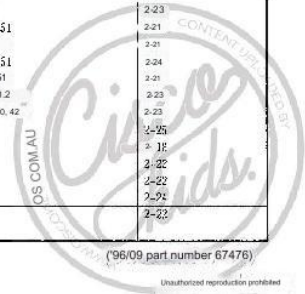

5

Index (in order of connector number)

connector No.	Part name	Wiring diagram for each system page	Wiring equipment page	Part No.
A 1	J/C No. 1	3-13, 32, 41, 52	12-18	11529
A 2	J/C No. 1	3-13, 15, 25, 24, 36, 29, 30, 32, 18	12-18	11542
A 3	3) Front wiper motor	3-43, 45, 46, 48, 51, 52		
A 4	cruise control actuator	3-43	12-3, 6, 9, 12, 15	11509
A 5	Absorber Control Actenuic-R- RH (Sty Hook)	3-43	2-6, 12	11150
A 6	ABS speed sensor FR R	3-43	2-6, 12	10789
A 7	Sanomi Turn RH (Mark, Cresta)	3-23, 23, 24, 26, 20, 32	2-3, 6, 9, 12, 15	11002
A 8	Fender marker lamp R (Mark, Cresta)	3-51	2-3, 6, 9, 12, 15	11149
A 9	9) Front Turn RH (Mark II, Kunsta)	3-48	2-3, 6, 9, 12, 15	11074
A 10	1) Maronto fog lamp RH (Mark II Cresta)	3-51	2-3, 6, 9, 12, 15	11019
A 11	111 Clearance lamp R	3-51	2-3, 6, 12, 15	11860
A 12	121 Headlamp RH (Mark II, Cresta)	3-48	2-3, 6, 9, 12, 13	11039
A 13	131 Homyo	3-29	2-3, 6, 12, 15	11314
A 14	14) Outside temperature sensor	3-39	2-3, 6, 9, 12, 15	10619
A 15	151 Front Turn RE (Chaser)	3-28	2-3, 6, 9, 12, 15	11070
A 16	16 Headlamp R (TO) (Chaser)	3-51	2-3, 6, 12, 15	11019
A 17	Headlamp RH (II)	3-51	2-3, 6, 12, 15	11880
A 18	A 19 Front fog lamp RH (Chaser)	3-29, 52	2-3, 6, 9, 12, 15	11859
A 20	Alternator	3-51	2-3, 6, 9, 12, 15	10481
A 21	Tutanator	3-7	2-6, 9, 12, 15	
A 22	Fuel pump register	3-7, 44, 47	2-6, 9, 12, 13	1039
A 23	23 Power steering solenoid	3-10	2-9, 12	11075
A 24	24 ABS actuator	3-19	2-6, 9, 12	11082
A 25	25 ABS actuator	3-32	3-12	10885
A 26	26 ABS actuator	3-32	12-12	11087
A 27	27 Horn H	3-32	2-3, 6, 5, 12, 15	1099
A 28	28 Had lamp H (Mark II, Cresta)	3-29	2-3, 6, 12, 15	1104
A 29	29 Radiator fan motor No.	3-13	8-9, 12	11237
A 30	30 Clearance One Prej	3-18	2-3, 6, 9, 12, 15	11059
A 31	31 Front Fog Lamp LI (Mark II, Cresta)	3-31	2-3, 6, 12, 15	11050
A 32	32 Front turn (Book II, Cresta)	3-51	2-3, 6, 9, 12, 15	1103
A 33	33 Fender marker lamp, H (Mark, Cresta)	3-48	2-3, 6, 9, 12, 15	1104
A 34	34 Side turn LH (Mark, Cresta)	13-51	2-3, 6, 9, 12, 15	1149
A 35	35 Front fog lamp LI (Bu Nir)	3-51	2-3, 6, 9, 12, 15	10481
A 36	36 Front turn L (Chaser)	3-51	2-3, 6, 9, 12, 15	11019
A 37	37 Headlamp LH (HI)	3-29, 52	2-3, 6, 9, 12, 15	11859
A 38	38 Headlamp LH (LC) (Chinisaal)	3-29	2-3, 6, 12, 15	11060
A 39	40 batteries	3-2, 3, 7, 29, 47, 48, 51, 53	2-3, 6, 12, 38	
A 40	41 J/C Nu. 2	3-4, 6, 8, 10, 13, 28, 29, 48, 52	2-3, 6, 9, 12, 15	11661
A 41	A 42 Carrot Room R/B (ABS)	3-22, 23, 24, 26, 30, 32	2-3, 6, 9, 12, 16	10995
A 42	43 FL (ABS & VTR)	3-12, 22, 23, 24, 26, 30, 32	2-3, 6, 9, 12, 15	
A 43	44 FL (Orthane)	3-2, 7, 48	2-3, 6, 9, 12, 16	
A 44	45 FL (Alter)	3-7	2-3, 5, 5, 12, 15	
A 45	A 46 FL (Alter)	3-2, 35, 47, 48, 30	2-3, 6, 9, 12, 15	
A 46	47 Brake level warning switch 18	3-24, 26, 28, 30, 45, 46	12-3, 6, 9, 12, 15	11217
A 47	48 Front fog lamp RH (Mac II, Kunsu small)	3-51	2-5, 9	10431
A 48	49 Headlamp RH (LC)	3-52	3-9	123
A 49	50 Headlamp Level Adjuster RH	3-52	2-3, 9	10916
A 50	51 Headlamp LH (LC)	3-52	3-9	11255
A 51	A 52 Radiator fan motor No.2	3-13	2-9	11237
A 52	53 Headlamp repel actuator turn H	13-52	2-5, 9	11016
A 53	54 Front fog lamp LI (Mark II, Cresta)	3-51	2-5, 9	10431
A 54	55 Maltanator	3-7	2-4	
A 55	56 Alternator	3-57	2-4	11345
A 56	57 Nocuum Journeying Switch	3-30, 45	2-15	11252
A 57	58 Intake sensor	3-12	2-15	11165
A 58	59 Magnetic clutch	3-52	2-15	11271
A 59	60 Water temperature switch (radiator fan)	3-13	2-5, 12	11235
B 1	J/C No. 3	3-3, 4, 3, 9, 10	2-20	11061
B 2	2) Engine control system (1G-FE, 21-TE)	3-3, 6, 3, 10, 14, 16, 18, 24, 23, 2-19		11220
B 3	3 Engine control component... (16-FE, 2L-TE)	3-13		
B 4	J/C No. 4	3-3, 6, 3, 10, 14, 16, 18, 24, 27, 12-19		11221
B 5	J/C No. 5	13, 32, 43		
B 6	J/C No. 5	3-3, 4, 3, 8, 11, 12, 14, 16, 18, 202-15		11339
B 7	5 JC Nu. 5	3-27		
B 8	J/C No. 5	3-4, 6, 10, 12, 13, 14, 17, 18, 19	2-20	1166
B 9	CC/D direct clutch speed hint	3-20, 32, 43, 44, 46		1166
B 10		3-4, 6, 10, 12, 13, 14, 17, 18, 19, 20		1166
B 11		3-20, 37, 43, 44, 46		1166
B 12		3-14, 18	2-7, 13	1155

connector No.	Part name	Wiring diagram for each system page	Wiring knee [2] Invol page	Part No.
C 8	8) Nitrinal start switch	1-1, 10, 18, 19, 32, 37, 38, 41, 432-13		11232
C 9	9 A/T speed sensor	3-46	24, 7, 13	1156
C 10	10 ECT sensor	3-14, 18, 22	24, 7, 13	11691
C 11	Vacuum sensor	3-18	2-13	11316
C 12	VSV (L-14)	3-4, 8, 11, 20	2-4, 7, 13	11550
C 13	C13 Cam position sensor	3-6, 10	12-7, 13	13947
C 14	IC 14 Injector No.	5-6, 6, 11	2-7, 10, 13	11153
C 15	6 151 Injector v.5	13-6, 9, 20	2-7, 10, 13	11153
C 16	16 VSV	5-6, 9, 20	2-7, 10, 13	11149
C 17	Power steering pressure switch	26, 10	2-7, 13	10974
C 18	18 Knock sensor No.2	5, 7, 10	2-7, 13	1105
C 19	19 Starter	2-6, 8, 13	2-7, 10, 13	1405
C 20	20 Injector No.4	2-3	2-7, 10, 13	1153
C 21	C2 Injector No.3	3-10	2-3	1153
C 22	C22 Scuttle position sensor	2-6, 10	3-7, 13	1153
C 23	C23 Injector No.2	3-11, 18	2-13	10711
C 24	C 24   Injector No.)	3-10	12-13	1153
C 25	C 25 VV Solenoid	3-6, 10, 46	2-7, 13	1153
C 26	C 26 Diagnosis Connector	3-7, 11	12-7, 13	1162
C 27	27 Nail Pressure Suite	3-3, 11, 12, 18, 21, 23, 43	12-13	11095
C 28	28 Waterfall Hint	3-44, 47	1-7, 13	11203
C 29	29 Knock sensor No.1	3-6, 11, 14, 18	2-7, 13	10737
C 30	30 Water Temperature Cender Purge	136, 11	2-7, 13	1166
C 31	31 Magnet Coat & Thick Sensor	3-45, 46	3-7, 13	11428
C 32	32 Ignition coil No.1	3-52	2-7, 13	10916
C 33	C 33 Ignition Coil No.2	3-3	2-7, 13	10846
C 34	Ignition Inno M1.3	3-3	2-7, 13	1216
C 35	35 Pilot, position sensor	3-3	12-7, 13	1246
C 36	C 30 SCV	3-5, 11, 14, 17, 54, 28	12-7, 13	1071
C 37	37 Purpos Pulp Ta	3-10	3-9	1144
C 38	38 Ignitor	13-20, 38	3-7, 13	1114
C 39	39 crank position sensor	36, 1	27, 13	11028
C 40	40 Ignitor	3-6, 1, 16, 18, 43	2-7, 13	10447
C 41	41 Ignitor	3-3, 5, 13, 29, 44, 46	3-7, 13	11653
C 42	C 42 Condenser (Radio)	3-6, 11	2-7, 13	11263
C 43	13 Throttle Control Computer (JZ-GTE)	3-3	2-7, 13	10843
C 44	44 J/C No. 6	3-0, 27	2-20	11389
C 45	45 J/C No. 6	3-8, 25, 20	12-20	11661
C 46	46 ISCV	3-8, 16	2-20	11661
C 47	47 Injector No.4	3-4	2-10	11114
C 48	VSV	13-6, 9	2-7, 10	11152
C 49	VSV (Komba/Water)	3-6	2-10	11146
C 50	50 dynost clutch speed sensor	3-6	2-10	1158
C 51	51 Toral start switch	3-16	2-10	11156
C 52	52 A/T speed tip C	3-16	2-10	11332
C 53	53 RCT solenoid	3-16	2-10	1166
C 54	54 backup lamp snock	3-16	2-10	10891
C 55	55 Meter Pete Sensor (M/T)	3-16	2-10	11142
C 56	56 Diagnosis Connector	3-9, 01	2-10	11143
C 57	57 Condenser (Radio)	13-3, 8, 16, 21, 28	2-10	11195
C 58	58 Ignitor	3-3	2-10	10843
C 59	59 Injector No.3	3-3, 9, 29, 41	2-10	11653
C 60	60 Injector No.2	3-0	2-10	11153
C 61	61 Injector No.	3-9	2-10	11153
CG2	CG2 Supplementary valve motor	3-8	2-10	1116
C 62	C 62 Throttle position key	3-27	2-10	1145
C 63	63 Magnetic clutch lock sensor	13, 8, 16, 26	2-10	11261
C 64	64 oil pressure switch	3-28	2-10	11016
C 65	65 Ignitor NU	3-44	2-10	11353
C 66	66 Sun throttle position sensor	3-9	2-10	11153
C 67	67 VVT solenoid	3-27	2-10	10711
C 68	68 Ignition Wld	3-9	2-10	11162
C 69	69 Ignition Coil No.2	3-3	2-10	11246
C 70	70 Ignition Coil No.3	3-3	2-10	11246
C 71	71 Water Kunbancha Shinzo Gauge	3-3	2-10	11246
C 72	72 Water humidity sensor	3-45	2-10	11246
C 73	73 crank position sensor	3-8, 16	2-10	11246
C 74	74 Caminp flow meter	3-8, 16	2-10	11246
C 75	75 sensor	3-8	2-10	11246
C 76	76 VSV	3-8	2-10	11246



Please check the housing part number list in the WH repair manual to see if connectors need to be supplied.

Unauthorized reproduction prohibited



Index (in order of connector number)

connector IND.	品名	Wiring diagram for each system page	Arrangement diagram page	品番
	C8 neutral star switch	3.2, 5, E, 14, 17, 19, 20, 22, 37, 24, 7		11832
	C9 ECT solenoid (2WD)	3-58, 41, 43, 45		10854
C 3 0	throttle position sensor	3-4	2-7	11261
C 3 2	Injector No.2	3-4, 20	2-4, 7	11261
C 3 3	Injector No.2	3-6, 14, 24	2-7	11261
C 3 4	Injector No.2	2-4	2-1	11261
C 3 5	Injector No.2	3-3, 7, 14, 15, 22, 22, 23, 24, 43, 7		11261
C 8 5	Engine Control Lamp/Indicator (15-FE)	3-6	2-7	11745
C 8 7	Carrot control computer (1G-FE)	3-3, 4, 20, 46	2-19	11745
C 8 8	88 Backup lamp switch (M/T)	3-4, 20, 29	2-19	11745
C 3 9	skater	3-37	2-4	11442
C 3 9	Folk Template Senna	3-3	2-4	11400
C 3 1	Injector No. a	3-46, 46	2-4	11428
C 3 2	Injector No. a	3-4	2-1	11133
C 3 3	33 Non-juctor No.6	3-4	2-4	11133
C 3 4	34: NokseV.1	3-4	2-4	11133
C 9 6	VSV	3-44, 47	2-4	11563
C 9 7	Diagnosis Connector	3-6	2-3	11563
C 9 8	Injector No.1	3-3, 5, 20, 21	2-6	11295
C 9 9	Injector No.2	3-20	12-1	10737
C 1 0	Injector No.3	3-4	2-4	11153
C 1 0	ISC	3-4	2-4	11153
C 1 0	21031 Throttle position sensor	3-4	2-4	11153
C 1 0	Magnetic clutch	3-4, 20	2-4	10711
C 1 0	Ice Nobliator	3-28	2-4	11271
C 1 0	sensor	3-4	2-1	11150
C 1 0	English language server	3-4	2-4	11028
C 1 0	Ignitor	3-4	2-4	11163
C 1 0	Ignition switch	3-4, 29, 44, 40	12-4	11028
C 1 0	capacitors (radio)	3-3	2-4	11136
C 1 3	Emission control computer (21-TE)	3-12, 29, 30	2-19	11390
C 1 3	Emission control computer (2L-TE)	3-12, 29, 30	2-19	11391
C 1 3	Farnil Filter	3-4	2-16	11218
C 1 3	Farnil Filter	3-4	2-16	10837
C 1 3	Farnil Filter	3-4	2-16	11156
C 1 3	turbo ranger sensor	3-12	2-16	10845
C 1 4	O/D Solenoid	3-17	2-16	11156
C 1 4	Neutral Scoot Switch	3-3, 12, 19, 22, 30, 37, 38, 41, 45	2-16	11392
C 1 4	Oil pressure switch	3-16	2-16	10739
C 1 4	VSV (RGR)	3-12	2-16	11132
C 1 4	VSV No.2 (suction aperture) C145	3-12	12-16	11149
C 1 4	Water temperature sensor	3-12	2-15	10737
C 1 4	starter	3-3	2-15	1154
C 1 4	glow plug	3-12	2-16	-
C 1 8	crank position sensor	3-12	2-16	11182
C 1 8	Electromagnetic spin	3-12	12-16	11286
C 1 8	150 Timer control valve	3-12	2-16	11038
C 1 5	V&P	3-12	2-16	11278
C 1 5	VRT	3-12	2-16	11163
C 1 5	Pistle Position Sensor C154	3-12, 33	2-16	10711
C 1 5	Diesel Engine Revolution Fusion Sensor	3-12	2-16	11260
C 1 5	Fuel bulging barage sensor	3-12	2-16	10737
C 1 5	Water Sun Parameter Center Gauge	3-45	2-16	11428
C 1 5	Meta Speedmond (M/T)	3-5, 44	2-4	1149
C 1 5	Diagnosis: Nectar	3-12, 21, 22, 30	2-16	11195
C 1 5	ECTsolenoid	3-23	2-7	10699
D 1	battery	3-3	12-4, 7, 10, 13, 16	-
D 2	battery	13-3	24, 7, 10, 13, 16	-
E 1	battery	3-2, 3, 7, 29, 42, 47, 51, 52	24, 7, 10, 13, 16	-
F 1	Multitex Network Bothy Computer 2	3-34, 36, 44, 48	3-18	11058
F 1	Option Connector	3-21	2-18	11031
F 3	Vacuum indicator	3-33	2-18	10825
F 4	J/C No. 5	31, 8, 11, 13, 21, 22, 24, 34, 44, 2-18		11162
F 4	J/C No. 5	3-48, 51, 52		-
F 5	J/C No. 9	3-7, 15, 16, 18, 21, 24, 26, 33, 43, 2-18		11352
F 6	Absorber control consumer (Skyhook)	3-44, 45, 52, 52		-
F 7	DLC3 (1G-FE, 1JZ-GSE)	3-7, 15, 22, 25, 32	2-18	11408
F 7	DLC3 (1G-FE, 1JZ-GSE)	3-9, 11, 12, 15, 15, 18, 21, 22, 26, 16		11417
F 7	DLC3 (1G-FE, 1JZ-GSE)	3-50, 33, 43		-

connector No.	Part name	Wiring diagram for each system page	Wiring diagram page	品番
F 3	Tire pressure warning switch	13-30	2-18	10825
F 3	Rear fog lamp switch	13-30, 51	2-18	10533
F 3	10Mirahi Tarswitch	3-41, 50	2-18	10797
F 1 1	Power steering computer	3-19, 44, 46	3-18	10787
F 1 2	Cruise control computer	3-14, 18, 32, 43, 44, 45	2-18	11381
F 1 3	13 Stop Thump Switch	3-5, 7, 9, 10, 14, 15, 16, 17, 192-19		11118
F 1 4	14, Key gok solenoid & key unlock warning switch	13-22, 23, 25, 27, 31, 32, 43, 48		-
F 1 5	15 Ignition switch	23-17, 31	2-18	10795
F 1 6	1st, ignition key lighting	3-2, 3, 4, 3, 0, 10	2-18	11613
F 1 7	Steering sensor	13-19	2-18	10065
F 2 0	Combination switch	3-15, 23	2-18	11614
F 2 1	Combination swing	3-35, 41	2-18	11599
F 2 2	Combination switch	13-39, 63	2-18	11615
F 2 3	Airbag (unryo)	3-29, 44, 45, 45, 47, 48, 50, 51, 2-18		11671
F 2 3	Airbag (unryo)	3-53		-
F 2 3	Airbag (unryo)	3-21	2-18	10650
F 2 3	Airbag (unryo)	3-24, 30, 32, 39, 41, 45, 46	2-19	11146
F 2 3	Airbag (unryo)	3-6, 8, 10, 14, 16, 17, 18, 23, 22, 2-19		11218
F 2 3	Airbag (unryo)	13-29, 43, 44, 42		-
F 2 3	Airbag (unryo)	3-5, 8, 10, 14, 15, 16, 18, 22, 23, 2-19		11219
F 2 3	Airbag (unryo)	3-24, 25, 29, 32, 44, 46		-
F 2 7	Center coat bag sensor	3-21, 45, 46	2-19	11681
F 2 9	A3S deceleration sensor 33	3-34	2-19	11636
F 2 9	A3S deceleration sensor 33	3-30	2-19	11182
F 3 1	A3S computer	3-21	2-20	10850
F 3 1	A3S computer	3-10, 15, 32, 44, 26	2-18	11218
F 3 2	ABS computer	3-15, 32, 47	2-18	11219
F 3 3	ABS computer	3-10, 15, 32, 47	2-18	11220
F 3 4	ABS computer	3-32	2-18	11221
F 3 5	ABS & TRC Computer	3-7, 24, 25, 30	2-18	11424
F 3 6	ABS & TRC Computer	3-7, 13, 24, 26, 30	2-18	11399
F 3 7	TABS & TRC/Plinta	3-13, 14, 17, 22, 24, 26, 30, 41	2-18	11390
F 3 8	Scottie Valve Knee Sea Driver	3-44, 45		-
F 3 8	J/C No. 1 G	3-33	2-20	11423
F 3 8	J/C No. 1 G	3-2, 4, 6, 5, 10, 13, 14, 15, 16, 18, 2-20		10845
F 3 8	J/C No. 1 G	3-20, 22, 23, 24, 26, 30, 31		-
F 3 8	J/C No. 1 G	3-33, 34, 35, 41, 62, 14		-
F 3 8	J/C No. 1 G	3-2, 3, 4, 5, 9, 10	2-20	11661
F 3 8	J/C No. 1 G	3-41	2-20	11542
F 3 8	J/C No. 1 G	3-6, 9, 10, 13, 14, 15, 24, 26, 29	2-20	11542
F 3 8	J/C No. 1 G	3-30, 32, 36, 43, 44, 47		-
F 3 8	J/C No. 1 G	3-13, 28	2-19	10840
F 3 8	J/C No. 1 G	3-24, 26, 30	26, 6, 13, 15	11608
F 3 8	J/C No. 1 G	3-22, 23, 24, 25, 30	2-3, 6, 9, 12, 15	11413
F 3 8	J/C No. 1 G	3-15	2-12	10789
F 3 8	J/C No. 1 G	3-4, 6, 8, 10, 13, 28, 29, 43, 49, 2-3, 6, 9, 12, 15		11661
F 3 8	J/C No. 1 G	3-48, 52		-
F 4 9	Optional connector	3-21	2-3, 6, 9, 12, 15	11028
F 5 0	Washer motor	3-38, 43	2-3, 6, 9, 12, 13	10981
F 5 1	5 ABS Med Domincor FKLH	3-22, 23, 24, 23, 30, 32	2-3, 6, 9, 12, 15	11002
F 5 2	J/C No. 1 4	3-15	2-18	11542
F 5 3	53 Engine compartment R/B (ABS)	3-32	2-18	10916
F 5 4	Throttle Control Computer (1JZ-GTEI F 55)	3-27, 44	2-21	11390
F 5 5	DLC3 (1G-FE, 1JZ-GE)	3-5, 7, 14, 15, 20, 21, 22, 23, 24, 2-18		11665
F 5 6	F 56 ABS hinge (4WD)	3-43		-
F 5 7	ABS computer cable	3-23	2-19	11182
F 5 8	ABS Shooter	3-22	2-20	11426
F 5 9	ABS & 1W Coconbinia	37, 15, 43, 44, 48	2-20	11390
F 6 0	ABS & 4WD computer	3-23	2-20	11424
F 6 1	ABS & 4WD computer	37, 33, 44, 46	2-20	11391
F 6 2	condition commercial low pressure side switch) Pressure	3-7, 23, 44, 47	2-27	11390
F 6 3	ABS actuator... Switch Air	3-52	2-3, 6, 18	11149
F 6 4	Engine control computer (1G-FE) 66	3-22, 23	2-3, 6, 15	10691
F 6 5	Heater idle up switch (2 days a day)	1-4, 17, 21, 29, 44, 46	2-15	11738
F 6 6	367/Rake Keorning Relay	3-12	2-15	10698
F 6 7	Ni Mission Control... 2) JL-TEI	3-44	2-18	10801
F 7 0	Steering sensor (VSC)	3-12, 31, 31, 14, 53, 2-13		11392
F 7 1	Washer motor (Haraon)	3-15, 33	2-13	11581
F 7 1	Washer motor (Haraon)	3-43	2-3, 6	10681

5



Please check the housing part number list in the WH repair manual to see if the connector is supplied.

(96/09 part number 67476)


Unauthorized reproduction prohibited

Index (in order of connector number)

Connector No.	Part	Wiring diagram for each system page	配線図 page	
C	Outer mirror switch	3-25	2-18	1430
C	2) Conlight Scanner	3-47	2-18	1433
C	コンライトスキャナ	3-28	2-15	11330
G	combination arch (analog)	3-3, 7, 9, 13, 15, 17, 19, 20, 22, 23, 2-19		
G	Amblination meter analog	3-3, 8, 7, 9, 13, 15, 17, 19, 20, 22, 219		11114
G	Bi-Combination Maker Analog	3-3, 7, 9, 13, 15, 17, 19, 20, 22, 13-23, 24, 26, 29, 30, 31, 34, 39	2-19	11113
G	Combination meter (analog)	3-41, 43, 44, 50, 51, 52		11116
G	Headlamp level switch	3-42	2-19	10825
G	Near vinyl, fire switch	3-60, 52	2-19	10797
G11	exhaust sensor	3-9, 11	2-19	10824
C12	Tong plate swing lever type)	335, 39, 41, 45	1087	
G18	Console box lamp	3-60	2-19	11290
G 14	バックアップスイッチ	3-25, 26, 31, 33, 50	2-19	11471
G15	Baku Sharekumi Switch (FTCS)	3-27, 50	2-19	11494
C	16 Pattern select switch (ECT)	3-14, 27, 18, 20, 44, 40, 50	2-19	
C 170	Remain switch Shift indicator	3-14, 17, 18, 20, 44, 46, 50	2-19	10795
G 18	Shift lock control relay (straight type A/T)	3-17	2-19	11319
G 19	cigarette lighter lighting	13-50	2-19	11158
G20	cigarette lighter	3-35	2-19	10750
G2	ハザードスイッチ	3-50	2-19	10825
C22	hazard switch	3-44, 46, 50, 51	2-19	10801
C 23	Clock	3-35, 50	2-19	11013
G21	Razin stereo	3-37, 38	2-19	10996
G25	Geo & Stereo	3-37, 38, 50	2-19	10997
G 26	ユアンミンビンライ	3-28, 34, 34, 46, 50	2-19	11290
G 27	Yuanminbin-Lai	3-5, 7, 9, 13, 15, 17, 19, 20, 22, 23	2-19	11031
G28/C No.5		3-28	2-20	10807
G30	Coilbox rear sensor	3-28	2-20	10825
C	31 Glove box lamp	3-50	2-20	11096
G32	Rokugaichi damper cutting servo motor	3-28	2-20	10808
G 33	Abilifer...	3-52	2-30	13737
G 34	Main switch and Shino indicator lighting (gate type A/T)	3-14, 16, 19, 45, 50	2-19	11493
G35	A/T) Shift lock control relay (gate A/T)	3-14, 16, 20	2-19	11533
G36	swing grill	3-28, 50	2-19	10795
G37	radio stereo	3-40, 42, 50	2-19	11251
G 38	Marle V Station	3-39, 4, 44, 46	2-19	11330
G39	Multi AV Station	3-39, 4	2-19	11533
G 40	J/C No. 2 1	3-38, 40, 42	2-20	10837
G41	combination meter (digital)	3-5, 7, 15, 22, 24, 29, 32, 33, 2-13		
G42	combination meter (digital)	3-13, 16, 45		
G 43	コンビネーションメータ (デジタル)	3-7, 15, 19, 20, 21, 24, 33, 45, 48	2-19	11119
G 44	コンビネーションメータ (アナログ)	3-49, 5		
G 45	コンビネーションメータ (デジタル)	3-3, 5, 11, 10, 19, 20, 22, 24	2-19	11332
G 46	コンビネーションメータ (デジタル)	3-31, 33, 34, 39, 41, 43, 46, 50		
G 47	コンビネーションメータ (デジタル)	3-51, 52		
G 48	コンビネーションメータ (デジタル)	3-15, 47, 50	2-19	11336
E	Regex Network Master Switch	3-34, 35, 17	2-13	11459
E	2) Power Window Motored	3-37	2-23	11011
H	31 Door control switch (Keyikegekiba) (Cresta)	3-31	2-23	10735
E	4) Connect the front speakers	3-37, 38, 40, 42	2-23	10835
H	5C No.13 (Crestan)	3-34, 35, 41	2-23	11529
H	6) Remote Control Actuator RH	3-35	2-23	10735
H	7) 1) Mote control actuator...RH Mirror heater RH	3-25, 41	2-23	11632
H	8) Tweeter	3-37, 38, 40, 42	2-23	11013
H	9) KH (Cresta)	3-49	2-23	11146
H 10	Nakontro Luota FR-RH	3-34	2-23	11150
H 11	11) Courtesy lamp JR/RH (Mark II, Chaser)	3-44	2-23	11148
H 12	Door control switch (Eleven Inma Blade) (Mark I, Chex...)	3-34	2-23	10735
I	1) Power window motor FR-1H	13-35	2-23	10860
J	2) Multitex network switch FR, li	3-35	2-23	10797
I	3) Front speaker	13-37, 35, 40, 42	2-23	10696
I	4) ツイーター LH	13-37, 38, 40, 42	2-23	11013
I	5) For remote control...le actuator	3-25	2-23	10796
I	6) Remote Control Tectunia LH & Mihi Beatale	3-25, 41	2-23	11632
I	autosharpama	3-10	2-23	11148
I	Door control motor FR/H	3-31	2-23	2150

connector No.	Part	Wiring diagram for each system page	Wiring box contents page	
J	1) Power window motor RRR/RH	3-35	2-23	10860
J	2) Rear speaker RH	3-37, 38, 43, 42	2-23	10835
J	Multi Rex Network Suit RRR-RH	3-35	2-23	10797
J	Odob control unit KR, RH	3-4	1-23	1-150
K	1) Power window...RR/RH	3-35	2-23	10860
K	2) Rear speaker 1!	3-37, 38, 42, 42	2-23	10835
K	3) Multitex Net Quick RRLH	3-35	12-23	10797
K	4) Door Control Ester KRLH	3-34	2-23	11150
L	1) Airbag RH (Seat)	3-21	2-23, 25	11790
L	2) Buckle switch KII (no power seat!)	3-31, 44, 45	2-23	10795
L	3) Exhaust sensor	3-44	2-23	10833
L	4) Courtesy fitted RRH	3-31, 34, 45, 46, 47, 49	12-23	10871
L	5) side door bag sensor	3-21, 45, 45	2-28	11661
L	6) Huppstonoid FR-RH	3-31	2-24	11359
L	7) ABS speed sensor RRR/RH	3-22, 23, 24, 26, 30, 32	12-24	11060
L	8) Courtesy switch RR/RH	3-34, 45, 46, 49	2-24	10871
L	9) J/C (As No.2)	3-4, 6, 8, 13, 15, 31, 34, 35, 36	2-24	11542
L	10) J/C No. 1 7	3-37, 42, 43, 51		
L	11) Afsoba Control Actuator RR, RII 2/	33, 48	2-24	11542
L	12) C 190.18	3-19	12-24	10789
L	13) 1137 Nishia Pump	3-31, 48, 51	2-24	11542
L	14) Fansoda	3-18, 8, 10	2-24	10655
L	15) Center mesh lamp (bangle) Rear	3-44, 40	2-24	10891
L	16) seat bar heater & relay	3-48	2-24	11148
L	17) Luggage room lamp	3-36	2-24	13789
L	18) lamp Punor rear sensor	3-49	2-24	11148
L	19) Hug gauge opener relay	3-44, 47, 45	2-24	13803
L	20) Door control receiver	3-34, 40	2-24	11371
L	21) Rear combination runRH	3-31	2-21	11175
L	22) luggage room lamp switch	3-37, 18, 51	2-24	11587
L	23) Rear condom lamp!	3-34, 40	2-24	10825
L	24) Center Stop Lamp (LED) (Markle, Crestan)	3-37, 48, 51	2-24	11587
L	25) Noise filter (stop lamp)	3-45	2-24	11060
L	26) License Pre-Trump LH (Chaley)	3-48	2-24	10825
L	27) License Pre-Trump RH (G'inar)	1-18	2-20	11158
L	28) Center stop ring (LED type) (Chaser)	3-18	2-20	11148
L	29) J/C No. 1 8	1-48	2-25	11000
L	30) Luggage opener solenoid crease	3-34, 18	2-24	11502
L	31) Courtesy switch FR-RE (Mark II, Chaser)	3-34	2-24	10855
M	1) stereo power amplifier	3-31, 34, 45, 46, 47, 49	2-25	1026
M	2) Steropower amplifier	3-40, 12, 40	2-23	10818
M	3) Airbag (seat)	3-40, 42, 50	12-23	10807
M	4) Buckle switch H	3-21	12-23	11790
M	5) Courtesy switch FR-LH	13-31	2-23	10660
M	6) Lap belt solenoid door	3-31, 13, 16, 49	2-23	10871
M	7) RII Side airbag Kinnishi H	3-31	2-23	11309
M	8) ABS speed sensor/RR/LE	3-21	2-23	11581
M	9) Zuan Switch, LH	3-22, 23, 24, 26, 30, 32	12-21	11060
M	10) Absorber Control Actuator RR LH	3-34, 15, 16, 40	2-24	10871
M	11) woofer speaker	3-16	2-21	10796
M	12) yawfley, sensor	3-4, 12	2-24	10935
M	13) Navigation Computer	3-33	2-24	10912
M	14) Navigation Computer	3-38, 41, 44, 45	2-24	11542
M	15) Buckle switch L (Mark, Tennis)	3-38, 11	2-21	10791
M	16) Courtesy switch FRLH (mark, chinisa)	3-31	2-23	10795
N	1) フォイテモーター	3-34, 45, 46, 49	12-23	11036
N	2) Front bar decal motor	3-36	2-25	10825
N	3) Rear perch can...ta...	3-36	2-25	11625
N	4) power seat swing	3-35	2-25	10807
N	5) Buckle switch RH (with lumbar support)	3-31, 44, 47	12-25	10858
N	6) recliner motor	3-35	2-25	10825
N	7) Lumbar Support Neets	8-35	2-25	10825
N	8) Power seat switch (electric ramp...support) ; H;	3-36	2-250	1000
O	1) Vanity lamp&H	3-49	2-32	11360
O	2) Sliding Roof Switch & Map Lamp (Eek II Bunixer)	3-31, 49	2-22	0387
O	3) Illiator Tsukon Roly Sea	3-31	12-22	12801
O	4) Bertie Lampre	3-18	2-20	11359
O	5) Room lamp	3-49	2-22	10935
O	6) noise filter...(defogger)	3-34	2-22	11259
O	7) map lamp	3-49	2-22	10936
O	8) Sliding Husuit & Fucontre Mulamp & Sop Lamp(Kunsta)	3-31, 49	2-22	11533

Please check the housing part number list in the WH repair manual to see if connectors need to be supplied.

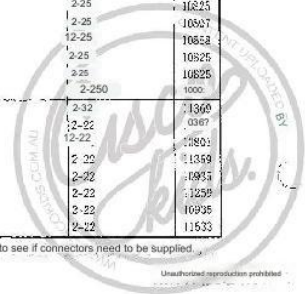



Index (in order of connector number)

connector No.	部名	Wiring diagram for each system page	wiring diagram page
U 0 6	Rear room lamp LE	3-49	3-22
U 0 10	リヤルームランプJ/B	3-49	2-22
U 11	Blomfi Room Lamp & Map Lamp	3-49	2-22
P 1	Rear combination lamp	3-37,48,52	2-34
P 2	total 2] Front plate lamp mark Cresta	3-18	2-21
P 3	Ya combination lamp LU	13-33,48,51	2-24
P 4	Stilage room lamp switch (Cresta)	3-49	2-24
R 1	Amix damper switching	3-28	2-10
R 2	mode damper switching servo motor	3-28	2-15
S 1	blower motor	3-28	2-20
S 2	Allory Motor Nintro...	3-28	2-20
S 3	Broly Motor Nintroller	3-28	2-20

connector No.	部名	Wiring diagram for each system page	Wiring diagram page
5	50 Cowl rear to 1/5 No.1	3-5,7,12,14,15,17,19,20,23,228	3-26,23,20,30,32,34,34,35,36,30
5	カウルワイヤ J/B No.1	3-41,13,14,15,46,47,48,50,51,52	5,3,1,9,10,13,14,15,16,17,18,19,28
5	Akauru wire to J/B No.	5,20,22,23,35,27,28,31,32,33,34	3-35,35,41-13,44,45,47,48,50,52
5		3-5,7,1,12,14,15,26,21,22,23,218	3-24,26,28,29,30,32,36,43,44,47
5		3-33,52	

connector No.	部名	Wiring diagram for each system page	配線図表図 page
FA	Owlwire 10 Driver Side J/B	3-5,7,14,20,31,34,35,44,45,45	8-20
FB	"Cowl Fire Lo Arrival Side"	3-47,49	
FC	Cowl rear driver sign/R	3-1,6,6,2,10,12,14,10,18,15,20,12-20	
FD	Kaushwanoya to driver side/do	3-2,5,7,9,10,11,13,14,15,16,17,20	
FE	Cowl Wanyoa Lo Driver Side/B	3-18,19,20,21,22,23,24,25,26,27	
FF	Luma No.1: Driver side/3]	3-28,29,30,31,32,33,35,36,37,42	
FG	Non-strumnet panel wire driver side F/J/B	3-19,44,45,46,47,48,49,50,51,52	
FH	Instrument panel wire driver side J/L	3-2,3,6	2-20
FI	Pro Alinoya (K Liver)K/J/R	3-4,5,6,5,10,12,24,13,18,20,21	2-20
FJ	Floor Wanyoa: Driver Side J/	3-22,23,25,27,31,32,33,43,45,47	3-61
FK	"Carrot Room Main Wire Driver Side J/B"	3-31,34,49	2-20,22
FL	Carrot Loom Main Wire to Driver Side J/B	3-14,15,17,18,19,20,21,25,36,29,2-20	
FM	Cowl Wire to Driver Cad J/B	3-31,30,23,44,45,46,47,49,50,31	3-52
FN	Floor Sya to Driver...Cada J/B	3-7,15,21,28,29,34,37,38,40,42	2-20
FO	Engine room main wire lu J/B No.2	3-14,16,46,47,49	2-20,22
FP	Carrot Loom Main Wire 11 JR No.?	3-29,32,35,36,49	2-20,22
FQ	Carrot Loom Main Wire 1v J/B No.2	1-20,32,84,42,43,46,47,48,49,51	2-20,22
FR	*Katsuru Tweed 10 J/B No.2	3-2,35,47,48,50	2-20
FS	Custid LB No. 2	3-7,12,20,43,48,01	2-20
FT		32,45,47	2-20
FU		3-21	2-20,22
FV		3-2,3,22,47,51,32	2-3,6,9,12,15
FW		3-2,3,4,6,8,16,13,28	2-3,6,10,12,14
FX		3-3,12,28,39,42,48,51,52	2-3,6,5,12,15
FY		3-2,3,28,34	2-3,6,9,13,15
FZ		3-3,4,5,6,8,9,10,11,12,13,14,16	2-3,6,9,12,15
GA		3-18,20,22,23,24,28,27,28,30,39	
GB		3-15,16	
GC		3-2,4,5,6,7,8,10,12,13,14,16,18	2-3,6,9,12,15
GD		3-20,22,23,24,25,27,28,29,30,33,1	
GE		3-34,35,37,38,41,42,45,46,47,49	
GF		3-51,52	
GA	Instrument panel 7/B No.	3-14,17,15,20,25,35,45,46,50,52,219	
GB	Instrument panel wire to B No.	3-14,17,18,20,25,35,11,45,1,472-19	
GC	Instrument panel wire Lo/B No.3	13-40,50,51,82	
GD	10 Instrument panel rinoke Lo 1/8 No.3	3-3,5,9,13,14,18,17,18,19,20,2912-19	
GE	Instrument panel wire to 1/3 No.3	3-37,38,41,43,44,45,46,49	
GF	Instrument panel wire to 1/8 No.3	3-3,5,7,9,11,13,14,17,18,20,22,129	
GG	Instrument panel wire to 1/3 No.3	3-23,24,25,30,31,33,37,43,44,46	
GH	Instrument panel wire to 1/8 No.3	3-48,51	
GI	Instrument panel wire to 1/3 No.3	3-14,15,17,18,25,14,46,47	2-9
GJ	Instrument panel wire to 1/8 No.3	3-5,9,13,14,15,17,18,25,24	2-9
GK	Instrument Panel Wanyoa to J/B No.5	3-34,38,41,43,44,45,46	
GL	Cowl wire: 0/B No.5	3-38,39,41,44,45	2-19
GM	Gatsuru wire 0/B No.5	3-2	2-9
GN		3-29,47,48,50,52,52	28
GO		3-12,19,22,23,24,25,26,27,30,31,2-18	
GP		3-32,33,43,44,45,16,47	
GQ		3-5,7,9,10,11,12,13,14,15,16,2-18	
GR		3-18,20,21,22,23,24,26,29,30,33	
GS		3-36,43,44,45,40,32	

connector No.	部名	Wiring diagram for each system page	配線図表図 page
GA1	Engine room main wire "Engine room Tsuneya No.2	3-13	2-9,12
GA2	Engine room main wire to cowl wire	3-12,112,13,52	2-15
GA3	AF2 Engine room main rear (cowl ear)	3-7,13,15,19,28,23,32,53,41,43,2-18	3-11
GA4	Engine room main rear LU cowl wire	3-8,12,13,15,30,41,45,32	2-19
GA5	Engine room main wire to cowl fly	3-7,29,22,23,24,23,28,29,30,4312-13	3-44,45,43,47,52
CA1	Engine wire to engine room main wire	1-2,32	2-10
CF1	Engine wire to cowl wire	3-8,9,11,12,13,16,18,23,24,25,20	3-23,30,32,33,35,41
CF2	Conson Wight LC Cowl Wire	3-2,4,5,8,8,9,10,11,12,23,14,16,20	3-17,18,19,20,22,23,24,26,27,28
CF3	Engine wire to cowl rear	3-30,33,37,13,4,45,46	3-24,5,6,7,8,10,11,12,13,14,15,20
CG1	Engine wire to instrument panel rear	3-25,15,20,21,22,23,24,26,23,30	3-32,33,43
FA1	Kariya Lv Ranging Ha Main Wire	3-13,5,7,9,11,13,14,16,17,18,19,12-19	3-23,28,37,35,41,44,45,46,47
FL1	Kariya to Floor Wire	3-37	2-12
FL2	Cowl wire to floor sawyer	13-13,22,24,24,26,30,32,54,33	2-18,22
FSL	Cowl wire of cooler earring	3-4,6,8,10,34,35,18,51	2-18,22
FT1	harness to engine room relay block ASSY	3-21	2-20
FT2	Cowl rear Lo engine room Lining block ASSY	3-32	2-13
GF1	Instrument panel wire LU cowl wire	3-32	2-13
GF2	Instrument panel screwdriver 10 Cowl Wire	3-3,7,9,11,13,14,17,18,20,22,23-2,15	3-20,25,26,29,30,31,33,43,44,45
GF3	Instrument panel rear LU cowl fire	3-06,47,48,51,52	2-5,7,9,10,11,18,14,15,16,17,18,2-13
GM1	Instrument panel rear to floor rear	3-19,20,26,29,34,37,38,39,41,43	3-44,5,16,17,00
GM2	Instrument panel wire in Flobunlyadro 2	3-13,17,22,23,24,25,26,27,28,30,2,20,22	3-31,33,37,38,42,42,13,16
GM3	Instrument Panel Maya to Floriad, 2	1-47,31	3,31,37,35,10,12,44,45,47,25,2-13,22
GR1	Instrument Panel Wire to Kerall Earring Harness No.1	3-38,40,42	2-19,22
HFI	Front door RIU LU canal rig	3-40,41,12,10	2-22,22
HGF	Front door wire RIL to Wolf	3-38,39,40,41,44,40	2-22,22
HGI	Front dryer KH to instrument panel wire	3-28	2-21
IF1	Fend dop wire II to cowl wire	3-338,30,41,49	2-13,22
IF2	Control door wire 11 to instrument panel wire	3-81	3-13,22
IF3	fan wire in cowl wire	3-25,34,37,38,40,42,47	2-18,22
IJ1	Fairwire (u Rear door Anya Xc.1	3-34,35,41,49	2-23,22
IJ2	Fairwights co rear door wire NC.1	3-25,37,38,10,12	2-23,22
IMI	Flare wire "Floor Reitz No.2	3-21,45,47	2-23,22
IN1	Floor wire co sheet wire No.1	3-34,35,37,38,42,42	2-23
IN2	What is LPI floor seat? Drink panel (luggage compartment door) Wire No.1	3-34,35,37,38,46	2-23
IN3	Floor Wight No.2 L out wire	3-31,36,44,17	2-23,25
IN4	Floor light No.2 to cowl wire	3-37,42,48,49,51	2-24
IN5	MK1 Floor Rear No.2 to Rear Door Wide.2	3-15,22,23,34,28,360,31,32,34,35,2-20,22	3-37,38,45,46,44
IN6	MK2 Floor/Ritsu No.2 to Rear Door Wide.2	3-15,83	2-20,22
ML1	Floyd 21 (Antewire)	3-34,35,37,38,40,42	2-23
ML2	Furia Wireba O 2 L Freon Wide	3-31,35,37,48,43,42	2-23
QA	Front Win doubufuga switch wire 1a carrot roux	3-21	2-21
QA		3-21	2-21
QA		3-11	2-3,6,9,12,15



Please check the housing part number list in the WH repair manual to check if connector needs to be replenished.

(96/09 part number 67476)

Unauthorized reproduction prohibited