



ELECTRICAL WIRING ROUTING


□	: Location of Connector Joining Wire Harness and Wire Harness
▽	: Location of Ground Points

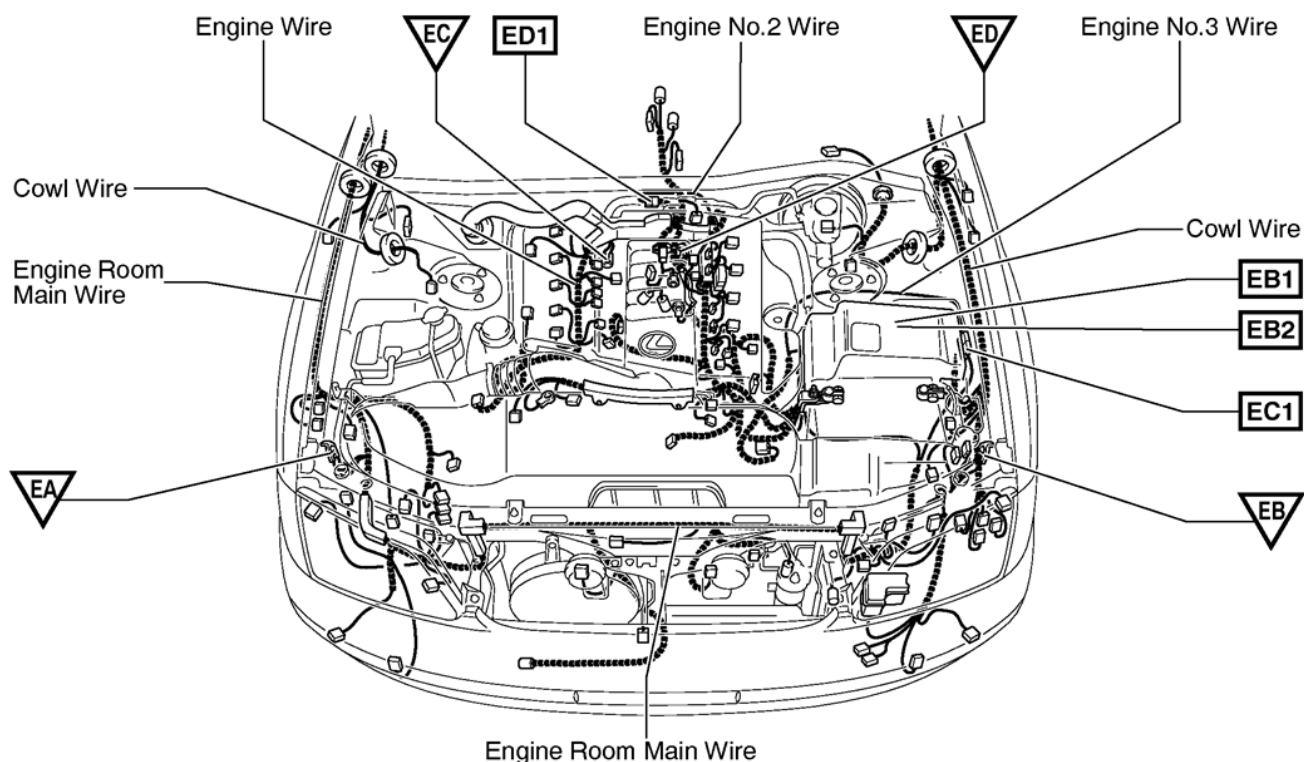

○	: Location of Splice Points
---	-----------------------------

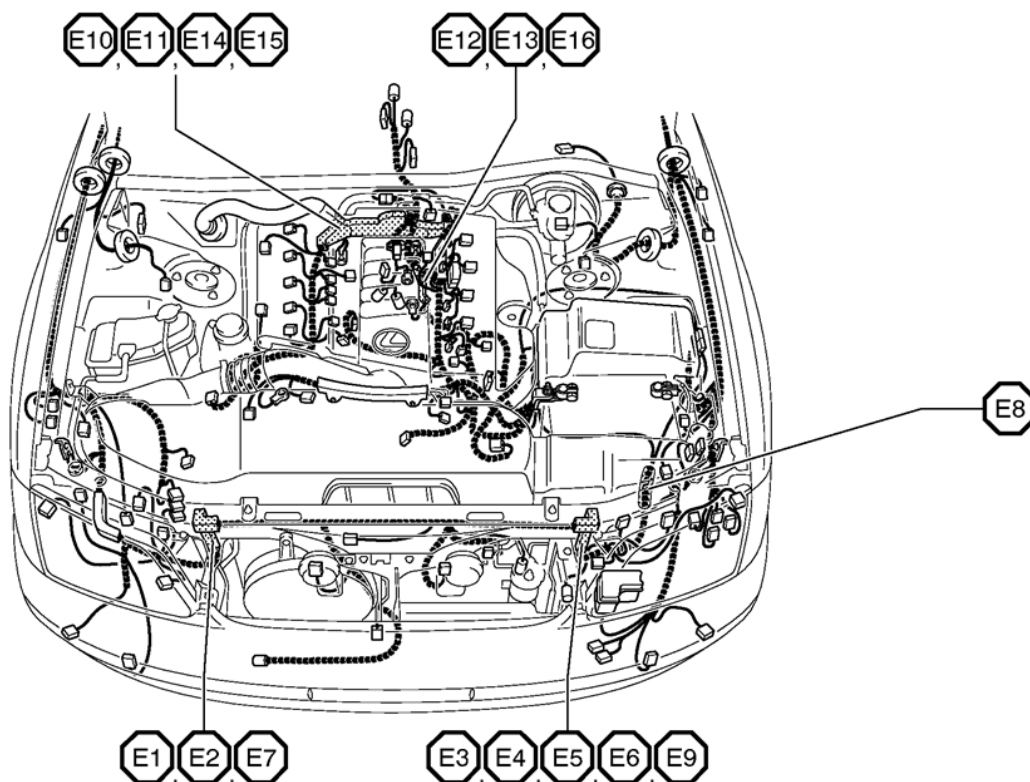

Connector Joining Wire Harness and Wire Harness

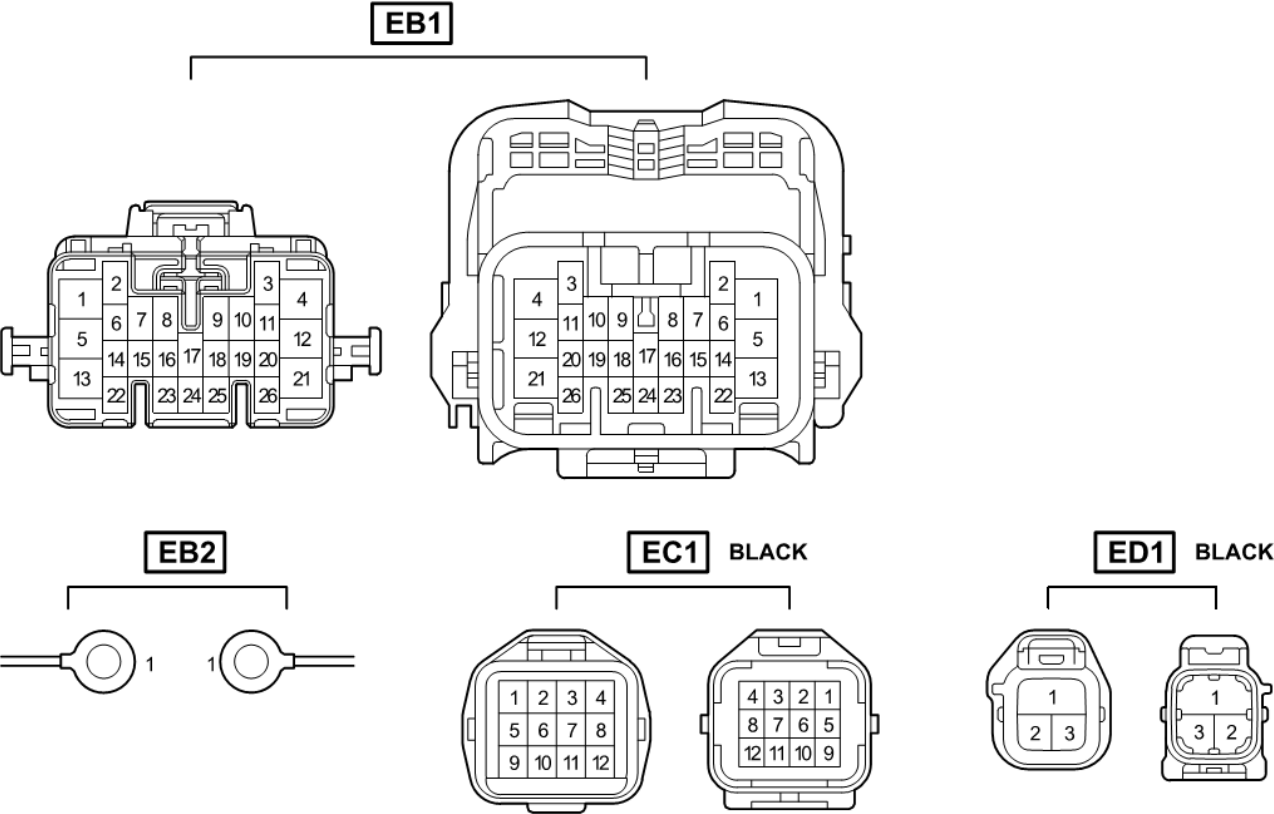


Code	Joining Wire Harness and Wire Harness (Connector Location)
EB1	Cowl Wire and Engine Room Main Wire (Under the Engine Room J/B)
EB2	
EC1	Engine No.3 Wire and Cowl Wire (Front Side of Left Fender)
ED1	Engine No.2 Wire and Engine Wire (Rear Side of Air Intake Chamber)


ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


[Instrument Panel 1]

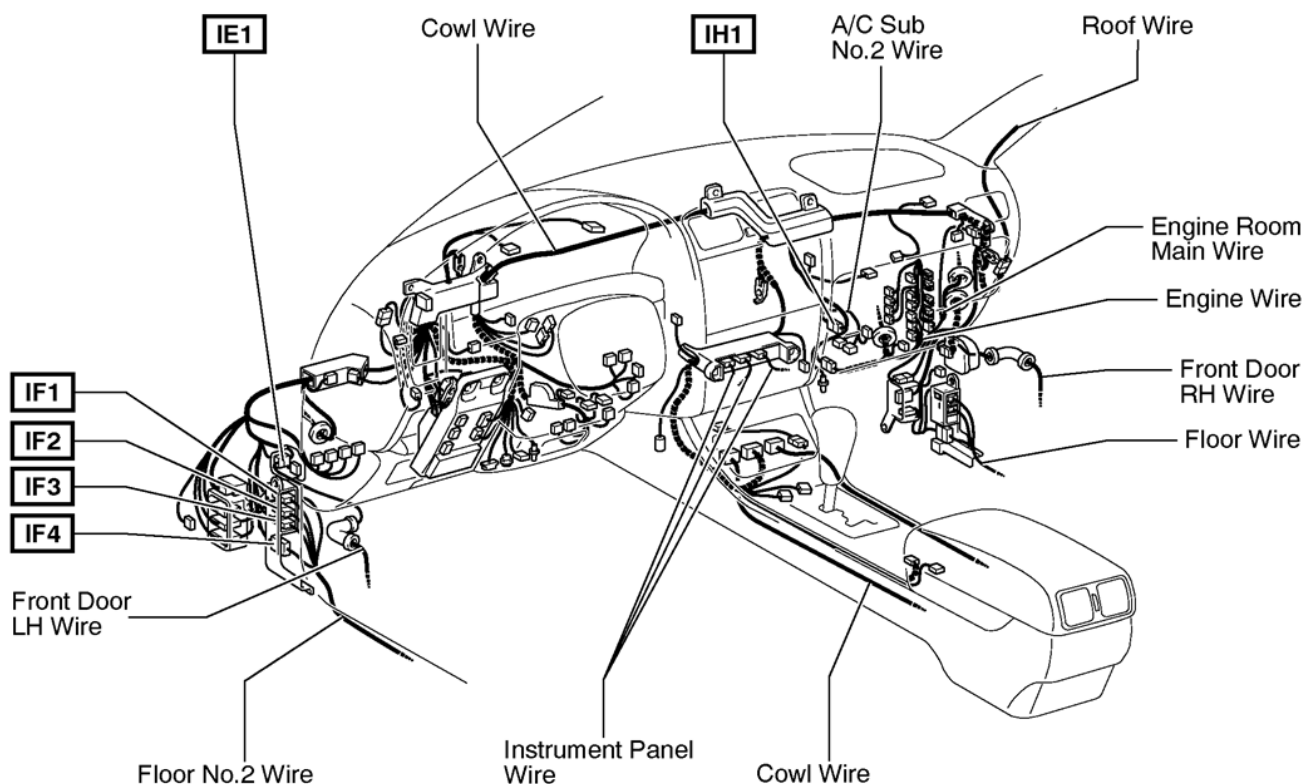

▽ : Location of Ground Points

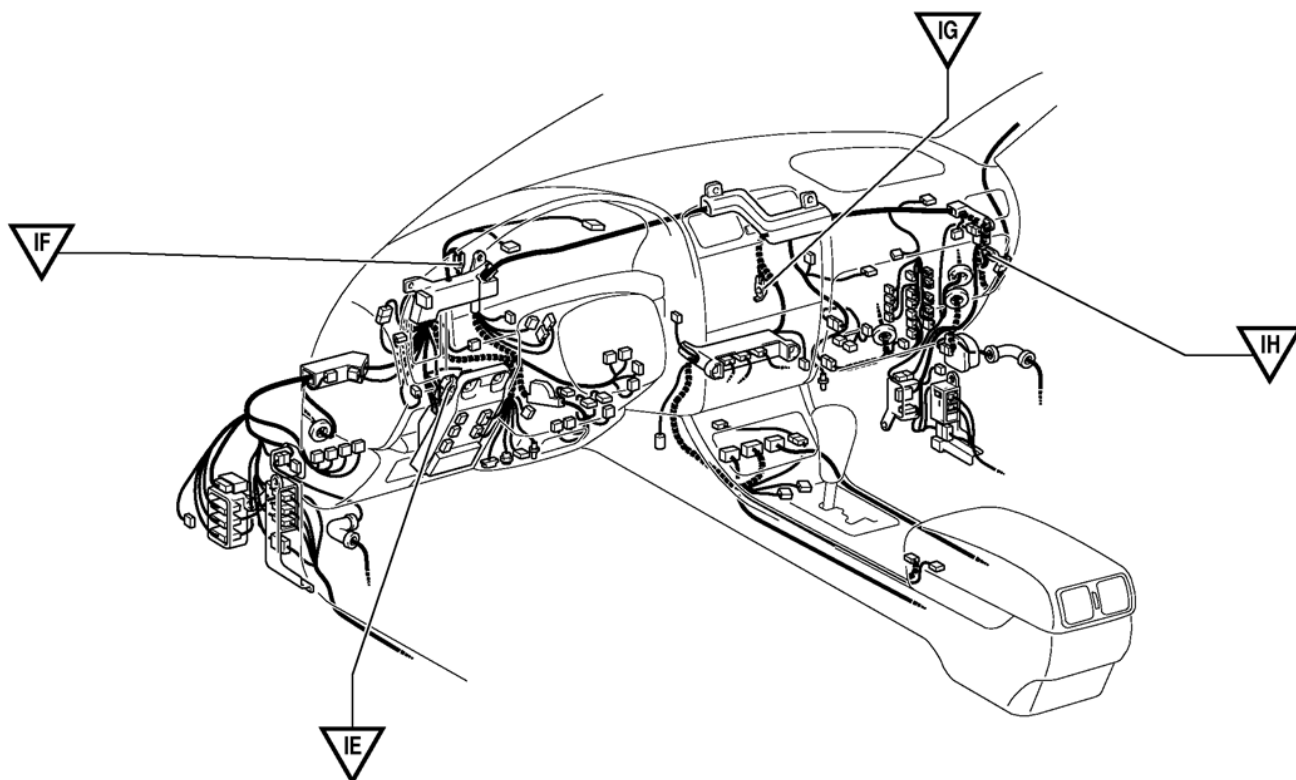

Connector Joining Wire Harness and Wire Harness

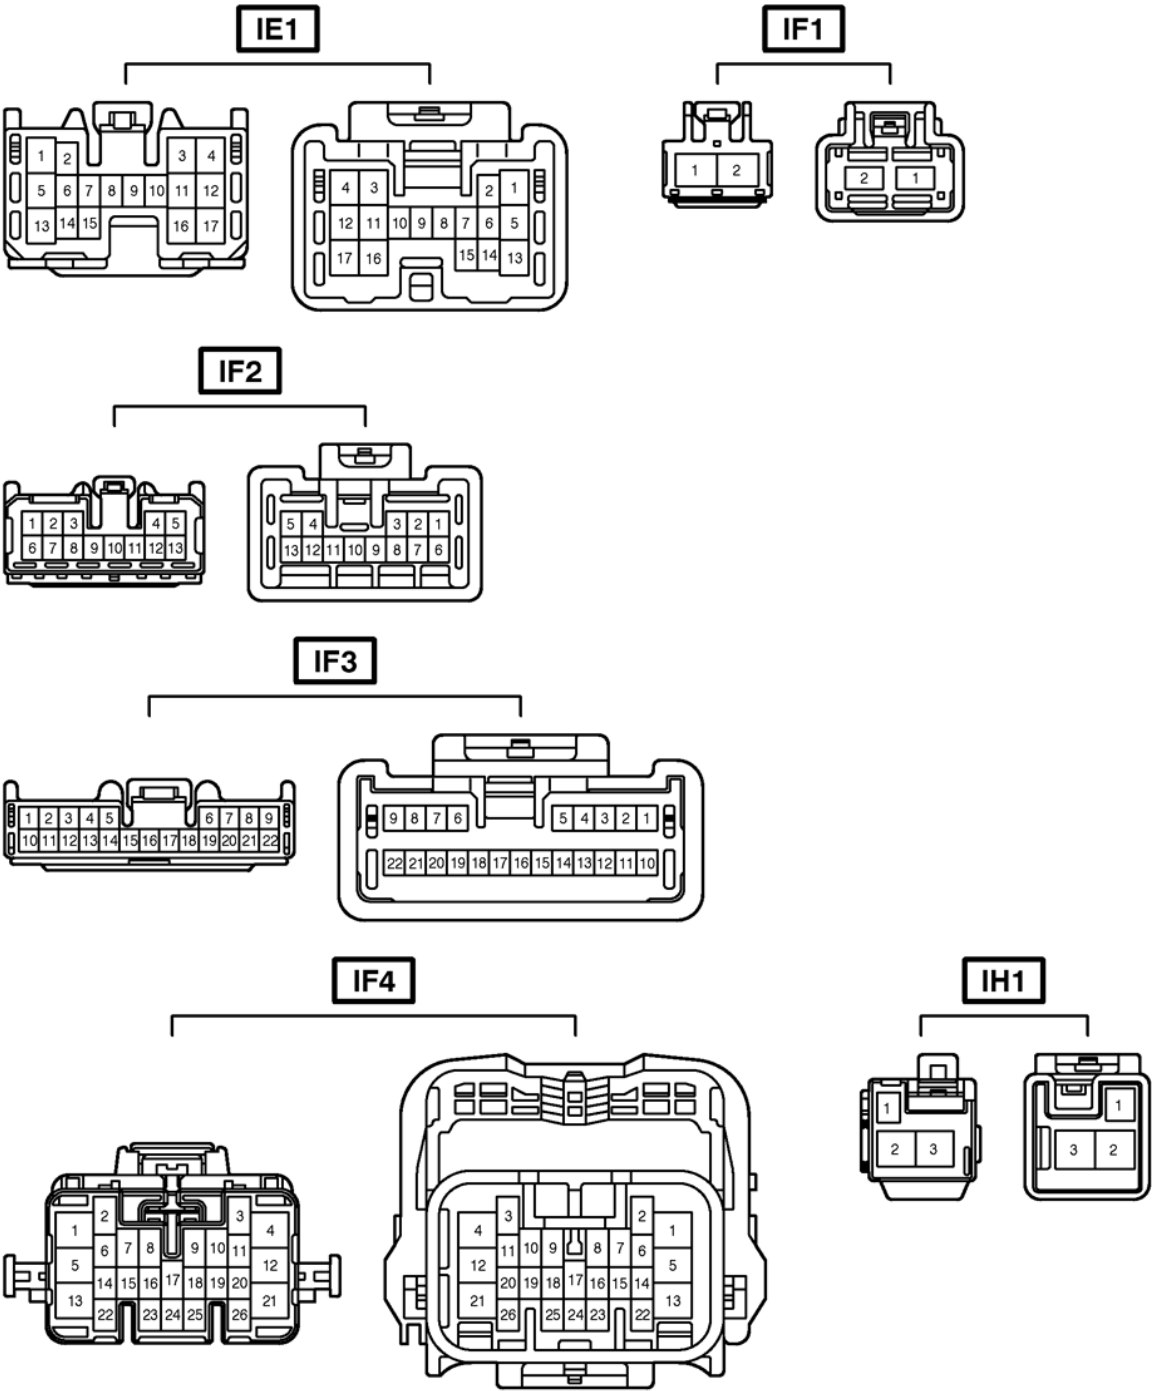


Code	Joining Wire Harness and Wire Harness (Connector Location)
IE1	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IF1	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
IF2	
IF3	
IF4	
IH1	Cowl Wire and A/C Sub No.2 Wire (Left Side of Blower Unit)


ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


[Instrument Panel 1]

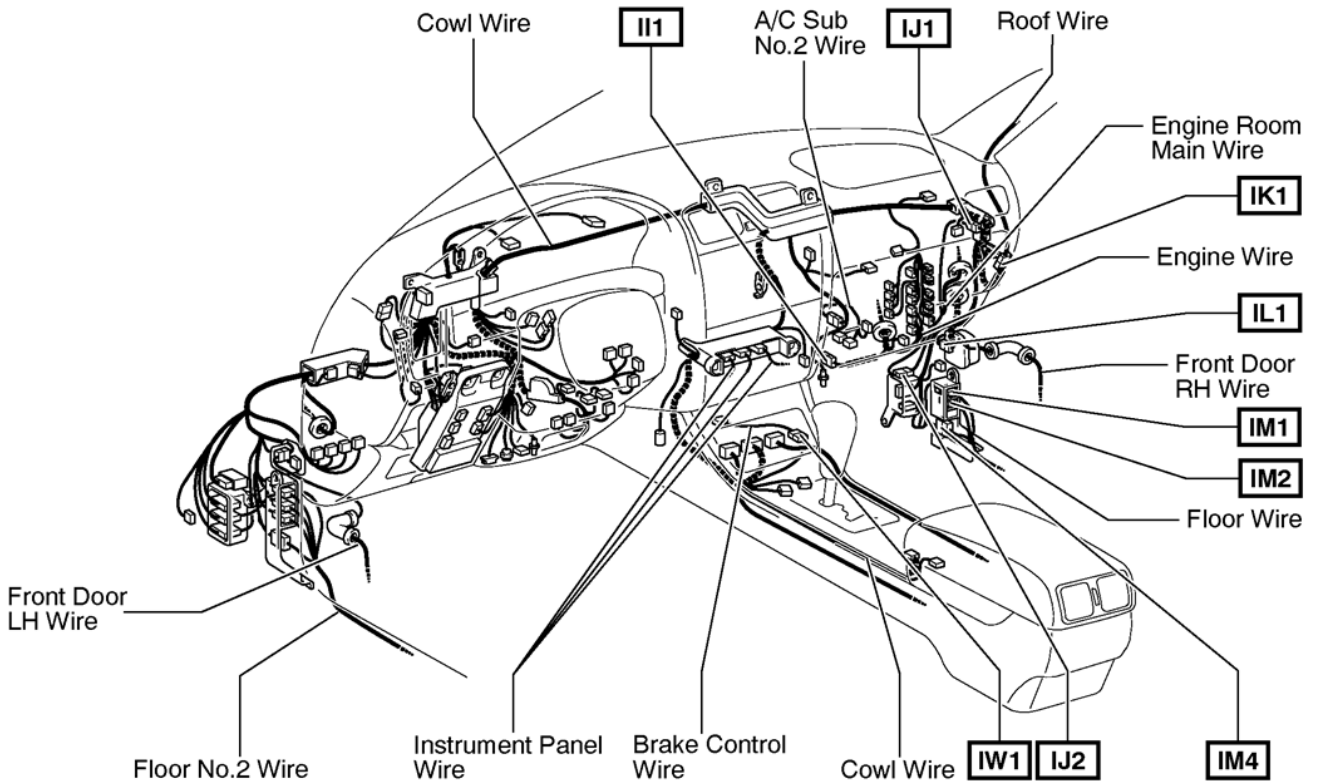

○ : Location of Splice Points

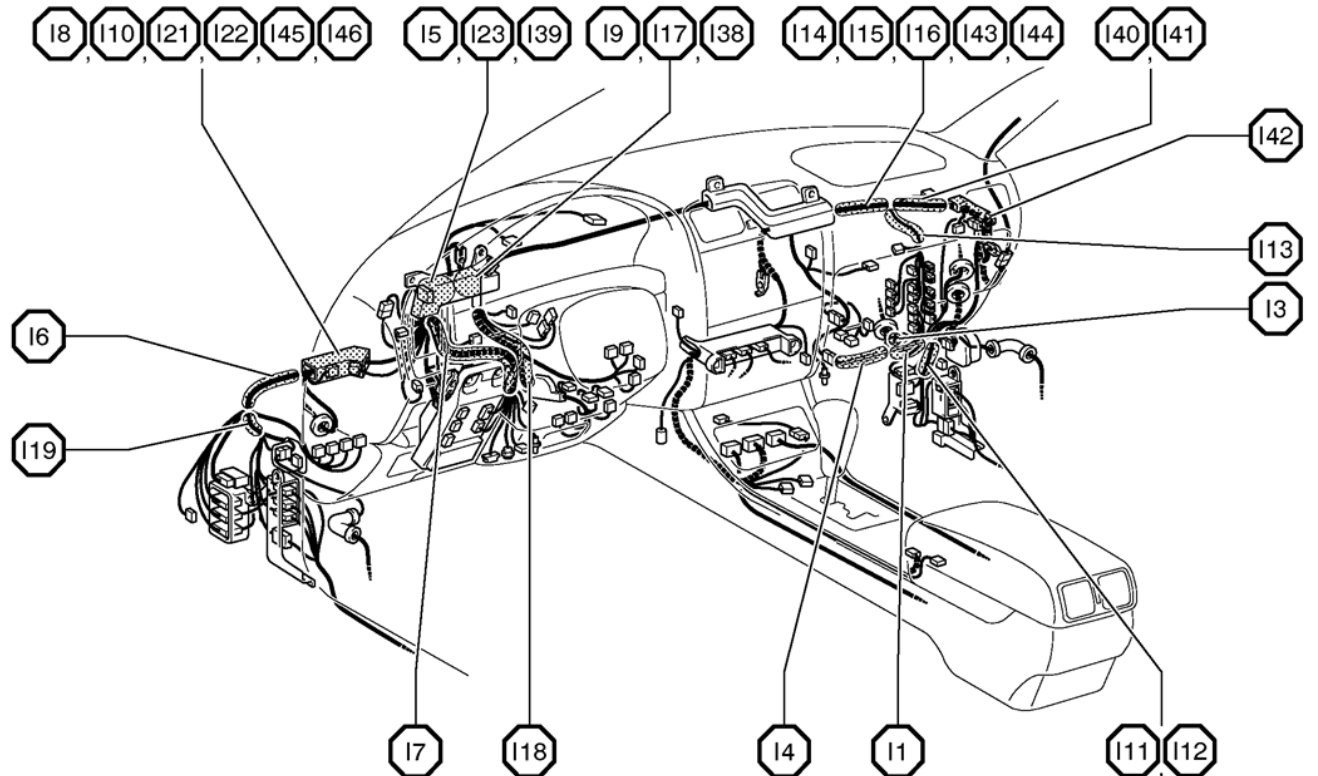

Connector Joining Wire Harness and Wire Harness

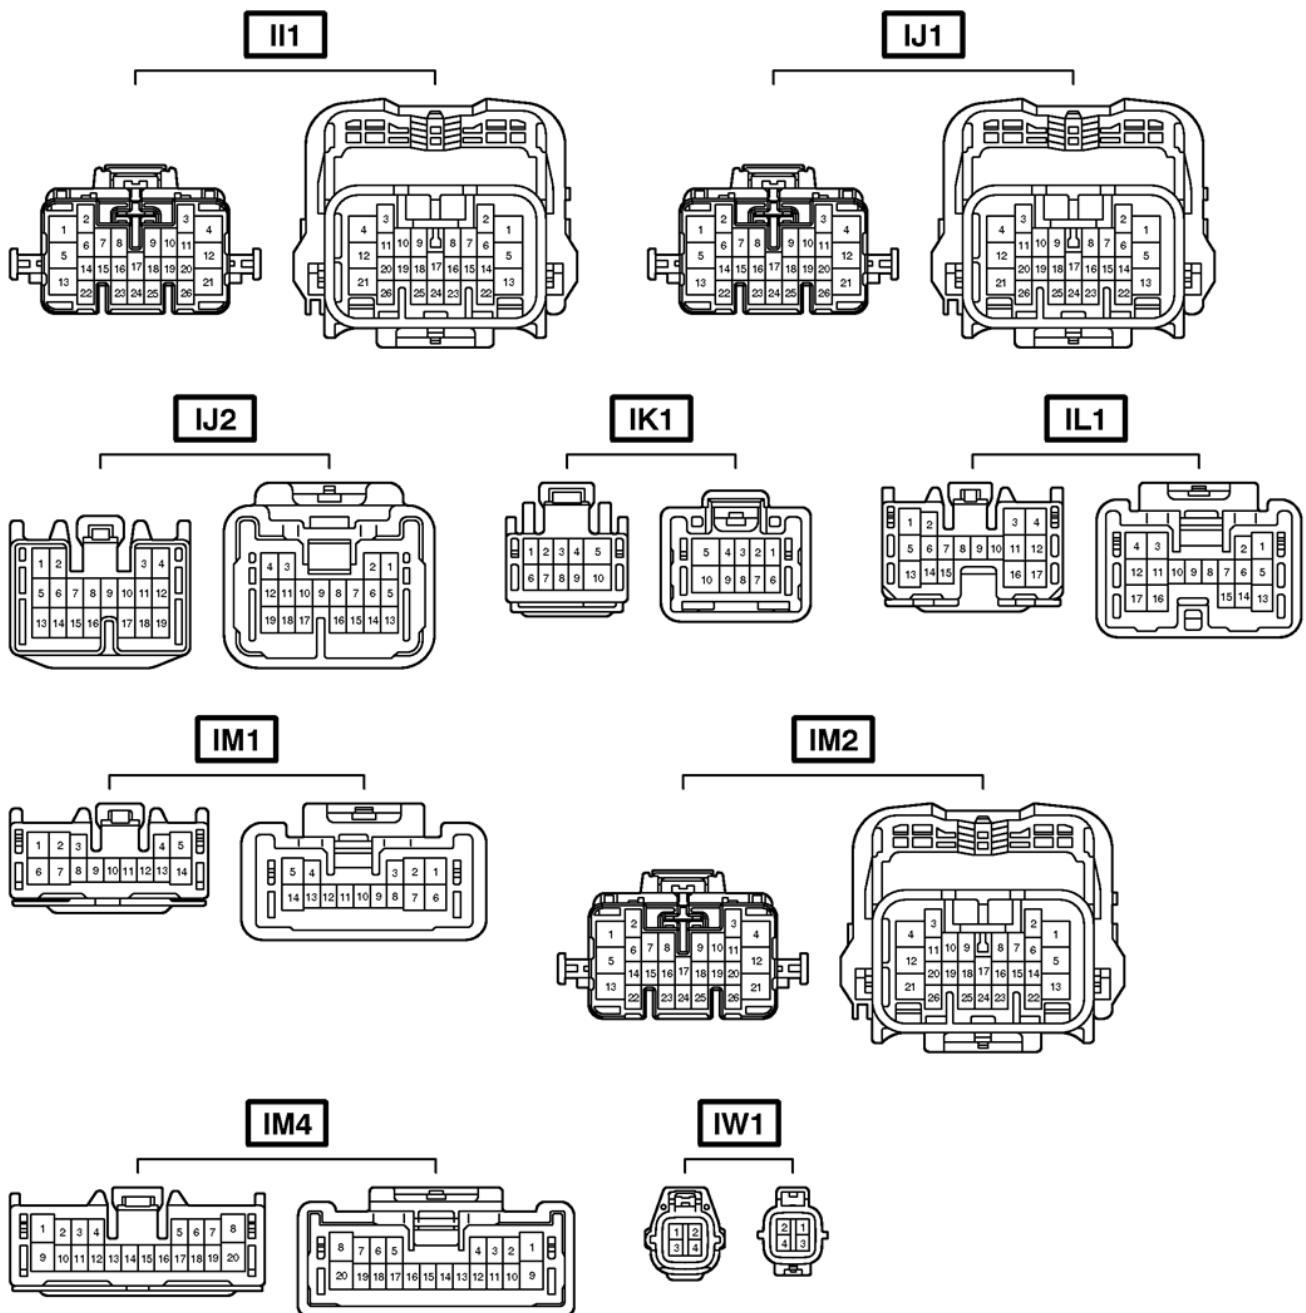


Code	Joining Wire Harness and Wire Harness (Connector Location)
II1	Engine Wire and Cowl Wire (Left Side of Blower Unit)
IJ1	Engine Room Main Wire and Cowl Wire (Right Side of Instrument Panel)
IJ2	Engine Room Main Wire and Cowl Wire (Right Side of Instrument Panel)
IK1	Cowl Wire and Roof Wire (Right Side of Instrument Panel)
IL1	Front Door RH Wire and Cowl Wire (Right Kick Panel)
IM1	Floor Wire and Cowl Wire (Right Kick Panel)
IM2	Floor Wire and Cowl Wire (Right Kick Panel)
IM4	Floor Wire and Cowl Wire (Right Kick Panel)
IW1	Cowl Wire and Brake Control Wire (Instrument Panel Brace RH)

ELECTRICAL WIRING ROUTING


□ : Location of Connector Joining Wire Harness and Wire Harness

▽ : Location of Ground Points


[Instrument Panel 2]

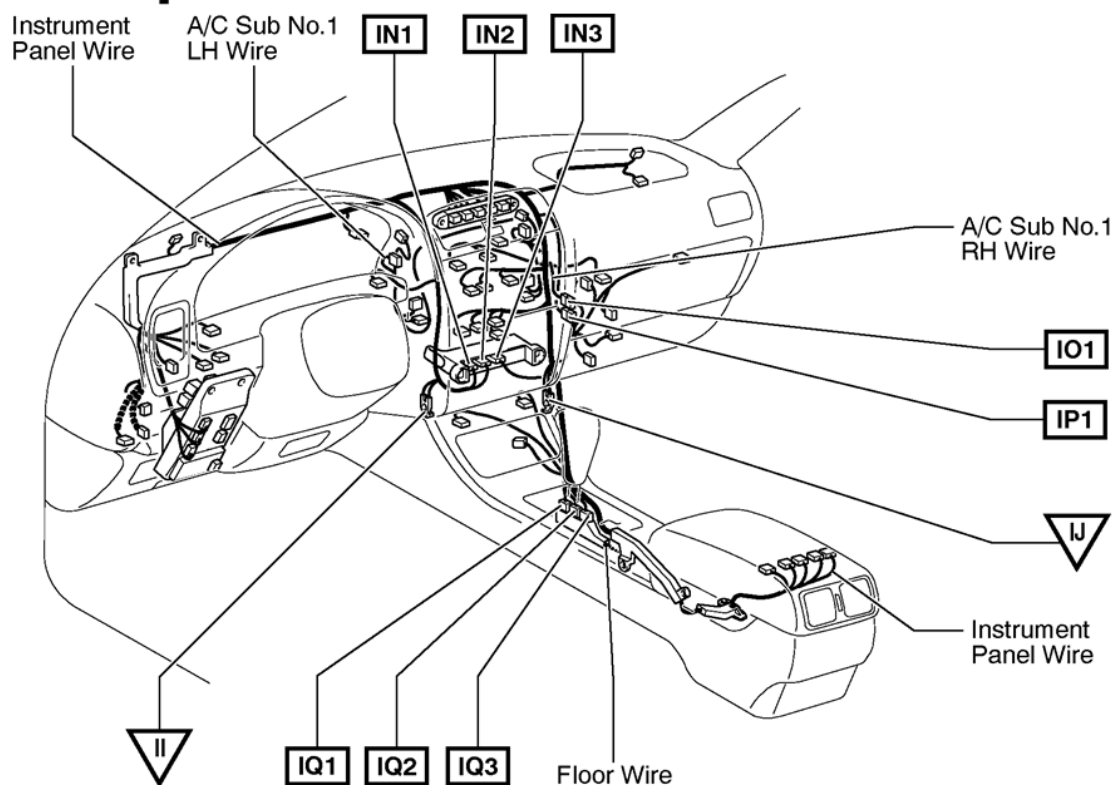

○ : Location of Splice Points

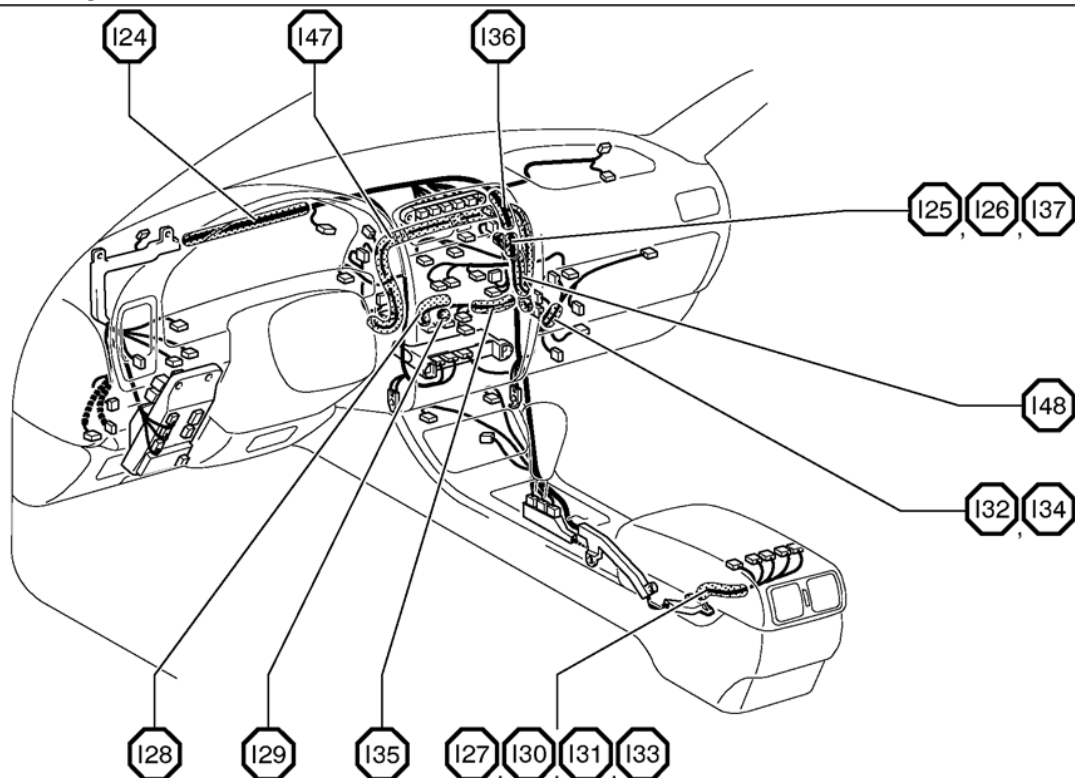

Connector Joining Wire Harness and Wire Harness

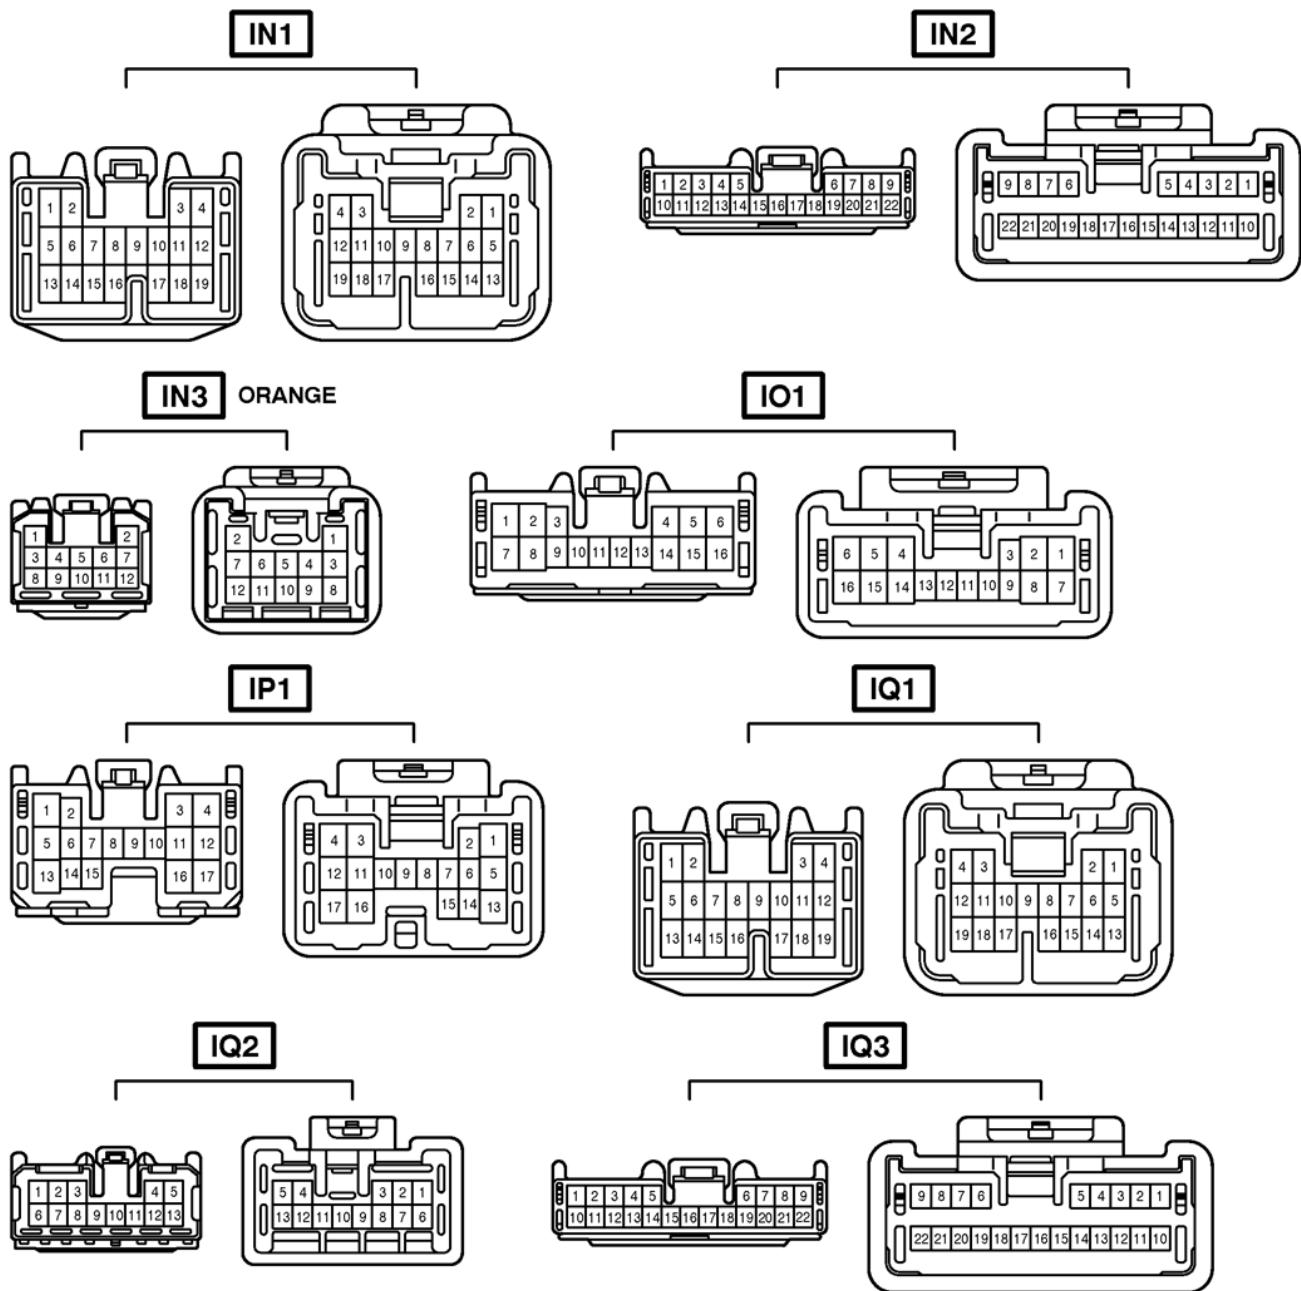


Code	Joining Wire Harness and Wire Harness (Connector Location)
IN1	Instrument Panel Wire and Cowl Wire (Behind the Radio and Player)
IN2	
IN3	
IO1	Instrument Panel Wire and A/C Sub No.1 RH Wire (Left Side of Blower Unit)
IP1	Instrument Panel Wire and A/C Sub No.1 LH Wire (Left Side of Blower Unit)
IQ1	Instrument Panel Wire and Floor Wire (Right Side of Shift Lever)
IQ2	
IQ3	


ELECTRICAL WIRING ROUTING

□ : Location of Connector Joining Wire Harness and Wire Harness


▽ : Location of Ground Points

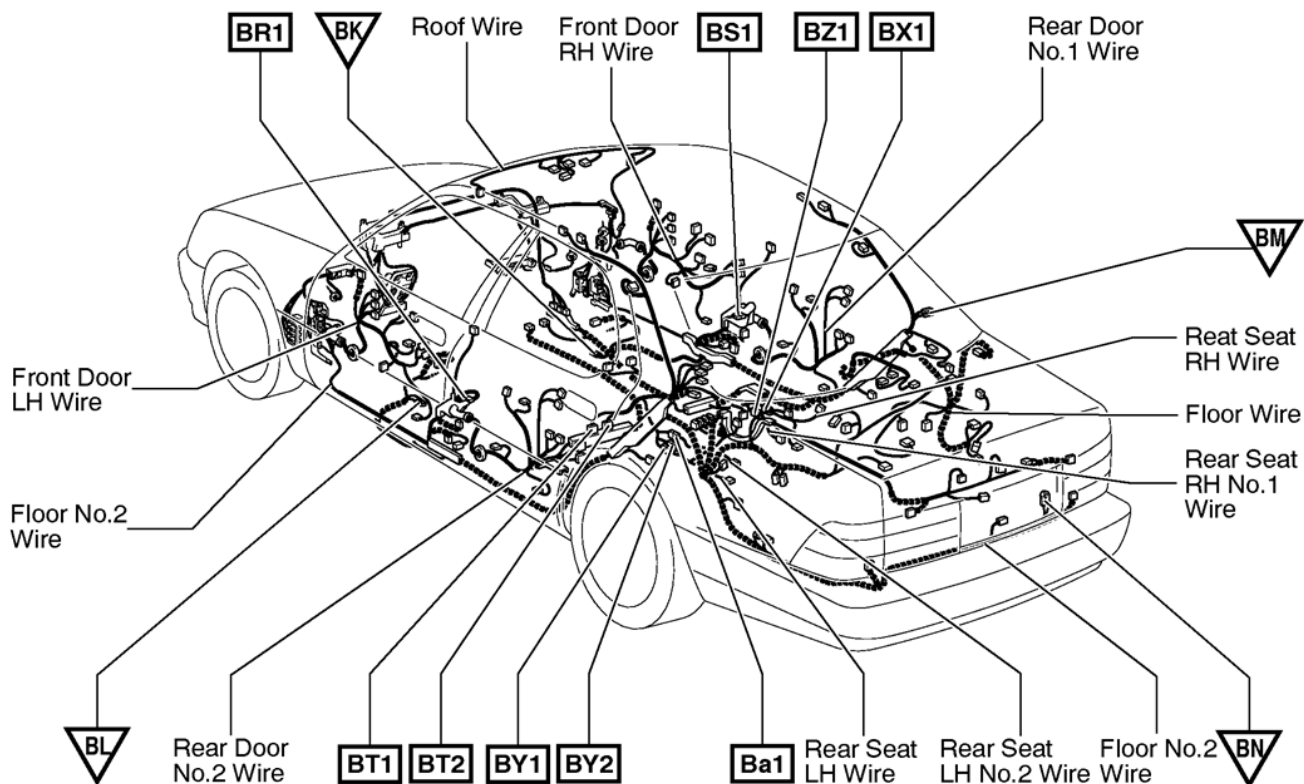

○ : Location of Splice Points

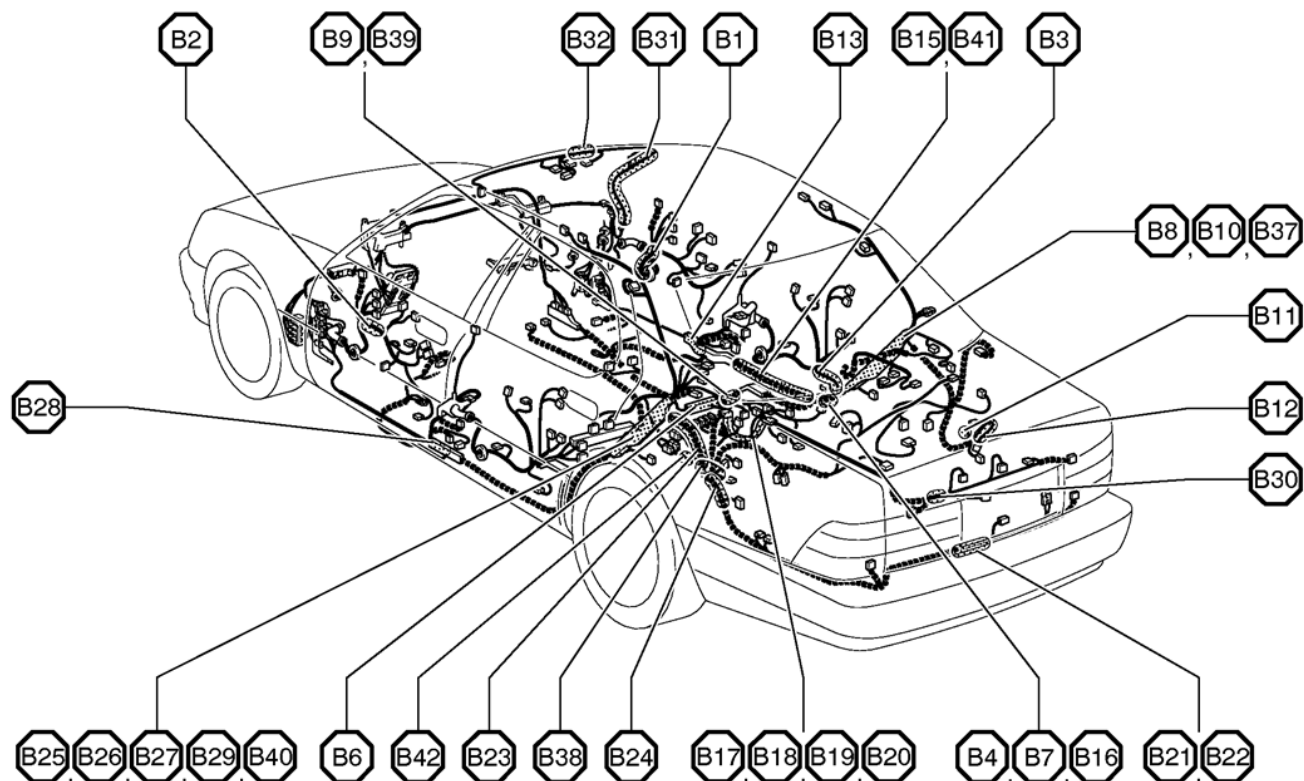


Connector Joining Wire Harness and Wire Harness

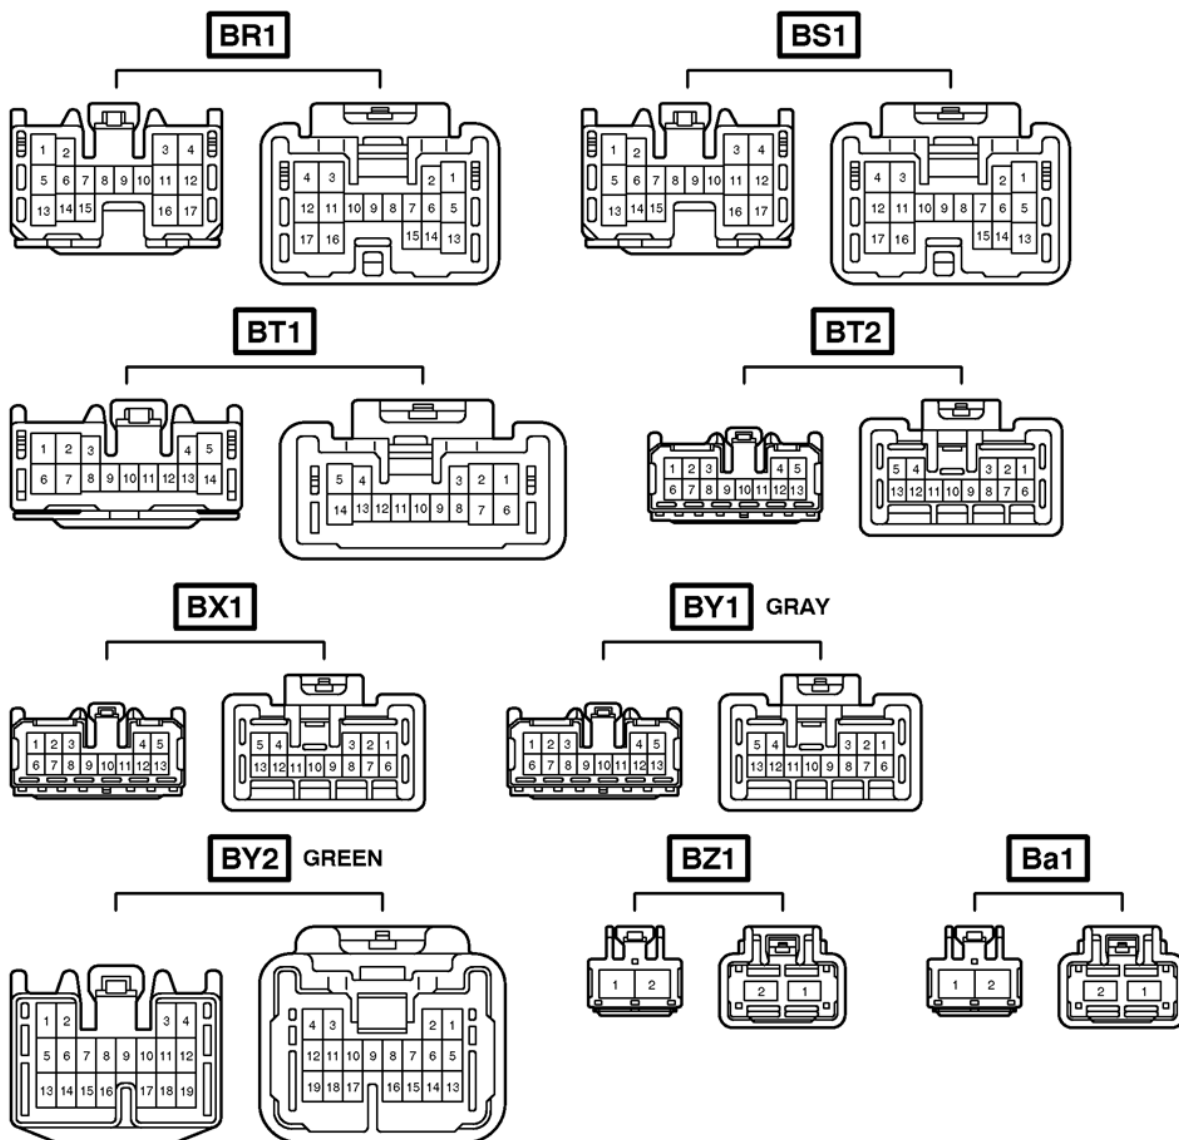


Code	Joining Wire Harness and Wire Harness (Connector Location)
BR1	Rear Door No.2 Wire and Floor No.2 Wire (Under the Left Center Pillar)
BS1	Rear Door No.1 Wire and Floor Wire (Under the Right Center Pillar)
BT1	Floor Wire and Floor No.2 Wire (Under the Left Rear Cushion)
BT2	
BX1	Rear Seat RH Wire and Floor Wire (Under the Rear Passenger's Seat RH)
BY1	Rear Seat LH Wire and Floor Wire (Under the Rear Passenger's Seat LH)
BY2	
BZ1	Floor Wire and Rear Seat RH No.2 Wire (Under the Rear Passenger's Seat RH)
Ba1	Floor Wire and Rear Seat LH No.2 Wire (Under the Rear Passenger's Seat LH)

ELECTRICAL WIRING ROUTING



□ : Location of Connector Joining Wire Harness and Wire Harness

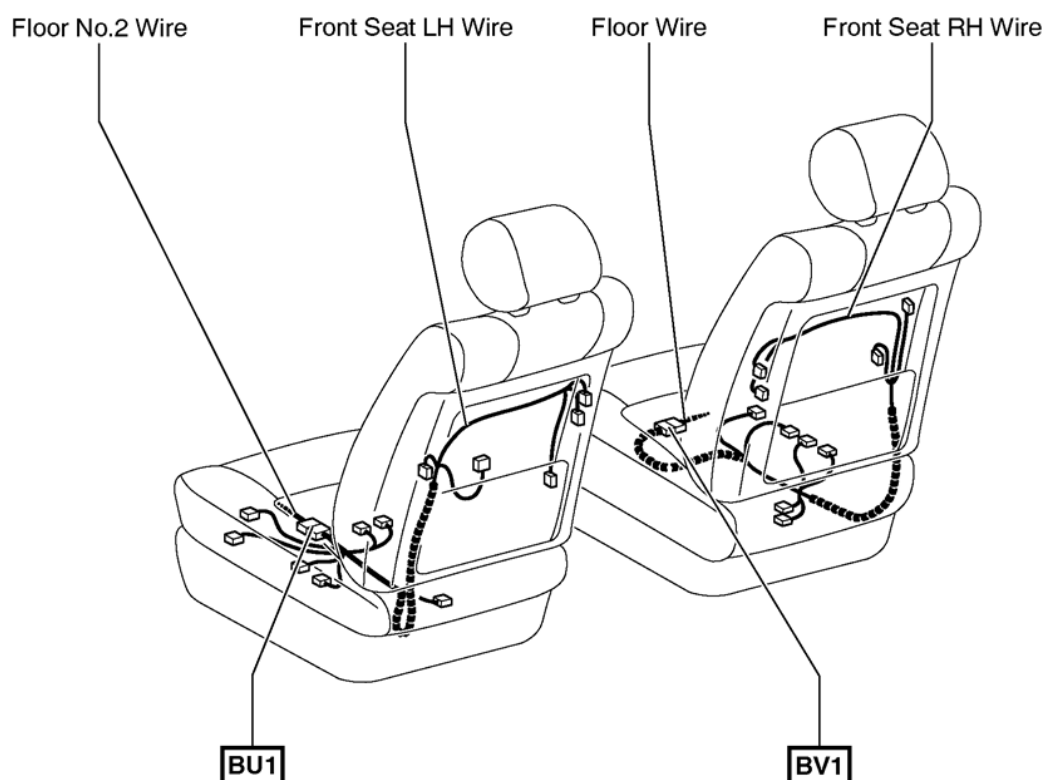

○ : Location of Splice Points

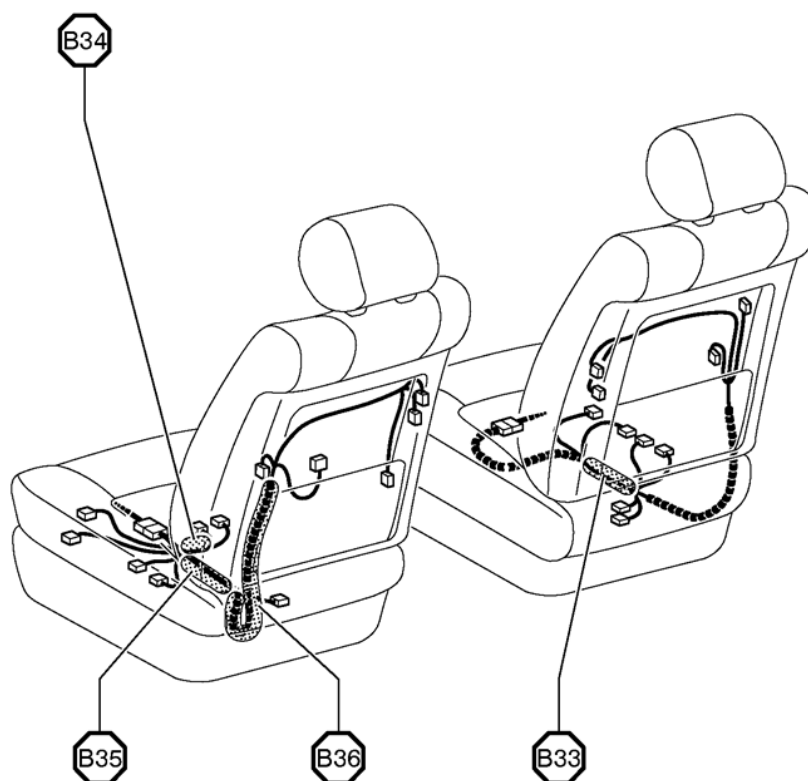

Connector Joining Wire Harness and Wire Harness

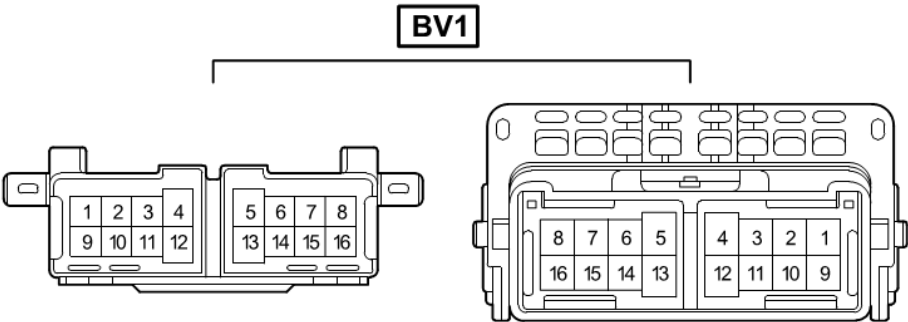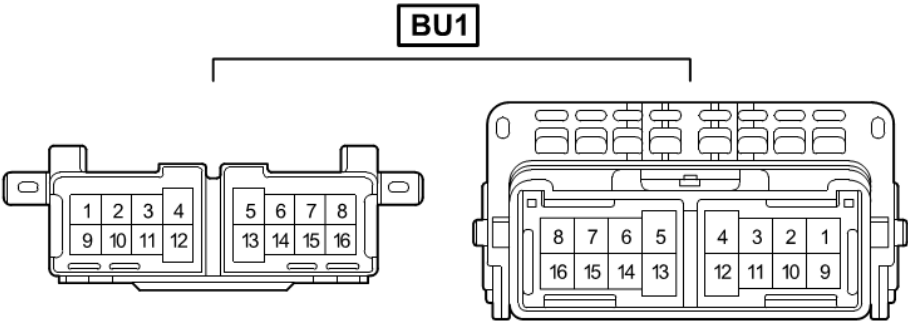

Code	Joining Wire Harness and Wire Harness (Connector Location)
BU1	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)
BV1	Floor Wire and Front Seat RH Wire (Under the Front Passenger's Seat)