




# GROUND POINT

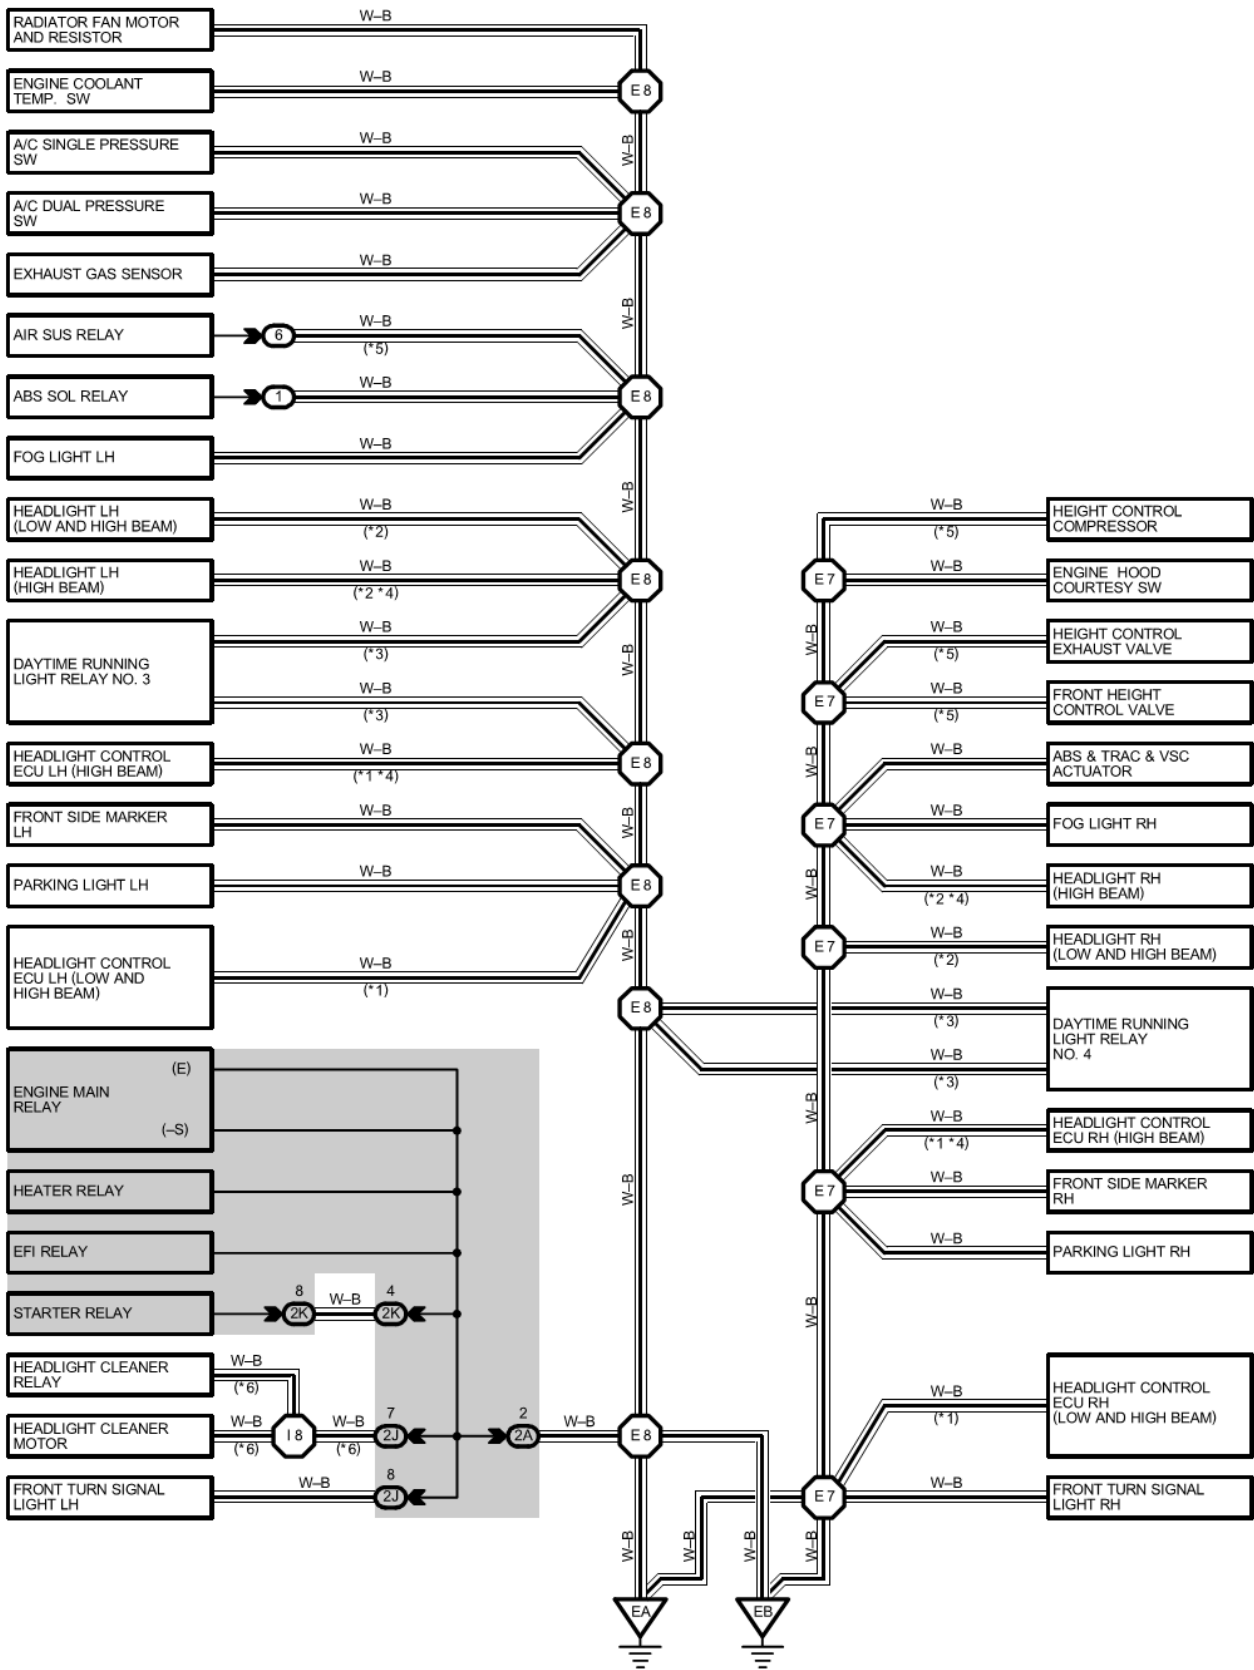


- \* 1 : W/ HID
- \* 2 : W/O HID
- \* 3 : W/ DAYTIME RUNNING LIGHT
- \* 4 : W/O DAYTIME RUNNING LIGHT
- \* 5 : W/ AIR SUSPENSION
- \* 6 : CANADA

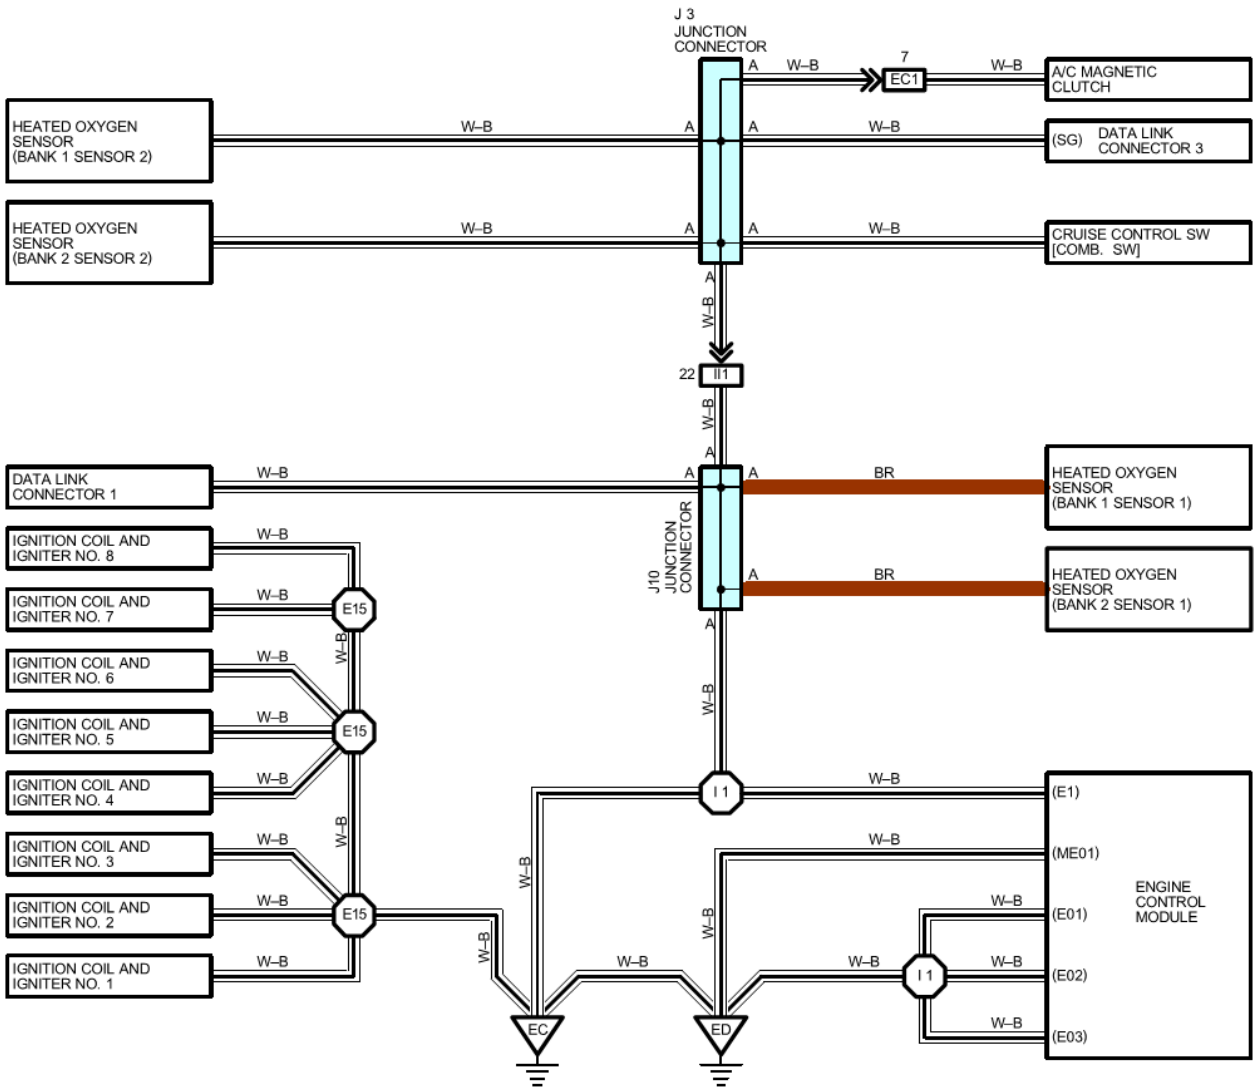


# GROUND POINT

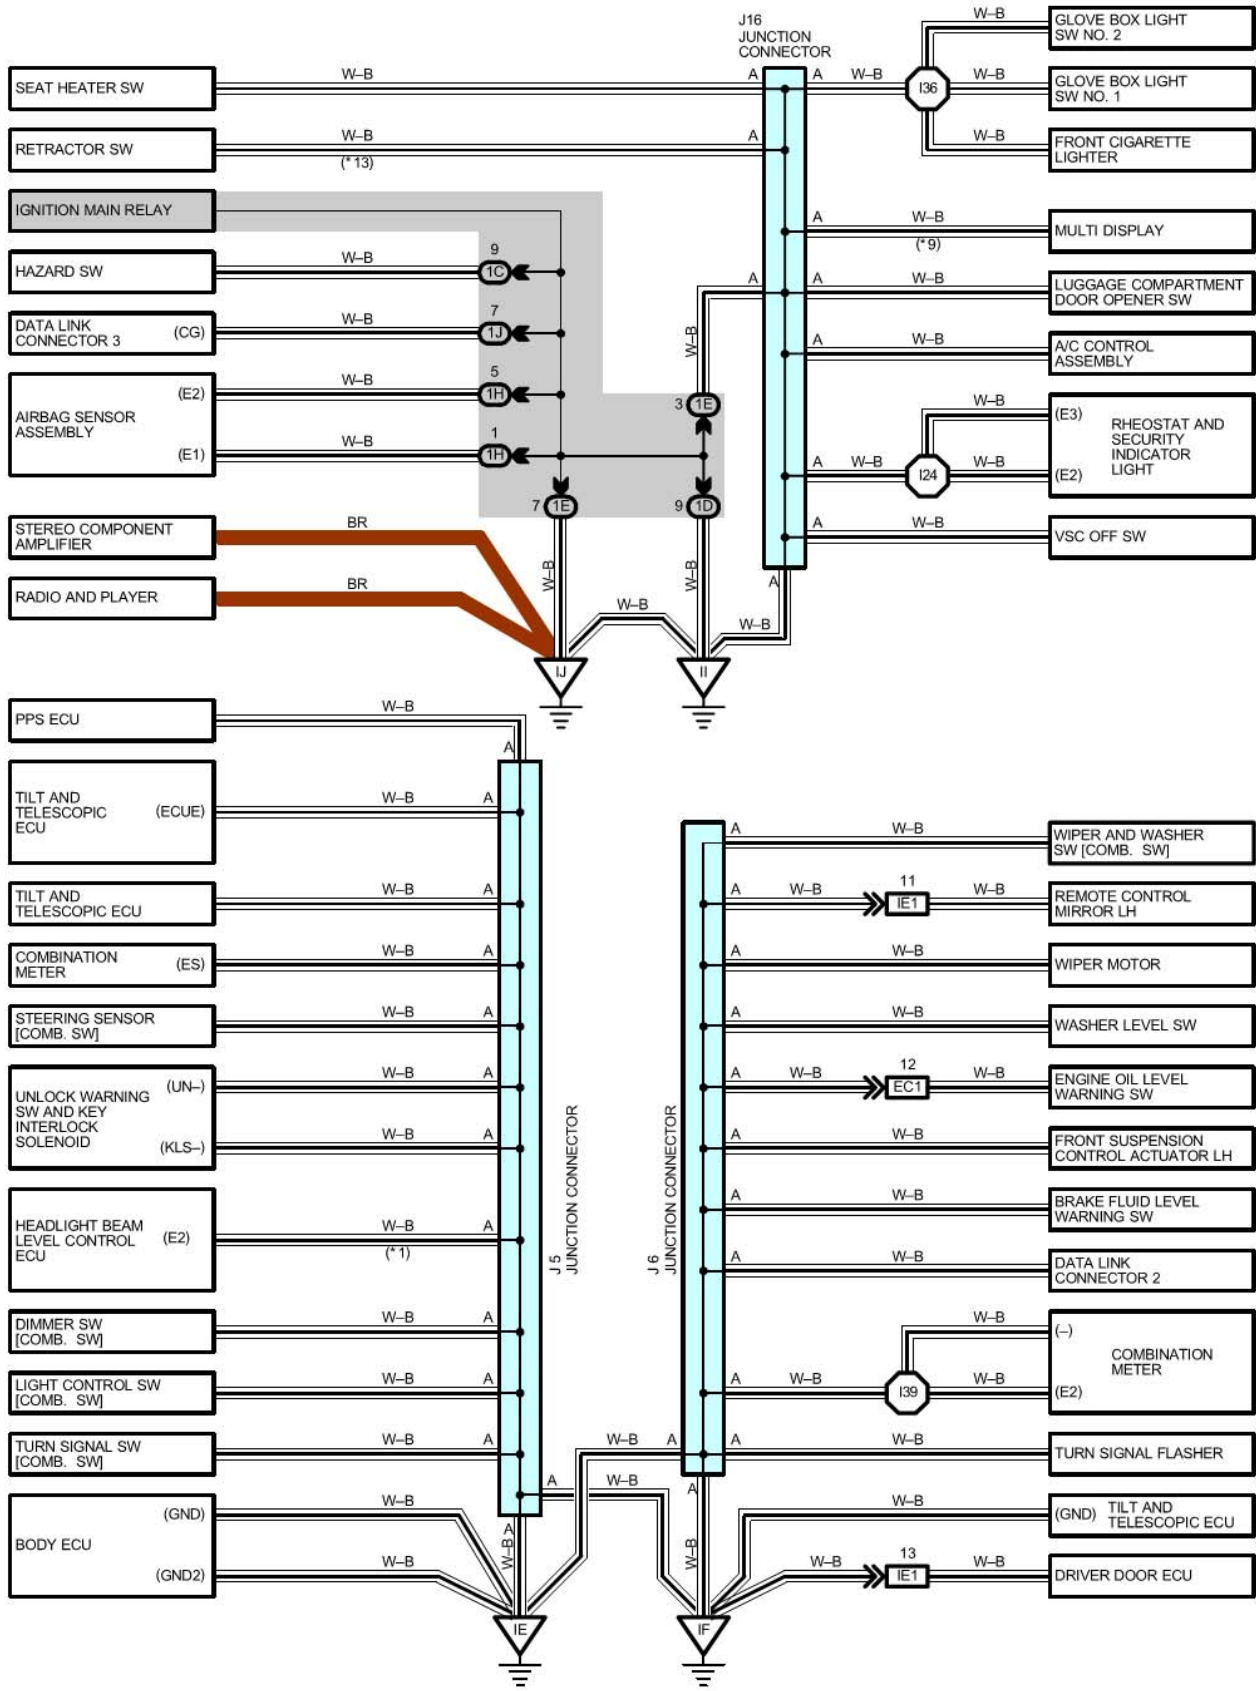

- \* 1 : W/ HID
- \* 2 : W/O HID
- \* 3 : W/ DAYTIME RUNNING LIGHT
- \* 4 : W/O DAYTIME RUNNING LIGHT
- \* 5 : W/ AIR SUSPENSION
- \* 6 : CANADA
- \* 7 : W/O AIR SUSPENSION
- \* 8 : USA
- \* 9 : W/ LEXUS NAVIGATION SYSTEM
- \* 10 : W/ MEMORY
- \* 11 : W/O MEMORY
- \* 12 : W/ MOON ROOF
- \* 13 : TAIWAN

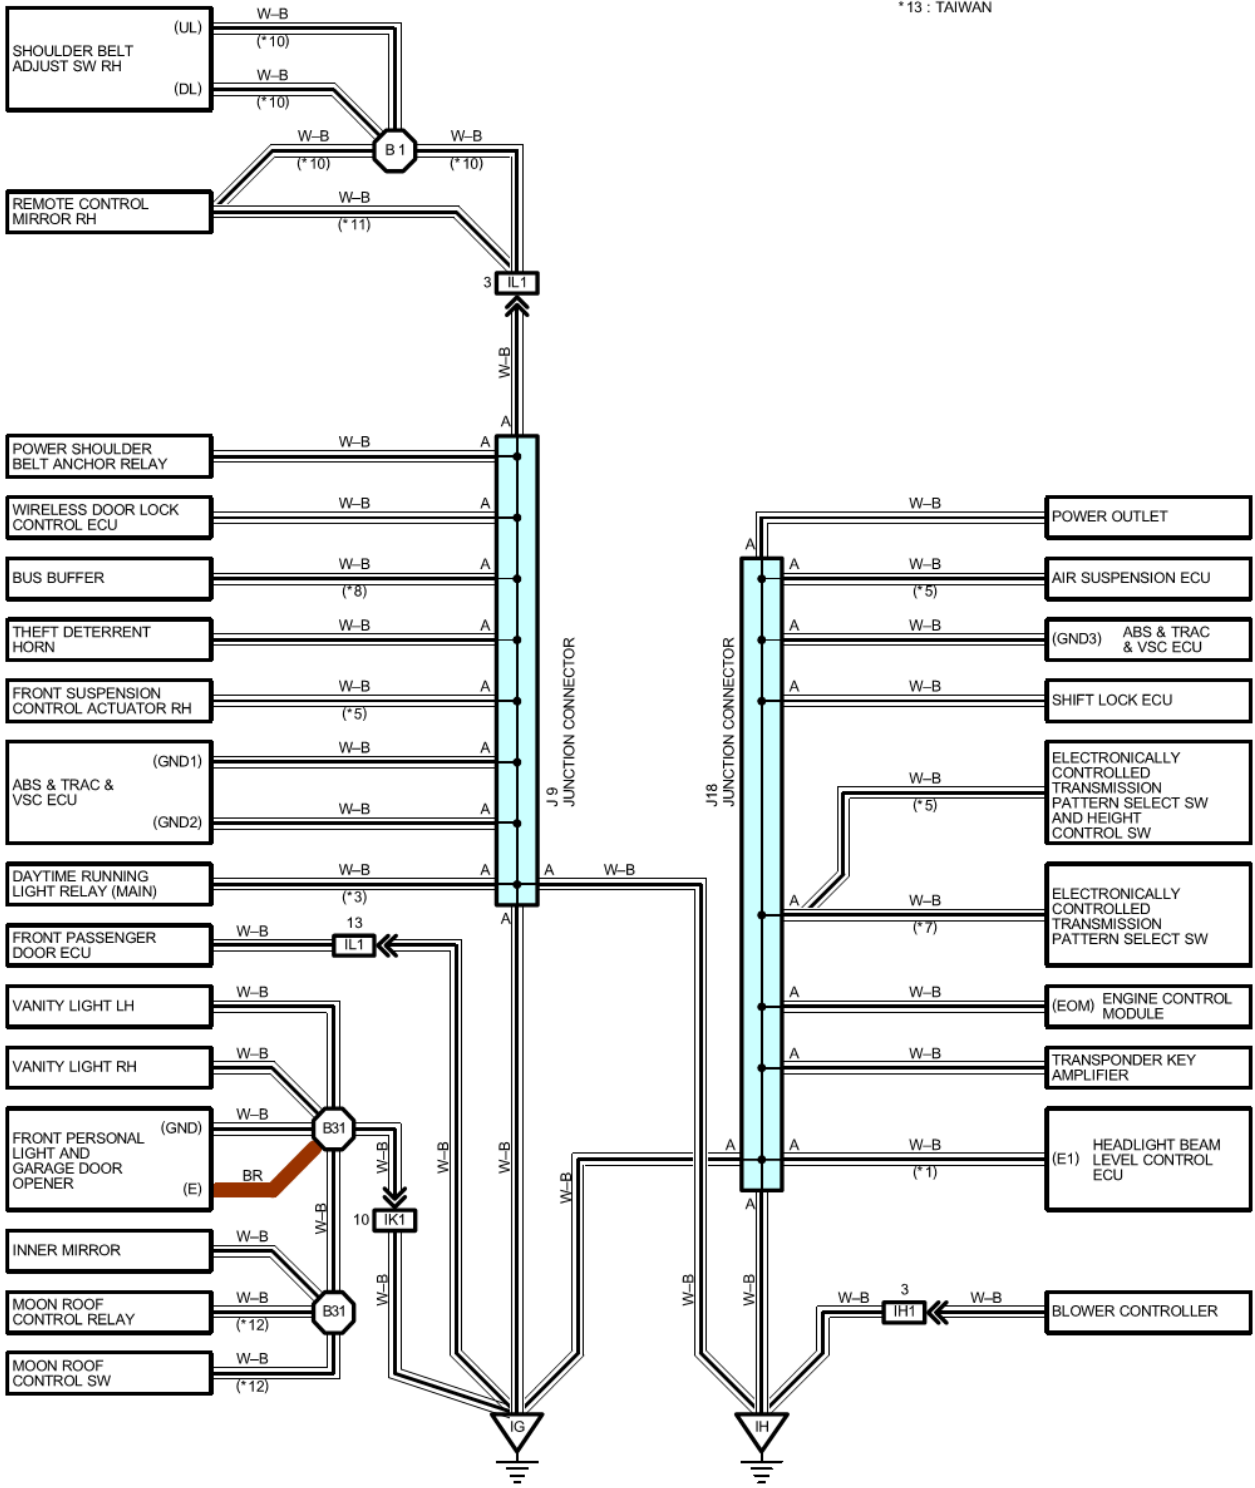

# GROUND POINT

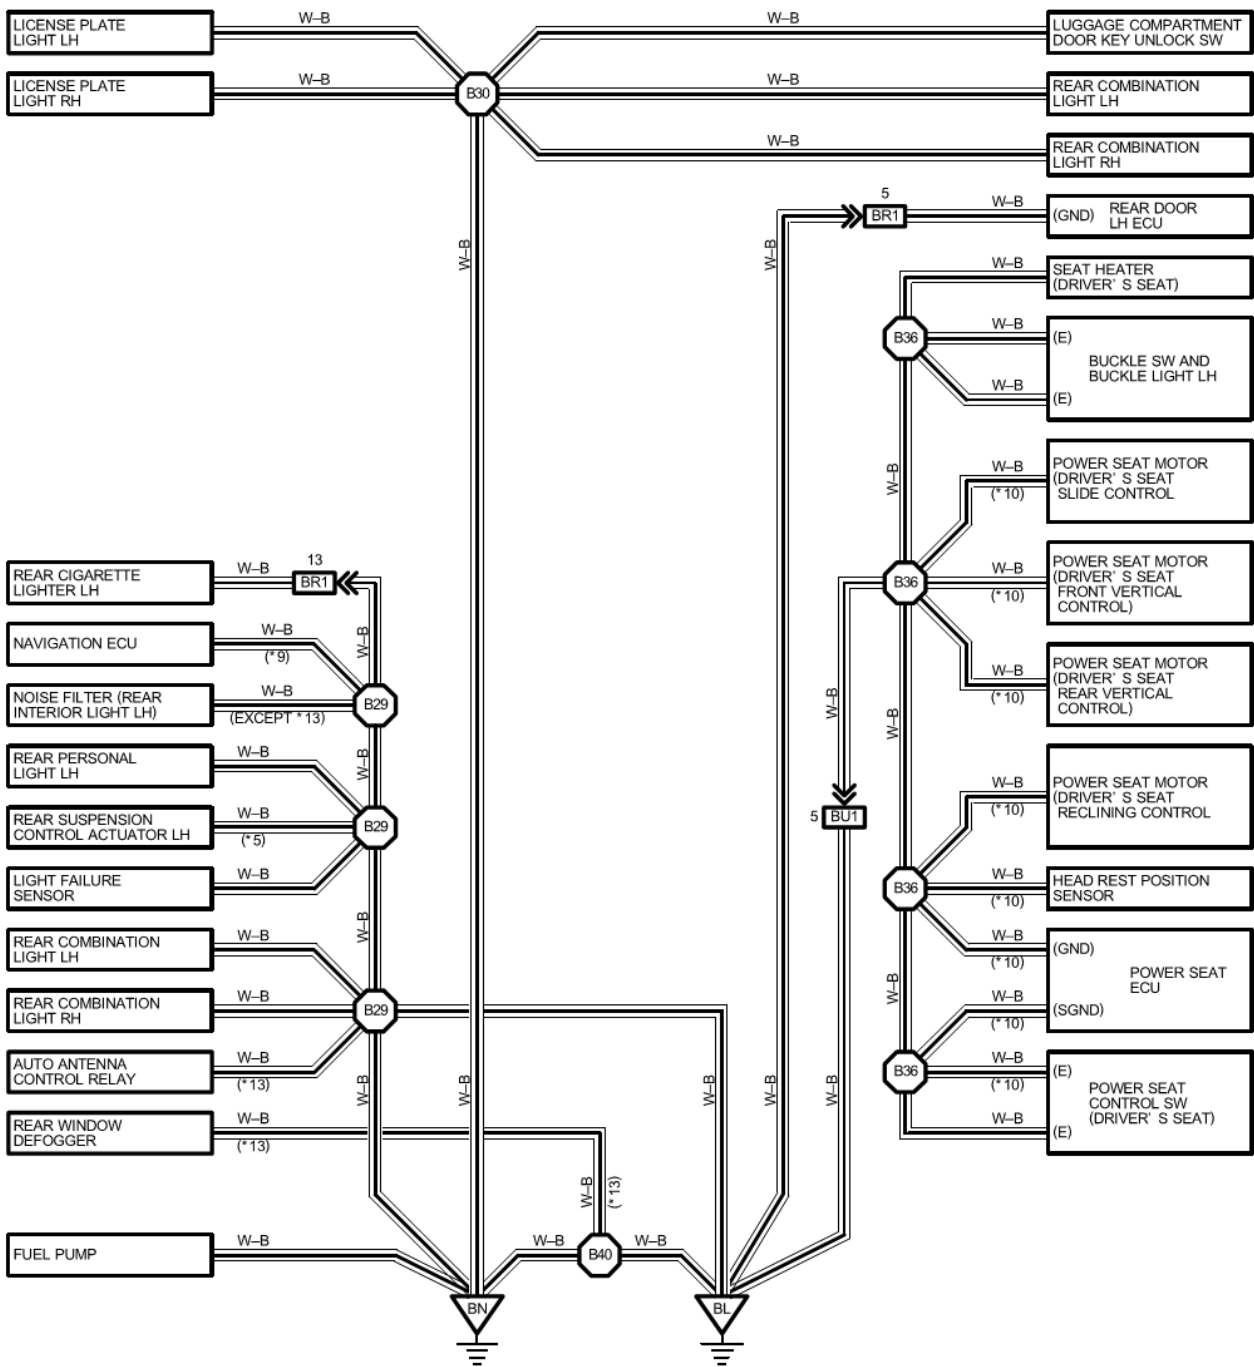

# GROUND POINT

## : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J3	35	J9	35	J18	35
J5	35	J10	35		
J6	35	J16	37		

## : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	30	Engine Room R/B (Engine Compartment Left)
6	30	R/B No.6 (Under the Headlight LH)

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	22	Instrument Panel Wire and Instrument Panel J/B (Rear of Parking Brake Release Lever)
1D		
1E		
1H	22	Cowl Wire and Instrument Panel J/B (Rear of Parking Brake Release Lever)
1J		
2A	24	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2J	24	Cowl Wire and Engine Room J/B (Engine Compartment Left)
2K		

## : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EC1	42	Engine No.3 Wire and Cowl Wire (Front Side of Left Fender)
IE1	44	Front Door LH Wire and Cowl Wire (Left Kick Panel)
IH1	44	Cowl Wire and A/C Sub No.2 Wire (Left Side of Blower Unit)
II1	46	Engine Wire and Cowl Wire (Left Side of Blower Unit)
IK1	46	Cowl Wire and Roof Wire (Right Side of Instrument Panel)
IL1	46	Front Door RH Wire and Cowl Wire (Right Kick Panel)
BR1	50	Rear Door No.2 Wire and Floor No.2 Wire (Under the Left Center Pillar)
BS1	50	Rear Door No.1 Wire and Floor Wire (Under the Right Center Pillar)
BU1	52	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)
BV1	52	Floor Wire and Front Seat RH Wire (Under the Front Passenger's Seat)
BX1	50	Rear Seat RH Wire and Floor Wire (Under the Right Rear Cushion)
BY1	50	Rear Seat LH Wire and Floor Wire (Under the Left Rear Cushion)

## : GROUND POINTS

Code	See Page	Ground Points Location
EA	42	Front Side of Right Fender
EB	42	Front Side of Left Fender
EC	42	Rear Side of Cylinder Head RH
ED	42	Rear Side of Cylinder Head LH
IE	44	Left Side of Instrument Panel J/B
IF	44	Behind the Combination Meter
IG	44	Instrument Panel Brace RH
IH	44	Right Side of Instrument Panel
II	48	Instrument Panel Brace LH

**: GROUND POINTS**

Code	See Page	Ground Points Location
IJ	<a href="#">48</a>	Instrument Panel Brace RH
BK	<a href="#">50</a>	Under the Front Passenger's Seat
BL	<a href="#">50</a>	Under the Driver's Seat
BM	<a href="#">50</a>	Under the Right Rear Pillar
BN	<a href="#">50</a>	Back Panel Right

**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E7	42	Engine Room Main Wire	B3	50	Rear Door No.1 Wire
E8			B16	50	Floor Wire
E15	42	Engine Wire	B29	50	Floor No.2 Wire
I1	46		B30		
I8	46	Cowl Wire	B31	50	Roof Wire
I24	48	Instrument Panel Wire	B33	52	Front Seat RH Wire
I36			B36	52	Front Seat LH Wire
I39	46	Cowl Wire	B38	50	Rear Seat LH Wire
B1	50	Front Door RH Wire	B40	50	Floor No.2 Wire