

PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11070	B 9	Buckle SW and Buckle Light LH	90980-11001
A 2	A/C Magnetic Clutch	90980-11016	B10	Buckle SW and Buckle Light RH	
A 3	A/C Triple Pressure SW (A/C Dual and Single Pressure SW)	90980-10943	B11	Bus Buffer	90980-10789
A 6	A/C Room Temp. Sensor	90980-10825	C 3	Crankshaft Position Sensor	90980-11162
A12	Air Suspension ECU	90980-11424	C 5	Combination Meter	90980-11562
A13	Air Suspension ECU	90980-11391	C 6	Combination Meter	90980-11497
A14	Air Suspension ECU	90980-11390	C 8	Combination SW	90980-11616
A15	Airbag Sensor Assembly	90980-11872	C 9	Combination SW	90980-11595
A16	Airbag Squib (Front Passenger Airbag Assembly)	90980-11886	C10	Combination SW	90980-11614
A17	Airbag Squib (Steering Wheel Pad)	90980-10850	C11	Combination SW	90980-11594
A18	A/C Control Assembly	90980-11390	C13	CD Automatic Changer	90980-11556
A20	A/C Control Assembly	90980-11408		CD Automatic Changer	90980-10803
A21	A/C Control Assembly	90980-11392	C14	CD Player	90980-11533
A22	A/C Evaporator Temp. Sensor	90980-10825	C16	Combination Meter	90980-11475
A23	A/C Solar Sensor	90980-11053	C17	Cool Air Bypass Servo Motor (Driver Side)	-
A24	Air Inlet Control Servo Motor	90980-10797	C18	Cool Air Bypass Servo Motor (Front Passenger Side)	
A25	Air Mix Control Servo Motor (Driver Side)	90980-11165	C19	Cellular Phone	90980-10798
A26	Air Mix Control Servo Motor (Front Passenger Side)		C20	Cellular Phone	90980-10998
A27	Air Vent Mode Control Servo Motor (Driver Side)		C21	Camshaft Position Sensor	90980-10947
A28	Air Vent Mode Control Servo Motor (Front Passenger Side)		C22	Camshaft Timing Oil Control Valve LH	90980-11162
A29	Automatic Light Control Sensor	90980-11633	C23	Camshaft Timing Oil Control Valve RH	
A30	Acceleration Sensor Rear RH	90980-10845	D 1	Data Link Connector 1	90980-11195
A31	Auto Antenna Motor and Relay	90980-10799	D 2	Daytime Running Light Relay No.3	90980-10939
A34	ABS & TRAC & VSC Actuator	90980-11413	D 3	Daytime Running Light Relay No.4	90980-10940
A35	ABS & TRAC & VSC Actuator	90980-11132	D 4	Data Link Connector 2	90980-11417
A36	ABS & TRAC & VSC Actuator	90980-11698	D 5	Data Link Connector 3	90980-11665
A37	Accel Position Sensor	90980-11150	D 6	Daytime Running Light Relay (Main)	90980-11450
A38	ABS & TRAC & VSC ECU	90980-11421	D 7	Diode	90980-11251
A39	ABS & TRAC & VSC ECU	90980-11476	D 8	Duct Sensor (Driver Side)	90980-10825
A40	ABS & TRAC & VSC ECU	90980-11637	D 9	Duct Sensor (Front Passenger Side)	
A41	ABS & TRAC & VSC ECU	90980-11638	D10	Driver Door ECU	90980-11595
A42	Airbag Sensor Assembly	90980-11869	D11	Driver Door ECU	90980-11648
A43	Airbag Sensor Assembly	90980-11867	D12	Driver Door ECU	90980-11594
A45	Arm Rest SW	90980-10859	D13	Driving Position Memory and Return SW	90980-11165
B 1	Brake Fluid Level Warning SW	90980-11207	D14	Diode (Rear Interior Light LH)	90980-11071
B 2	Blower Controller	90980-11667	D15	Diode (Rear Interior Light RH)	
B 3	Blower Controller	90980-11579	D17	Diode (MPX Body No.2)	90980-10962
B 4	Blower Motor	90980-10385	E 3	Electronically Controlled Transmission Solenoid	90980-11664
B 5	Body ECU	90980-11469	E 5	Engine Coolant Temp. SW	90980-11235
B 6	Body ECU	90980-11502	E 6	Engine Coolant Temp. Sensor	90980-10736
B 7	Body ECU	90980-11475	E 7	Engine Hood Courtesy SW	90980-11189
B 8	Body ECU	90980-11852	E 8	Engine Oil Level Warning SW	90980-11235
			E 9	Engine Oil Pressure SW	90980-11363

Note: Not all of the above part numbers of the connector are established for the supply. In case of ordering a connector or terminal with wire, please confirm in advance if there is supply for it using "Parts Catalog News" (published by Parts Engineering Administration Dept.).

Code	Part Name	Part Number	Code	Part Name	Part Number
E10	Electronically Controlled Transmission Pattern Select SW (Canada) or Electronically Controlled Transmission Pattern Select SW and Height Control SW (USA)	90980-10797	F29	Front Personal Light and Garage Door Opener	90980-11488
E11	Engine Control Module	90980-11637	F30	Front Power Window Control SW RH	90980-10797
E12	Engine Control Module	90980-11586	F31	Front Power Window Master SW and Door Lock Control SW LH	90980-10807
E13	Engine Control Module	90980-11476	F32	Front Power Window Motor LH	90980-11587
E14	Engine Control Module	90980-11421	F33	Front Power Window Motor RH	
E15	Engine Control Module	90980-11638	F34	Fuel Lid Opener Solenoid	90980-10825
E16	Engine Control Module	90980-11423	F35	Fuel Pump	90980-10916
E17	Exhaust Gas Sensor	90980-11150	F36	Fuel Sender	90980-10908
F 1	Fog Light LH	90980-11096	F37	Fuse Holder	—
F 2	Fog Light RH		F38	Front Passenger Door ECU	90980-11648
F 3	Front ABS Speed Sensor LH	90980-11002	G 1	Generator	90980-09218
F 4	Front ABS Speed Sensor RH and Pad Wear Indicator	90980-11291	G 2	Generator	90980-11349
F 5	Front Height Control Sensor LH and Acceleration Sensor LH		G 3	Glove Box Light No.1	90980-11148
F 6	Front Height Control Sensor RH and Acceleration Sensor RH (w/ Air Suspension)		G 4	Glove Box Light No.2	
	Front Height Control Sensor RH and Acceleration Sensor RH (w/o Air Suspension, Canada)	90980-11293	G 5	Glove Box Light SW No.1	90980-11098
F 7	Front Height Control Valve	90980-11016	G 6	Glove Box Light SW No.2	
F 8	Front Side Marker LH	90980-11162	H 1	Headlight Cleaner Motor	90980-11410
F 9	Front Side Marker RH		H 2	Headlight Cleaner Relay	90980-10939
F10	Front Suspension Control Actuator LH	90980-10789	H 3	Headlight LH (High Beam)	90980-11095
F11	Front Suspension Control Actuator RH		H 4	Headlight LH (Low Beam)	90980-11096
F12	Front Turn Signal Light LH	90980-11019	H 5	Headlight RH (High Beam)	90980-11095
F13	Front Turn Signal Light RH		H 6	Headlight RH (Low Beam)	90980-11096
F14	Fuel Pump Resistor	90980-11003	H 7	Heated Oxygen Sensor (Bank 1 Sensor 1)	90980-10869
F15	Fusible Link Block	—	H 8	Heated Oxygen Sensor (Bank 2 Sensor 1)	
F16	Front Cigarette Lighter and Illumination	90980-11606	H 9	Height Control Compressor	90980-10990
F17	Fuel Lid Opener SW	90980-10825	H10	Height Control Exhaust Valve	90980-11156
F18	Front Door Courtesy Light LH	90980-11148	H11	Horn LH	90980-10619
F19	Front Door Courtesy Light RH		H12	Horn RH	
F20	Front Door Key Lock and Unlock SW LH	90980-11490	H13	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028
F21	Front Door Key Lock and Unlock SW RH		H14	Heated Oxygen Sensor (Bank 2 Sensor 2)	
F22	Front Door Lock Control Motor, Door Unlock Detection SW and Door Open Detection SW LH	90980-11001	H16	Hazard SW	90980-10801
F23	Front Door Lock Control Motor, Door Unlock Detection SW and Door Open Detection SW RH		H17	High Mounted Stop Light	90980-10825
F24	Front Door Lock Control SW RH		H18	Head Rest Position Sensor	90980-10908
F25	Front Door Speaker LH		H19	Headlight Beam Level Control Actuator LH	90980-11144
F26	Front Door Speaker RH	90980-10935	H20	Headlight Beam Level Control Actuator RH	
F27	Front Passenger Door ECU	90980-11594	H23	Headlight Control ECU LH (Low Beam)	90980-11003
F28	Front Passenger Door ECU	90980-11595	H24	Headlight Control ECU RH (Low Beam)	
			H25	Headlight Beam Level Control ECU	90980-11422
			I 6	Injector No.1	90980-11153
			I 7	Injector No.2	
			I 8	Injector No.3	
			I 9	Injector No.4	
			I10	Injector No.5	
			I11	Injector No.6	

PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number	
I12	Injector No.7	90980-11153	M 7	Multi Display	90980-11562	
I13	Injector No.8		N 1	Noise Filter (Ignition System)	90980-10843	
I14	Ignition Key Cylinder Light	90980-10906	N 2	Noise Filter (Rear Window Defogger)	90980-11184	
I15	Ignition SW	90980-11615	N 3	Noise Filter (Rear Interior Light LH)	90980-10825	
I16	Inner Mirror	90980-11187	N 4	Noise Filter (Stop Light and Rear Interior Light RH)	90980-10795	
I17	Ignition Coil and Igniter No.1	90980-11150		N 5	Noise Filter (Rear Window Defogger)	90980-11259
I18	Ignition Coil and Igniter No.2			N 6	Navigation ECU	90980-10799
I19	Ignition Coil and Igniter No.3			N 7	Navigation ECU	90980-11542
I20	Ignition Coil and Igniter No.4			O 1	O/D Direct Clutch Speed Sensor	90980-11156
I21	Ignition Coil and Igniter No.5			P 1	Park/Neutral Position SW	90980-11332
I22	Ignition Coil and Igniter No.6			P 2	Parking Light LH	90980-11156
I23	Ignition Coil and Igniter No.7			P 3	Parking Light RH	
I24	Ignition Coil and Igniter No.8			P 4	PPS Solenoid	90980-11162
J 3	Junction Connector	90980-11542		P 5	Parking Brake SW	90980-11146
J 4	Junction Connector			P 6	Power Shoulder Belt Anchor Relay RH	90980-10799
J 5	Junction Connector		P 7	PPS ECU	90980-10797	
J 6	Junction Connector		P 8	Power Seat Control SW (Driver's Seat)	90980-10885	
J 7	Junction Connector		P 9	Power Seat Control SW (Front Passenger's Seat)		
J 8	Junction Connector	90980-11502	P10	Power Seat ECU	90980-11502	
J 9	Junction Connector	90980-11542	P11	Power Seat ECU	90980-11542	
J10	Junction Connector		P13	Power Seat Motor (Driver's Seat Front Vertical Control) (w/o Driving Position Memory)	90980-10825	
J12	Junction Connector			Power Seat Motor (Driver's Seat Front Vertical Control) (w/ Driving Position Memory)	90980-10797	
J13	Junction Connector		P14	Power Seat Motor (Driver's Seat Head Rest Control)	90980-10825	
J14	Junction Connector			P15		Power Seat Motor (Driver's Seat Lumbar Support Control)
J15	Junction Connector		P16	Power Seat Motor (Driver's Seat Rear Vertical Control) (w/ Driving Position Memory)	90980-10797	
J16	Junction Connector			Power Seat Motor (Driver's Seat Rear Vertical Control) (w/o Driving Position Memory)	90980-10825	
J17	Junction Connector	90980-11502	P17	Power Seat Motor (Driver's Seat Reclining Control) (w/ Driving Position Memory)	90980-10797	
J18	Junction Connector	90980-11542		Power Seat Motor (Driver's Seat Reclining Control) (w/o Driving Position Memory)	90980-10825	
K 1	Keyless Buzzer	90980-11156	P18	Power Seat Motor (Driver's Seat Slide Control) (w/ Driving Position Memory)	90980-10797	
K 2	Knock Sensor 1	90980-11166		Power Seat Motor (Driver's Seat Slide Control) (w/o Driving Position Memory)	90980-10825	
K 3	Knock Sensor 2		P19	Power Seat Motor (Front Passenger's Seat Front Vertical Control)		
K 4	Keyless Buzzer ON/OFF SW	90980-10825	P20	Power Seat Motor (Front Passenger's Seat Head Rest Control)		
L 1	Luggage Compartment Door Opener SW	90980-10860	P21	Power Seat Motor (Front Passenger's Seat Lumbar Support Control)		
L 2	License Plate Light LH	90980-11148				
L 3	License Plate Light RH					
L 4	Light Failure Sensor	90980-10848				
L 5	Luggage Compartment Door Key Unlock SW	90980-10825				
L 6	Luggage Compartment Door Opener Motor	90980-11315				
L 7	Luggage Compartment Light	90980-11148				
L 8	Luggage Compartment Light SW	90980-11097				
M 1	Mass Air Flow Meter	90980-11317				
M 2	Moon Roof Control Relay	90980-10997				
M 3	Moon Roof Control SW	90980-11165				
M 5	Master Cylinder Pressure Sensor	90980-10845				
M 6	Multi Display	90980-11475				

Note: Not all of the above part numbers of the connector are established for the supply. In case of ordering a connector or terminal with wire, please confirm in advance if there is supply for it using "Parts Catalog News" (published by Parts Engineering Administration Dept.).

Code	Part Name	Part Number	Code	Part Name	Part Number
P22	Power Seat Motor (Front Passenger's Seat Rear Vertical Control)	90980-10825	R22	Rear Height Control Valve	90980-11016
P23	Power Seat Motor (Front Passenger's Seat Reclining Control)		R23	Rear Interior Light LH	90980-11148
P24	Power Seat Motor (Front Passenger's Seat Slide Control)		R24	Rear Interior Light RH	
P25	Power Outlet	90980-10760	R25	Rear Personal Light LH	90980-11187
P26	Pretensioner LH	90980-11862	R26	Rear Personal Light RH	
P27	Pretensioner RH		R27	Rear Power Window Control SW LH	90980-10797
P28	Power Shoulder Belt Anchor Relay LH	90980-10799	R28	Rear Power Window Control SW RH	
P29	Power Seat Control SW (Rear Passenger's Seat)	90980-11596	R29	Rear Power Window Motor LH	90980-11011
P30	Power Seat Control SW (Rear Passenger's Seat)	90980-11573	R30	Rear Power Window Motor RH	
P31	Power Seat Motor (Rear Passenger's Seat LH Head Rest Top and Bottom Control)		R31	Rear Suspension Control Actuator LH	90980-10789
P32	Power Seat Motor (Rear Passenger's Seat LH Slide Control)		R32	Rear Suspension Control Actuator RH	
P33	Power Seat Motor (Rear Passenger's Seat LH Head Rest Turning Control)	90980-10795	R33	Rear Window Defogger	90980-10913
P34	Power Seat Motor (Rear Passenger's Seat RH Head Rest Top and Bottom Control)	90980-10825	R34	Rear Window Defogger	90980-10914
P35	Power Seat Motor (Rear Passenger's Seat RH Slide Control)		R35	Remote Control Mirror LH	90980-11556
P36	Power Seat Motor (Rear Passenger's Seat RH Head Rest Turning Control)		R36	Remote Control Mirror RH	
R 1	Radiator Fan Motor and Resistor	90980-10990	R37	Radio and Player	90980-10996
R 2	Radio and Player	90980-11556	R38	Radio and Player	90980-10997
R 3	Radio and Player	90980-11591	R39	Radio and Player	90980-11165
R 4	Remote Control Mirror SW	90980-11657	R40	Rear Door LH ECU	90980-11877
R 5	Rheostat and Security Indicator Light	90980-11450	R41	Rear Door LH ECU	90980-10799
R 6	Rear ABS Speed Sensor LH	90980-10824	R42	Rear Door RH ECU	90980-11877
R 7	Rear ABS Speed Sensor RH and Pad Wear Indicator	90980-10794	R43	Rear Door RH ECU	90980-10799
R 8	Rear Cigarette Lighter LH	90980-10795	R44	Rear Door Courtesy Light LH	90980-11148
R 9	Rear Cigarette Lighter RH		R45	Rear Door Courtesy Light RH	
R10	Rear Combination Light LH	90980-11011	R46	Rear Audio Control Panel	90980-11503
R11	Rear Combination Light LH	90980-11587	R47	Retractor SW	90980-11090
R12	Rear Combination Light RH	90980-11011	S 1	Starter	90980-11400
R13	Rear Combination Light RH	90980-11587	S 2	Starter	90980-09585
R14	Rear Door Courtesy Light LH	90980-11148	S 5	Shift Lock ECU	90980-11533
R15	Rear Door Courtesy Light RH		S 6	Step Light LH	-
R16	Rear Door Lock Control Motor, Door Unlock Detection SW and Door Open Detection SW LH	90980-11001	S 7	Step Light RH	
R17	Rear Door Lock Control Motor, Door Unlock Detection SW and Door Open Detection SW RH		S 8	Stop Light SW	90980-11118
R18	Rear Door Speaker LH		S 9	Seat Heater SW	90980-10807
R19	Rear Door Speaker RH	90980-10935	S10	Stereo Component Amplifier	90980-11556
R20	Rear Height Control Sensor LH	90980-11298	S11	Stereo Component Amplifier	90980-11591
R21	Rear Height Control Sensor RH		S12	Stereo Component Amplifier	90980-11542
			S13	Stereo Component Amplifier	90980-11535
			S14	Shoulder Belt Adjust SW RH	90980-11165
			S15	Shoulder Belt Anchor Motor LH and Shoulder Belt Anchor Sensor	90980-11001
			S16	Shoulder Belt Anchor Motor RH	90980-10906
			S17	Seat Heater (Driver's Seat)	
			S18	Seat Heater (Front Passenger's Seat)	90980-11857
			S19	Side Airbag Sensor LH	
			S20	Side Airbag Sensor RH	

PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
S21	Side Airbag Squib LH	90980-11864	Y 1	Yaw Rate Sensor	90980-11904
S22	Side Airbag Squib RH				
S24	Short Connector	90980-11369			
S25	Short Connector	90980-11368			
S26	Stereo Component Amplifier	90980-10996			
S27	Stereo Component Amplifier	90980-10997			
S28	Stereo Component Amplifier	90980-10803			
S29	Stereo Component Amplifier	90980-10799			
S30	Stereo Component Amplifier	90980-11556			
S31	Seat Belt Warning Occupant Detection Sensor RH	90980-11060			
T 1	Theft Deterrent Horn	90980-11235			
T 2	Throttle Position Sensor	90980-11037			
T 8	Tilt and Telescopic ECU	90980-10803			
T 9	Tilt and Telescopic ECU	90980-10502			
T11	Transmission Control SW	90980-11488			
T12	Turn Signal Flasher	90980-10799			
T13	Telescopic Position Sensor and Motor				
T15	Trip SW	90980-11490			
T16	Telephone Transceiver and Speaker Relay	90980-10803			
T17	Telephone Transceiver and Speaker Relay	90980-10802			
T18	Tension Reducer Solenoid LH	90980-11369			
T19	Tension Reducer Solenoid RH				
T20	Transponder Key Amplifier	90980-10789			
T22	Throttle Control Motor and Clutch	90980-10942			
T23	Tilt Position Sensor and Motor	90980-10799			
U 1	Unlock Warning SW and Key Interlock Solenoid	90980-10795			
V 1	Vehicle Speed Sensor	90980-11156			
V 2	VSV (EVAP)				
V 4	Vanity Light LH	90980-11369			
V 5	Vanity Light RH				
V 6	Vapor Pressure Sensor	90980-11143			
V 8	VVT Sensor LH	90980-10947			
V 9	VVT Sensor RH				
V10	VSV (ACIS)	90980-11156			
V11	VSC Deceleration Sensor	90980-11182			
V12	VSC Buzzer	90980-10906			
V13	VSC Off SW and Headlight Cleaner SW	90980-10933			
V14	VSV (Canister Closed Valve)	90980-11162			
V15	VSV (Pressure Switching Valve)	90980-11156			
W 1	Washer Level SW	90980-11003			
W 2	Washer Motor	90980-10981			
W 3	Wiper Motor	90980-11290			
W 4	Wireless Door Lock Control ECU	90980-11165			
W 5	Water Valve Servo Motor	90980-11471			
W 6	Woofer (Speaker)	90980-10935			

Note: Not all of the above part numbers of the connector are established for the supply. In case of ordering a connector or terminal with wire, please confirm in advance if there is supply for it using "Parts Catalog News" (published by Parts Engineering Administration Dept.).

[illegible]