


GENERAL INFORMATION

1. BASIC DIMENSIONS

- (a) There are two types of dimensions in the diagram.
 - (1) (Three-dimensional distance)
 - Straight-line distance between the centers of two measuring points.
 - (2) (Two-dimensional distance
 - Horizontal distance in forward/rearward direction between the centers of two measuring points.
 - The height from an imaginary datum line.


- (b) In cases in which only one dimension is given, left and right are symmetrical.
- (c) The dimensions in the following drawing indicate actual distance. Therefore, please use the dimensions as a reference.
- (d) The line that connects the places listed below is the imaginary datum line when measuring the height. (The dimensions are printed in the text.)

SYMBOL	Name
1	The place that was lowered A mm from the under surface of the rocker panel centered on the front jack up point.
2	The place that was lowered B mm from the under surface of the rocker panel centered between 1 and 3.
3	The place that was lowered C mm from the under surface of the rocker panel centered on the rear jack up point.

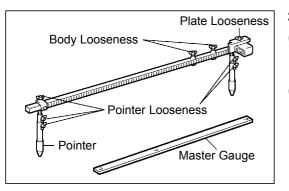

2. MEASURING

- (a) Basically, all measurements are to be done with a tracking gauge. For portions where it is not possible to use a tracking gauge, a tape measure should be used.
- (b) Use only a tracking gauge that has no looseness in the body, measuring plate, or pointers.

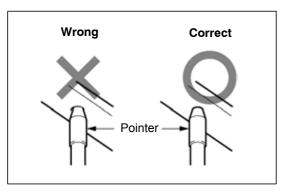

HINT:

- 1) The height of the left and right pointers must be equal.
- 2) Always calibrate the tracking gauge before measuring or after adjusting the pointer height.
- 3) Take care not to drop the tracking gauge or otherwise shock it.
- 4) Confirm that the pointers are securely in the holes.
- (c) When using a tape measure, avoid twists and bends in the tape.