


## FRONT BODY PILLAR LOWER GUSSET (ASSY)

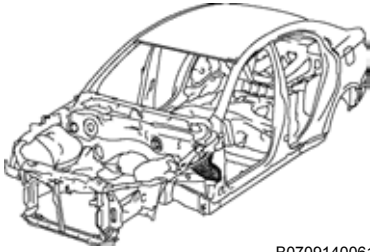


B0709140061

### Symbol meaning

REMOVAL      ▲ : Remove Weld Points

INSTALLATION      ◻ : MIG Plug Weld

### REMOVAL-INSTALLATION

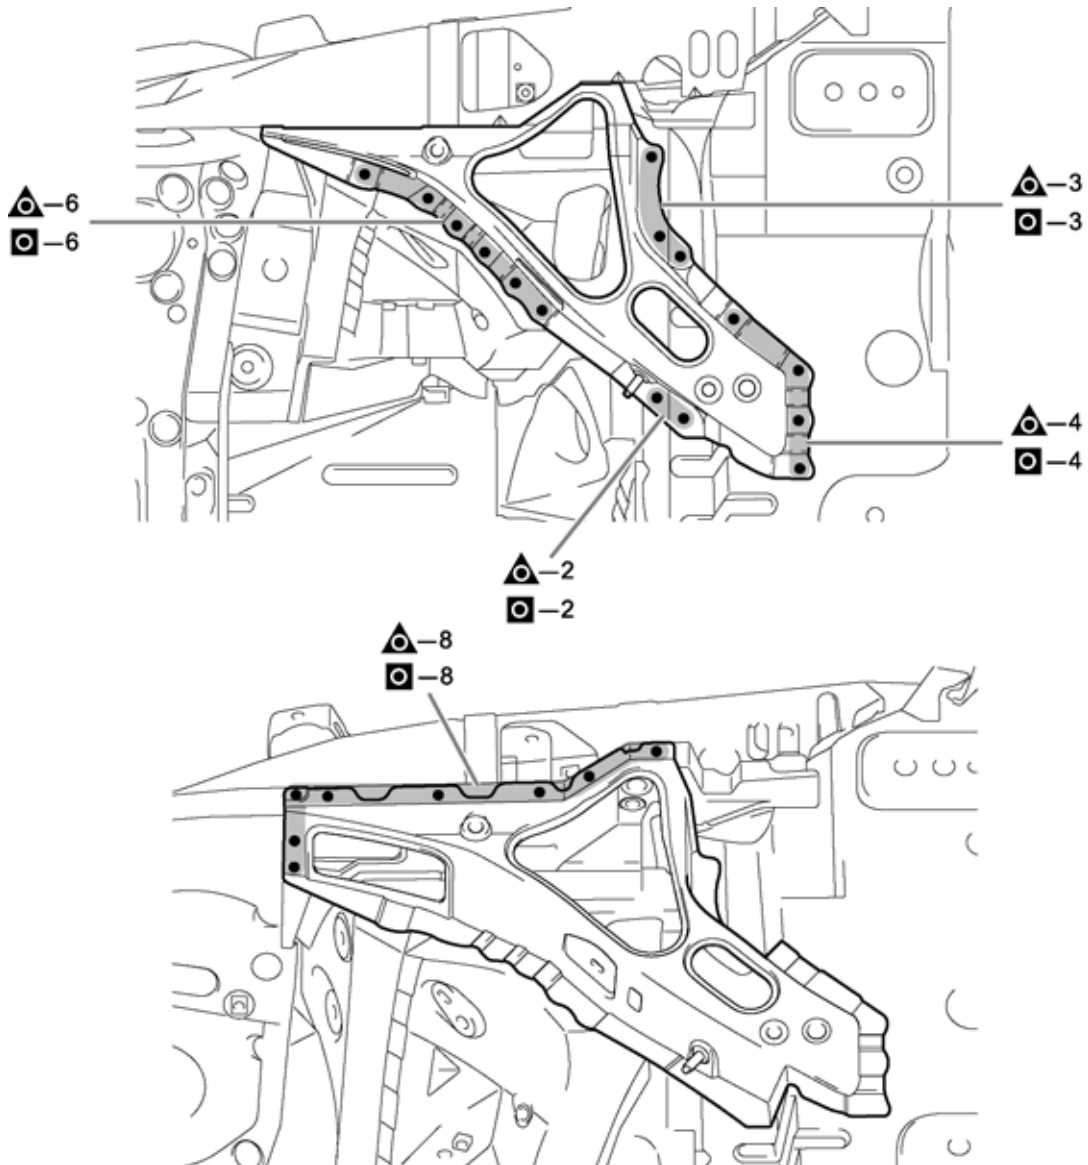

B0709140062

### INSTALLATION POINT

- 1 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint-coating)
- 2 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.