


6. REPAIR PROCEDURE OF HEADLIGHT RETAINER

(a) INSTALL UPPER HEADLIGHT PROTECTOR RETAINER

HINT:


If the installation area of the headlight is damaged, use the supply retainer for low-cost repair. Ensure that the headlight is not damaged.

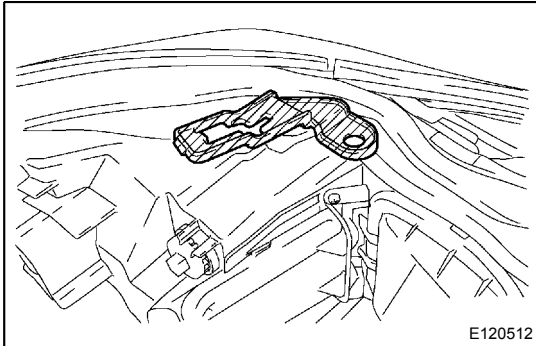

- (1) Cut off the part shaded in the illustration and smooth with sandpaper.

NOTICE:

After cutting off the part, place the headlight protector retainer against the bosses, and gradually file away the old bracket if it interferes with the installation of the supply retainer.

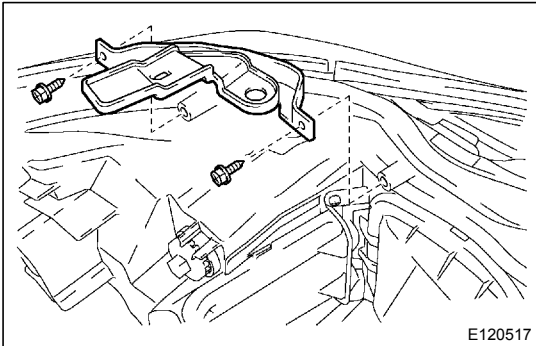


- (2) Install the headlight protector retainer with the screw.

(b) INSTALL LOWER HEADLIGHT PROTECTOR RETAINER

HINT:


If the installation area of the headlight is damaged, use the supply retainer for low-cost repair. Ensure that the headlight is not damaged.

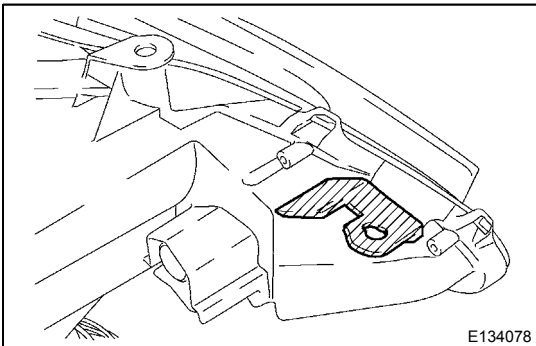

- (1) Cut off the part shaded in the illustration and smooth with sandpaper.

NOTICE:

After cutting off the part, place the headlight protector retainer against the bosses, and gradually file away the old bracket if it interferes with the installation of the supply retainer.

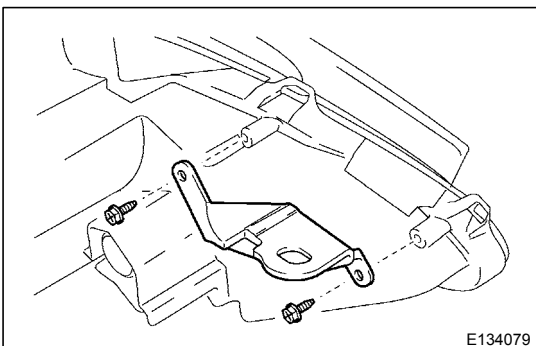

- (2) Install the headlight protector retainer with the screw.