

## 7. PROCEDURES NECESSARY WHEN BATTERY TERMINAL IS DISCONNECTED/RECONNECTED

### (a) THE WORK LIST

(1) Each inspection procedure refers to the LEXUS Repair Manual.

Necessary Procedure	Procedure Detail	Effects/Inoperative Functions When Necessary Procedures are not Performed	Note
Reset power window regulator motor	<ol style="list-style-type: none"> <li>1. Turn the engine switch ON (IG).</li> <li>2. Halfway open the power window by pressing the power window switch.</li> <li>3. Fully pull up the switch until the power window is fully closed and continue to hold the switch for approx. 1 second after the power window is fully closed.</li> </ol>	<ul style="list-style-type: none"> <li>• AUTO UP/DOWN function</li> <li>• Power window operation function</li> <li>• Transmitter-linked function</li> <li>• Key-linked function</li> <li>• Jam protection function</li> </ul>	Be sure to reset the power window regulator motors using the power window switch on each door because the motors cannot be reset by remote operation using the multiplex network master switch assembly.

#### NOTICE:

- After the power switch is turned OFF, the HDD navigation system requires approximately 6 minutes to record various types of memory and settings. As a result, after turning the power switch OFF, wait 6 minutes or more before disconnecting the cable from the negative (–) battery terminal.