





10. PRECAUTIONS FOR SRS AIRBAG SYSTEM

(a) Handling of a vehicle that has been damaged in a collision.

- (1) Refer to the LEXUS Repair Manual for the SRS airbag system inspection procedures.
- (2) When using an electric welder, first remove all airbags and seat belt pretensioners.
- (3) If impacts are likely to occur to the front airbag sensors, side airbag sensors, rear side airbag sensors, center airbag sensor or seat position sensor, remove each sensor as necessary beforehand.
- (4) Do not allow the front airbag sensors, side airbag sensors, rear side airbag sensors, center airbag sensor or seat position sensor to become heated to high temperatures.
- (5) Check the wire harnesses and connectors for damage and/or melting, as some areas of the airbags and seat belt pretensioners may heat up to several hundred degrees when they operate.

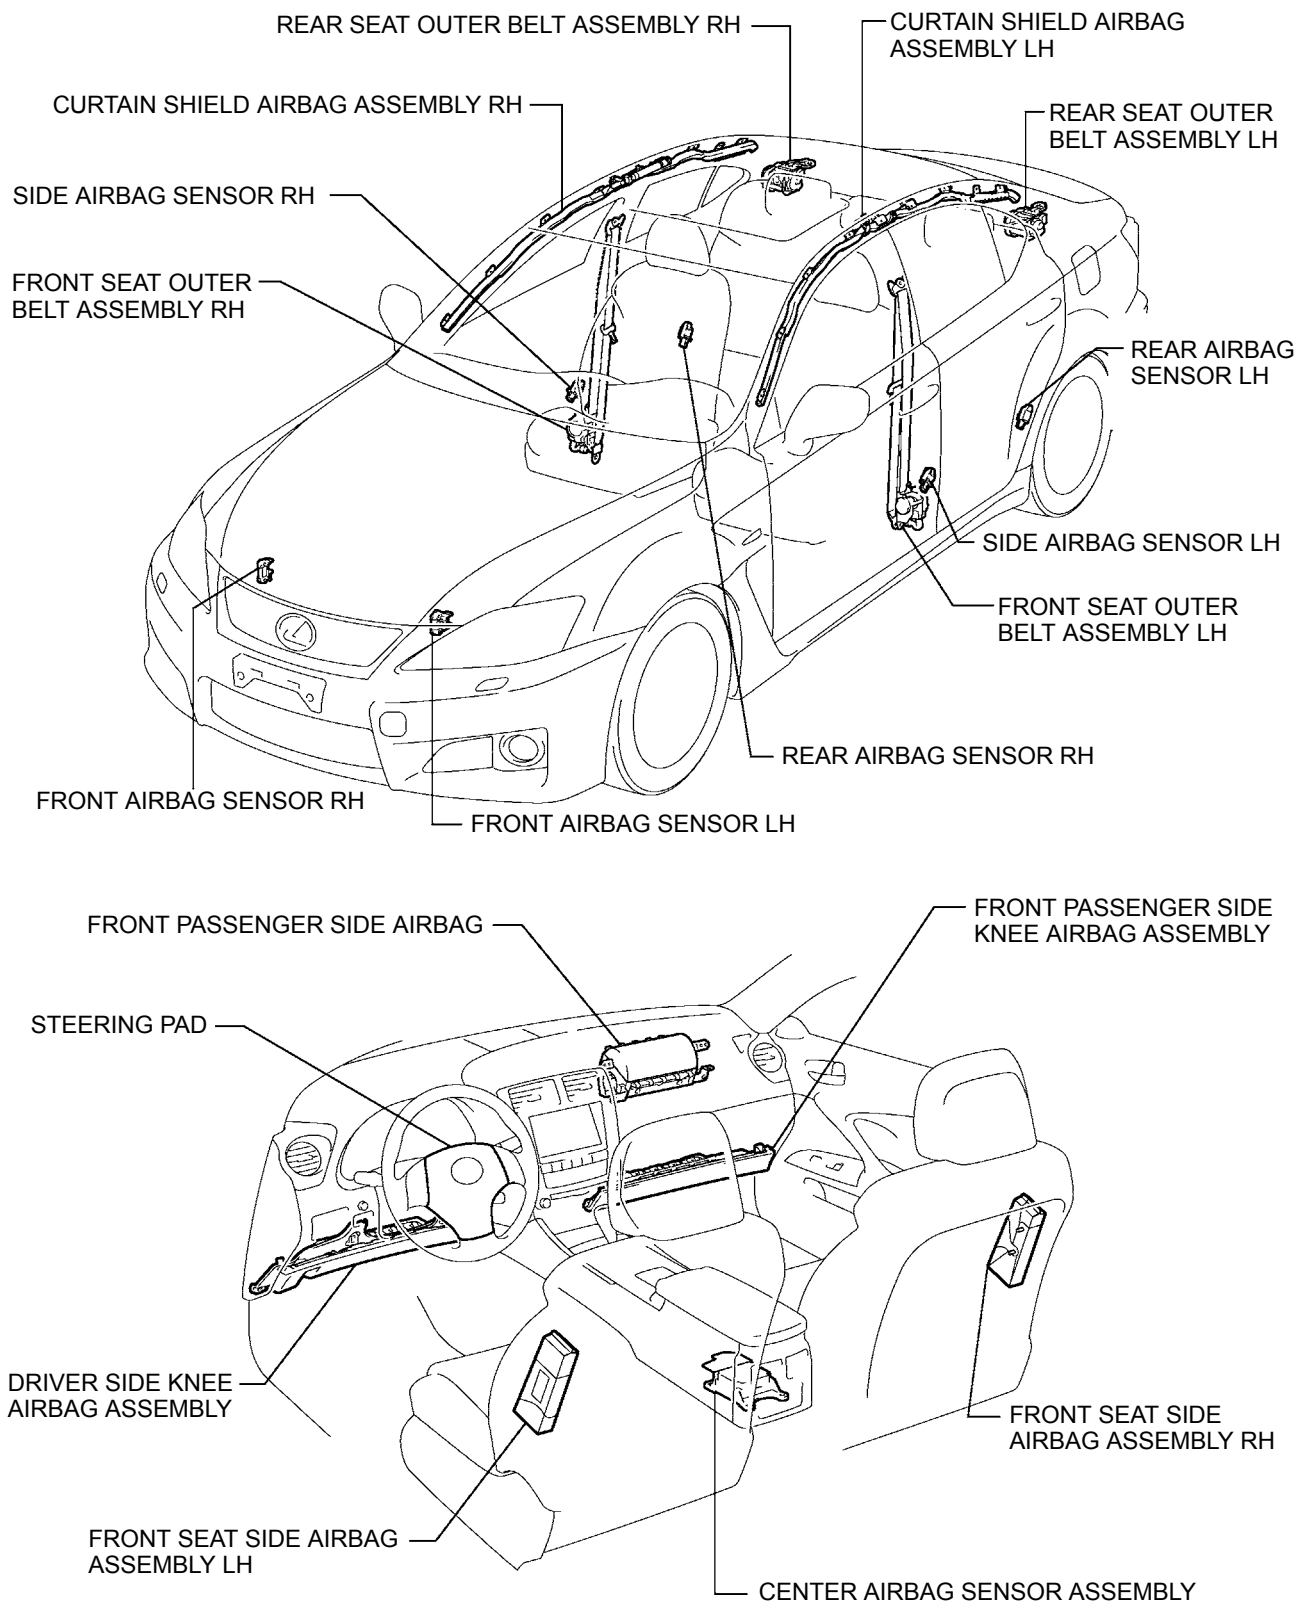

USA, Canada

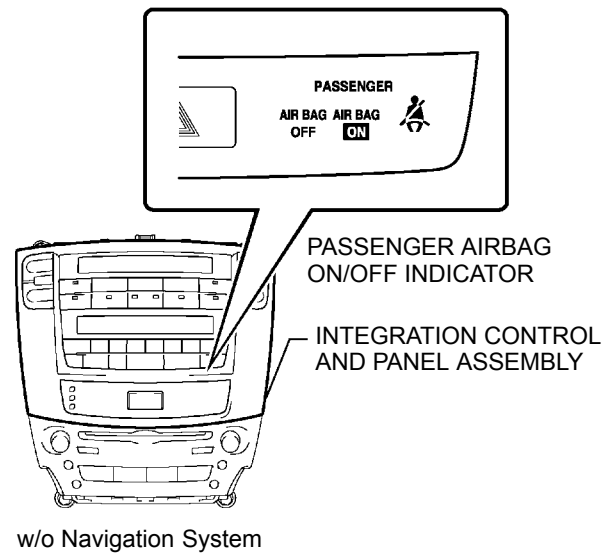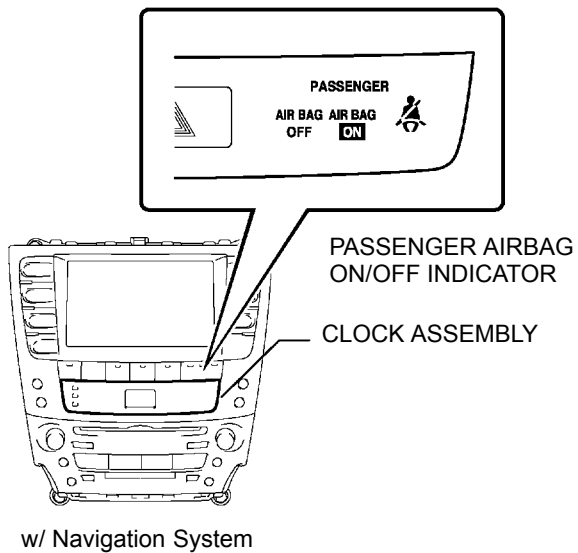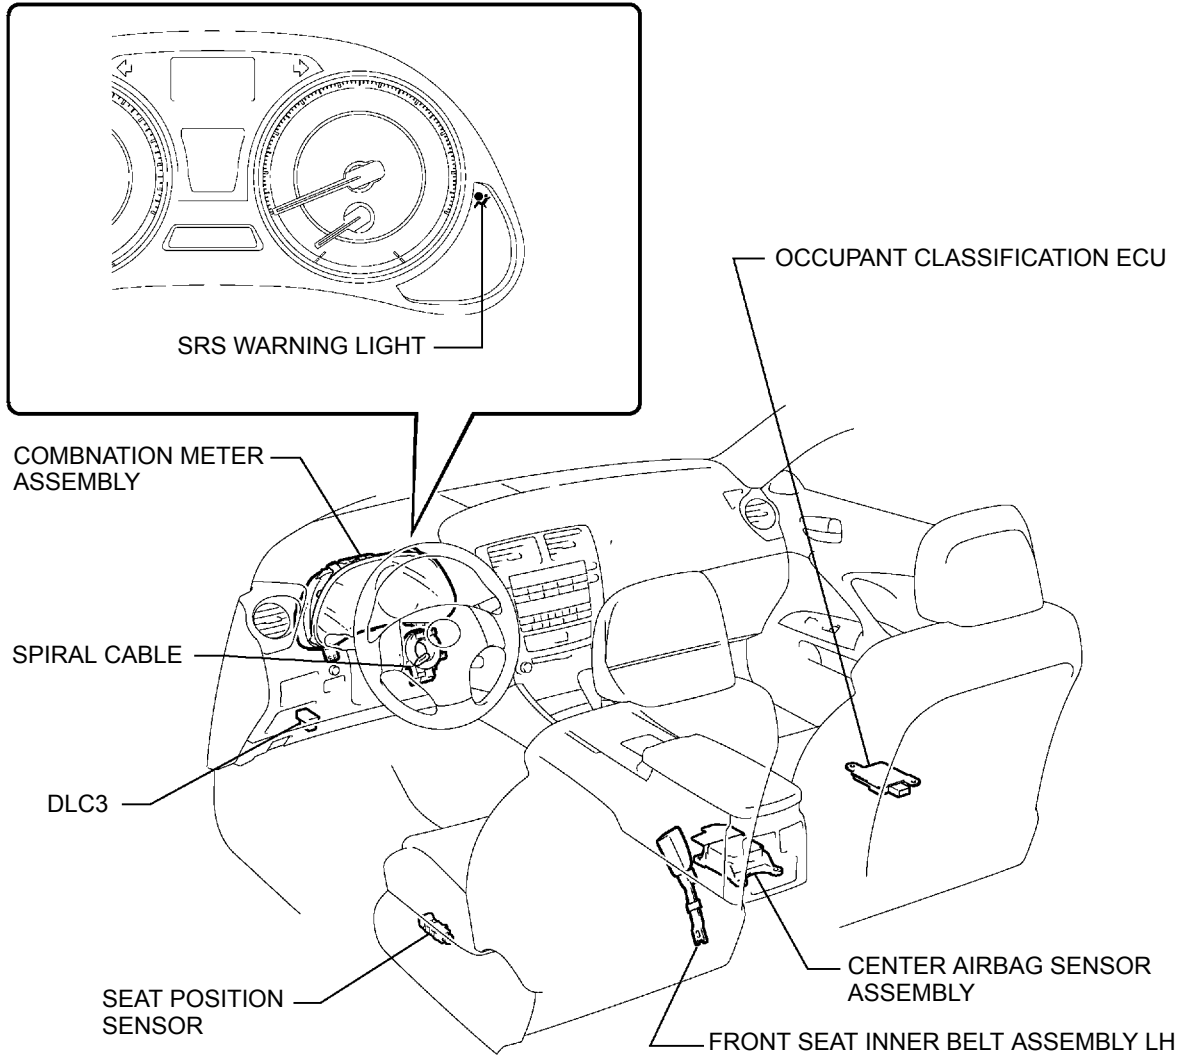

Except USA, Canada

