
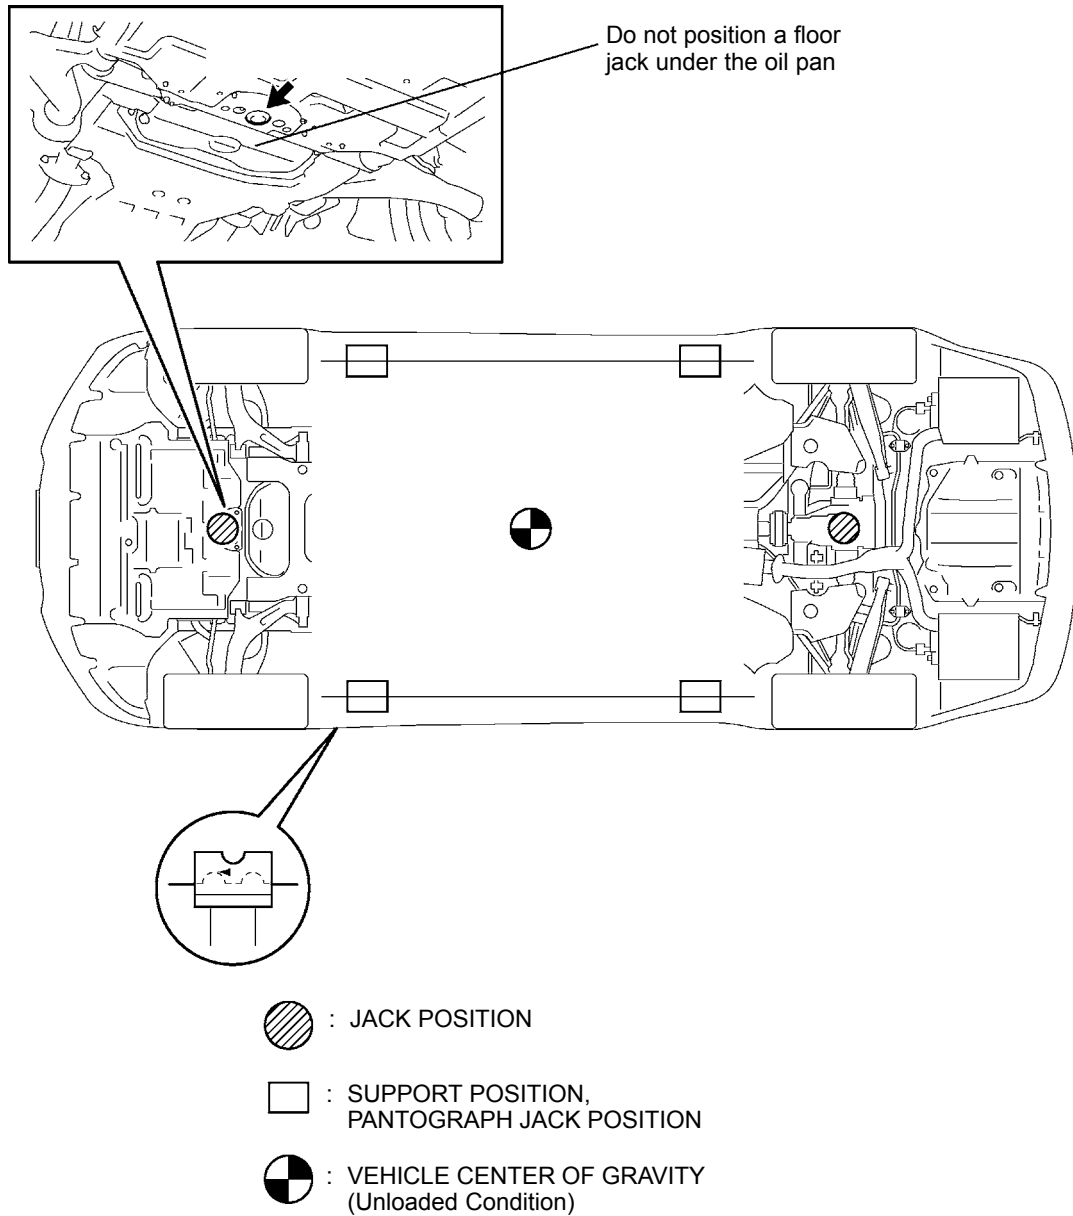




## 2. NOTICE ABOUT VEHICLE CONDITION WHEN JACKING UP VEHICLE

### (a) NOTICE FOR USING JACK AND SAFETY STAND

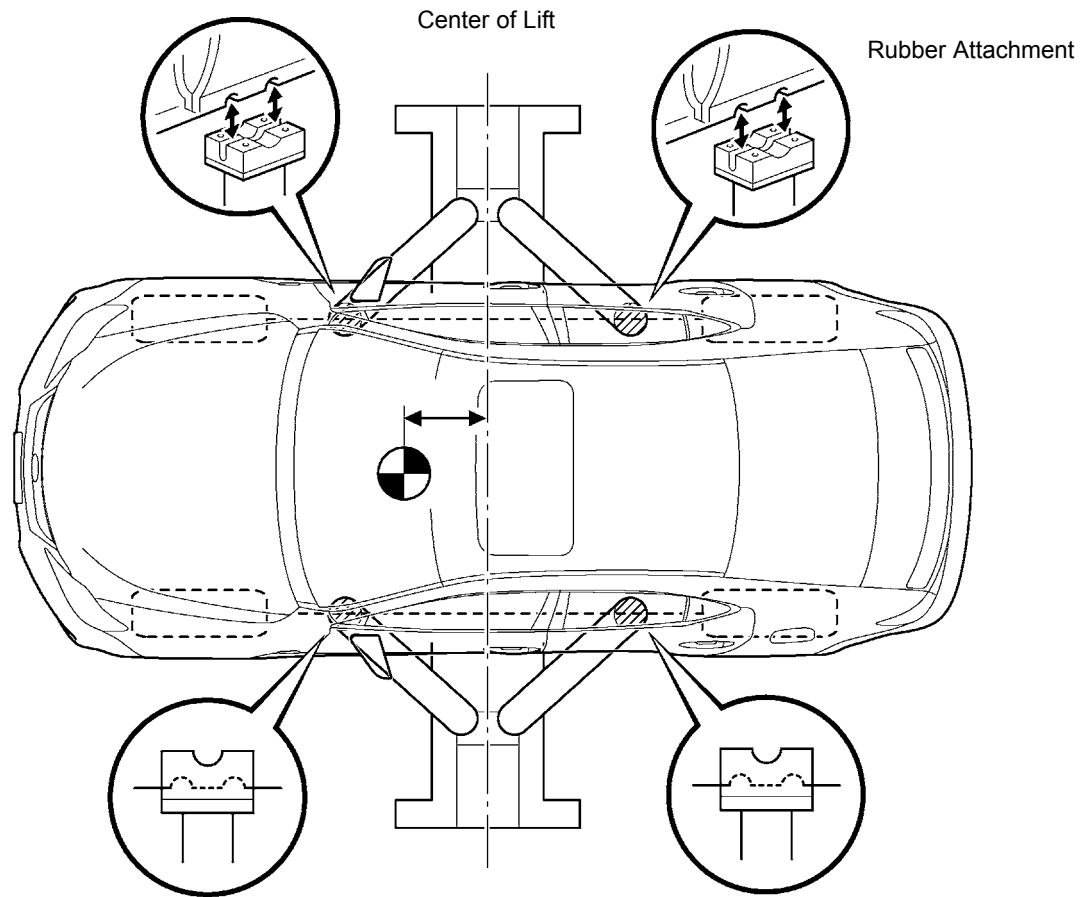

**(b) NOTICE FOR USING SWING ARM TYPE LIFT**

⊙ : VEHICLE CENTER OF GRAVITY (Unloaded Condition)

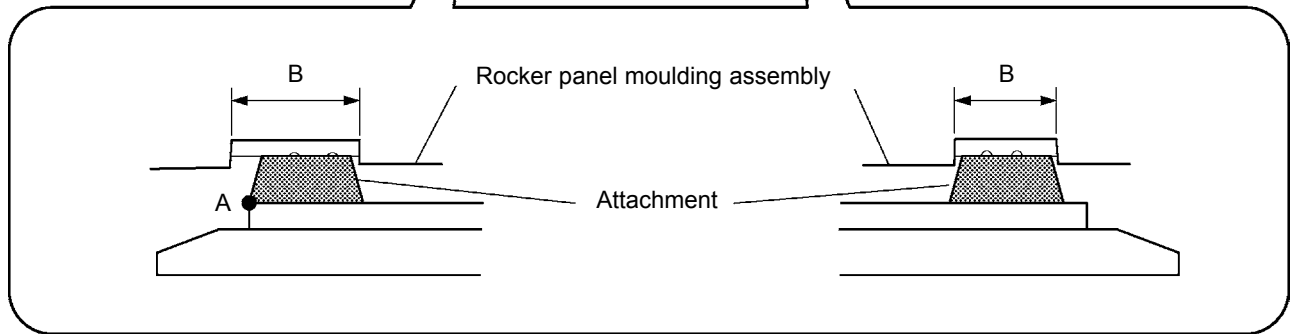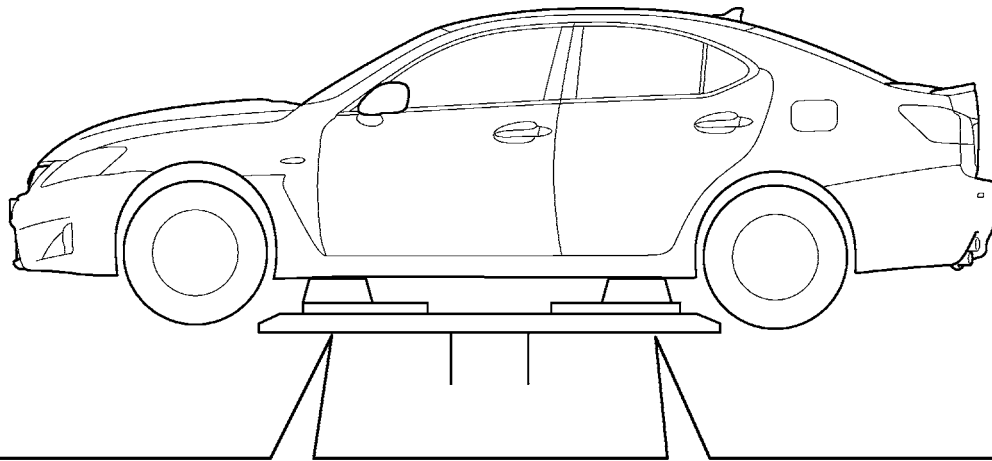**(c) NOTICE FOR USING PLATE TYPE LIFT****Attachment Dimensions**

Be sure to set the attachment to position (B) as shown in the illustration. Failure to do so may damage the rocker panel moulding assembly.

