

■ MULTIPLEX COMMUNICATION

1. Major Difference

The all unlock/open-close function has been changed as follows:

- Default setting (except for models for G.C.C. countries): ON
- The timeout for unlocking all the doors when the engine switch is turned from on to off has been changed from 10 seconds to approximately 45 seconds.

2. Customize Function Table for Door Lock System

 : Changed

Tester Display Content	Contents	Default Setting	Available Setting
Auto Lock	Locks the doors when the vehicle reaches a certain speed.	ON	ON/OFF
Unlock Key Twice	Unlocks only the driver's door by operating the key once and unlocks all the doors when the key is operated twice. In the OFF setting, operating the key "UNLOCK" once makes all the doors unlock.	ON*1 OFF*2	ON/OFF
All Unlock/Open-Close	Unlocks all the other doors when the driver's door is opened within approximately 45 seconds after turning the engine switch off from on (IG).	ON*3 OFF*4	ON/OFF
Unlock/Park	Unlocks the doors when the shift lever is moved to P from a position other than P when the engine switch is on (IG).	OFF	ON/OFF
Auto Lock/Shift	Locks the doors when the shift lever is moved from P to a position other than P.	OFF	ON/OFF

*1: Models for G.C.C. countries and the destination packages for Australia, New Zealand and Taiwan

*2: Models for destinations other than G.C.C. countries and the destination packages for Australia, New Zealand and Taiwan

*3: Models for destinations other than G.C.C. countries

*4: Models for G.C.C. countries