


■ AIR OUTLETS AND AIRFLOW VOLUME

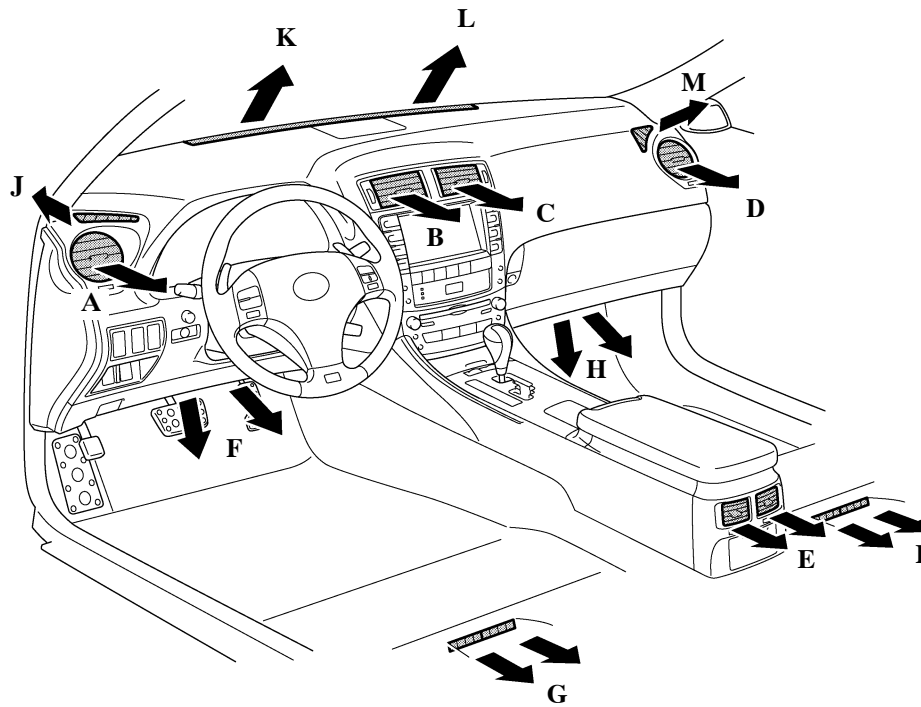

08E0BE251C

Indication	Mode	Selection		Face					Footwell				Defroster			
		AUTO	MANUAL	Driver		Front Passenger		Rear	LH		RH		Driver		Front Passenger	
				A	B	C	D	E	F	G	H	I	K	J	L	M
 187BE24	FACE-U* ¹	☐	☐	☐	☐	☐	☐	☐	—	—	—	—	—	—	—	—
	FACE-L* ²	☐	—	☐	☐	☐	☐	☐	☐	☐	☐	☐	—	—	—	—
 187BE25	BI-LEVEL U* ¹	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	—	—	—	—
	BI-LEVEL L* ²	☐	—	☐	☐	☐	☐	☐	☐	☐	☐	☐	—	—	—	—
 187BE26	FOOT D* ³	☐	—	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
	FOOT R* ⁴	☐	—	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
	FOOT F* ⁵	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
 187BE27	FOOT/DEF	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐	☐
 187BE28	DEF	☐	☐	—	—	—	—	—	—	—	—	—	☐	☐	☐	☐

The size of the circle ○ indicates the proportion of airflow volume.

*¹: Greater airflow volume at the upper area. *²: Greater airflow volume at the lower area.

*³: Greater airflow volume at the defroster. *⁴: Greater airflow volume at the rear.

*⁵: Greater airflow volume at the front.