


CRUISE CONTROL SYSTEM

DESCRIPTION

- When the cruise control system is set to a desired vehicle speed, the throttle valve position is adjusted automatically to maintain the vehicle speed without the driver having to depress the accelerator pedal.
- This system performs control using the ETCS-i (Electronic Throttle Control System-intelligent).
- This system is standard equipment.

► System Diagram ◀

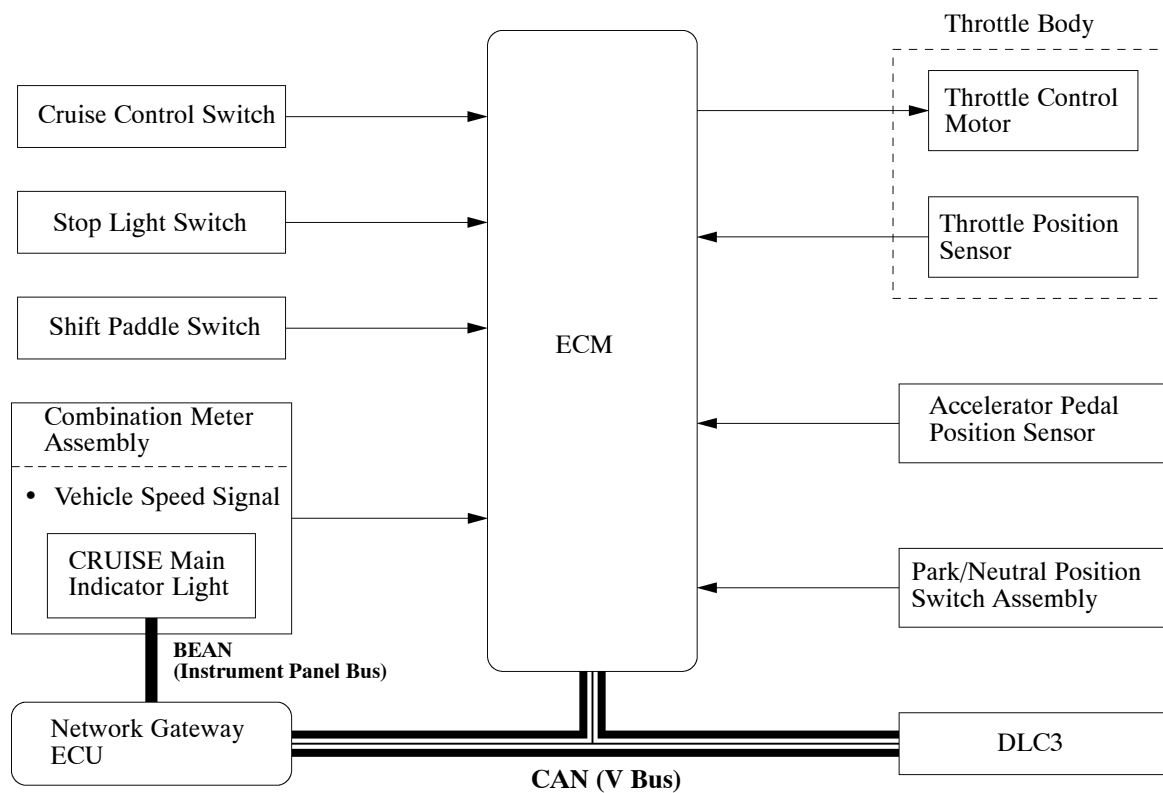

BE