

ENTRY AND START SYSTEM


■ DESCRIPTION

The entry and start system not only has a wireless door lock control function and engine immobilizer function, but by carrying the key the following functions (entry function and start function) are also possible, without having to use a key or transmitter button. It is an extremely convenient system.


- Door unlock/lock (Entry Unlock/Entry Lock Functions)
- The engine can be started by simply pressing the engine switch while depressing the brake pedal (Start Function)
- The trunk can be opened (Trunk Open Function)
- Wireless door lock control function

This system is standard equipment on the all models.

Entry Unlock/Lock Functions

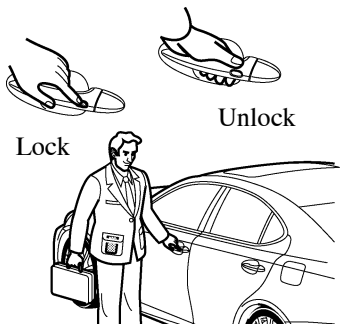

Trunk Open Function

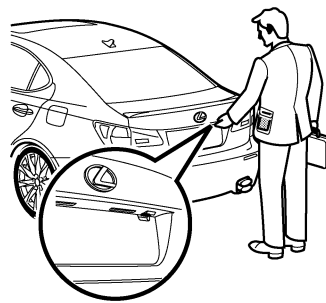

Start Function

