

■ ACTUATION AREA

The special functions of the entry and start system only work when the key is in the actuation area formed by the six oscillators.

- The front and rear room oscillator forms the actuation area of the start function.
- Front door oscillators and outer trunk oscillator form the actuation area of the entry function.

