

## ■ CUSTOMIZED BODY ELECTRONIC FUNCTION

### 1. General

Intelligent tester can be used to customize the system settings.

### 2. Customized Table for Lighting System

Tester Display Content	Contents	Default Setting	Available Setting
Lighting Time	Changes the lighting time after closing the door. (It will quickly fade out in the event the power source is turned IG-ON.)	15 sec.	7.5 sec./ 15 sec./ 30 sec.
Light Dome Lamp When Unlocking With Door Key	Lights up the interior lights, etc. when the door is unlocked with a transmitter, key cylinder or door lock control switch.	ON	ON/OFF
Light I/L when ACC OFF	Lights up the interior lights when the engine switch is turned from "ACC" to "OFF".	ON	ON/OFF
Light auto OFF delay	Keeps the headlights illuminated for a certain period of time after closing all the doors when the engine switch has been turned OFF (was in the ON mode), the light control switch is in the HEAD or AUTO position and the headlights were ON.	30 sec.	OFF/ 30 sec./ 60 sec./ 90 sec.
Turn ON luminous intensity	To adjust the sensitivity of the lighting illumination.	NORMAL	LIGHT 2/ LIGHT 1/ NORMAL/ DARK 1/ DARK 2
Display extinction luminous intensity	Used to changes the brightness required to dim the lights such as the indicator light of the combination meter assembly, A/C indicator lights, clock.	NORMAL	LIGHT 2/ LIGHT 1/ NORMAL/ DARK 1/ DARK 2
Display extinction release luminous intensity	Used to change the brightness required to cancel the dimming of the lights such as the indicator light of the combination meter assembly, A/C indicator lights, clock.	NORMAL	LIGHT 2/ LIGHT 1/ NORMAL/ DARK 1/ DARK 2
Exterior Foot Light Control	Changes the availability of the foot lights.	AVAIL	NOT AVL/ AVAIL
Seat Light Control	Lights up the seat illumination when unlocking the vehicle using the door key cylinder.	AVAIL	NOT AVL/ AVAIL
Shift Light Control	Lights up the shift illumination when unlocking the vehicle using the key cylinder.	AVAIL	NOT AVL/ AVAIL

**3. Customized Table for Combination Meter Assembly**

Tester Display Content	Contents	Default Setting	Available Setting
Key Remind Volume	Changes the volume of the key reminder buzzer.	LARGE	LARGE/ MEDIUM/ SMALL
Key Remind Sound	Changes the frequency of the key reminder buzzer.	NORMAL	NORMAL/ FAST/ SLOW
Units By Region	Function to change the unit of the display.	RHD: ML/G LHD: KM/L	KM/L/ ML/G

**4. Customized Table for Wiper and Washer System**

Tester Display Content	Contents	Default Setting	Available Setting
Speed Mode	Changes the intermittent wiper operation to available when the vehicle comes to a stop (0 vehicle speed) from running condition when the wiper switch is in the LO position.	ON	ON/OFF
Auto Wiper	Operates the wipers automatically when it is raining.	AVAIL	NOT AVL/ AVAIL
Re-wiper Control	Changes delay until rewipe time to prevent drips after having used the washer.	SPD MOD	OFF/ 3 sec./ SPD MOD

**5. Customized Table for Air Conditioning System**

Tester Display Content	Contents	Default Setting	Available Setting
Air Inlet Mode	When the A/C is turned ON and it is desired to make the compartment cool down quickly, this is the function to set the mode automatically to RECIRCULATE mode.	AUTO	MANUAL/ AUTO
Compressor Mode	Turns the A/C ON automatically by pressing the AUTO button when the blower is ON and the A/C is OFF.	AUTO	MANUAL/ AUTO
Compressor/Air Inlet DEF operation	Turns the A/C ON automatically linking with the FRONT DEF button when the A/C is OFF.	LINK	NORMAL/ LINK
Evaporator Control	Function to set the evaporator control to the AUTOMATIC position (AUTO) to save power or to the coldest position (MANUAL) to dehumidify the air and to prevent the windows fogging up.	AUTO	MANUAL/ AUTO
Foot/DEF Auto Mode	Turns the air flow to Foot/DEF ON automatically when AUTO MODE is ON.	ON	ON/OFF

(Continued)

Tester Display Content	Contents	Default Setting	Available Setting
Foot/DEF Automatic Blower Increase Function	Function to increase the blower level automatically when the defroster is ON.	ON	ON/OFF
Set Temperature Shift	Shifts the climate control output air temperature compared to the displayed temperature.	NORMAL	+2°C/+1°C/ NORMAL/ -1°C/ -2°C
Ambient Temperature Shift	To shift the ambient temperature that is detected against the displayed ambient temperature.	NORMAL	+3°C/+2°C/ +1°C/ NORMAL/ -1°C/-2°C/ -3°C
Emission Gas Sensor Shift	Changes the sensitivity of the exhaust gas sensor.	NORMAL	MU MORE/ MORE/ LI MORE/ NORMAL/LI LESS/LESS/ MU LESS
Button Press Buzzer	Sounds a buzzer when a button is pressed.	ON	ON/OFF
Foot Air Leak	Function to cut off the airstream felt underfoot while the vehicle is moving.	ON	ON/OFF

## 6. Customized Table for Power Window System

Tester Display Content	Contents	Default Setting	Available Setting
Door Key P/W UP	Makes all the door windows go up manually when the door key is held to the lock side for 1.5 seconds when the engine switch is OFF.	ON	ON/OFF
Door Key P/W DOWN	Makes all the door windows go down manually when the door key is held to the unlock side for 1.5 seconds when the engine switch is OFF.	ON	ON/OFF
P/W Up W/Transmit	Makes all the door windows go up manually by pressing on the transmitter lock button for 2.4 seconds when engine switch is OFF.	ON	ON/OFF
P/W Down W/Transmit	Makes all the door windows go down manually when pressing on the transmitter unlock button for 2.4 seconds when engine switch is OFF.	ON	ON/OFF
Smart P/W UP	Makes all the door windows go up manually by pressing on the lock button for 2.4 seconds when the engine switch is OFF.	ON	ON/OFF

## 7. Customized Table for Door Lock System

Tester Display Content	Contents	Default Setting	Available Setting
Auto Lock	Locks the doors when the vehicle reaches a certain speed.	ON	ON/OFF
Unlock Key Twice	Unlocks only the driver's door by operating the key once and unlocks all the doors when the key is operated twice. In the OFF setting, operating the key "UNLOCK" once makes all the doors unlock.	OFF	ON/OFF
All Unlock/Open-Close	Unlocks all the other doors when the driver's door is opened within 10 seconds after turning the engine switch to OFF from ON.	OFF	ON/OFF
Unlock/Park	Unlocks the doors when the shift lever is moved to the P range from a range other than P when the engine switch is ON.	OFF	ON/OFF
Auto Lock/Shift	Locks the doors when the shift lever is moved from P range to the range other than P.	OFF	ON/OFF

## 8. Customized Table for Wireless Door Lock Function

Tester Display Content	Contents	Default Setting	Available Setting
Open Door Warning	Makes the buzzer sound for 10 seconds if the door is open when locking with the wireless door lock function.	ON	ON/OFF
Wireless Control	Turns the wireless door lock function on or off.	ON	ON/OFF
Unlock 2 Operation	Unlocks the driver's door when the unlock button of the transmitter (key) is pressed once and unlocks all the doors when it is pressed twice. In the OFF setting, pressing one time makes all the doors unlock.	OFF	ON/OFF
Trunk Lid Operation	Changes the button operation necessary to opening the trunk using the transmitter (key).	0.8 sec. PR	1 TIME/ 2 TIMES/ 0.8 sec. PR /OFF
Auto Lock Time	To change the time until re-locking after the vehicle is unlocked with the wireless door lock function.	30 sec.	30 sec./ 60 sec./ 120 sec.
Hazard Answer Back	Lights up the all turn signal lights once when the transmitter lock button is pressed, and twice when the unlock button is pressed.	ON	ON/OFF
Wireless Buzzer Resp	Turns the wireless buzzer response function on or off.	ON	ON/OFF

## 9. Customized Table for Entry & Start System

Tester Display Content	Contents	Default Setting	Available Setting
Ignition Available Area	Chooses the actuation area for the key to start E/G and cancel the Steering Lock.	ALL	FRONT/ ALL
Park Wait Time	Sets a wait time to permit opening a door after it has been locked.	2.5 sec.	0.5 sec./ 1.5 sec./ 2.5 sec./ 5.0 sec.
Trunk Open Mode	Permits opening a trunk with the key.	ON	ON/OFF
Key Low Battery Warning	Enables a warning function for the first time when a key battery becomes weak.	ON	ON/OFF

## 10. Customized Table for Sliding Roof System

Tester Display Content	Contents	Default Setting	Available Setting
Door Key Related Open	Opens the sliding roof manually by linking with the power window if the key cylinder is held for 1.5 seconds or more to the unlock side when the engine switch is OFF.	ON	ON/OFF
Door Key Related Close	Closes the sliding roof by manually linking with the power window if the key cylinder is held for 1.5 seconds or more to the lock side when the engine switch is OFF.	ON	ON/OFF
Wireless Key Related Open	Opens the sliding roof manually by linking with the power window if the transmitter unlock button is pressed for 2.4 seconds or more when the engine switch is OFF.	ON	ON/OFF
Wireless Key Related Close	Closes the sliding roof manually linking with the power window if pressing on the transmitter lock button for 2.4 seconds or more when the engine switch is OFF.	ON	ON/OFF
Door Key Related Operation	Function to select the opening type of the sliding roof linked to the power window if the driver side door key is held for 1.5 seconds or more to the unlock side when the engine switch is OFF.	SLIDE	TILT/ SLIDE
Wireless Key Related Operation	Selects the opening type of the sliding roof linked to the power window if pressing on the transmitter unlock button for 2.4 seconds or more when the engine switch is OFF.	SLIDE	TILT/ SLIDE

**11. Customized Table for Lexus Parking Assist-sensor System**

Tester Display Content	Contents	Default Setting	Available Setting
Non P/R Range Sensor	Function to set available sensors when shift position is not P or R.	F	F, R CRN2/F
Keep Sense Status Buzzer	Function to make buzzer sound when distance between vehicle and obstacle does not change for more than 3 seconds.	ON	ON/OFF

**12. Customized Table for Power Tilt & Telescopic System**

Tester Display Content	Contents	Default Setting	Available Setting
Autoaway/Return Function	Turns the Auto away/return function on or off.	ON	ON/OFF