
08D0BE4Z

08E0BE18Z

■LAYOUT OF MAIN COMPONENTS

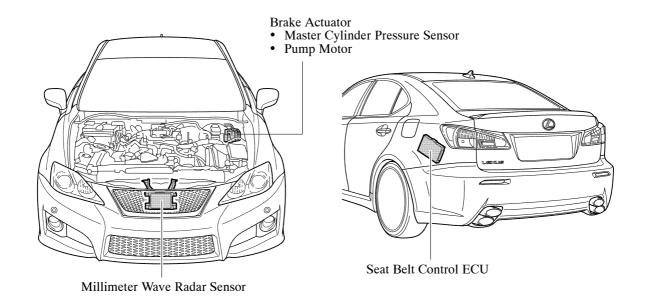

Multi-information Display Master Warning Light PCS Warning Light Network Gateway ECU Main Body ECU RH -(Cowl Side Junction Block RH) Skid Control ECU Assembly Skid Control Buzzer Assembly Yawrate Sensor Steering Sensor Distance Control ECU Assembly Satellite Switch DLC3 Front Seat Outer Belt Front Seat Outer Belt Seat Belt Motor · Seat Belt Motor Front Seat Inner Belt -Front Seat Inner Belt Center Airbag • Seat Belt Buckle Switch • Seat Belt Buckle Switch Sensor Assembly