


## ■ CONSTRUCTION AND OPERATION





### Combination Meter Assembly

The master warning light, PCS warning light, warning message of the multi-information display, buzzer in the combination meter assembly, or the skid control buzzer assembly warns the driver of the abnormal or poor conditions of the pre-crash safety system.

- If the distance control ECU assembly determines that the possibility of a collision is high, the combination meter assembly indicates a warning on the multi-information display and the skid control ECU assembly sounds the skid control buzzer assembly. Details are indicated below.

Warning Message	Detail	Skid Control Buzzer Assembly
 08E0BE20C	The distance control ECU assembly has determined that the possibility of a collision is high.	Sounds Continuously

- Two types of warning messages are used for the pre-crash safety system, as described below. The pre-crash safety system will not operate when these messages appear in the combination meter.

Warning Message	Detail	 0150BE35C	 0150BE36C	Buzzer	DTC
 0150BE33C	This message appears when the seat belt control ECU detects a system malfunction.	Illuminates	Illuminates	Sounds once	○
 0150BE34C	This message appears when the seat belt control ECU determines the following conditions: <ul style="list-style-type: none"> <li>• Dirty millimeter wave radar sensor</li> <li>• Poor weather conditions</li> <li>• Overheated seat belt control ECU</li> </ul> After these conditions have been resolved, the system will operate normally.	—	Flashes	Sounds once	×

○: Repair is required/DTCs are stored

×: Repair is not required/DTCs are not stored