


SRS AIRBAG SYSTEM

DESCRIPTION

The SRS (Supplemental Restraint System) airbag system has the following equipment:

Item		Equipment
Frontal Collision	Driver Airbag	Standard
	Front Passenger Twin-chamber Airbag	Standard
	Driver Knee and Front Passenger Knee Airbags	Standard
	Seat Belt Pretensioner (Front and Rear Passengers)	Standard
Side/Side Rear Collision	Side Airbag (LH and RH)	Standard
	Curtain Shield Airbag (LH and RH)	Standard
Airbag Manual on-off Switch		Standard

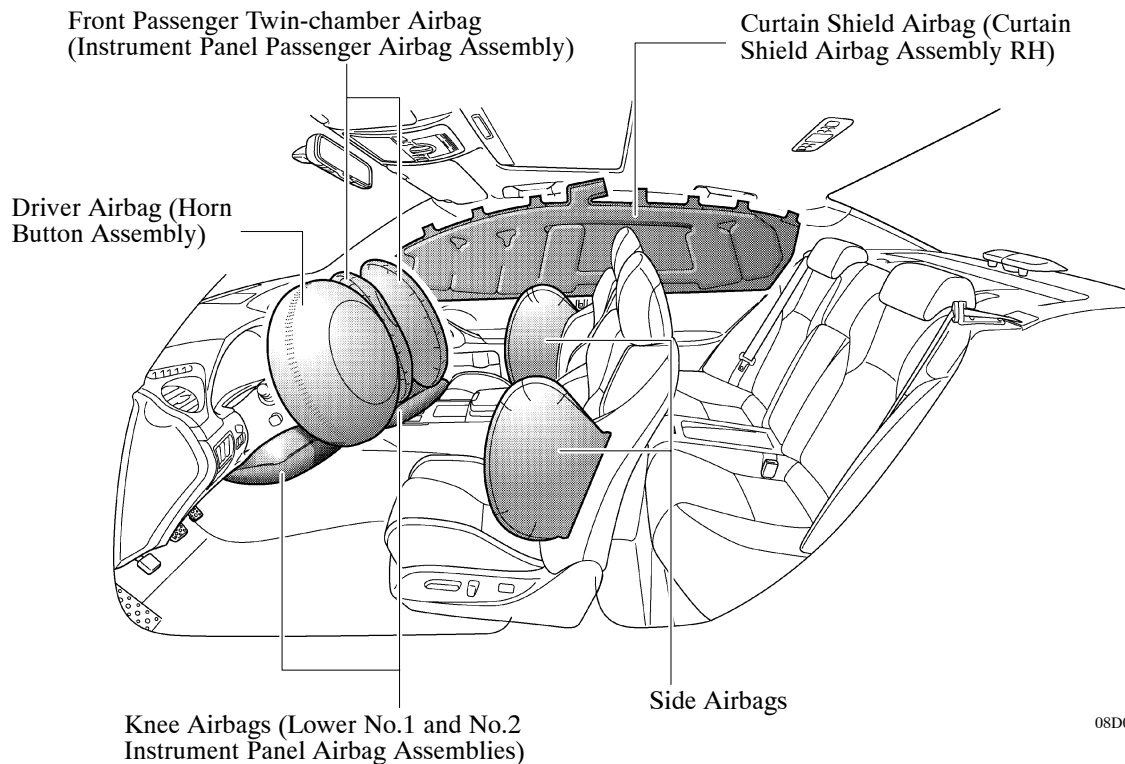

BE

- The driver airbag and front passenger twin-chamber airbag are used to help to reduce the shocks to the head and chest of the driver or front passenger in the event of a frontal impact collision as supplements to the seat belts.
- The knee airbags are used to help to reduce the shocks to the knees of the driver and front passenger in the event of a frontal impact collision as supplements to the seat belts.
- The side airbags are used to help to reduce the shocks to the chest of the driver or front passenger in the event of a side impact collision.
- The curtain shield airbags are used to help to reduce the shocks to the head of the driver, front passenger, or rear outer passenger in the event of a side or side rear impact collision.